


018 Blow - By System

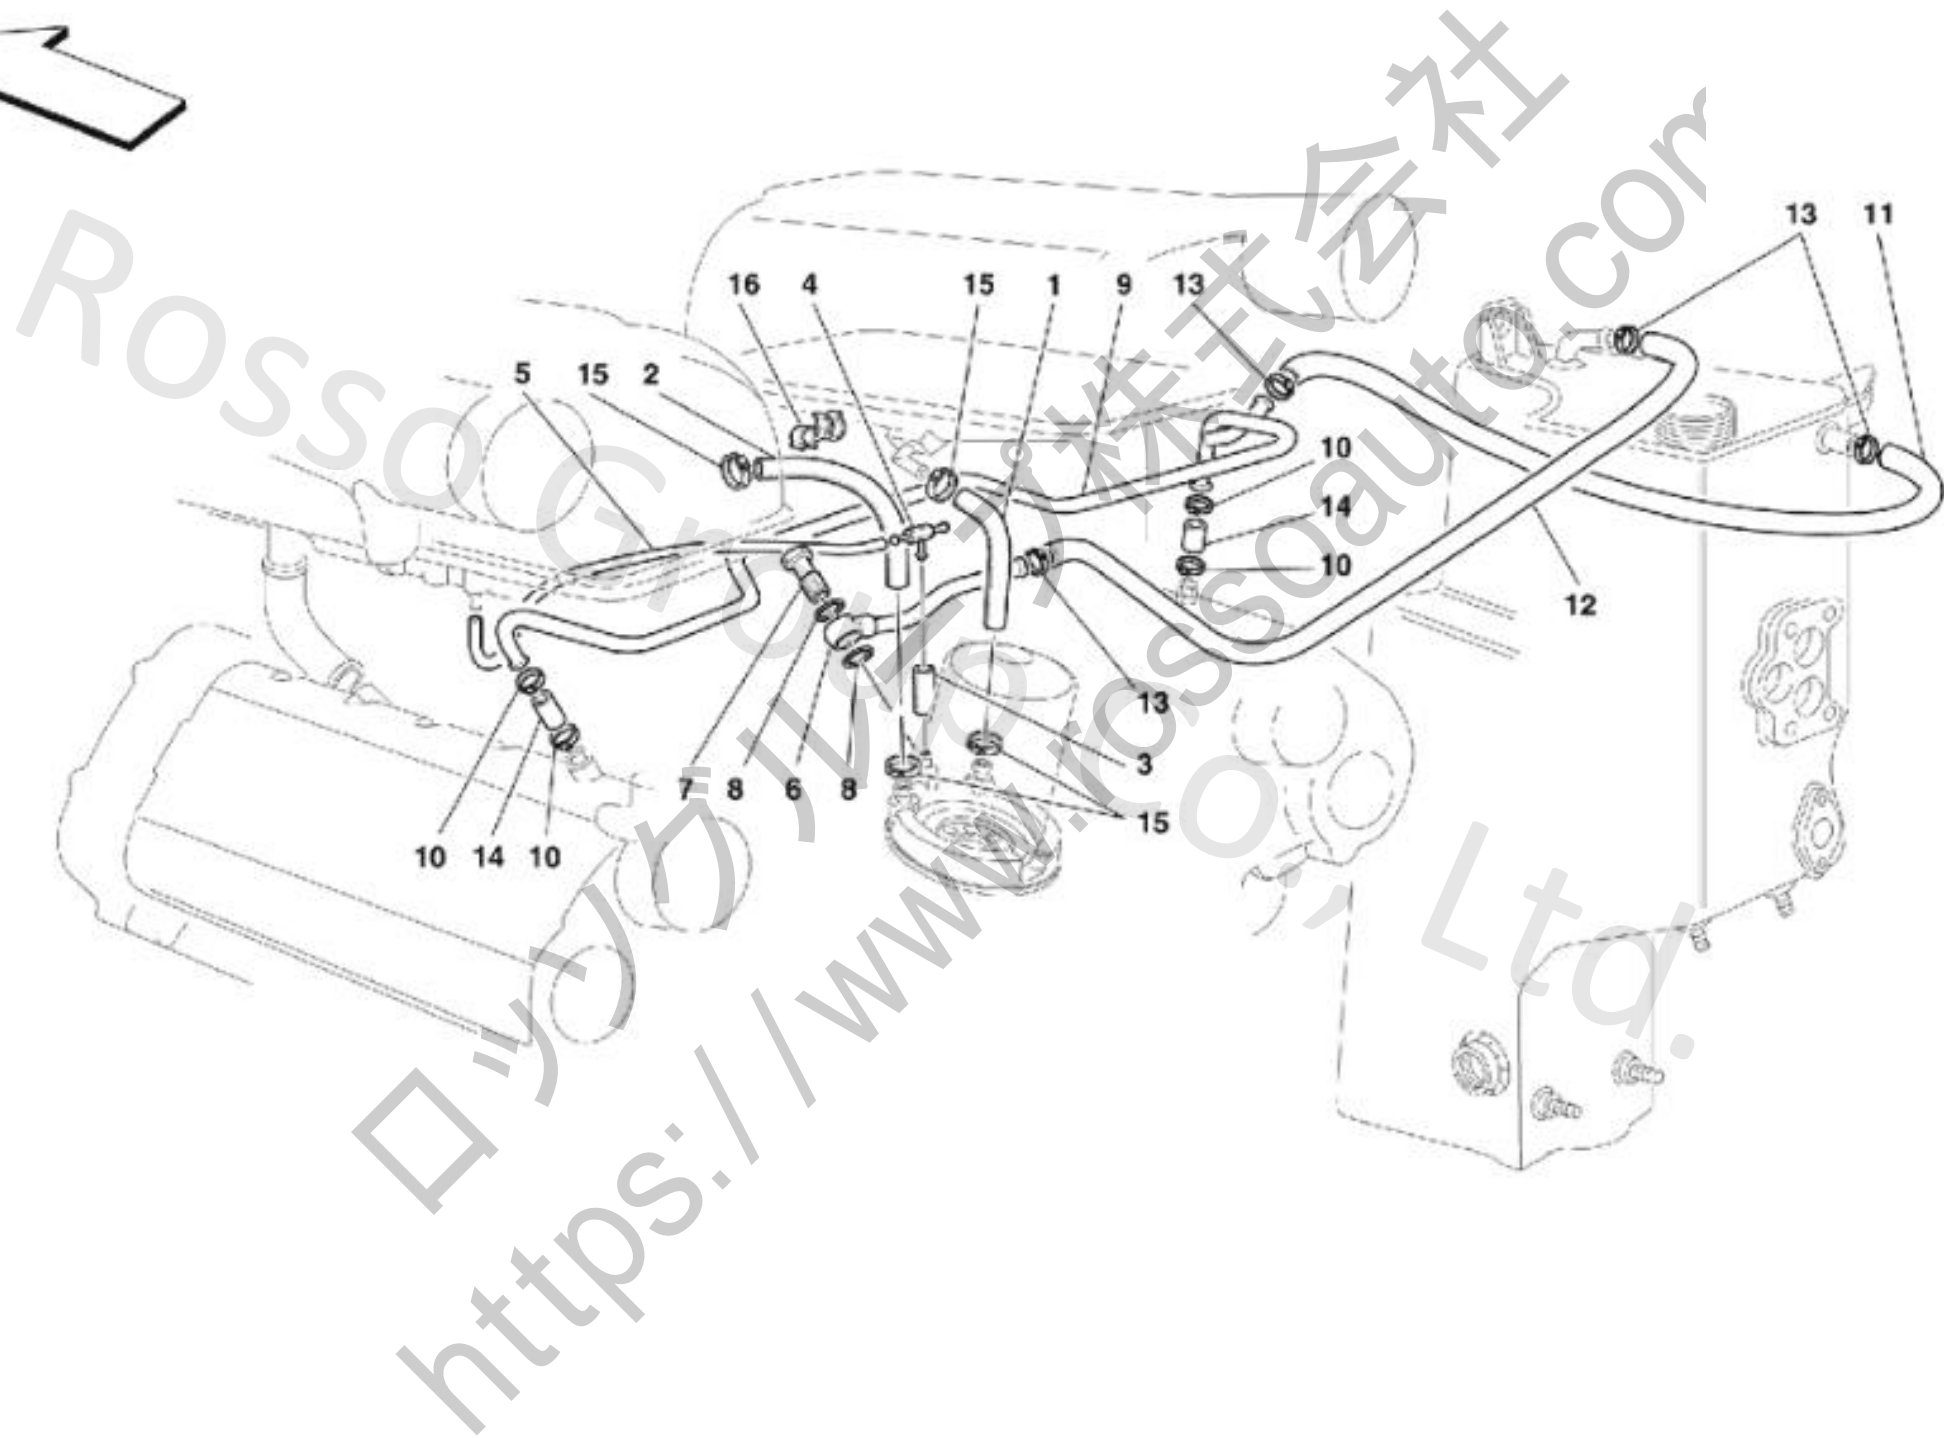

## 018 Blow - By System

No.	Part No.	Name	Qty
1	160932	R.H. OIL EXHAUST TUBE	1
2	160931	L.H. OIL EXHAUST TUBE	1
3	137904	PIPE FROM FILTER TO 3-WAY UNION	1
4	161816	3-WAY UNION	1
5	115676	RUBBER HOSE FROM UNION TO AIR CAPACITY UNION	2
5	126342	RUBBER HOSE FROM UNION TO AIR CAPACITY UNION	2
6	159409	SWINGING PIPE	1
7	159424	UNION	1
8	10257060	GASKET	2
9	163622	BREATHER PIPE	1
10	13000290	SCREW COLLAR	4
11	160017	PIPE FROM 3-WAY TO RESERVOIR	1
12	160018	PIPE FROM BREATHER BODY TO RESERVOIR	1
13	13000390	SCREW COLLAR	4
14	165557	RUBBER HOSE	2
15	13000290	SCREW COLLAR	4
16	139966	FLEXIBLE CLIP	2