


- <001 Crankcase>
- <002 Crankshaft, Conrods And Pistons>
- <003 R.H. Cylinder Head>
- <004 L.H. Cylinder Head>
- <005 Timing - Tappets>
- <006 Timing - Controls>
- <007 Air Injection - Ignition>
- <008 Air Injection Device>
- <009 Fuel Pump and Pipes>
- <010 Fuel Tank>
- <011 Antieaporation Device>
- <012 Manifolds and Covers>
- <013 Air Intake>
- <014 Throttle Housing and Linkage>
- <015 Exhaust System -Not for USA, CDN, CH, AUS->
- <016 Exhaust System -Valid for USA and CDN->
- <017 Exhaust System -Valid for CH and AUS->
- <018 Blow - By System>
- <019 Lubrication - Pumps and Oil Sumps>
- <020 Lubrication System>
- <021 Cooling System>
- <022 Cooling System Radiators>
- <023 Water Pump>
- <024 Clutch and Controls>
- <025 Clutch Release Control -Not for GD->
- <026 Clutch Release Control -Valid for GD->
- <027 Gearbox Differential Housing and Intermediate Casing>
- <028 Gearbox Covers>
- <029 Main Shaft Gears>
- <030 Lay Shaft Gears>
- <031 Inside Gearbox Controls>
- <032 Outside Gearbox Controls>
- <033 Differential and Axle Shaft>
- <034 Brake Hidraulic -Not for GD->
- <035 Throttle Pedal and Brake Hydraulic System -Valid for GD->
- <036 Hydraulic System for Antiskid>
- <037 Brake System>
- <038 Calipers for Front and Rear Brakes>
- <039 Hand-Brake Control>
- <040 Steering Box and Linkage>
- <041 Steering Column>
- <042 Front Suspension - Shock Absorber and Brake Disc>
- <043 Front Suspension - Wishbones>
- <044 Rear Suspension - Shock Absorber and Brake Disc>
- <045 Rear Suspension - Wishbones>
- <046 Wheels>
- <047 Current Generator - Starting Motor>
- <048 Air Conditioning Compressor>
- <049 Tools Equipment>

<101 Body - General Units>
<102 Front Part Structures>
<103 Central Part Structures>
<104 Frame - Rear Part Elements>
<105 Roof - Outer Trims>
<106 Body - Outer Trims>
<107 Passengers Comp. Insulations -Valid for GTB_GTS -Valid for USA->
<108 Passengers Comp. Insulations -Valid for Spider - Not for USA->
<109 Passengers Compartment Carpets -Not for Spider->
<110 Passengers Compartment Carpets -Valid for Spider->
<111 Front Compartments Carpets>
<112 Roof Trims -Valid for GTB->
<113 Roof Trims -Valid for GTS and Spider->
<114 Top -Valid for Spider->
<115 Front Hood>
<116 Opening Device for Front Hood>
<117 Rear Hood>
<118 Opening Devices for Rear Hood and Gas Door>
<119 Doors - Framework and Rear Mirror>
<120 Doors - Opening Control and Hinges>
<121 Doors - Glass Lifting Device>
<122 Doors - Inner Trims -Not for Spider>
<123 Doors - Inner Trims -Valid for Spider>
<124 Front Bumper>

<125 Rear Bumper>
<126 Glasses and Gaskets>
<127 Seats and Safety Belts -Not for Spider->
<128 Seats and Safety Belts -Valid for Spider - Not for USA->
<129 Seats and Safety Belts -Valid for USA->
<130 Seats -Valid for 348 Comp.->
<131 Passive Safety Belts System -Valid for USA->
<132 Tunnel - Framework and Trims>
<133 Tunnel - Accessories>
<134 Dashboard - Structure and Supports -Not for USA->
<135 Dashboard - Trim and Accessories -Not for USA->
<136 Dashboard - Structure and Supports -Valid for USA->
<137 Dashboard - Trim and Accessories -Valid for USA->
<138 Instruments>
<139 Front and Rear Lights>
<140 Lights Lifting Device and Headlights>
<141 Windshield Wiper and Controls>
<142 Glass Washer and Horns>
<143 Electrical System -Not for USA and CDN->
<144 Electrical System -Valid for USA and CDN->
<145 Electrical Boards>
<146 Evaporator Unit and Passengers Compartment Aerating>
<147 Air Conditioning System>

<001 Crankcase>

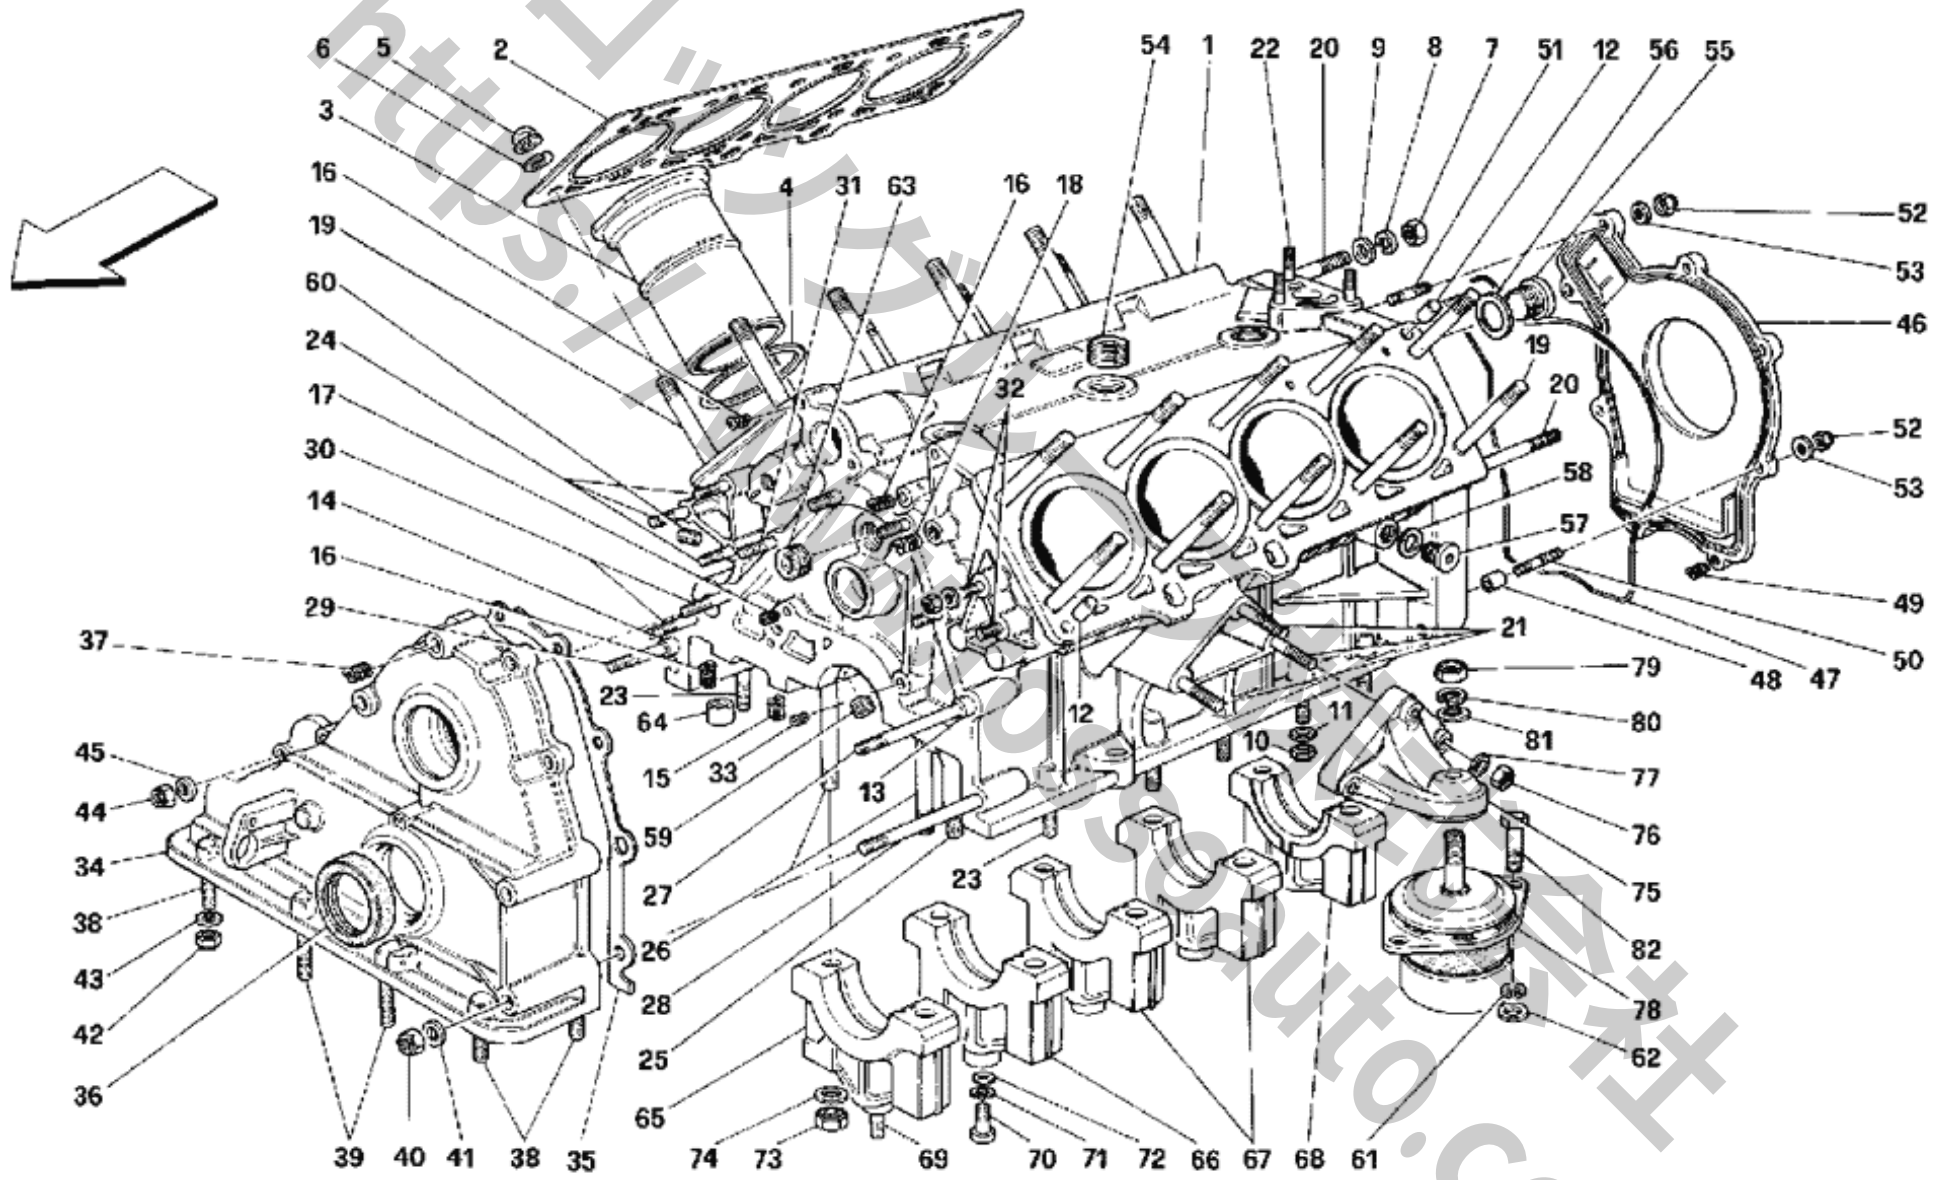



<001 Crankcase>

No.	Part No.	Name	Qty
0	152538	COMPLETE CRANKCASE	1
0	149508	COMPLETE CRANKCASE	1
0	139571	COMPLETE CRANKCASE	1
0	146665	COMPLETE ENGINE	1
0	95961951	COMPLETE ENGINE	1
0	95961959	COMPLETE ENGINE	1
0	95971393	CYLINDER HEAD TOOL	1
0	95971393	CYLINDER HEAD TOOL	1
1		CRANKCASE	1
2	152029	GASKET	2
3	136875/R	CYLINDER LINER	8
3	136875/G	CYLINDER LINER	8
3	136875	CYLINDER LINER	8
3	136875	CYLINDER LINER	8
4	136258	GASKET	8
5	136269	NUT	20
6	136270	WASHER	20
7	133988	NUT	4
8	127497	WASHER	4
9	14496621	WASHER	4
10	16104411	NUT	12
11	12604479	WASHER	12
12	152627	DOWEL	4
13	100052	DOWEL	1
14	100041	DOWEL	1
15	13525770	THREADED INSERT	1
16	13525870	THREADED INSERT	7
17	13525570	THREADED INSERT	2
18	13526070	THREADED INSERT	2
19	137507	STUD	20
19	137507	STUD	20
20	13547135	STUD	4
21	13546621	STUD	6
21	13546621	STUD	6
22	13543521	STUD	3
23	13543324	STUD	12

24	12354524 STUD	3
25	13516624 STUD	3
26	104075 STUD	10
27	13953221 STUD	1
27	13953521 STUD	1
28	13450724 STUD	1
28	13953321 STUD	1
29	13544024 STUD	1
30	13543921 STUD	2
31	13543421 STUD	4
32	13543324 STUD	2
33	13525470 THREADED INSERT	2
34	FRONT COVER	1
35	150077 GASKET	1
36	133628 GASKET	1
37	13525870 THREADED INSERT	2
38	13543324 STUD	4
39	13543824 STUD	2
40	102742 NUT	2
41	12638601 WASHER	2
42	16104411 NUT	6
43	12604479 WASHER	6
44	16104411 NUT	7
45	12601374 WASHER	7
46	142471 REAR COVER	1
46	138257 REAR COVER	1
47	142472 OR-RING	1
48	103038 DOWEL	2
49	13525570 THREADED INSERT	2
50	13541124 STUD	2
51	13540821 STUD	4
52	15896211 NUT	6
53	12620479 WASHER	6
54	14325540 PLUG	3
55	10275011 PLUG	2
56	10263460 GASKET	2
57	150731 WATER OUT PLUG	2
58	10280060 GASKET	2
59	10269650 PLUG	2

60	14326150 PLUG	1
61	10275011 PLUG	1
62	10263460 GASKET	1
63	10269850 PLUG	1
64	145326 BUSHING	1
64	145326 BUSHING	1
65	FRONT HAT	1
66	FRONT INTERMEDIATE HAT	1
67	INTERMEDIATE CENTRAL AND REAR HAT	2
68	REAR HAT	1
69	13516624 STUD	1
70	14305224 SCREW	1
70	10902724 SCREW	1
70	10902724 SCREW	1
71	127494 WASHER	1
72	12644421 WASHER	1
73	103841 NUT	10
73	103841 NUT	10
74	103842 WASHER	10
75	133285 SUPPORT FOR MOTOR FIXING	2
76	15501121 NUT	6
77	11190579 WASHER	6
78	139469 FLEXIBLE PAD	2
79	16101521 NUT	2
80	127498 WASHER	2
81	14496701 WASHER	2
82	15970624 SCREW	4
83	14496601 WASHER	4
84	12574511 NUT	4
85	127497 WASHER	4

<002 Crankshaft, Conrods And Pistons>

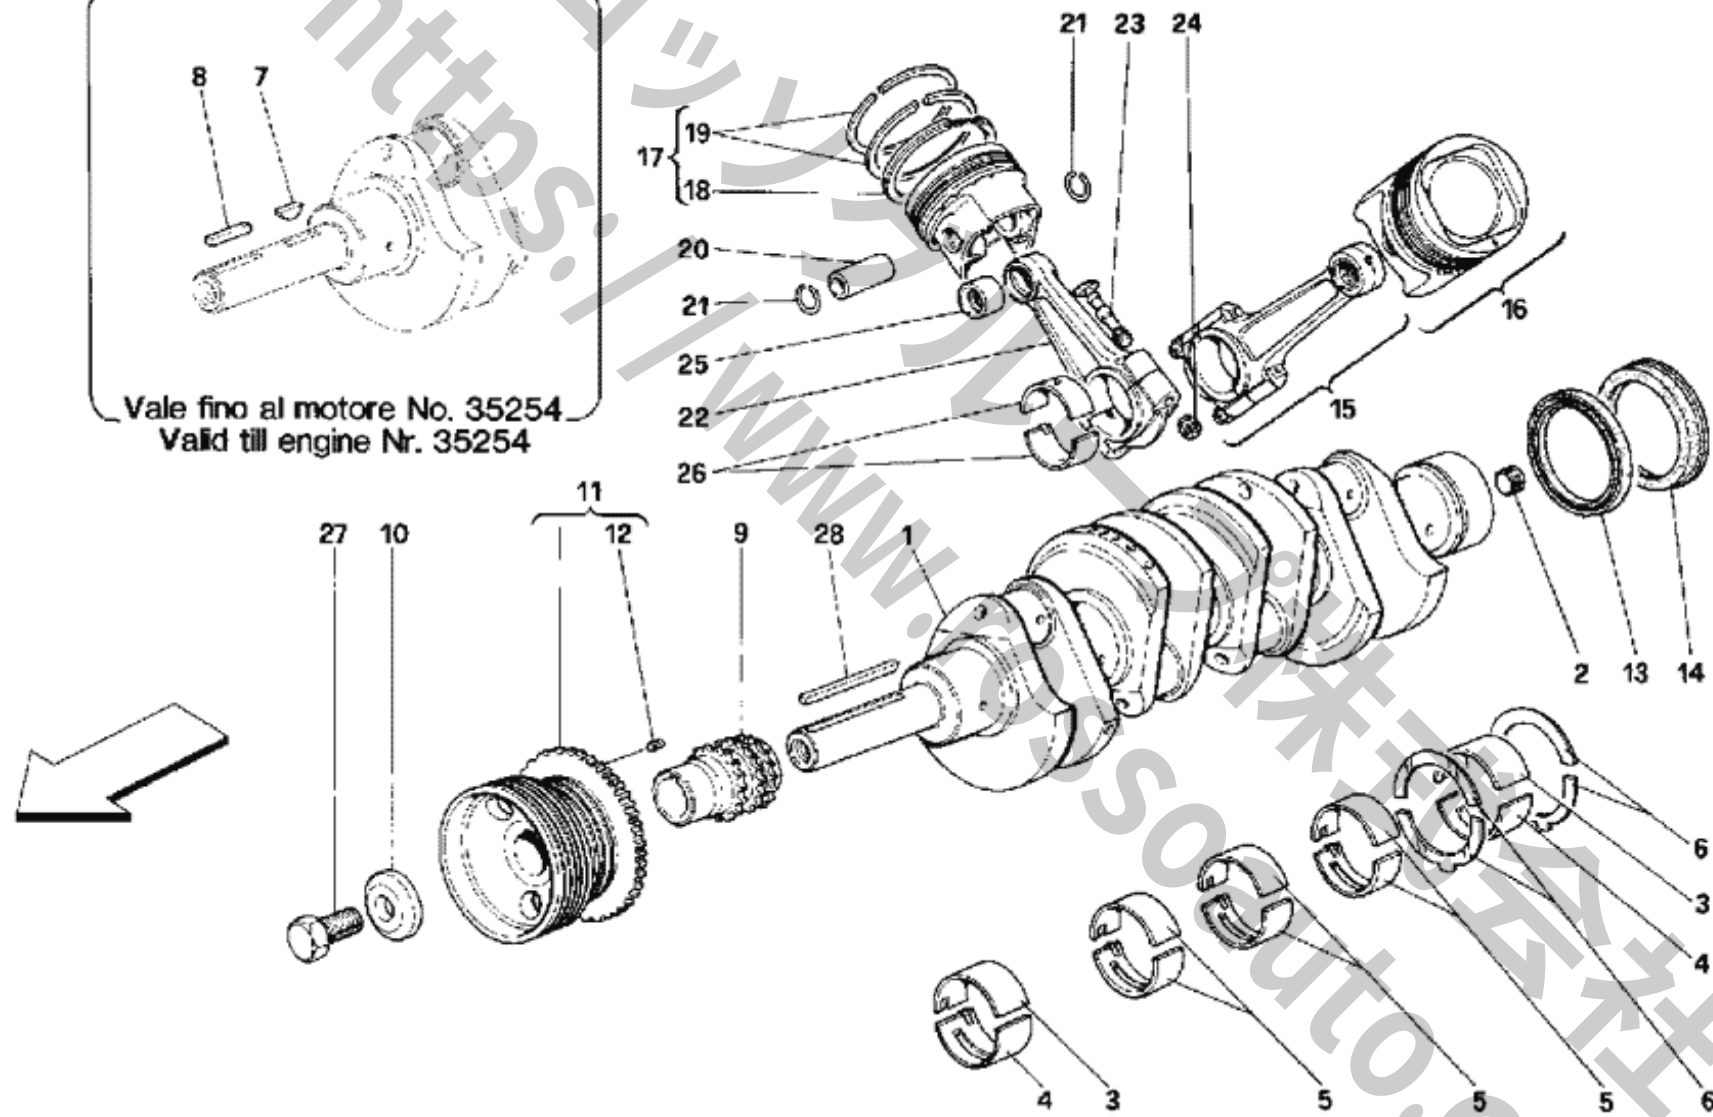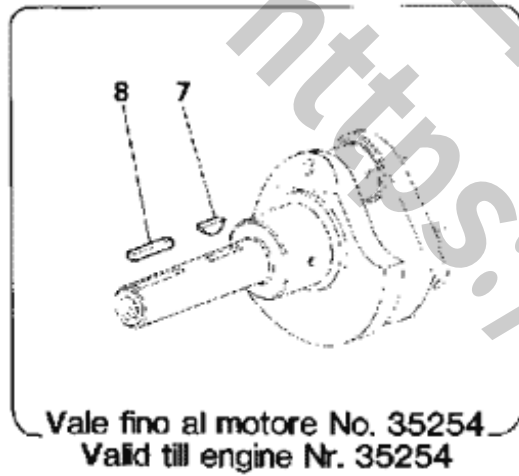


<002 Crankshaft, Conrods And Pistons>

No.	Part No.	Name	Qty
1	138193	CRANKSHAFT	1
2	10268450	PLUG	1
3	100124	LOWER HALF BEARING	2
3	100118	UPPER HALF BEARING	2
4	100122	LOWER HALF BEARING	2
4	100119	UPPER HALF BEARING	2
4	100120	UPPER HALF BEARING	2
5	104024	UPPER AND LOWER HALF BEARING	6
5	104025	UPPER AND LOWER HALF BEARING	6
5	104023	UPPER AND LOWER HALF BEARING	6
6	100146	SHIM	2
6	100147	SHIM	2
6	113984	SHIM	2
7	10206020	KEY	1
8	14723320	KEY	1
8	14723320	KEY	1
9	132807	TIMING GEAR	1
10	138792	WASHER	1
11	153030	TOOTHED WHEEL AND PULLEY	1
12	10841010	DOWEL	1
13	183581	SEAL RING	1
14	183581	SEAL RING	1
14	183581	SEAL RING	1
15	109738/U	CONNECTING CONNECTING ROD AND CAP	8
16	163399	348 GT PISTON & RINGS	8
16	137980	PISTON WITH RINGS	8
17	132959	PISTONS RINGS SET	8
18		ROF OIL SCRAPING RING	8
19		AC SEAL RING	16
20	119537	PIN	8
21	100174	STOP RING	16
22		CONNECTING ROD WITH CAP	8
23	100156	CONNECTING ROD TIGHTENING SCREW	16
24	104011	CONNECTING ROD TIGHTENING NUT	16
25	107100	BUSHING	8
26	100151	CONNECTING ROD HALF BEARING	16

26	100152 CONNECTING ROD HALF BEARING	16
26	106183 CONNECTING ROD HALF BEARING	16
27	138793 SCREW	1
28	138792 WASHER	1

ロッソグループ株式会社
<https://www.rossoauto.com>

<003 R.H. Cylinder Head>

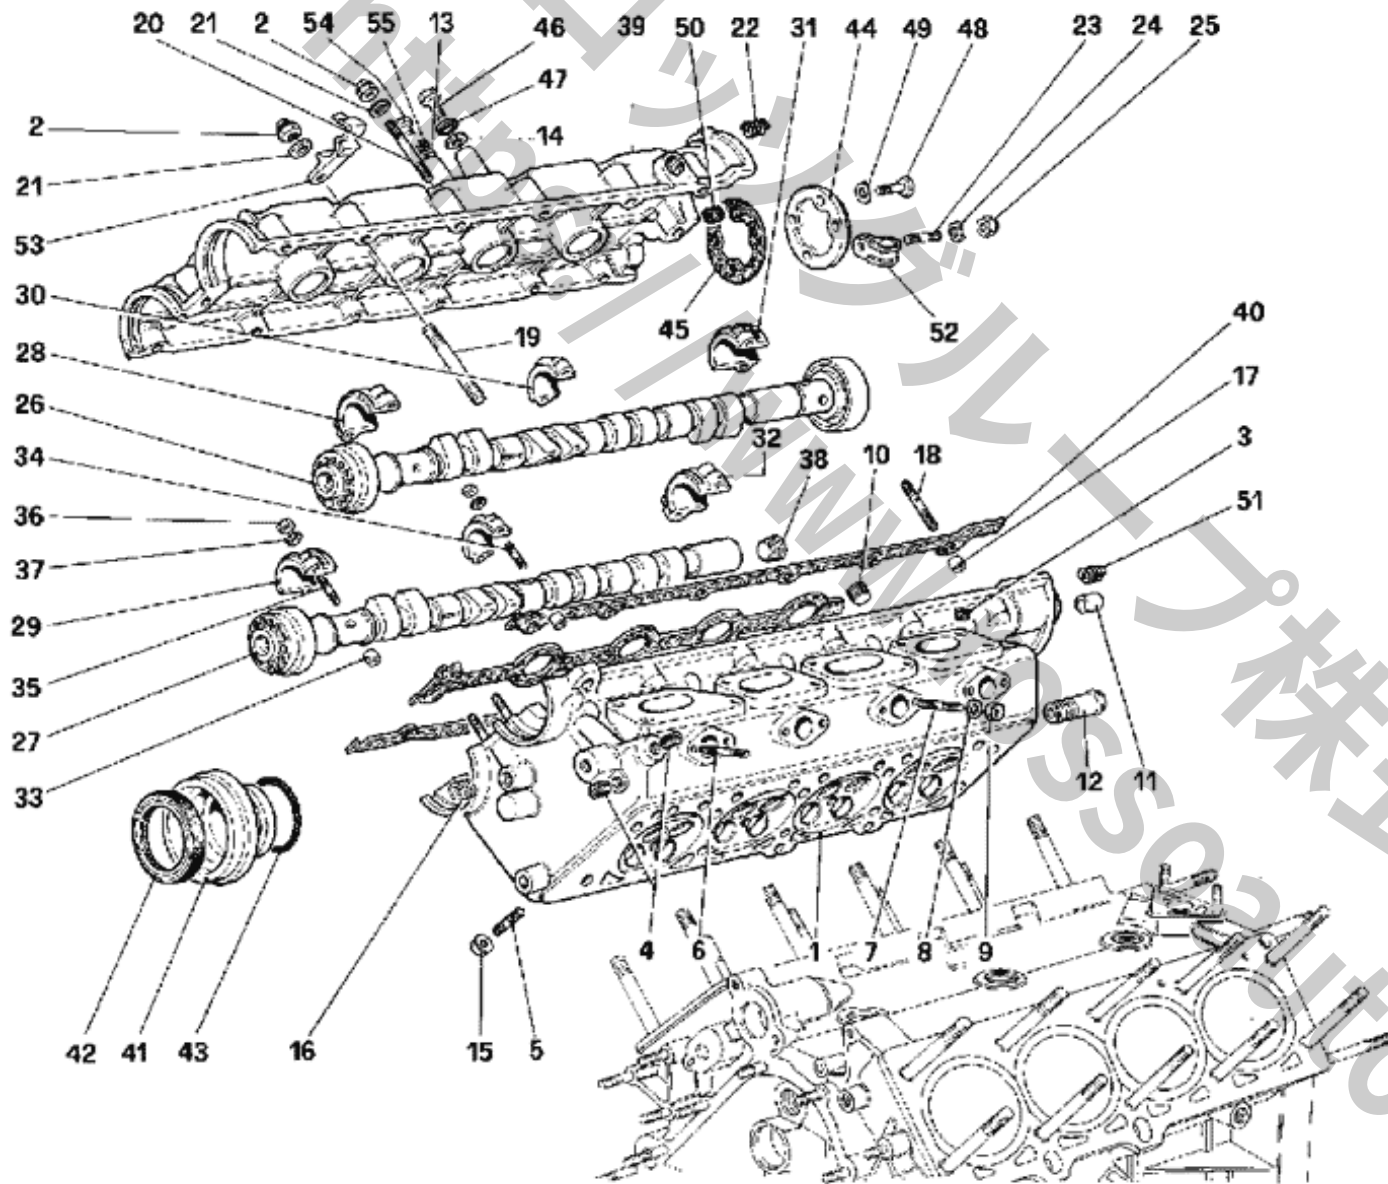


<003 R.H. Cylinder Head>

No.	Part No.	Name	Qty
0	143273	COMPLETE R.H. CYLINDERS HEAD	1
1		R.H. HEAD	1
2	151230	NUT	14
3	13525870	THREADED INSERT	10
4	14326150	THREADED PLUG	3
5	12354524	STUD SECURING EXHAUST MANIFOLDS	8
6	13541621	STUD SECURING WATER MANIFOLDS	4
7	13541721	STUD SECURING WATER MANIFOLDS	4
8	11197774	WASHER	8
9	15896211	NUT	8
10	127635	THREADED PLUG	5
11	102725	DOWEL	2
12	106227	UNION	1
12	106227	UNION	1
13	139489	PLUG	4
14	10257060	GASKET	4
15	138392	NUT	8
16	13525870	THREADED INSERT	3
17	102725	DOWEL	2
18	13541721	STUD	2
19	13541721	STUD	1
20	13541621	STUD	11
21	1197774	WASHER	14
22	13525470	THREADED INSERT	1
23	11500521	STUD	2
24	12601274	WASHER	2
25	102741	NUT	2
26	139334	COMPLETE R.H. INDUCTION DISTRIBUTION SHAFT	1
27	139337	COMPLETE R.H. EXHAUST CAM SHAFT	1
28		INLET SIDE FRONT CAP	1
29		EXHAUST SIDE FRONT CAP	1
30		INTERMEDIATE CAP	6
31		INLET SIDE REAR CAP	1
32		EXHAUST SIDE REAR CAP	1
33	102725	DOWEL	20
34	102735	STUD(INNER CAPS)	12

35	102754 STUD(OUTER CAPS)	8
36	15896211 NUT	20
37	11197774 WASHER	20
38	10269750 THREADED PLUG	1
39	R.H. CYLINDER HEAD COVER	1
40	150078 GASKET	1
41	144973 SMALL COVER	2
42	134714 GASKET	2
43	117275 O.R.GASKET	2
44	103796 REAR SMALL COVER	1
45	150075 GASKET	1
46	10902024 SCREW	1
47	10615479 WASHER	1
48	10902324 SCREW	2
49	12601274 WASHER	2
50	13525470 THREADED INSERT	2
51	13525470 THREADED INSERT	2
52	10418401 BRACKET	1
53	129544 CLIP	1
54	10977624 SCREW	1
55	149951 WASHER	1
56	10519377 WASHER	1
57	12648201 WASHER	1

<004 L.H. Cylinder Head>

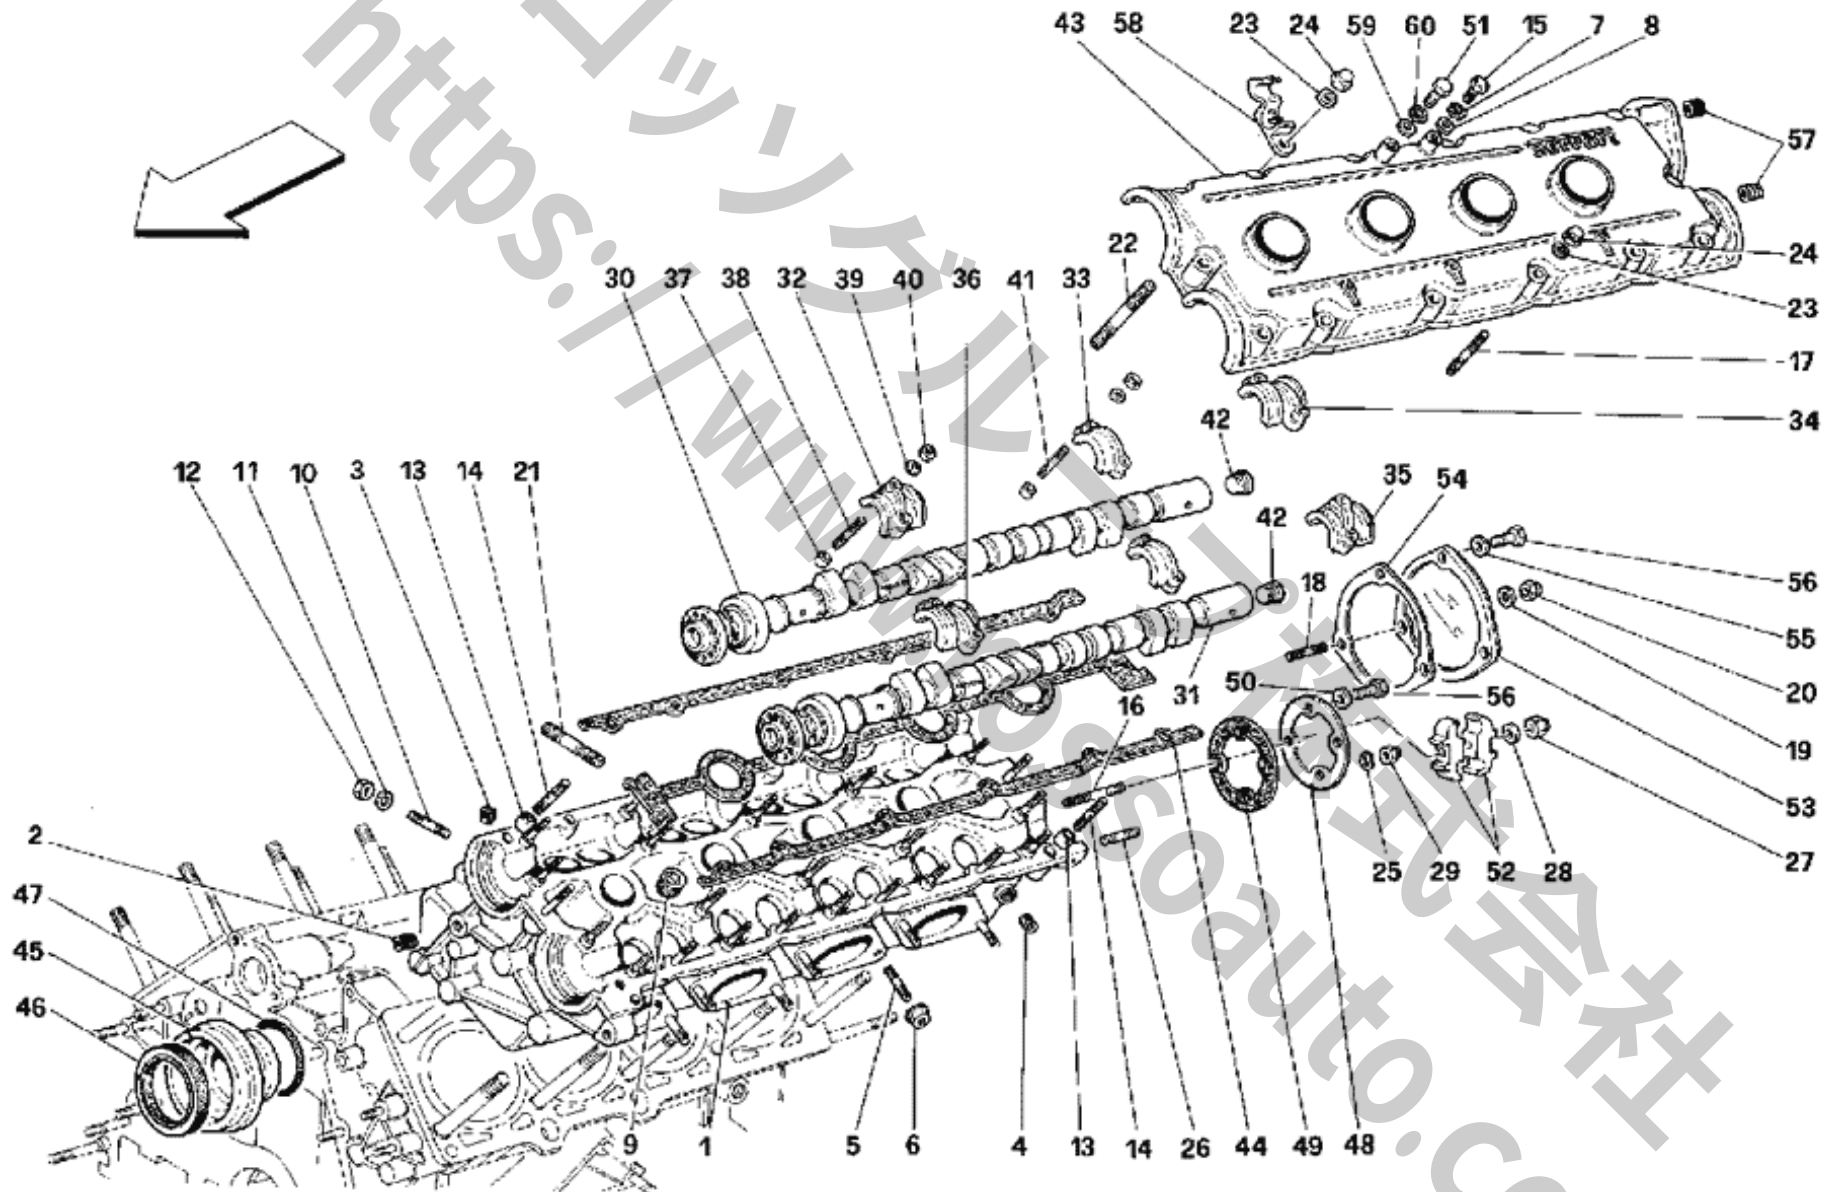


<004 L.H. Cylinder Head>

No.	Part No.	Name	Qty
0	149502	COMPLETE L.H. CYLINDERS HEAD	1
0	133994	COMPLETE L.H. CYLINDERS HEAD	1
1		L.H.HEAD	1
2	13525870	THREADED INSERT	2
3	13525870	THREADED INSERT	10
3	13525870	THREADED INSERT	10
4	14326150	PLUG	3
5	12354524	STUD SECURING EXHAUST MANIFOLD	8
6	138392	NUT	8
7	139489	PLUG	4
8	10257060	GASKET	4
9	127635	PLUG	5
10	13541621	STUD SECURING WATER MANIFOLDS(CYL,5,8)	4
10	13541621	STUD SECURING WATER MANIFOLDS(CYL,5,8)	4
11	11197774	WASHER	8
12	15896211	NUT	8
12	15896211	NUT	8
13	102725	DOWEL	2
14	13541721	STUD	2
15	11500521	STUD	1
16	11501421	STUD	1
		STUD	
16	11501421	STUD	1
17	13541621	STUD	1
18	11500521	STUD	2
19	11197774	WASHER	2
20	102741	NUT	2
21	13541721	STUD SECURING WATER MANIFOLDS(CYL,6,7)	4
22	13541921	STUD	1
22	13541721	STUD	1
23	11197774	WASHER	14
24	151230	NUT	14
25	12601274	WASHER	1
26	11500321	STUD	1
27	12574211	NUT	1
28	10519401	WASHER	1

29	12575411 NUT	1
30	139336 COMPLETE L,H,INDUCTION DISTRIBUTION SHAFT	1
31	139338 COMPLETE L,H,EXHAUST SHAFT	1
32	INLET SIDE FRONT CAP	1
34	INLET SIDE REAR CAP	1
35	EXHAUST SIDE REAR CAP	1
36	EXHAUST SIDE FRONT CAP	1
37	102725 DOWEL	20
38	102754 STID(OUTER CAPS)	8
39	11197774 WASHER	20
40	15896211 NUT	20
41	102735 STUD	12
42	10269750 (INNER CAPS)THREADED PLUG	2
43	L,H,CYLINDER HEAD COVER	1
44	150084 GASKET	1
45	144973 SMALL COVER	1
46	134714 GASKET	2
47	117275 O,R,GASKET	2
48	103796 REAR SMALL COVER	1
49	150075 GASKET	2
50	12601274 WASHER	2
51	10418401 BRACKET	1
52	62658700 CLIP	2
53	140102 REAR SMALL COVER	1
54	150074 GASKET	1
55	11197774 WASHER	1
56	10902324 SCREW	3
57	13525470 THREADED INSERT	3
58	129544 CLIP	1
59	140085 SPACER	1
60	12648201 WASHER	1
61	10615479 WASHER	1
62	10902024 SCREW	1
63	10977624 SCREW	1
64	149951 WASHER	1
65	10519377 WASHER	1

<005 Timing - Tappets>

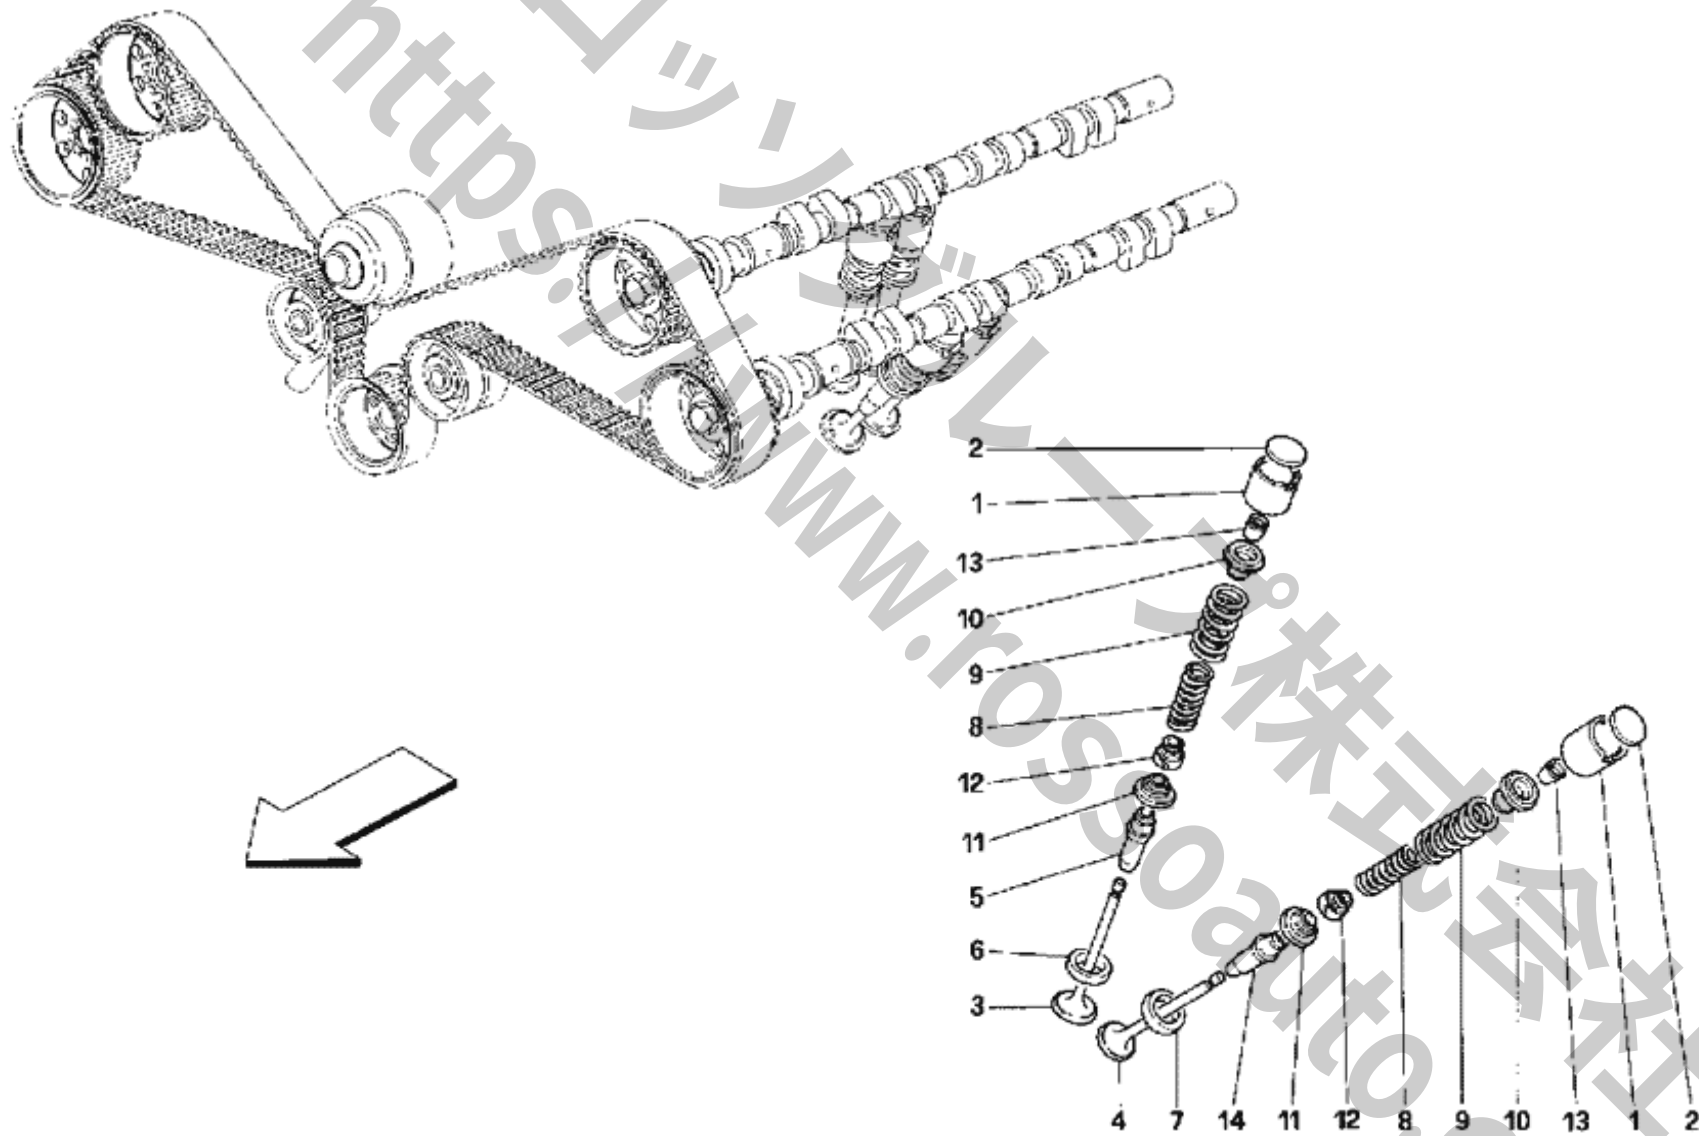


<005 Timing - Tappets>

No.	Part No.	Name	Qty
1	117562	TAPPET FOR VALVE CONTROL	32
1	117562	TAPPET FOR VALVE CONTROL	32
2	117580	VALVE SETTING PLATE	32
2	117584	VALVE SETTING PLATE	32
2	117585	VALVE SETTING PLATE	32
2	117586	VALVE SETTING PLATE	32
2	117587	VALVE SETTING PLATE	32
2	117588	VALVE SETTING PLATE	32
2	117589	VALVE SETTING PLATE	32
2	117590	VALVE SETTING PLATE	32
2	117591	VALVE SETTING PLATE	32
2	117592	VALVE SETTING PLATE	32
2	117593	VALVE SETTING PLATE	32
2	117594	VALVE SETTING PLATE	32
2	117583	VALVE SETTING PLATE	32
2	117582	VALVE SETTING PLATE	32
2	117569	VALVE SETTING PLATE	32
2	117570	VALVE SETTING PLATE	32
2	117571	VALVE SETTING PLATE	32
2	117572	VALVE SETTING PLATE	32
2	117573	VALVE SETTING PLATE	32
2	117575	VALVE SETTING PLATE	32
2	117576	VALVE SETTING PLATE	32
2	117577	VALVE SETTING PLATE	32
2	117578	VALVE SETTING PLATE	32
2	117579	VALVE SETTING PLATE	32
2	117581	VALVE SETTING PLATE	32
2	117595	VALVE SETTING PLATE	32
2	117596	VALVE SETTING PLATE	32
2	153742	VALVE SETTING PLATE	32
2	153741	VALVE SETTING PLATE	32
2	153740	VALVE SETTING PLATE	32
2	153739	VALVE SETTING PLATE	32
2	153738	VALVE SETTING PLATE	32
2	153737	VALVE SETTING PLATE	32
2	153736	VALVE SETTING PLATE	32

2	153736 VALVE SETTING PLATE	32
2	153735 VALVE SETTING PLATE	32
2	153734 VALVE SETTING PLATE	32
2	153733 VALVE SETTING PLATE	32
2	153732 VALVE SETTING PLATE	32
31	153731 VALVE SETTING PLATE	32
2	117574 VALVE SETTING PLATE	32
3	137955 SUCTION VALVE	16
4	137959 EXHAUST VALVE	16
5	117563 SUCTION VALVE GUIDE	16
5	117564 SUCTION VALVE GUIDE	16
6	137936 SUCTION VALVE SEAT	16
7	137935 EXHAUST VALVE SEAT	16
8	117558 INNER SPRING FOR VALVE RETURN	32
9	117559 OUTER SPRING FOR VALVE RETURN	32
10	117567 UPPER CUP RETAINING SPRING	32
11	117568 LOWER CUP FOR RETAINING SPRING	32
12	141565 OIL RING FOR VALVE GUIDE	32
13	117283 CONE FOR SPRING PLATE	64
14	117566 EXHAUST VALVE GUIDE	16

<006 Timing - Controls>

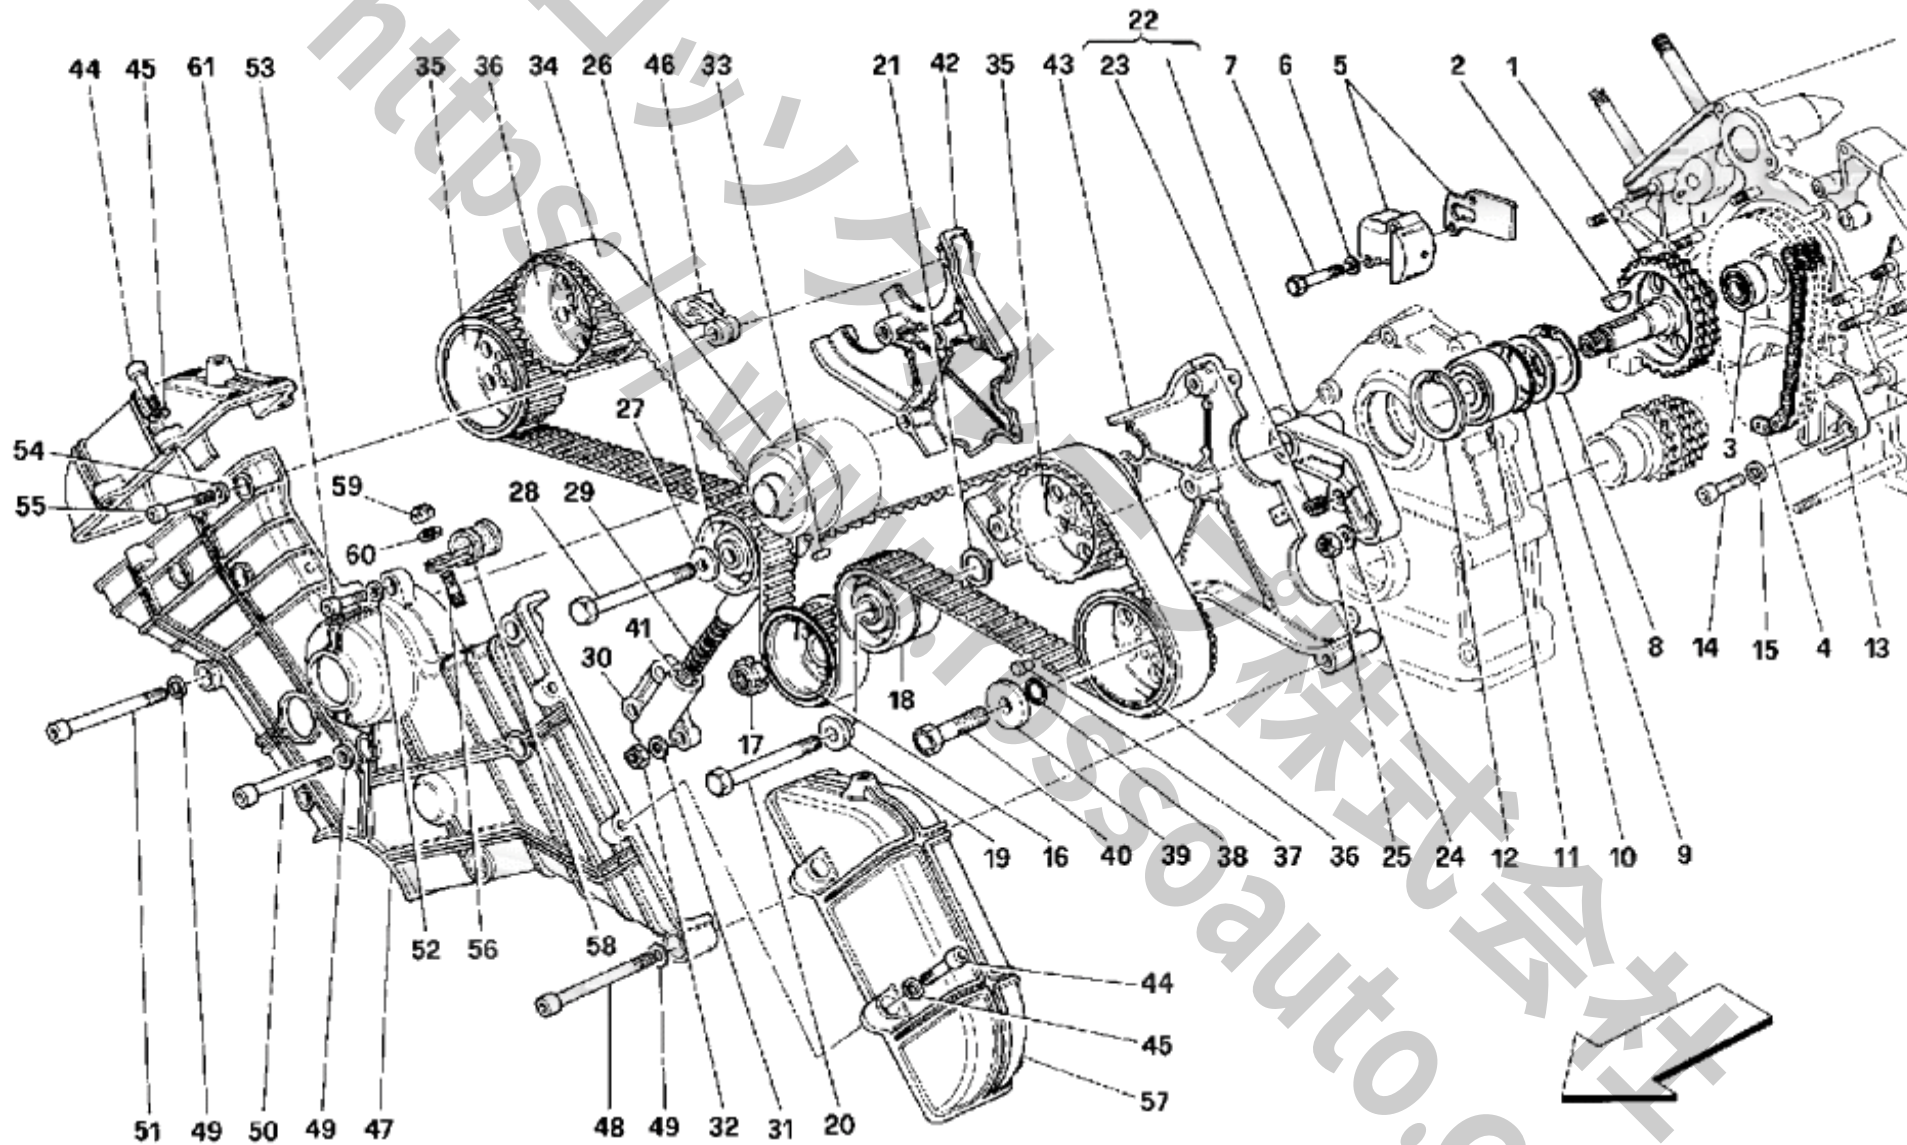


<006 Timing - Controls>

No.	Part No.	Name	Qty
1	144489	DRIVEN GEAR	1
1	132808	DRIVEN GEAR	1
2	10206320	KEY	1
3	185343	BEARING	1
3	171177	BEARING	1
4	132968	TIMING CONTROL CHAIN	1
5	147338A	CHAIN TIGHTENER	1
6	11197774	WASHER	2
7	10903021	SCREW	2
8	11060576	SEEGER RING	1
9	133377	WASHER	1
10	136140	O.R GASKET	1
11	170787	BEARING	1
12	11060576	SEEGER RING	1
13	143782	GUIDE SHOE	1
14	14305721	SCREW	2
15	12604279	WASHER	2
16	132909	DRIVING GEAR	1
17	104919	RING NUT	1
18	145807	L.H.PULLEY	1
19	133385	BUSHING	1
20	134663	SCREW	1
20	134663	SCREW	1
21	137481	WASHER	1
22	147132	BRACKET	1
22	137473	BRACKET	1
23	13525770	THREADED INSERT	1
24	12601374	WASHER	2
25	16104411	NUT	2
26	149791	R.H.PULLEY	1
27	12626224	WASHER	1
28	134665	SCREW	1
29	148356	SPRING	1
30	137632	BRACKET	1
31	12601374	WASHER	3
32	16104125	NUT	3

33	10486110 PIN	1
33	10486110 PIN	1
34	132843 TIMING CONTROL BELT	1
34	132843G TIMING CONTROL BELT OEM	1
35	136229 DRIVEN GEAR	2
36	136230 DRIVEN GEAR	2
37	106203 DOWEL	4
38	114808 SEAL RING	4
39	117274 WASHER	4
40	146540 SCREW	4
41	12638601 WASHER	1

<https://www.rossoauto.com> 株式会社

<007 Air Injection - Ignition>

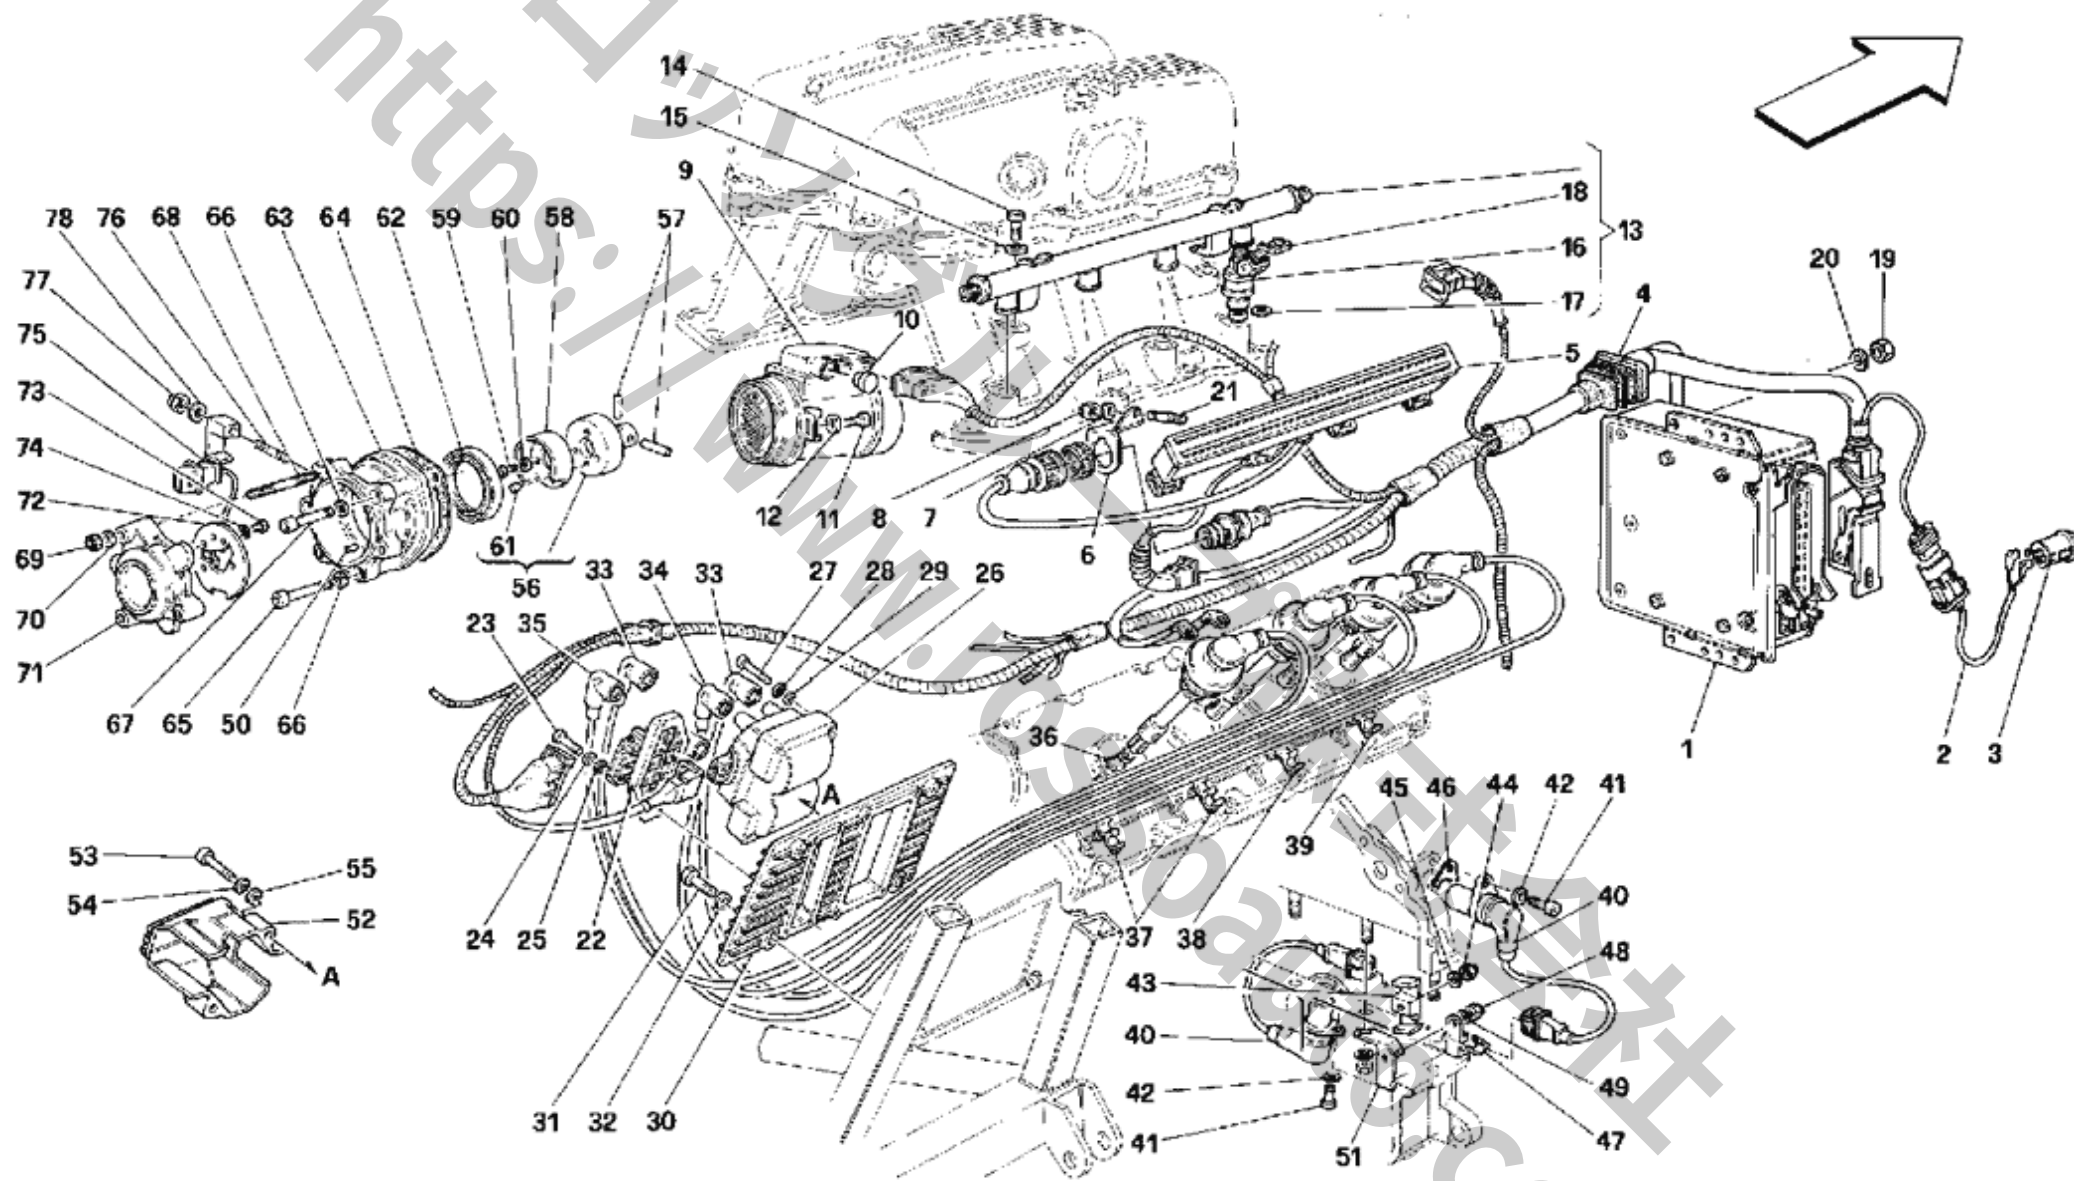


<007 Air Injection - Ignition>

No.	Part No.	Name	Qty
1	132216	IGNITION/SUPPLY CONTROL	2
2	139465	RUBBER BOOT	2
3	124802	ADDITIONAL AIR VALVE	2
4	11500024	STUD	4
5	14496401	WASHER	4
6	12575411	NUT	4
7	13000390	SCREW COLLAR	4
8	139372	AIR/MANIFOLD VALVE CONNECTION PIPE	2
8	139372	AIR/MANIFOLD VALVE CONNECTION PIPE	2
9	13000390	SCREW COLLAR	4
10	139452	AIR/R.H. MANIFOLD VALVE CONNECTION PIPE	1
10	139451	AIR/R.H. MANIFOLD VALVE CONNECTION PIPE	1
11	136374	AIR INDICATOR	2
12	140190	PLUG	2
12	144092	PLUG	2
13	12639978	WASHER	4
13	12639978	WASHER	4
14	10373677	SCREW	4
15	137326	INJECTORS COMPLETE TUBE	2
16	20293306	SCREW	4
17	12601374	WASHER	4
18	130968	ELECTRO-INJECTOR	8
19	133902	GASKET	16
20	144763	INJECTOR RETAINING SPRING	8
21	12575411	NUT	4
22	14496401	WASHER	4
23	137511	POWER MODULE	2
24	13274672	SCREW	4
25	149951	WASHER	4
26	10519377	WASHER	4
27	138255	IGNITION COIL	2
28	13274972	SCREW	8
29	149951	WASHER	8
30	10519377	WASHER	8
31	139434	COIL AND MODULE SUPPORT	2
32	10902724	SCREW	8

33	10519424 WASHER	8
34	188914 CABLE (FOR SPARK PLUGS 1, 2, 7, 8)	4
34	188911 CABLE (FOR SPARK PLUGS 1, 2, 7, 8)	4
34	188912 CABLE (FOR SPARK PLUGS 3,6)	1
35	137451 CABLE (FOR SPARKING PLUGS 3,6)	2
35	145501 CABLE (FOR SPARK PLUGS 3,6)	2
35	188912 CABLE (FOR SPARKING PLUGS 3,6)	2
36	137452 CABLE (FOR SPARK PLUGS 4,5)	2
36	145502 CABLE (FOR SPARK PLUGS 4,5)	2
36	188913 CABLE (FOR SPARKING PLUGS 4,5)	2
37	150180/A SPARK PLUG	8
37	139425 SPARK PLUG (BOSCH XR4CS)	8
38	119402 4-HOUSINGCLIP	4
39	119403 3-HOUSINGCLIP	2
40	119404 2-HOUSINGCLIP	2
41	130975A ANGULAR SPEED SENSOR	2
41	130975 ANGULAR SPEED SENSOR	2
42	14305121 SCREW	2
43	12601274 WASHER	2
44	139244 SUPPORT	1
45	15896470 NUT	1
46	11199279 WASHER	1
47	140621 THICKNESS	2
48	129544 CLIP	1
49	12574211 NUT	1
50	12648201 WASHER	1
51	139949 BRACKET	1
52	10331010 PIN	1
53	150631 PROTECTION	2
54	13274872 SCREW	4
55	149951 WASHER	4
56	10519377 WASHER	4
57	133378 COUPLING ON THE CAM SHAFT	1
57	133378 COUPLING ON THE CAM SHAFT	1
58	132355 PIN	2
59	TIMER	1
61	12604070 WASHER	
62	1048610 PIN	1
63	149917 RING FOR CAMSHAFT	1

64	137508 PHASE SENSOR SUPPORT	1
65	150076 SUPPORT GASKET	1
65	150076 SUPPORT GASKET	1
66	14305920 SCREW	2
67	12604279 WASHER	3
68	14305821 SCREW	1
69	13539821 STUD	3
70	12577811 NUT	3
71	10519377 WASHER	3
72	137510 SMALL COVER	1
73	146312 COMPLETE PHASE SENSOR	1
73	146312 COMPLETE PHASE SENSOR	1
74	14418131 SCREW	2
75	12600479 WASHER	2

<008 Air Injection Device>

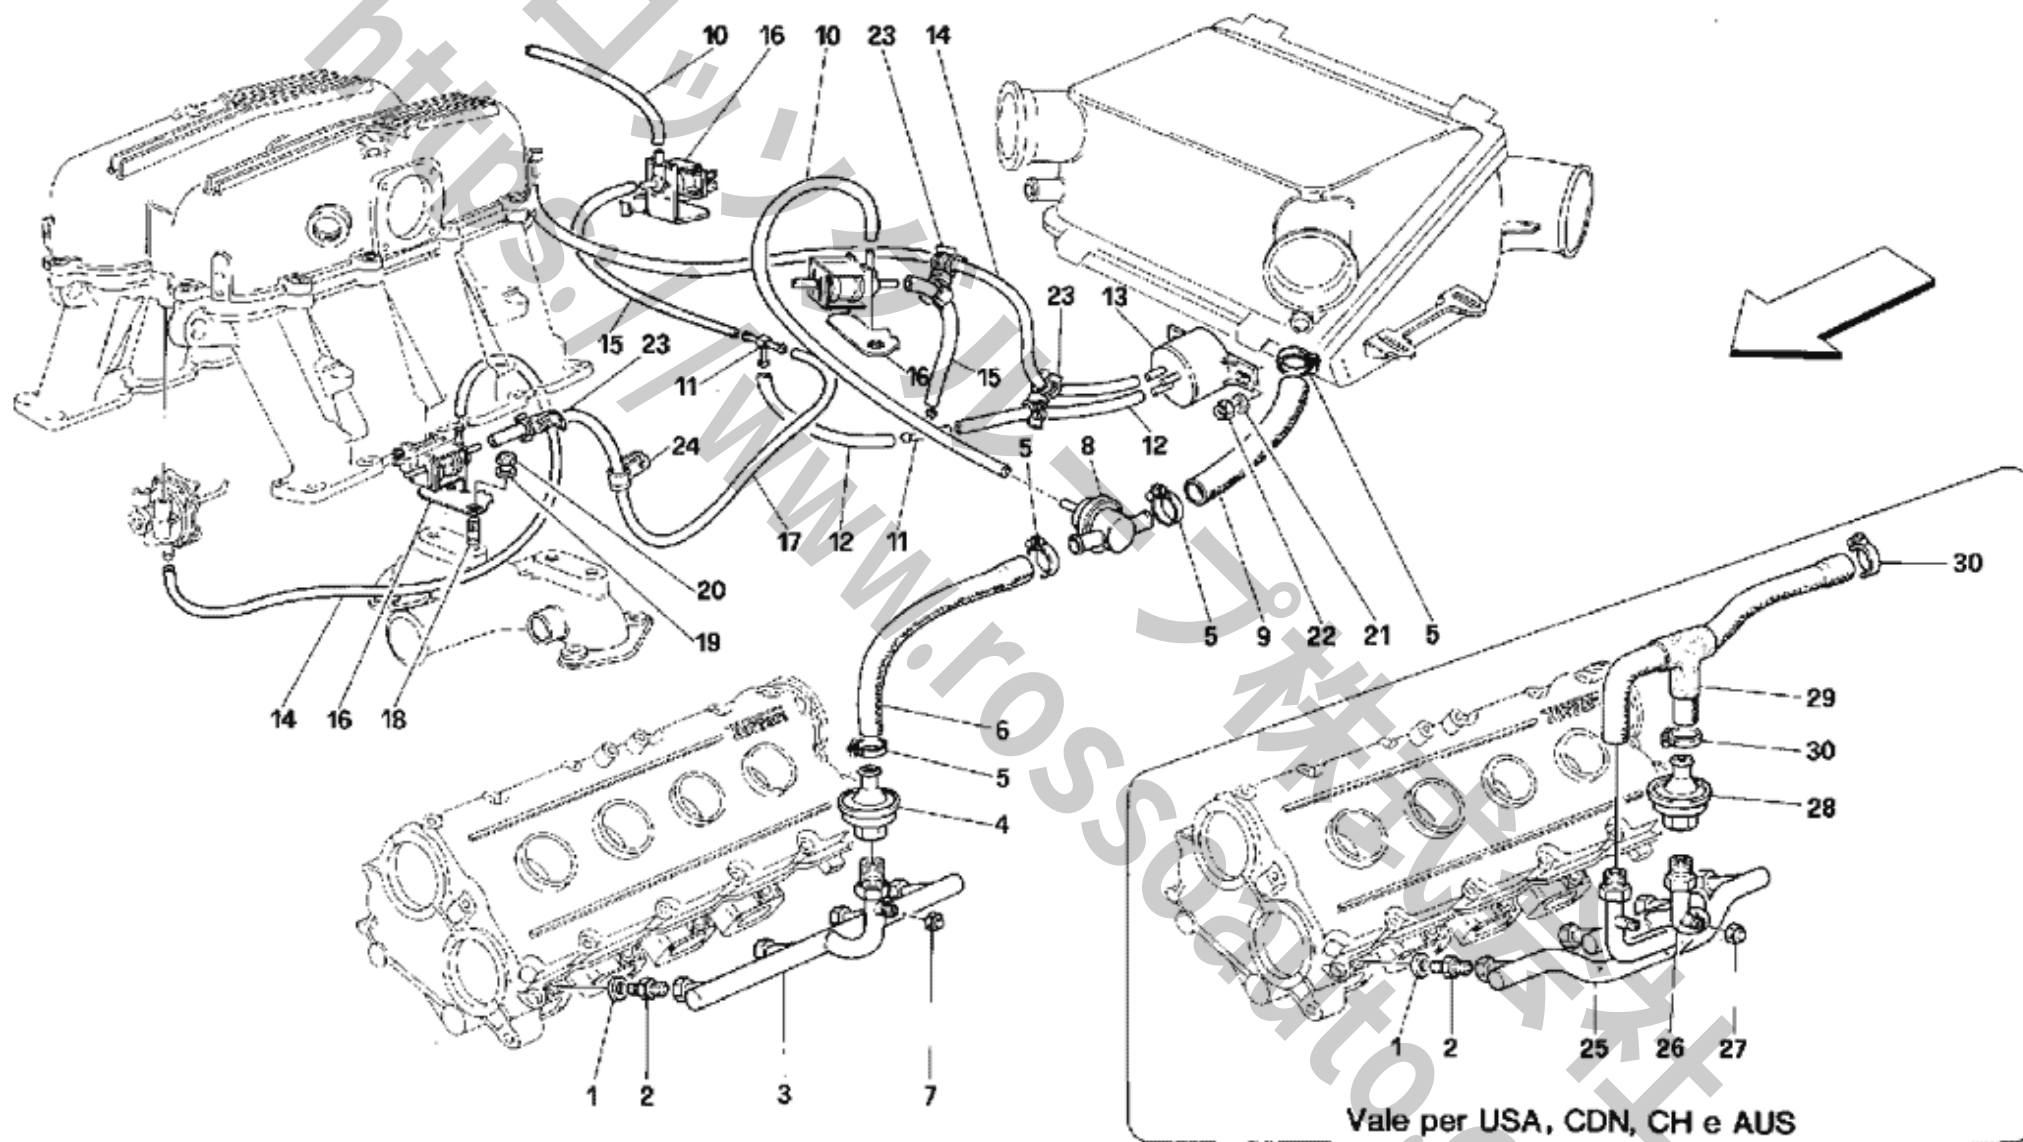


Vale per USA, CDN, CH e AUS
Valid for USA, CDN, CH and AUS

<008 Air Injection Device>

No.	Part No.	Name	Qty
1	10257060	GASKET	8
2	121718	UNION	8
3	141195	PIPE FOR AIR INLET	2
4	148494	NONRETURN VALVE	2
5	13000490	SCREW COLLAR	8
6	133962	AIR INLET SLEEVE	2
7	150595	NUT	2
8	147390	CUT-OFF-VALVE	2
9	116785	PIPE FROM CUT-OFF-TO-AIR INLET	2
10	128907	PIPE FROM 3-WAYS UNION TO R.H. AND LH. CUT-OFF	2
11	121793	UNION	2
12	115411	PIPE FROM 3-WAYS UNION TO SOLENOID VALVE	1
13	115411	PIPE FROM 3-WAYS UNION TO SOLENOID VALVE	1
14	111704	SOLENOID VALVE	1

<009 Fuel Pump and Pipes>

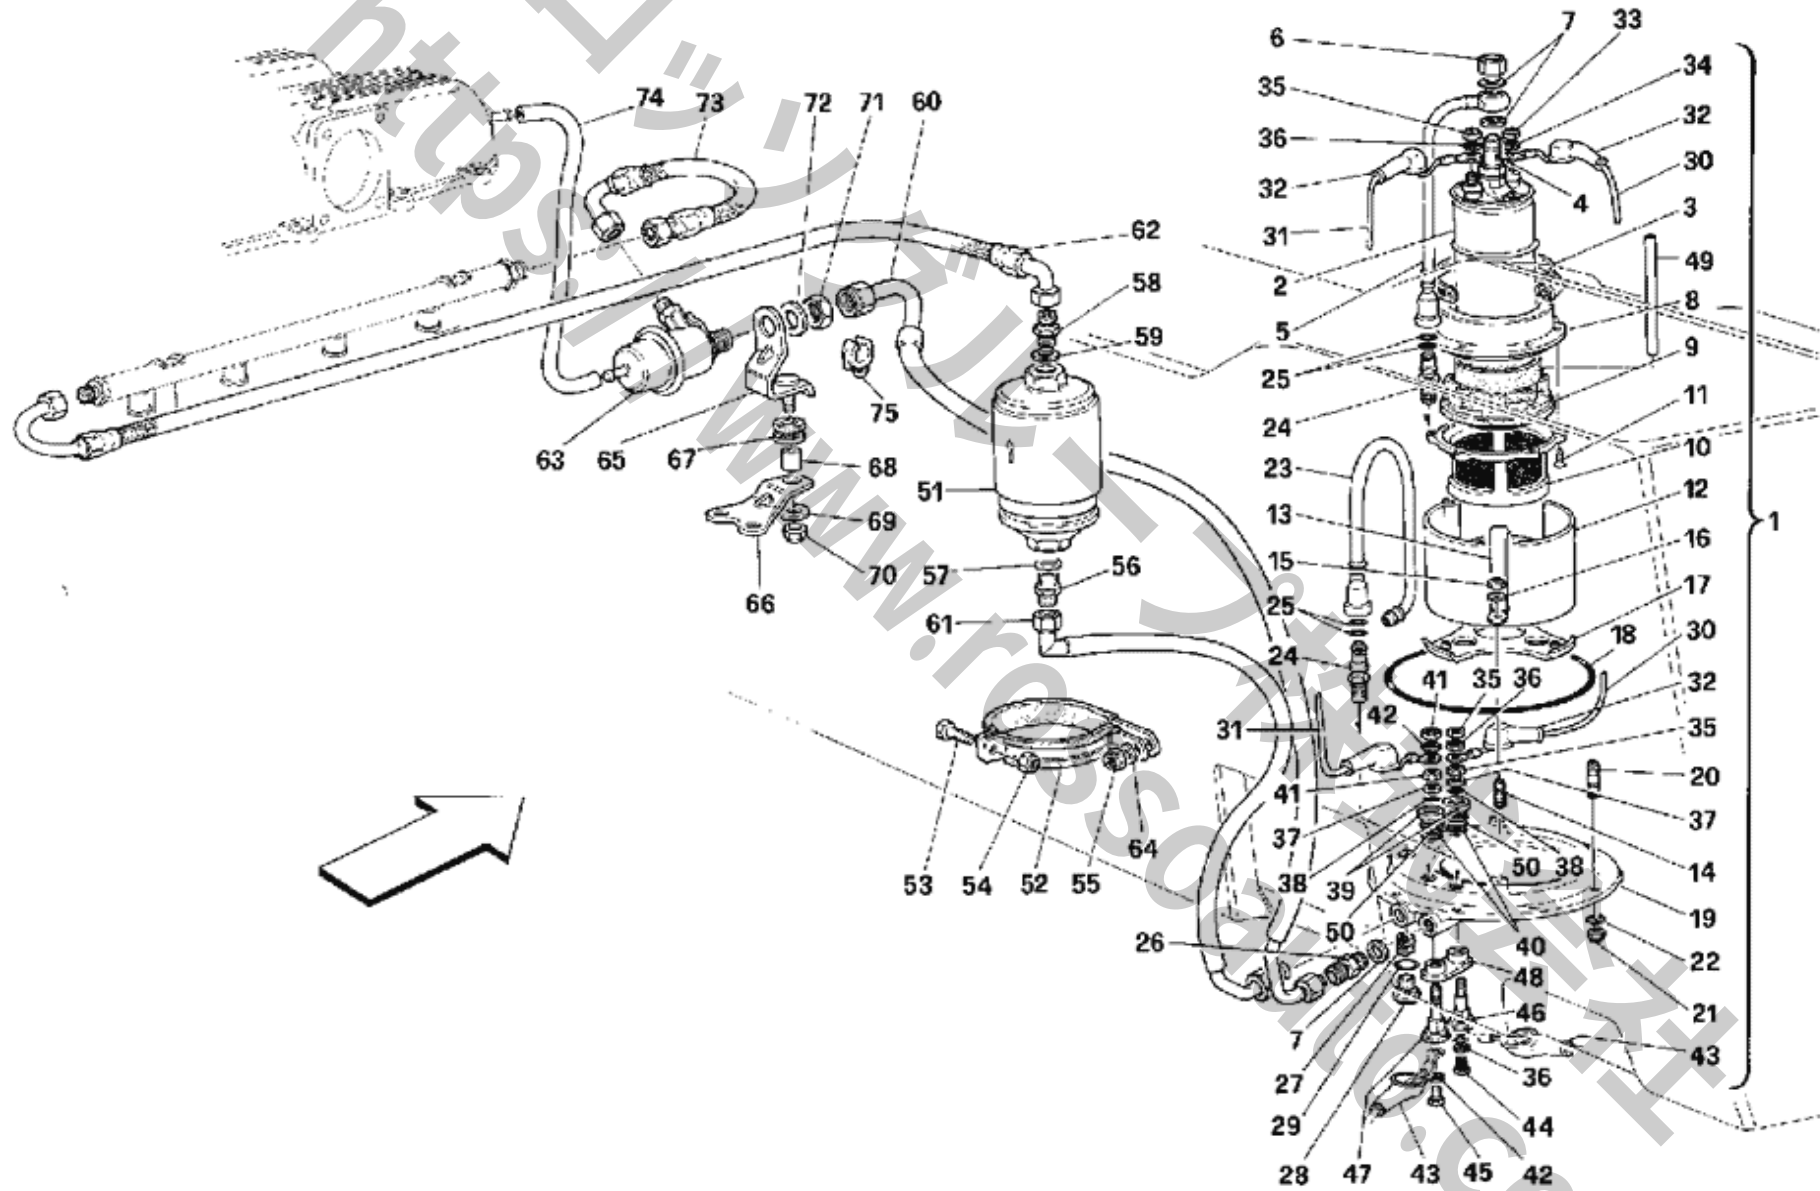


<009 Fuel Pump and Pipes>

No.	Part No.	Name	Qty
1	155699	COMPLETE FUEL PUMP	2
1	155699	COMPLETE FUEL PUMP	2
2	155592	FUEL PUMP Ø53	2
2	140317	FUEL PUMP Ø60	2
3	13000890	SCREW COLLAR	2
3	13000890	SCREW COLLAR	2
4	120098	NONRETURN VALVE	2
5	133967	FUEL PIPE	2
6	10183217	PLUG	2
7	11270160	GASKET	8
8	126810	FUEL FILTER COVER	2
9	144232	GASKET	2
9	126809	GASKET	2
10	126808	FILTER INSIDE CHAMBER	2
11	15671101	SCREW	12
12	126806	PAN	2
13	137577	BRACKET	4
13	137577	BRACKET	4
14	11000924	STUD	4
15	13677911	NUT	4
16	10730021	WASHER	4
17	126807	ANTI-VIBRATIONS	2
18	138453	GASKET	2
19	139454	FUEL PUMP COVER	2
20	11500221	STUD	16
21	19575491	NUT	16
22	12601274	WASHER	16
23	133968	FUEL FLOWING BACK PIPE	2
24	133950	UNION	4
25	133956	GASKET	8
26	127756	UNION	4
27	103388	THREADED INSERT	2
28	134713	PLUG	2
29	134233	GASKET	2
30	139519	POSITIVE CABLE	2
31	146660	NEGATIVE CABLE	2

31	146660 NEGATIVE CABLE	2
32	130146 BOOT	8
32	130146 BOOT	8
33	10794011 NUT	2
34	10615274 WASHER	2
35	15896470 NUT	6
36	149951 WASHER	6
37	10519401 WASHER	4
38	134701 GASKET	4
39	134672 BUSHING	4
40	134705 GASKET	4
41	15896211 NUT	4
42	12601374 WASHER	4
43	137612 BOOT	4
44	10856821 SCREW	2
45	11635721 SCREW	2
46	137611 MASS PIN	2
47	137610 MASS PIN	2
48	137613 OUTER FLANGE	2
49	139205 VENT PIPE	2
50	14456880 O.R. GASKET	2
51	117792 FUEL FILTER	2
52	126352 BRACKET	2
52	152885 BRACKET	2
52	152212 FUEL FILTER	2
53	10902324 SCREW	2
54	12575411 NUT	2
55	16104411 NUT	2
56	109889 UNION	2
57	10280060 GASKET	2
58	109797 UNION	2
59	11270160 GASKET	2
60	147291 FUEL TUBE FROM PRESSURE ADJUSTER TO LH. PUMP	1
60	147291 FUEL TUBE FROM PRESSURE ADJUSTER TO LH. PUMP	1
60	147290 FUEL TUBE FROM PRESSURE ADJUSTER TO R.H. PUMP	1
61	141746 FUEL PIPE FROM PUMP TO LH. FILTER	1
61	141724 FUEL PIPE FROM PUMP TO R.H. FILTER	1
62	143787 FUEL PIPE FROM L.H. FILTER TO L.H. FLUTE	1
62	143786 FUEL PIPE FROM R.H. FILTER TO R.H. FLUTE	1


63	141718 FUEL PIPE FROM PRESSURE ADJUSTER TO L.H. PUMP	1
63	141751 FUEL PIPE FROM PRESSURE ADJUSTER TO R.H. PUMP	1
64	139932 SLEEVE	2
65	13000190 SCREW COLLAR	4
66	14574287 CLIP	2
67	137960 PRESSURE REGULATOR	2
68	139428 L.H. BRACKET	1
68	139428 L.H. BRACKET	1
68	139427 R.H. BRACKET	1
69	101413 NUT	2
70	12601779 WASHER	2
71	149812 FUEL PIPE FROM FLUTE TO PRESSURE ADJUSTER	2
72	115042 PRESSURE ADJUSTER/COVER PIPE	2
72	115042 PRESSURE ADJUSTER/COVER PIPE	2
73	147281 PRESSURE REGULATOR	2
74	12646724 WASHER	2
75	148126 L.H. UPPER BRACKET	1
75	148125 R.H. UPPER BRACKET	1
75	148125 R.H. UPPER BRACKET	1
76	148124 LOWER BRACKET	2
77	103549 CABLE GROMMET	2
78	103550 SPACER	2
79	106744 WASHER	2
80	12575411 NUT	2

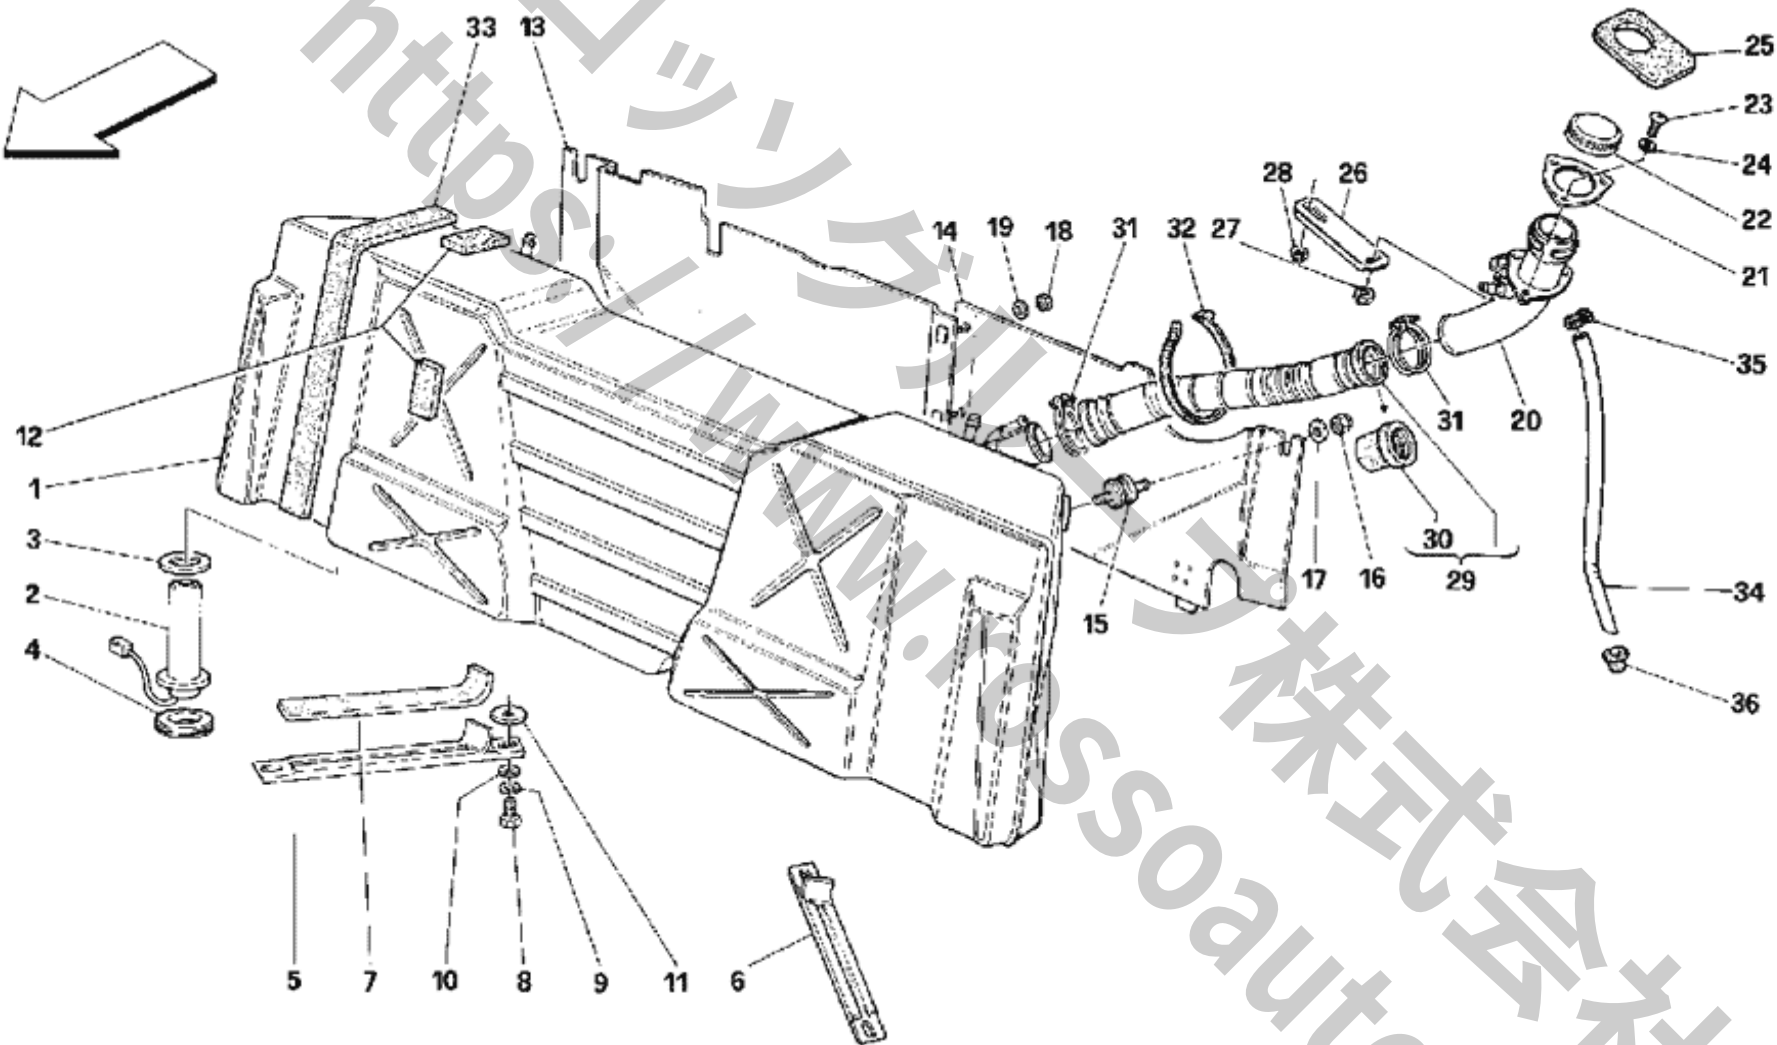

<010 Fuel Tank>

No.	Part No.	Name	Qty
1	133961	FUEL TANK	1
1	153684	FUEL TANK	1
2	146648	FUEL LEVEL INDICATOR CONTROL	1
3	154802	GASKET	1
4	121435	RING NUT	1
5	135035	R.H. SUPPORT	1
5	135035	R.H. SUPPORT	1
6	135036	L.H. SUPPORT	1
7	125035	RUBBER THICKNESS	2
7	125035	RUBBER THICKNESS	2
8	15970721	SCREW	4
9	127497	WASHER	4
10	14496621	WASHER	4
11	140745	SPACER WASHER MM. 2	1
11	140746	SPACER WASHER MM. 3	1
11	140747	SPACER WASHER MM. 4	1
12	127403	RUBBER THICKNESS	4
13	146308	R.H. PANEL	1
13	146310	R.H. PANEL	1
14	146310	L.H. PANEL	1
15	137994	ANTI-VIBRATION SUPPORT	2
16	12575611	NUT	2
17	12644301	WASHER	2
18	12577811	NUT	3
19	12638101	WASHER	3
20	133954	FILLTUBE	1
20	141504	FILLTUBE	1
20	142994	FILLTUBE	1
20	144646	FILLTUBE	1
21	123897	GASKET	1
22	175708	PLUG	1
23	62926700	SCREW	3
24	12601274	WASHER	3


<011 Antievaporation Device>

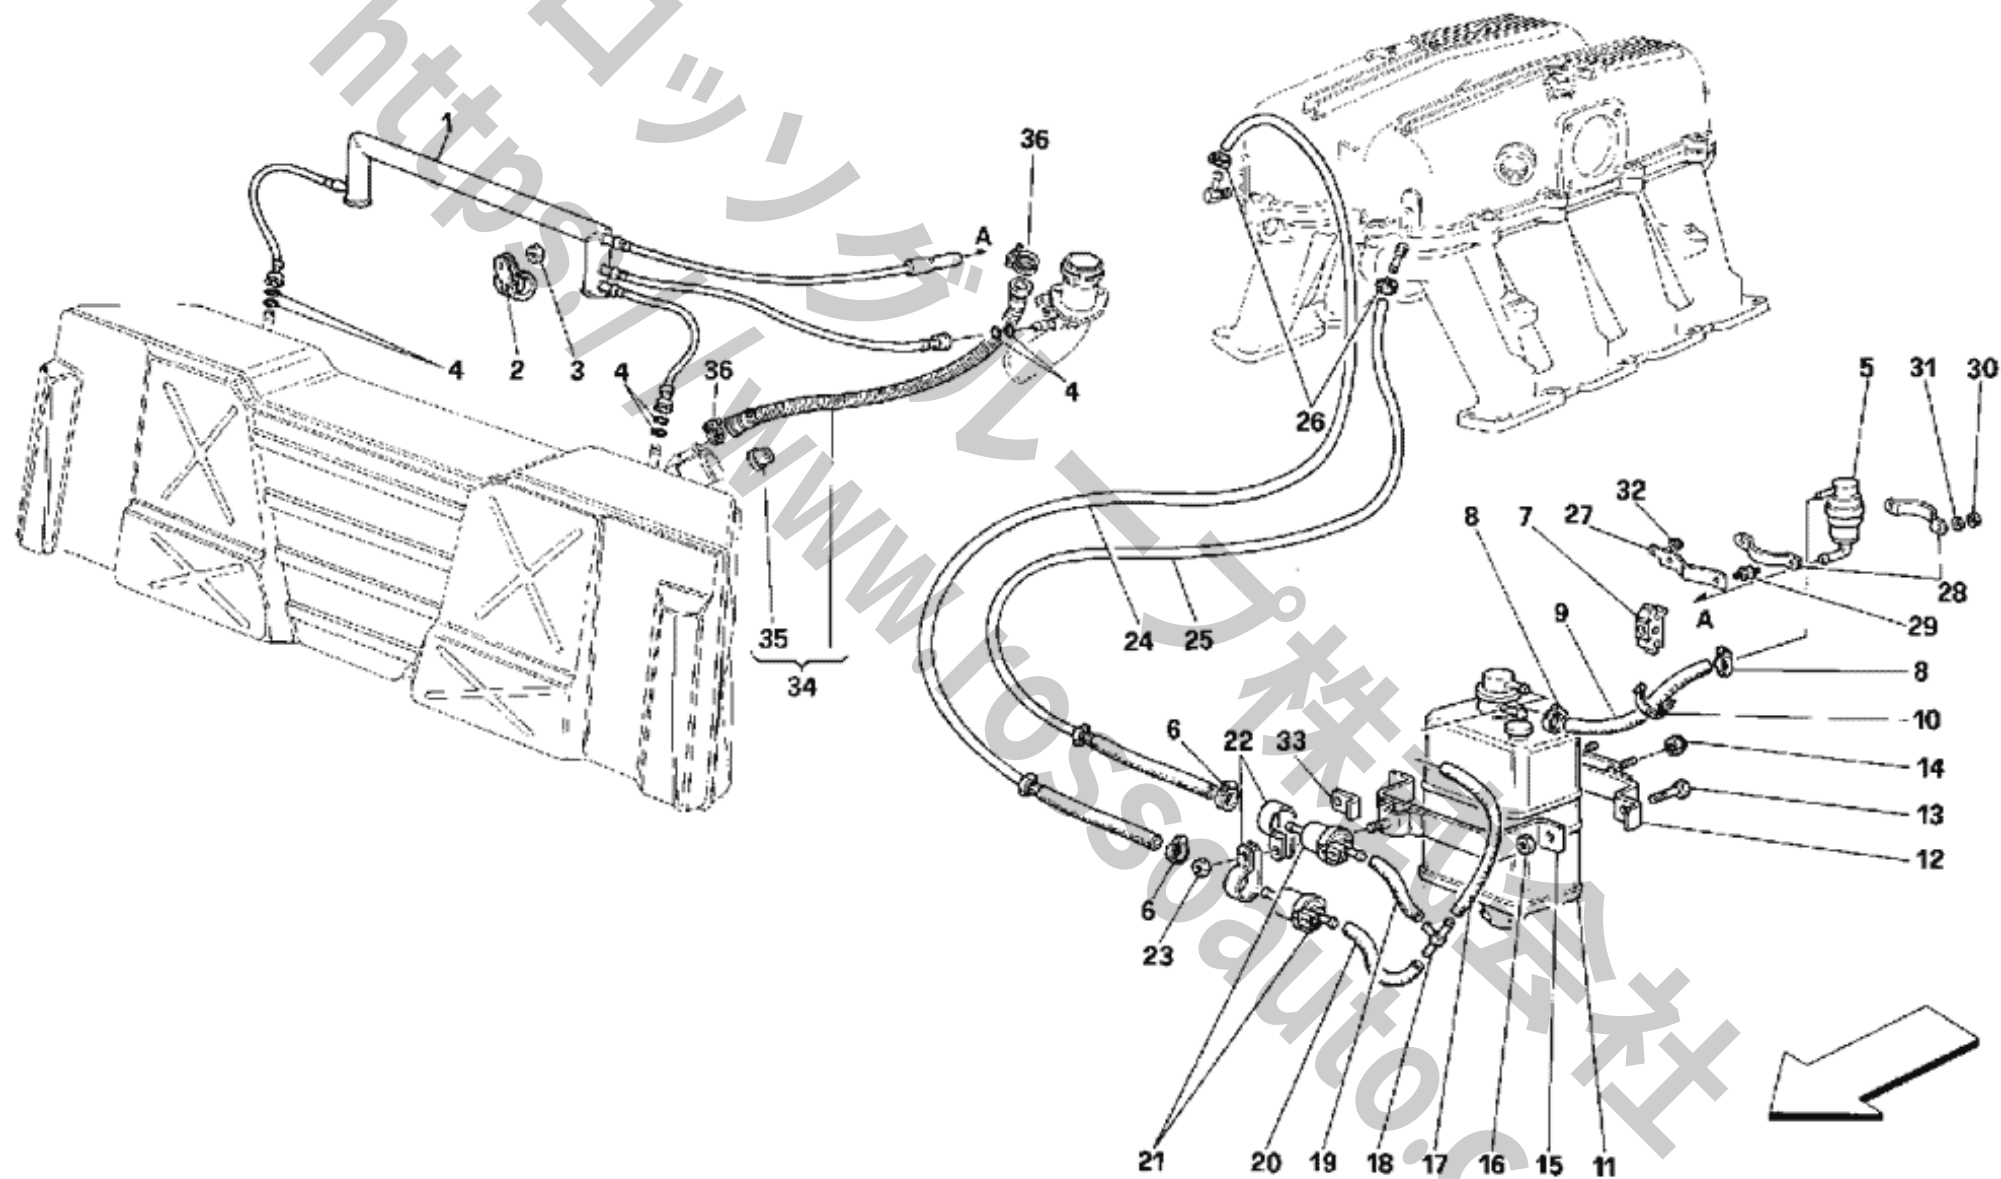

<011 Antievaporation Device>

No.	Part No.	Name	Qty
1	141547	VENT PIPE	1
1	142997	VENT PIPE	1
2	133956	O.R GASKET	6
3	144467	CLIP	2
3	144467	CLIP	2
4	12646601	WASHER	2
5	12575411	NUT	2
6	141699	CLIP	4
7	12181290	SCREW COLLAR	2
8	142106	GASKET	2
9	142104	VENT PIPE FROM TANK TO UNION	1
10	149438	BRACKET	1
11	149437	BRACKET	2
12	139568	ANTI-TILTING VALVE	1
13	141704	VENT PIPE FROM UNION TO VALVE	1
14	13000190	SCREW COLLAR	
14	13000190	SCREW COLLAR	1
15	14058411	NUT	2
16	14496401	WASHER	2
17	10418801	BRACKET	2
17	10418801	BRACKET	2
18	11944511	SCREW	2
19	62807100	VENT PIPE	1
20	10396880	CABLE GROMMET	1
21	141258	VENT PIPE FROM VALVE	1
22	113021	PAD	2
23	15896470	NUT	4
24	127493	WASHER	4
25	12575411	NUT	1

<012 Manifolds and Covers>

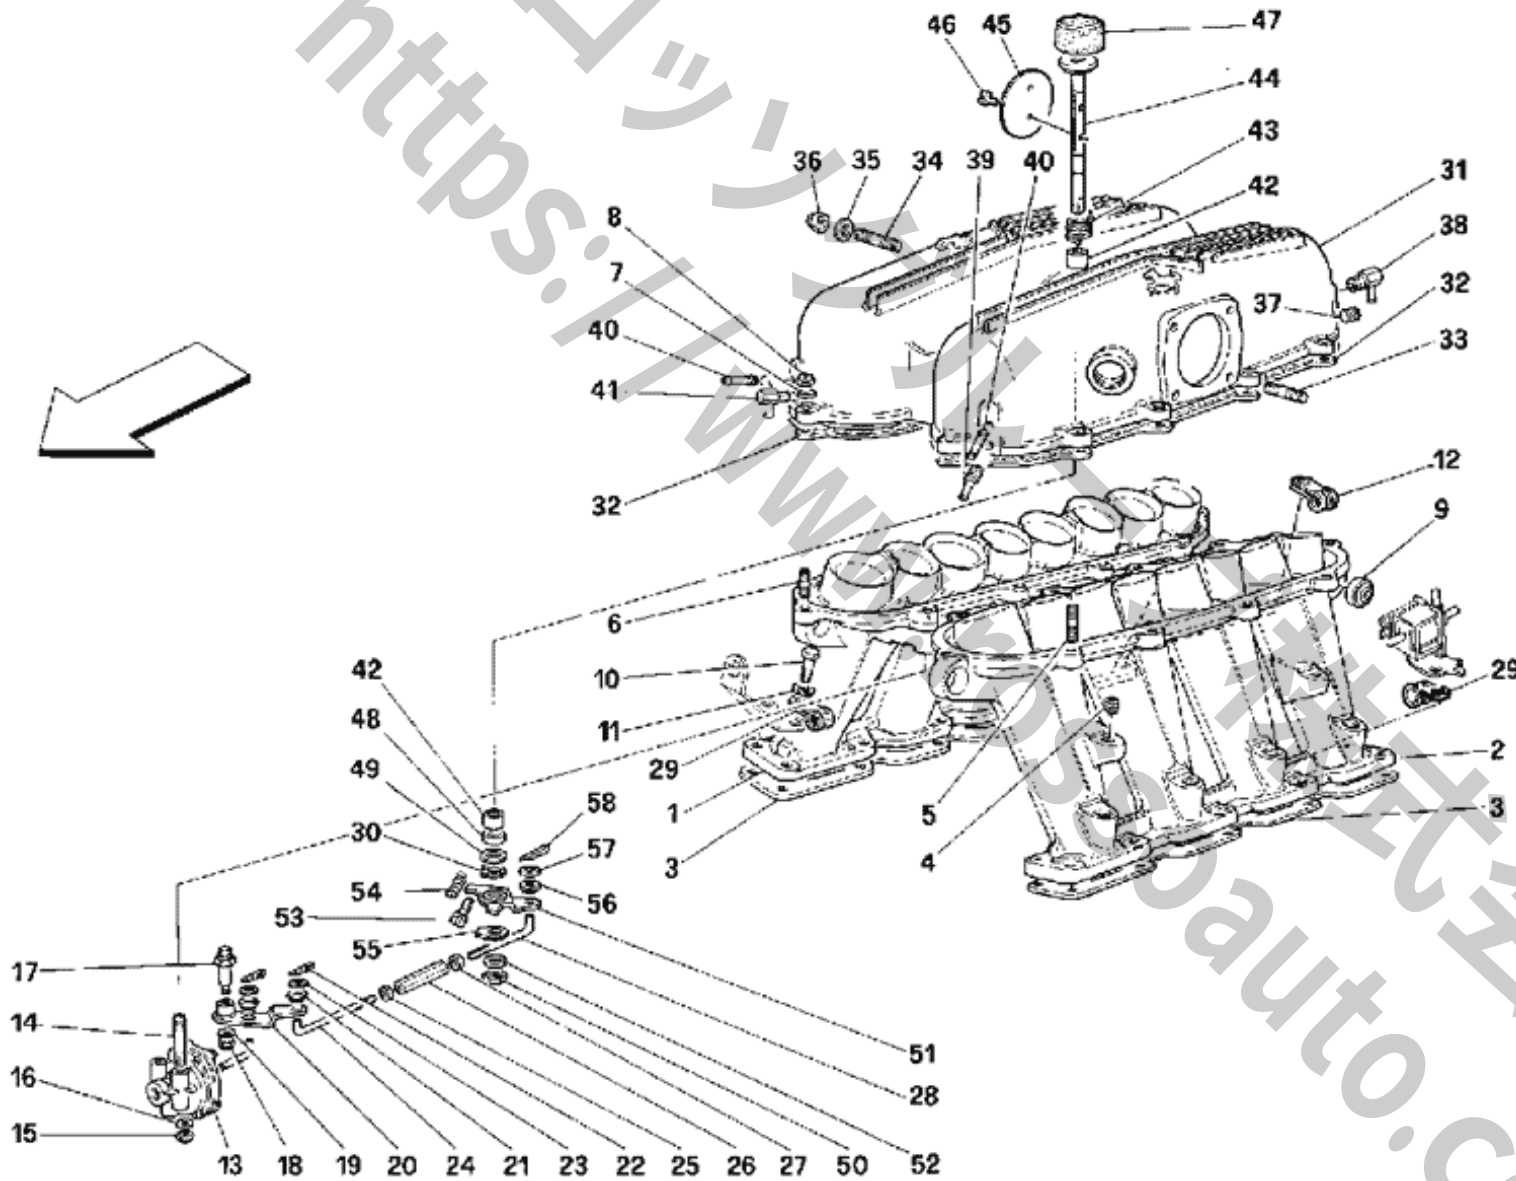


<012 Manifolds and Covers>

No.	Part No.	Name	Qty
0	149503	COMPLETE R.H. SUCTION MANIFOLD	1
1	149504	COMPLETE LH. SUCTION MANIFOLD	1
1		R.H. SUCTION MANIFOLD	1
2		LH. SUCTION MANIFOLD	1
3	138029	GASKET	2
3	138029	GASKET	2
4	13525770	THREADED INSERT	4
5	143307	STUD	2
6	11500321	STUD	18
7	12601274	WASHER	20
8	101239	NUT	20
9	100424	BALL JOINT	2
10	16043721	SCREW	20
11	12601374	WASHER	20
12	10450690	BRACKET	1
13	136815	PNEUMATIC CAPSULE	1
14	11001721	STUD	2
15	12577811	NUT	2
16	14496301	WASHER	2
17	137277	STUD	1
18	12577811	NUT	1
19	10730021	WASHER	1
20	137135	LEVER	1
21	137271	BUSHING	2
22	10794501	SPLIT PIN	2
23	14496201	WASHER	2
24	137270	L.H. THREAD TIE ROD	1
25	10791111	L.H. THREAD NUT	1
26	137273	ADJUSTMENT SLEEVE	1
27	10794011	R.H. THREAD NUT	1
28	137276	R.H. THREAD TIE ROD	1
29	10450590	BRACKET	3
30	149505	COMPLETE SUCTION MANIFOLDS COVER	1
30	11065676	SEEGER RING	1
31		SUCTION MANIFOLDS COVER	1
32	138045	GASKET	2

33	11500421 STUD	4
34	13541124 STUD	4
35	14496401 WASHER	8
36	101239 NUT	8
37	141563 PLUG	3
38	128016 UNION	1
39	142507 UNION	1
40	117348 UNION	2
41	142511 UNION	1
42	136922 BUSHING	2
43	138169 SPRING	1
44	138173 BUTTERFLY CONTROL SHAFT	1
45	137280 AIR ADJUSTING THROTTLE	1
46	136923 SCREW	2
47	139373 PROTECTION BOOT	1
48	129269 SEAL RING	2
49	136921 WASHER	1
50	137134 THROTTLE CONTROL LEVER	1
51	154270 THROTTLE CONTROL LEVER	1
52	136924 SCREW	1
53	153399 SCREW	1
54	153400 SPRING	1
55	113566 SAFETY PLATE	1
56	137271 BUSHING	1
57	14496201 WASHER	1
58	10794501 SPLIT PIN	1
59	141563 PLUG	1
60	14326150 PLUG	1
61	137126 WASHER	1
62	16102311 NUT	1


<013 Air Intake>

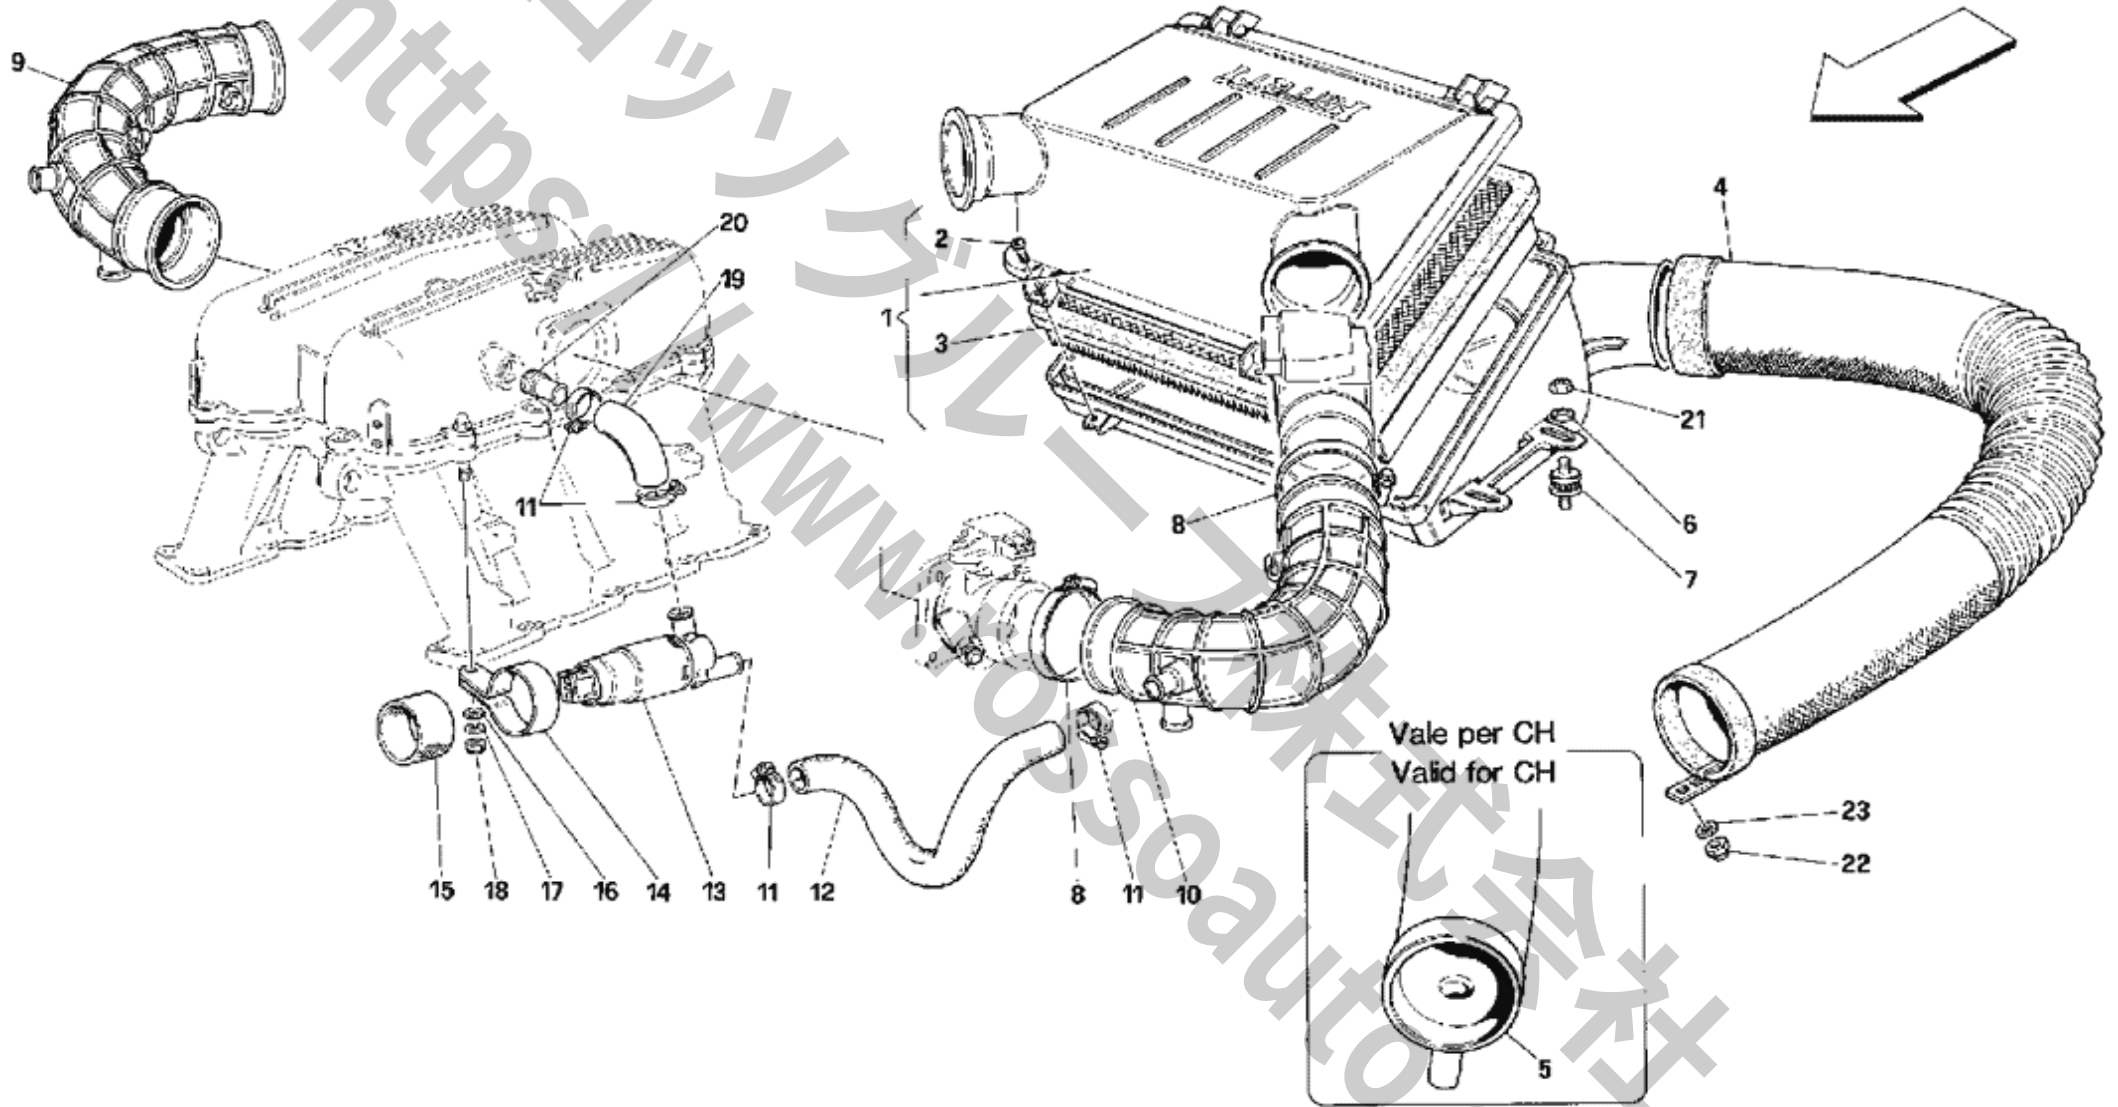

<013 Air Intake>

No.	Part No.	Name	Qty
1	142054	COMPLETE AIR INTAKE	1
1	142054	COMPLETE AIR INTAKE	1
1	144090	COMPLETE AIR INTAKE	1
2	10376577	SCREW	4
3	155871/A	AIR FILTER	1
3	133180	AIR FILTER	1
3	155871	AIR FILTER	1
4	142402	AIR INLET CONNECTION PIPE	2
5	143882	AIR INLET CONNECTION PIPE	2
6	10519424	WASHER	8
7	102947	PAD	4
8	12177290	SCREW COLLAR	4
9	143257	R.H. SLEEVE	1
10	143236	L.H. SLEEVE	1
11	13000490	SCREW COLLAR	8
12	143201	L.H. PIPE TO REGULATUR	1
12	143202	R.H. PIPE TO REGULATOR	1
13	142432	REGULATOR FOR IDLE ADJUSTMENT	2
14	143294	L.H. BRACKET	1
14	143301	R.H. BRACKET	1
15	143291	SLEEVE	2
16	14496401	WASHER	2
17	127494	WASHER	2
18	15896211	NUT	2
19	143270	PIPE FROM REGULATOR TO AIR PLENUM CHAMBER	2
20	143286	UNION	2
21	12574211	NUT	8
22	12575411	NUT	1
23	14496401	WASHER	1

<014 Throttle Housing and Linkage>

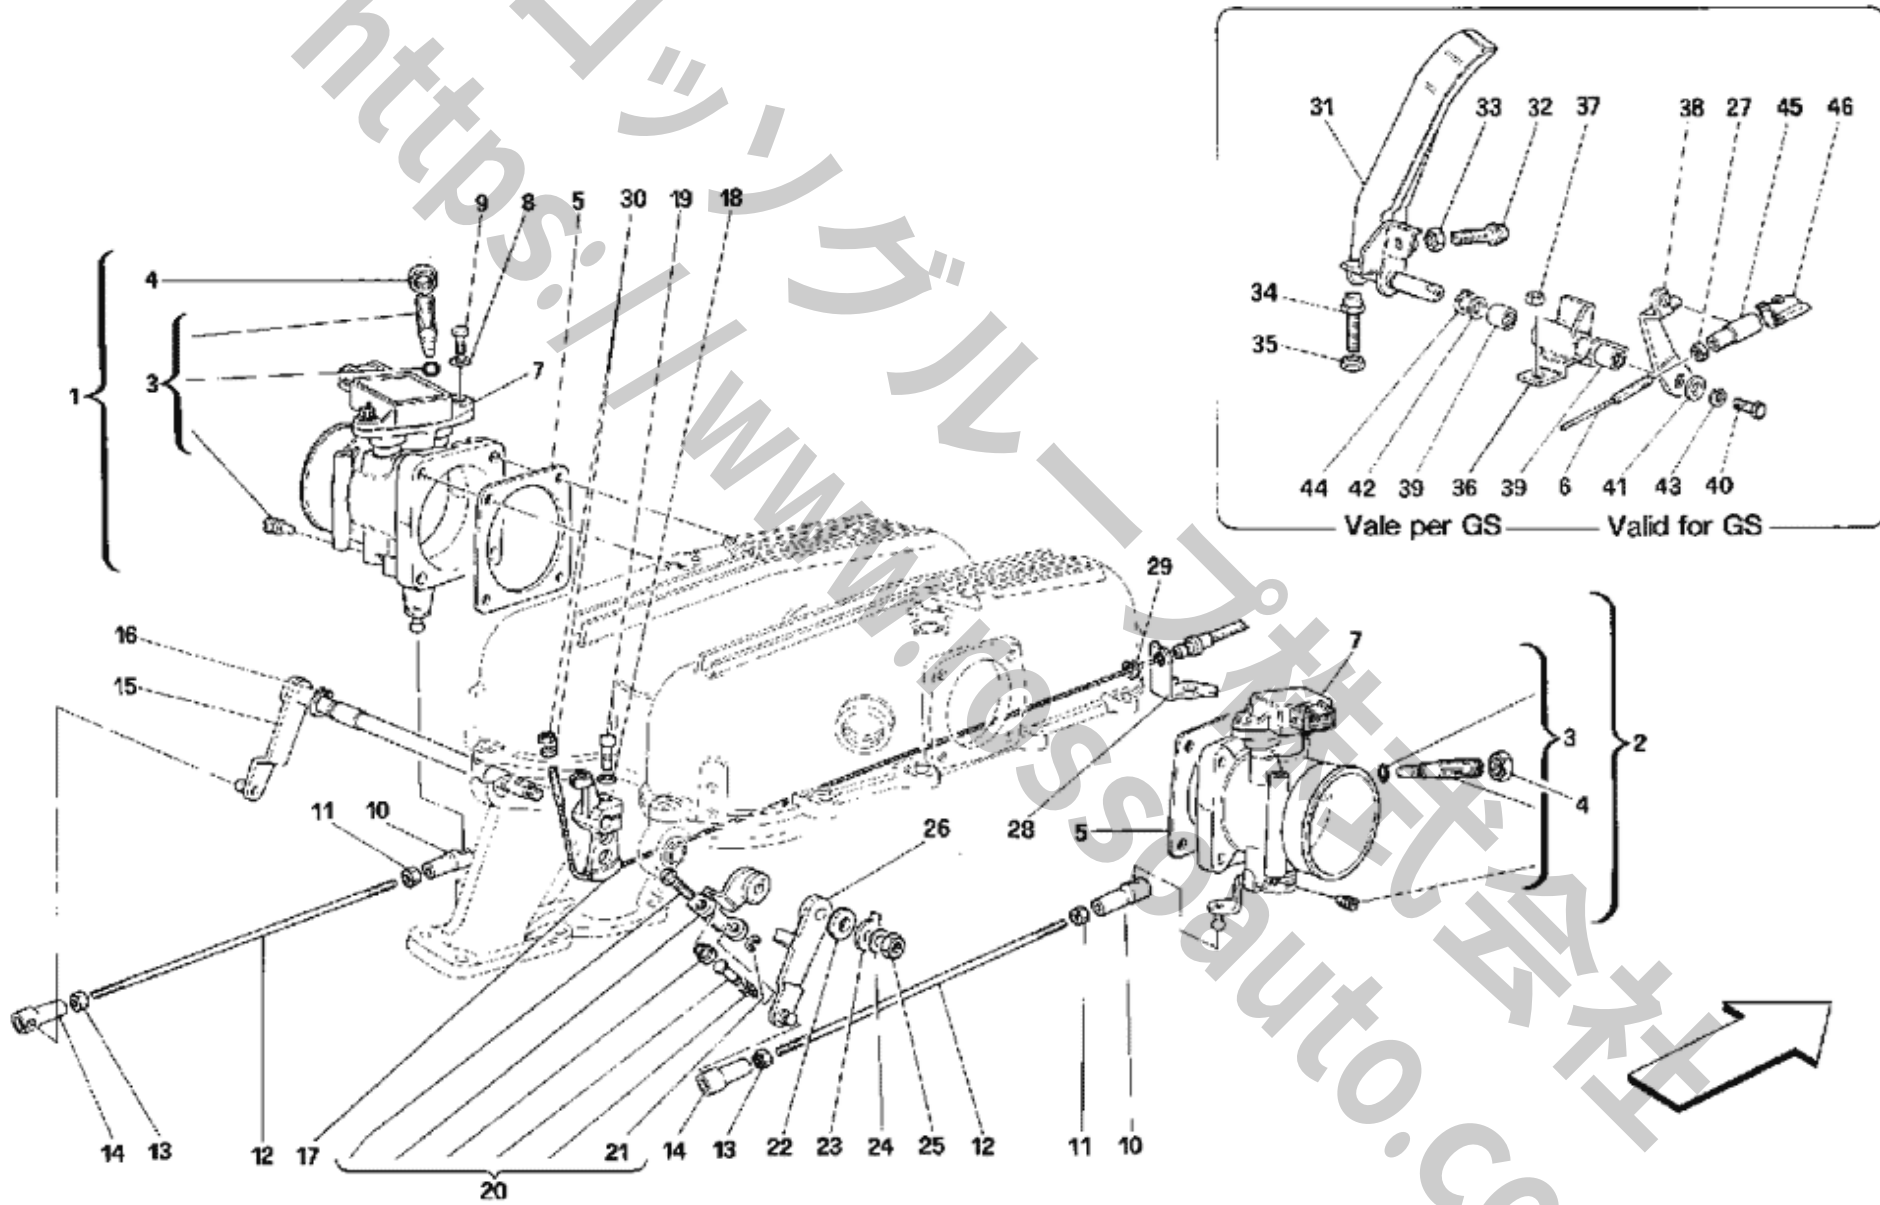


<014 Throttle Housing and Linkage>

No.	Part No.	Name	Qty
1	139531	COMPLETE R.H. THROTTLE HOLDER	1
1	142498	COMPLETE R.H. THROTTLE HOLDER	1
2	142499	COMPLETE L.H. THROTTLE HOLDER	1
2	139532	COMPLETE LH. THROTTLE HOLDER	1
3	70000610	ADJUSTMENT KIT FOR THROTTLE BODY	2
4	11691311	NUT	2
5	136919	GASKET	2
6	130974	MICRO-SWITCH	1
7	158170	POTENTIOMETER FOR THROTTLE VALVE	2
8	12601070	WASHER	4
9	10444521	SCREW	4
10	105617	R.H THREAD SPHERIC HEAD	2
11	15896470	R.H THREAD NUT	2
12	139551	TIE ROD	2
13	105586	L.H THREAD NUT	2
14	105619	L.H THREAD SPHERIC HEAD	2
15	139925	TRANSMISSION SPINDLE FOR BUTTERFLY CONTROL	1
16	11065976	FLEXIBLE RING	2
17	139923	THROTTLE CONTROL ECCENTRIC	1
18	12639701	WASHER	1
19	14432221	SCREW	1
20	137054	BUTTERFLY SYNCHRONIZATION	1
21	11087571	FLEXIBLE RING	1
22	137053	SPACER	1
23	113566	SAFETY PLATE	1
24	13550301	WASHER	1
25	16102311	NUT	1
26	139929	DRIVEN LEVER	1
27	15896470	NUT	1
28	138422	BRACKET	1
29	11087974	FLEXIBLE RING	1
30	10725011	NUT	2
31	137569	ACCELERATOR PEDAL	1
32	123961	PIN	1
33	16102311	NUT	1
34	137012	PIN	1

35	16102311 NUT	1
36	137009 ACCELERATOR SUPPORT	1
37	16104111 NUT	2
38	145425 ACCELERATOR LEVER	1
39	101677 BEARING	2
40	10902221 SCREW	1
41	106744 WASHER	1
42	108576 SPACER WASHER	1
42	105931 SPACER WASHER	1
43	127494 WASHER	1
44	11066076 SEEGER RING	1
45	10123811 BALL JOINT HEAD	1
46	10124776 CLIP	1
47	137578 ACCELERATOR CABLE	1
47	153698 ACCELERATOR CABLE	1
47	138252 ACCELERATOR CABLE	1
47	138252 ACCELERATOR CABLE	1

<015 Exhaust System -Not for USA, CDN, CH, AUS->

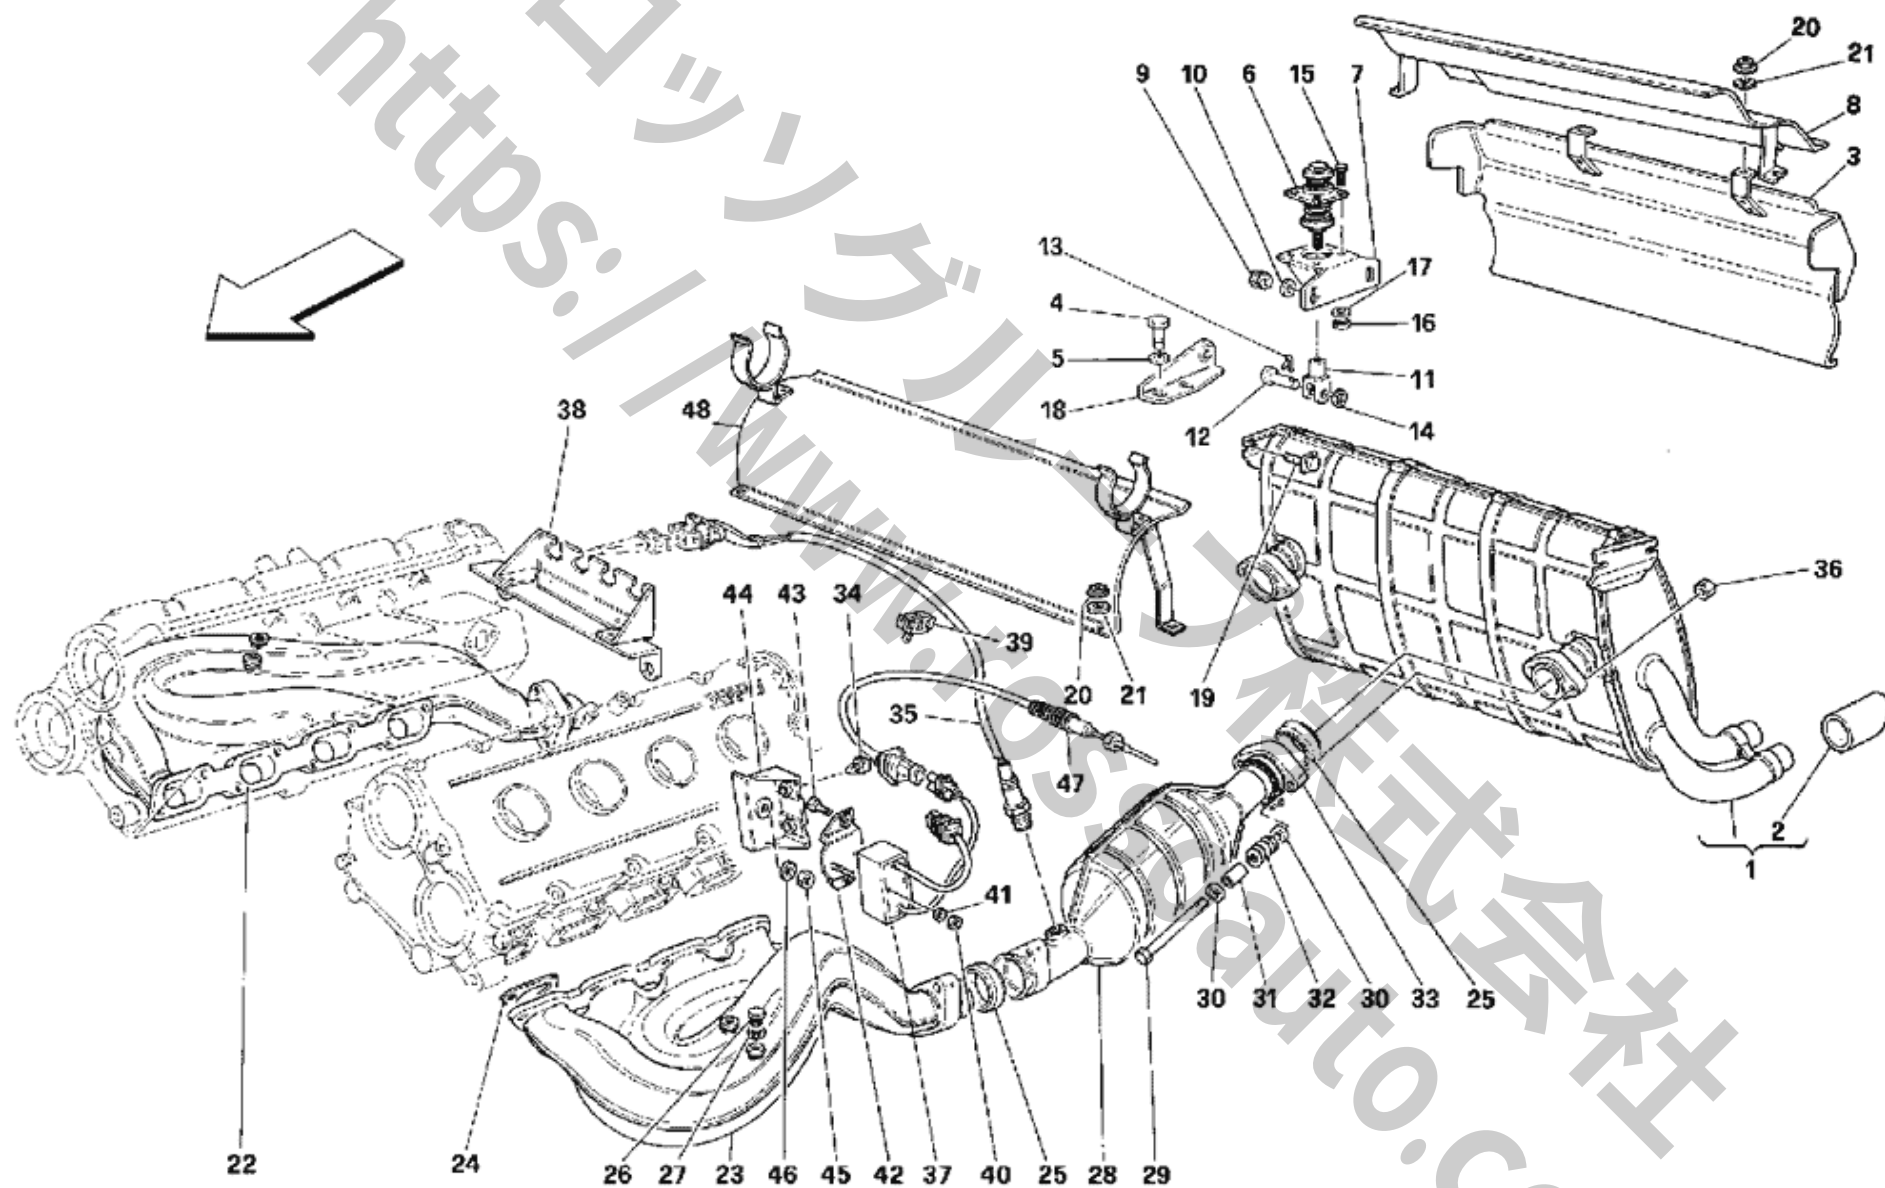


<015 Exhaust System -Not for USA, CDN, CH, AUS->

No.	Part No.	Name	Qty
1	136278	REAR SILENCER	1
1	157351/S	STAINLESS STEEL EXHAUST	1
2	136894	TERMINAL COVER	4
3	136277	FRONT MUFFLER	1
4	154984	GASKET	2
5	137431	SCREW	4
6	128010	WASHER	8
7	114749	SPACER	4
8	111743	SPRING	4
9	62663300	EXHAUST PROTECTION PANEL	1
10	114748	NUT	4
11	16043421	SCREW	2
12	128010	WASHER	4
13	114748	NUT	2
14	136877	BRACKET	2
15	139180	PAD	2
16	10977624	SCREW	8
17	15896470	NUT	8
18	127493	WASHER	8
19	137534	SCREW	4
20	114748	NUT	4
21	128010	WASHER	4
22	10007871	FORK	2
23	10050811	PIN	2
24	10519624	WASHER	2
25	10734301	SPLIT PIN	2
26	145741	SMALL PLATE	2
27	16043221	SCREW	4
28	127496	WASHER	4
29	14058411	NUT	5
30	12644421	WASHER	5
30	12644421	WASHER	5
31	136275	R.H. EXHAUST MANIFOLD	1
32	136276	L.H. EXHAUST MANIFOLD	1
33	138076	GASKET	8
34	154984	GASKET	4

35	110860 PLUG	4
36	10298460 GASKET	4
37	141006 EXTENSION BETWEEN MANIFOLD AND SILENCER	2
38	144240 UNION	2
39	150595 NUT	2
40	137431 SCREW	8
41	128010 WASHER	16
42	114749 SPACER	8
43	111743 SPRING	8
44	143871 EXHAUST PRE-MUFFLER	2

https://www.rossoauto.com 株式会社

<016 Exhaust System -Valid for USA and CDN->

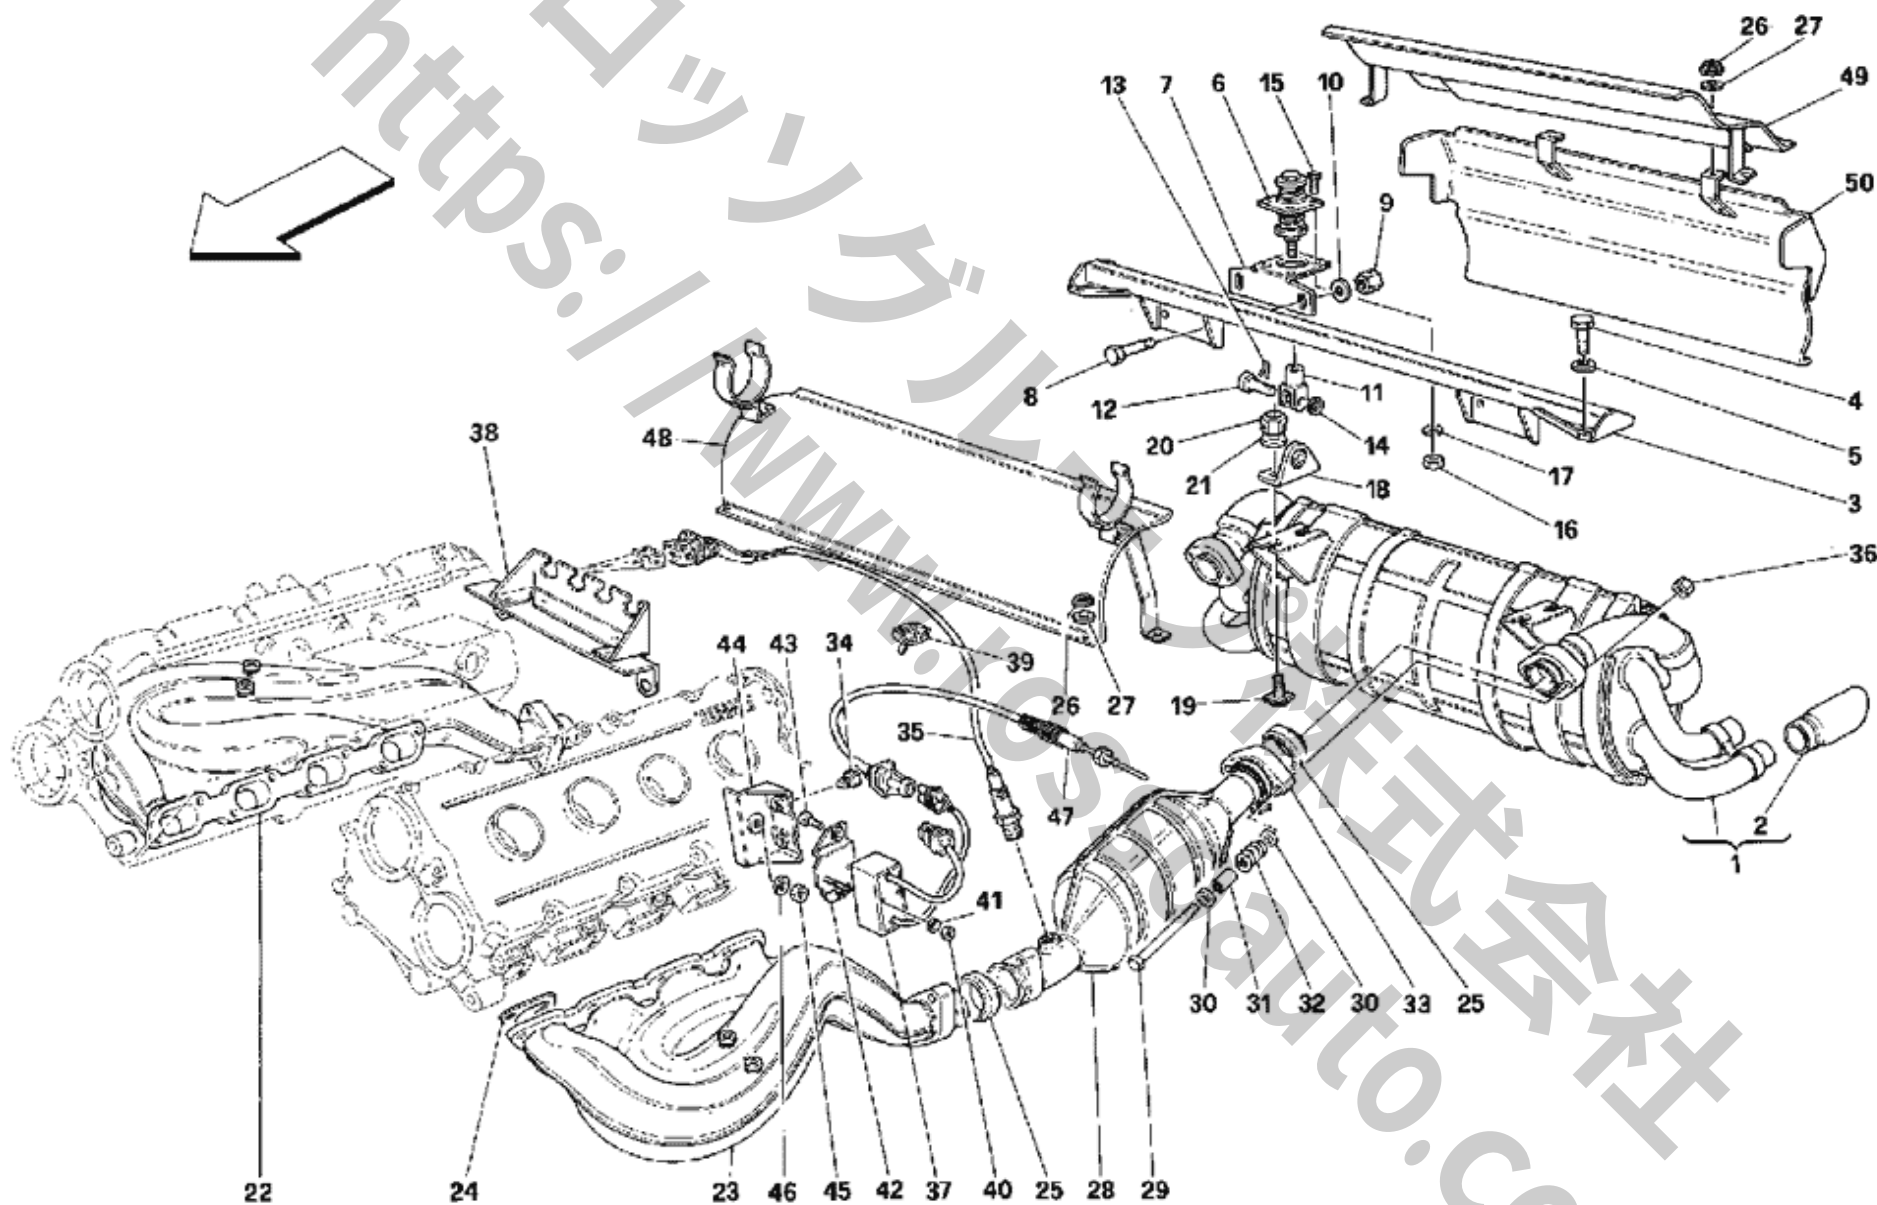


<016 Exhaust System -Valid for USA and CDN->

No.	Part No.	Name	Qty
1	156072	EXHAUST SILENCER	1
2	157096	TERMINAL COVER	4
3	156442	CROSSRAIL ASSEMBLY	1
4	16043221	SCREW	2
5	127496	WASHER	2
6	139180	PAD	2
7	136877	BRACKET	2
8	16043424	SCREW	4
9	114748	NUT	4
10	128010	WASHER	4
11	10007871	FORK	2
12	10050811	PIN	2
13	10734301	SPLIT PIN	2
14	10519624	WASHER	2
15	10977624	SCREW	8
16	15896470	NUT	8
17	127493	WASHER	8
18	145741	SMALL PLATE	2
19	137534	SCREW	4
20	114748	NUT	4
21	128010	WASHER	4
22	136275	R.H. EXHAUST MANIFOLD	1
22	149947	R.H. EXHAUST MANIFOLD	1
23	136276	L.H. EXHAUST MANIFOLD	1
24	138076	GASKET	8
25	154984	GASKET	4
26	110860	THREADED PLUG	8
27	10298460	GASKET	4
28	160506	CATALYST	2
28	134002	L.H. CATALYST	1
28	134002	L.H. CATALYST	1
28	134001	R.H. CATALYST	1
28	160506	RH/LH CATALYST	2
29	137431	SCREW	8
30	128010	WASHER	16
31	114749	SOACER	8

32	111743 SPRING	8
33	141874 FLANGED STUB PIPE	2
34	144036 CLIP	4
35	146650 OXYGEN SENSOR	2
36	114748 NUT	8
37	142581 CONTROL STATION	2
38	145487 BRACKET	1
39	145473 CLIP	2
40	12574011 NUT	4
40	12574011 NUT	4
41	14496201 WASHER	4
42	62844200 BRACKET FOR CONTROL UNIT	2
43	10444621 SCREW	4
44	143851 SUPPORT	2
45	12575411 NUT	2
46	12639701 WASHER	2
47	144270 THERMOCOUPLE	2
47	144270 THERMOCOUPLE	2
48	62663300 EXHAUST PROTECTION PANEL	1
48	62663300 EXHAUST PROTECTION PANEL	1
49	63006500 UPPER REAR SHIELD	1
50	63547900 BUMPER PROTECTION SHIELD	1
51	14058411 NUT	9
52	12644421 WASHER	9

<017 Exhaust System -Valid for CH and AUS->

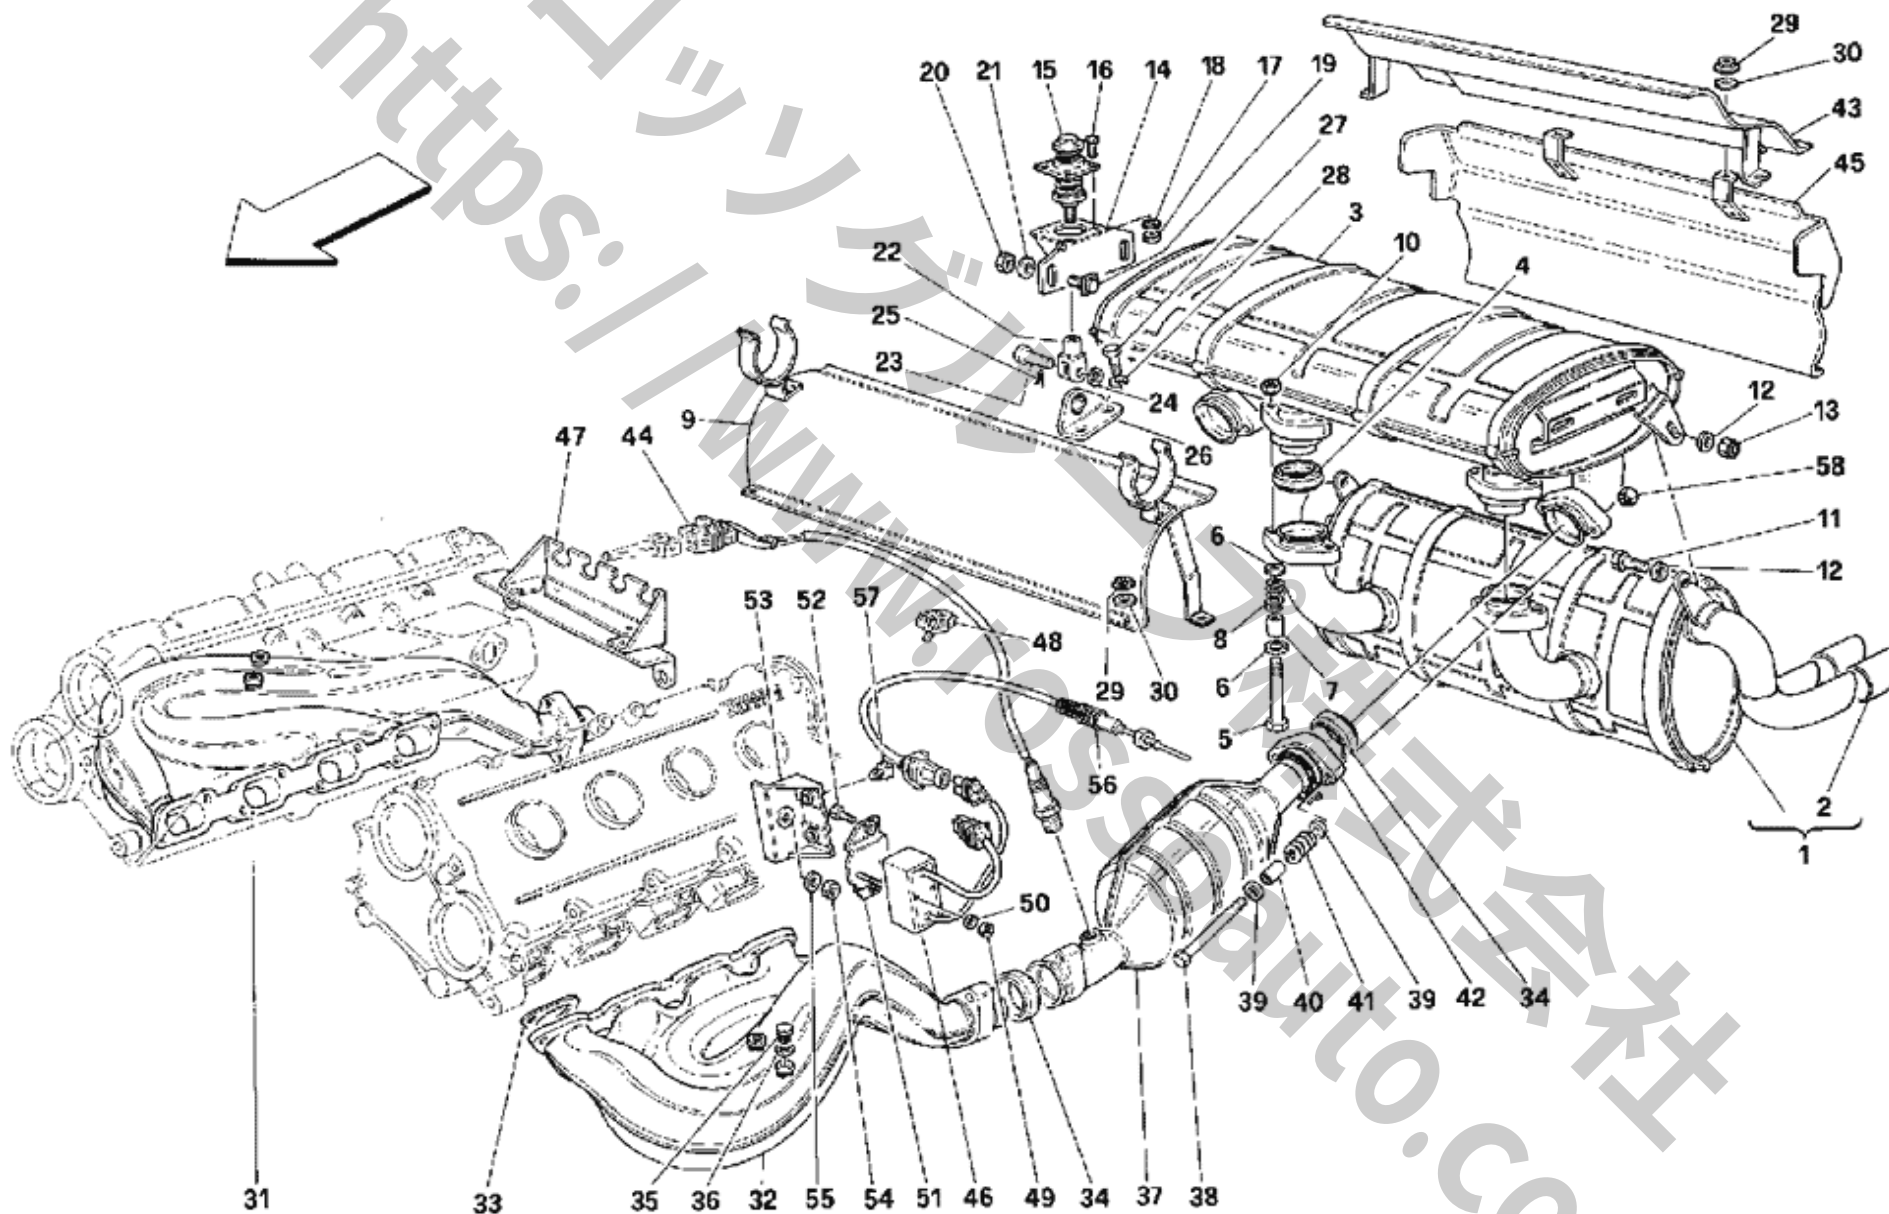


<017 Exhaust System -Valid for CH and AUS->

No.	Part No.	Name	Qty
1	136278	REAR SILENCER	1
1	157351/S	STAINLESS STEEL EXHAUST	1
2	136894	TERMINAL COVER	4
3	136277	FRONT MUFFLER	1
4	154984	GASKET	2
5	137431	SCREW	4
6	128010	WASHER	8
7	114749	SPACER	4
8	111743	SPRING	4
9	62663300	EXHAUST PROTECTION PANEL	1
10	114748	NUT	4
11	16043421	SCREW	2
12	128010	WASHER	4
13	114748	NUT	2
14	136877	BRACKET	2
15	139180	PAD	2
16	10977624	SCREW	8
17	15896470	NUT	8
18	127493	WASHER	8
19	137534	SCREW	4
20	114748	NUT	4
21	128010	WASHER	4
22	10007871	FORK	2
23	10050811	PIN	2
23	10050811	PIN	2
24	10519624	WASHER	2
27	16043221	SCREW	4
28	127496	WASHER	4
29	14058411	NUT	9
30	12644421	WASHER	9
31	136275	R.H. EXHAUST MANIFOLD	1
31	149947	R.H. EXHAUST MANIFOLD	1
32	149948	L.H. EXHAUST MANIFOLD	1
32	136276	L.H. EXHAUST MANIFOLD	1
33	138076	GASKET	8
34	154984	GASKET	4

35	110860 THREADED PLUG	8
36	10298460 GASKET	4
37	160506 CATALYST	2
37	143871 EXHAUST PRE-MUFFLER	2
37	143871 EXHAUST PRE-MUFFLER	2
37	151609 EXHAUST PRE-MUFFLER	2
37	134002 L.H. CATALYST	1
37	134001 R.H. CATALYST	1
38	137431 SCREW	8
39	128010 WASHER	16
40	114749 SPACER	8
41	111743 SPLING	8
42	141874 FLANGED STUB PIPE	2
43	121515 OXYGEN SENSOR	2
44	151667 OXYGEN SENSOR	2
44	146650 OXYGEN SENSOR	2
44	142514 OXYGEN SENSOR	2


<018 Blow - By System>

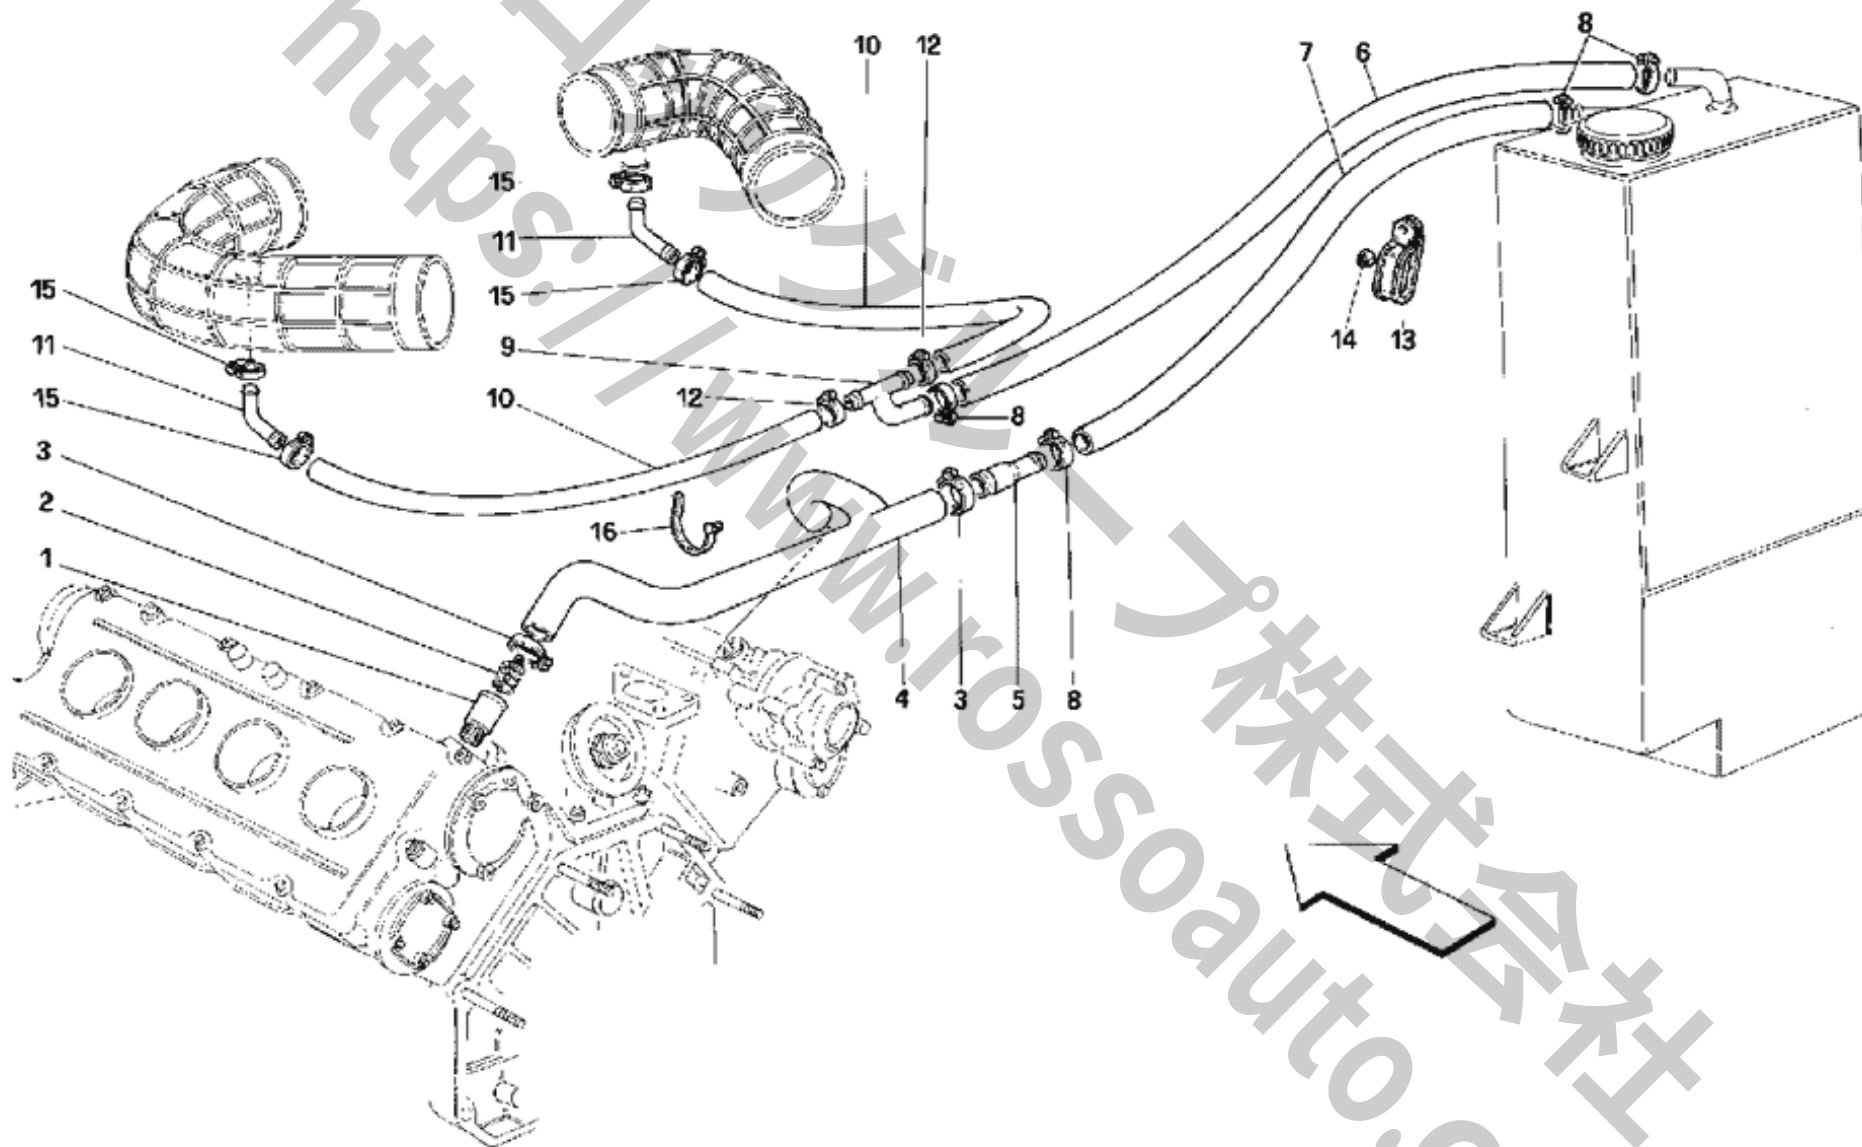

<018 Blow - By System>

No.	Part No.	Name	Qty
1	119236	UNION	2
2	119237	SPLASH GUARD	2
3	13000490	SCREW COLLAR	3
4	139525	VENT HEADS CONNECTION PIPE	1
5	140369	UNION	1
6	143051	PIPE	1
7	139342	PIPE	1
8	13000390	SCREW COLLAR	4
9	140096	UNION	1
10	140360	PIPE TO THE SLEEVE	2
11	140338	UNION	2
12	13000190	SCREW COLLAR	2
13	61712600	BRACKET	1
14	12575411	NUT	1
15	13000190	SCREW COLLAR	4
16	145855	CLAMP	2

<019 Lubrication - Pumps and Oil Sumps>

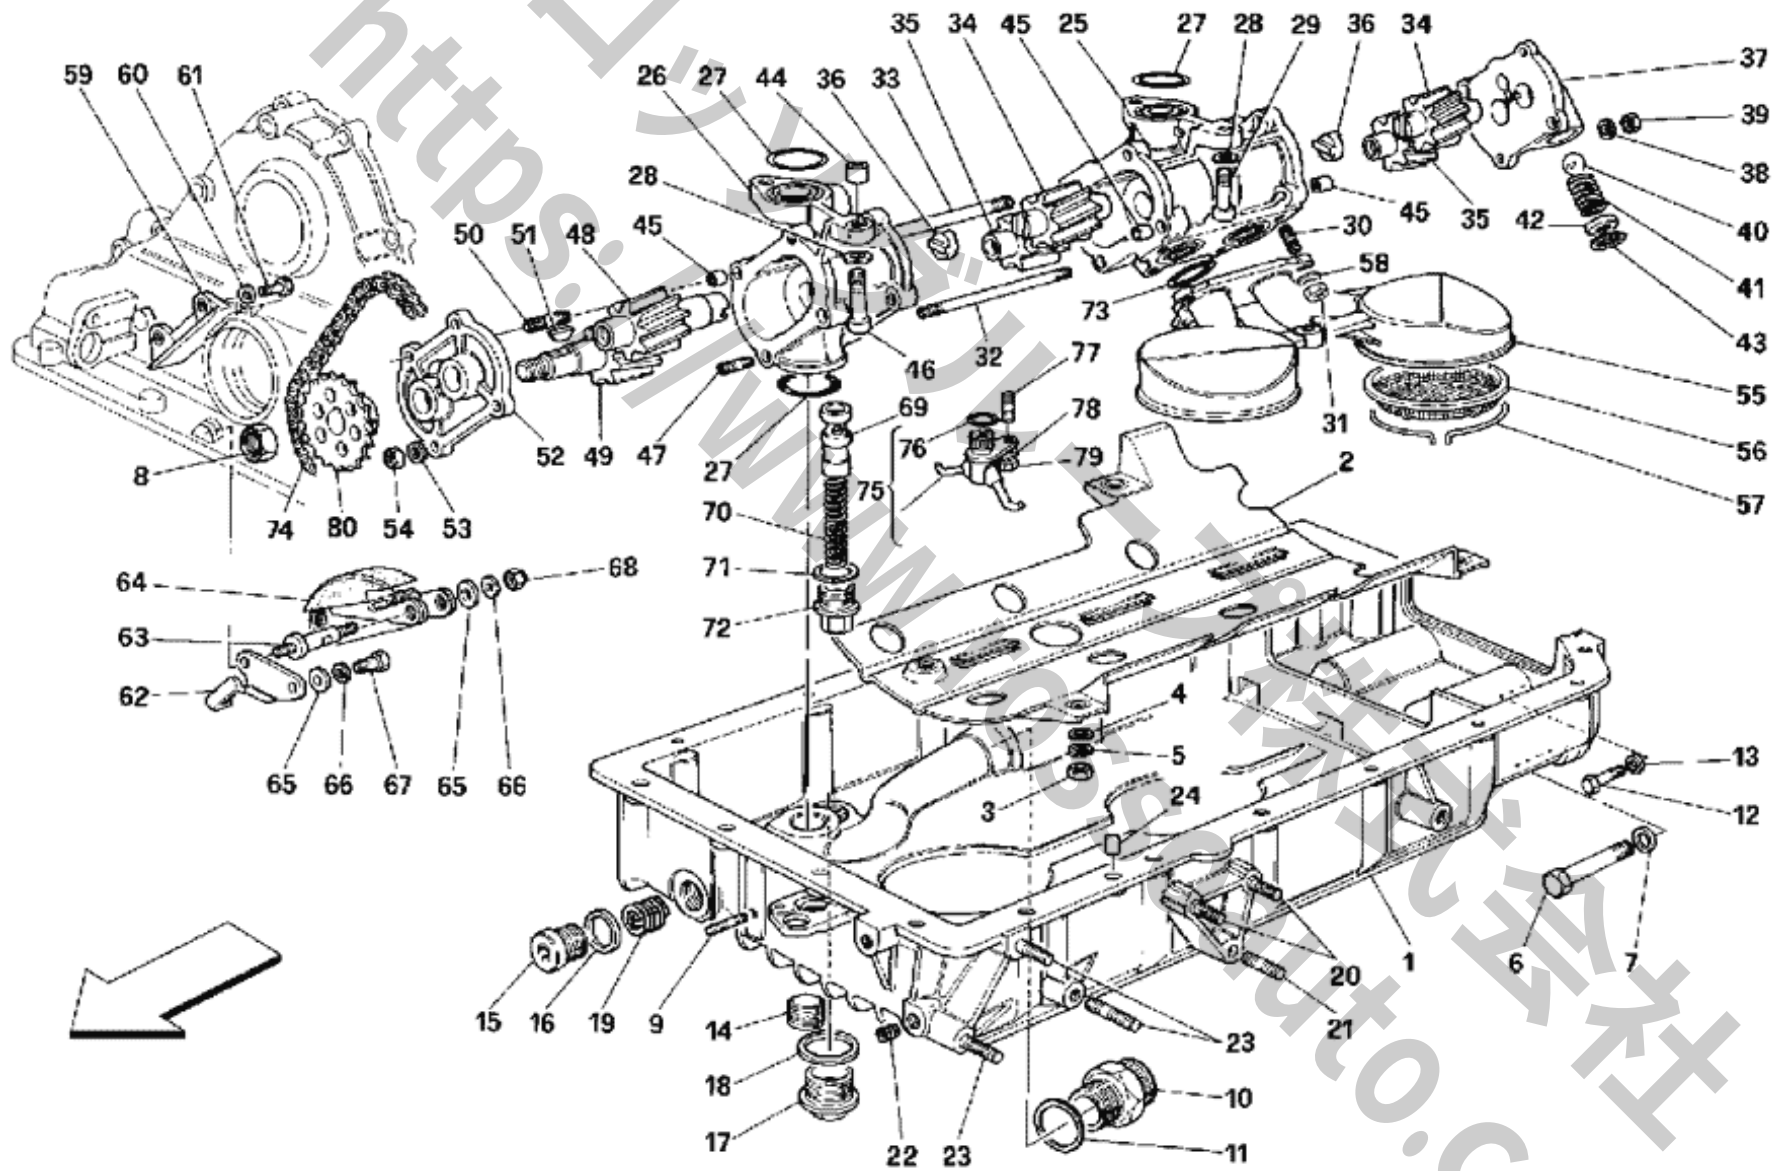


<019 Lubrication - Pumps and Oil Sumps>

No.	Part No.	Name	Qty
0	143277	COMPLETE OIL SUMP	1
1		OIL SUMP	1
2	149318	ANTI-SHAKING OIL PANEL	1
2	149318	ANTI-SHAKING OIL PANEL	1
3	161102311	NUT	4
4	10519624	WASHER	4
5	127496	WASHER	4
6	11288021	SCREW	2
7	11190579	WASHER	2
8	117036	GASKET	1
9	11001221	STUD	1
10	138149	UNION	1
11	144485	GASKET	1
12	10902724	SCREW	2
13	12601374	WASHER	2
14	10268450	THREADED PLUG	1
15	10275040	THREADED PLUG	1
16	10261860	GASKET	1
17	133284	THREADED PLUG	1
18	144485	GASKET	1
19	112254	THREADED INSERT	1
20	12354524	STUD	2
21	13543121	STUD	1
22	13525770	THREADED INSERT	2
23	12354524	STUD	3
24	102725	DOWEL	2
24	143276	RECOVERY PUMP BODY WITH STUD BOLTS	1
25	149530	DELIVERY PUMP BODY WITH STUD	1
25	143479	DELIVERY PUMP BODY WITH STUD BOLTS	1
25		RECOVERY PUMP BODY	1
26		DELIVERY PUMP BODY	1
27	133939	O.R. GASKET	3
28	11198079	WASHER	4
29	14306421	SCREW	3
30	13540821	STUD	4
31	132877	NUT	4

32	133842 STUD	2
33	133843 STUD	2
34	132458 DRIVING GEAR	2
35	132460 DRIVEN GEAR	2
36	109309 COUPLING	2
37	132436 RECOVERY PUMP COVER	1
38	11197774 WASHER	4
39	134041 NUT	4
40	121306 BALL	1
41	109980 SPRING	1
42	132772 SPACER	1
43	11057876 SEEGER RING	1
44	102704 DOWEL	1
45	102725 DOWEL	5
46	14306521 SCREW	1
47	13540821 STUD	2
48	132456 DRIVEN GEAR	1
49	132454 DRIVING GEAR	1
50	13541021 STUD	2
51	10205820 KEY	1
52	132434 FRONT COVER	1
53	11197774 WASHER	4
54	134041 NUT	4
55	132271 RECOVERY PUMP FLOATER	1
55	143797 RECOVERY PUMP FLOATER	1
56	122429 FILTER	2
57	103944 SEAL RING	2
58	12604279 WASHER	4
59	136039 FIXED TENSION	1
60	12601274 WASHER	2
61	10902324 SCREW	2
62	155833 SMALL PLATE	1
63	134263 STUD	1
64	147337 CHAIN TIGHTENER	1
60	12601274 WASHER	2
61	10902324 SCREW	2
62	155833 SMALL PLATE	1
62	133093 SMALL PLATE	1
63	134263 STUD	1

64	147337 CHAIN TIGHTENER	1
65	12646601 WASHER	2
66	12601274 WASHER	2
67	10902211 SCREW	1
68	131837 NUT	1
69	129324 REGISTER	1
70	137614 SPRING	1
71	10257460 GASKET	1
72	129322 PRESSURE VALVE CAP	1
73	133938 O.R. GASKET	2
73	133938 O.R. GASKET	2
74	133089 OIL PUMP CONTROL CHAIN	1
75	137607 MULTIPLE UNION	4
76	137192 O.R. GASKET	4
77	11000821 STUD	4
78	11199279 WASHER	4
79	15896470 NUT	4
80	132462 OUTER GEAR	1
81	132876 NUT	1

<020 Lubrication System>

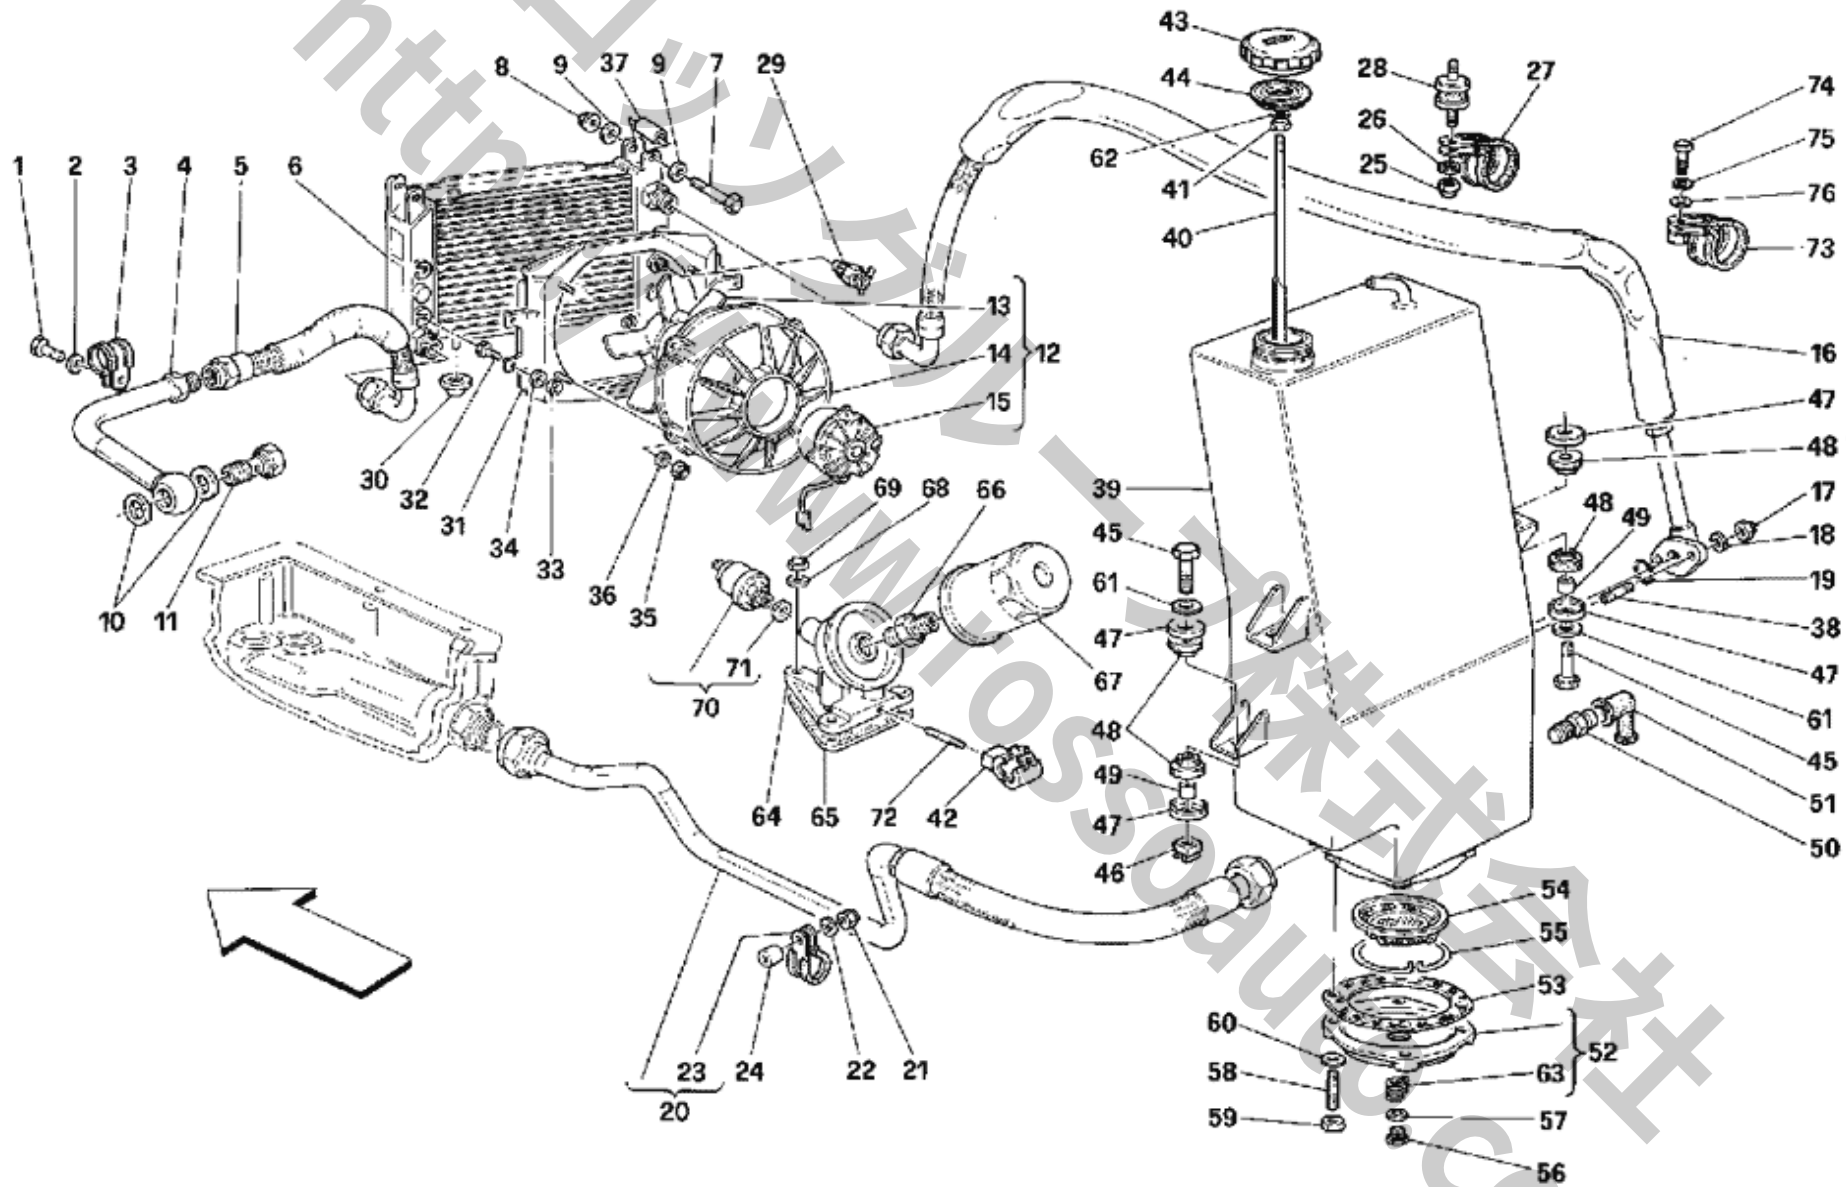


<020 Lubrication System>

No.	Part No.	Name	Qty
1	10902011	SCREW	1
2	12644421	WASHER	1
3	10442090	BRACKET	1
4	142563	PIPE FROM ENGINE TO RADIATOR	1
5	141820	FLEXIBLE PIPE FROM ENGINE TO RADIATOR	1
6	154584	OIL RADIATOR	1
7	10903821	SCREW	2
8	14058411	NUT	2
9	12644401	WASHER	4
10	144487	GASKET	2
11	129809	UNION	1
12	140808	COMPLETE ELECTROFAN	1
13	143544	BLOWER	1
14	143545	AIR CONVEYOR	1
15	143543	MOTOR	1
16	141821	PIPE FROM RADIATOR TO TANK	1
17	12575421	NUT	2
18	10519421	WASHER	2
19	139934	O.R. GASKET	1
20	141819	TANK/DELIVERY PUMP CONNECTION PIPE	1
21	133989	NUT	2
22	12601374	WASHER	2
23	141850	BRACKET	2
24	141849	SPACER	2
25	12575411	NUT	3
26	14496401	WASHER	3
27	106195	BRACKET	3
28	102947	PAD	1
29	123277	THERMOSWITCH	1
30	137624	PAD	2
31	140809	HOOD FOR ELECTROFAN	1
32	10902324	SCREW	4
33	14058411	NUT	4
34	14496401	WASHER	4
35	12574211	NUT	4
36	14496401	WASHER	4

37	144814 SPACER PIPE	2
38	13540921 STUD	2
39	136428 OIL TANK	1
40	139675 OIL LEVEL ROD	1
41	15896211 NUT	1
41	15896211 NUT	1
42	145623 TANK PLUG	1
43	145623 TANK PLUG	1
44	145625 GASKET	1
45	16043821 SCREW	3
46	141530 NUT	2
47	107979 CUP	6
48	107978 PAD	6
49	107980 SPACER	3
50	107576 OIL THERMISTOR	1
50	148676 OIL THERMISTOR	1
51	107003 ELECTRIC TERMINAL COVER	1
52	139627 COVER	1
52	139627 COVER	1
53	139631 GASKET	1
54	122429 FILTER	1
55	103944 SEAL RING	1
56	10300771 OIL OUTLET PLUG	1
57	1025060 GASKET	1
58	11500621 STUD	4
59	12574211 NUT	4
60	12601274 WASHER	4
61	127496 WASHER	3
62	12601274 WASHER	1
63	111352 THREADED INSERT	1
64	138348 OIL FILTER BASE-PLATE	1
65	188052 GASKET	1
66	124229 UNION	1
67	197654 OIL FILTER CARTRIDGE	1
68	12601374 WASHER	3
69	16104111 NUT	3
70	135940 SENDER UNIT	1
71	10259960 GASKET	1
72	13539021 STUD	1

ロッシングループ株式会社
<https://www.rossoauto.com>


<021 Cooling System>

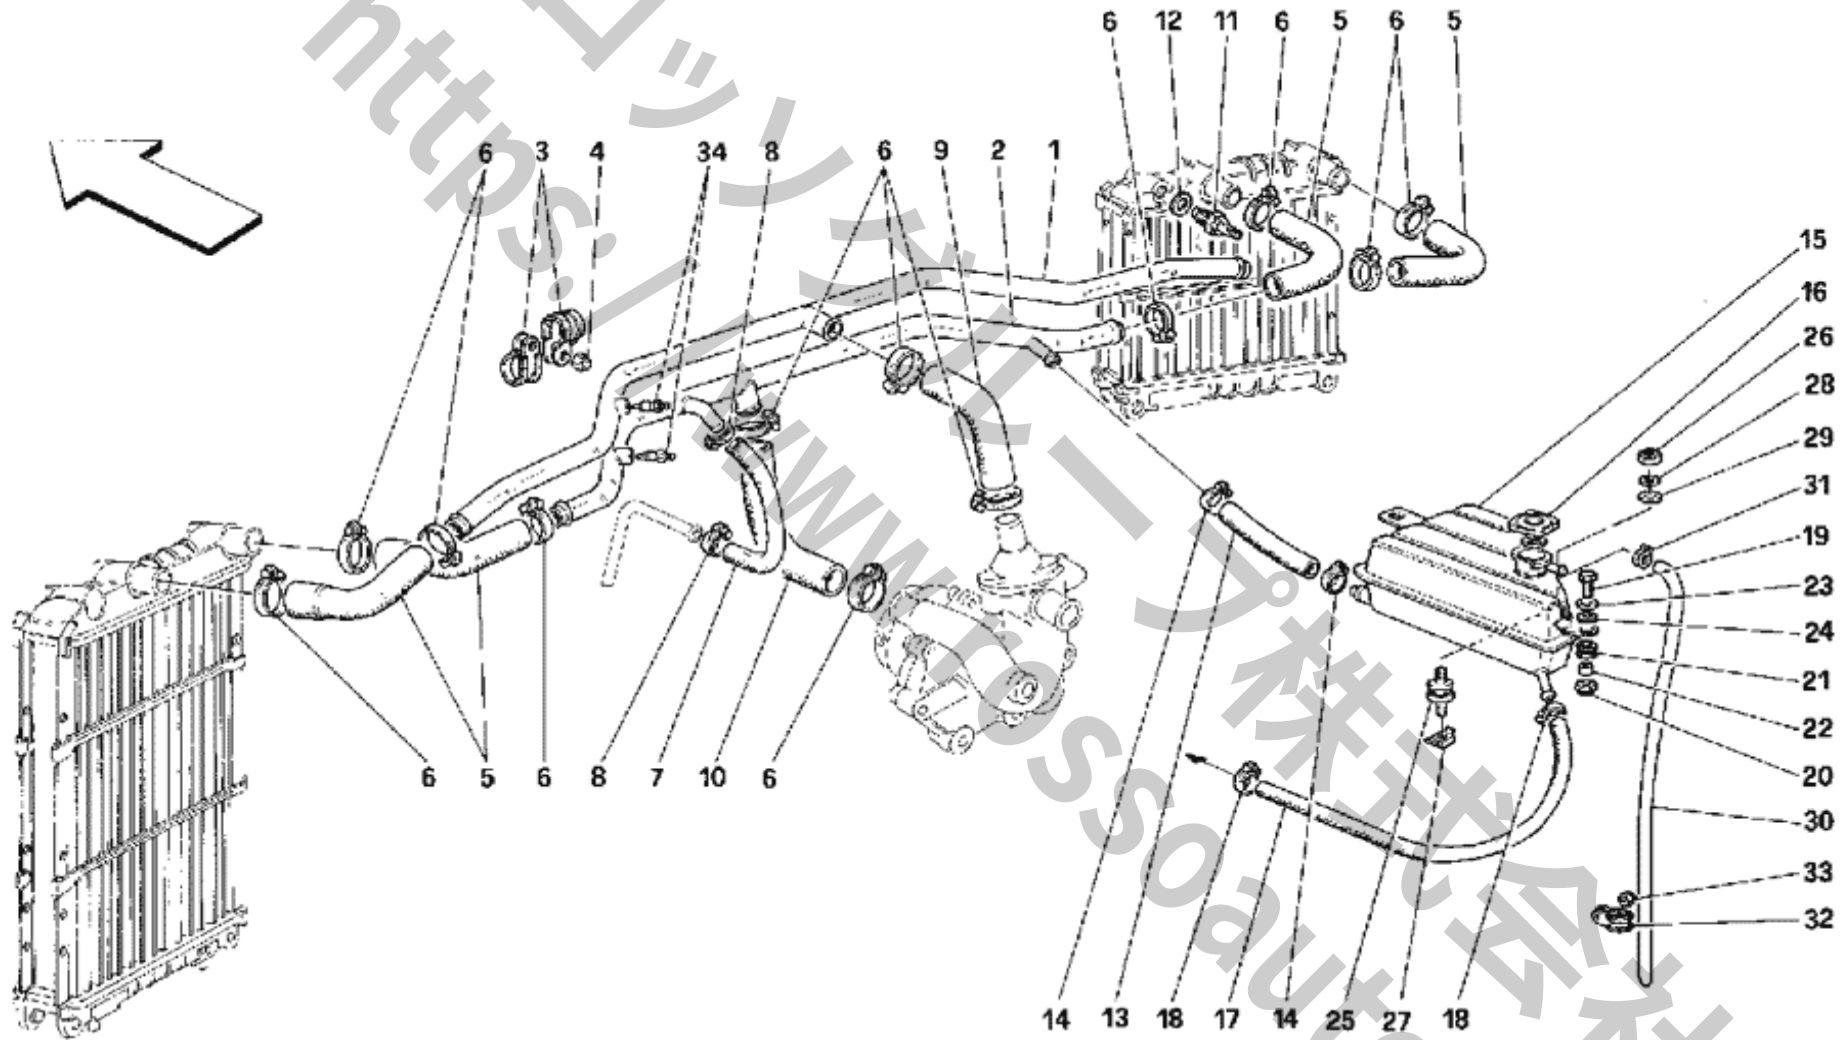

<021 Cooling System>

No.	Part No.	Name	Qty
1	140626	RADIATORS DELIVERY PIPE	1
2	140627	RADIATORS RETURN PIPE	1
3	106195	BRACKET	4
4	12575411	NUT	2
5	136513	RUBBER HOSE	4
6	12177090	SDREW COLLAR	12
7	62659600	SLEEVE	1
8	13000390	SCREW COLLAR	2
9	140624	RUBBER HOSE	1
10	140625	RUBBER HOSE	1
11	158655	TEMPERATURE SWITCH	1
12	101508	GASKET	1
13	198332	RUBBER HOSE	1
14	12180190	SCREW COLLAR	2
15	140838	HEADER TANK	1
16	137644	RADIATOR PRESSURE CAP	1
17	122219	NOURICE- ENGINE EXHAUST PIPE	1
18	13000190	SCREW COLLAR	2
19	10902421	SCREW	2
20	12575421	NUT	2
21	103549	CABLE GROMMET	2
22	103550	SPACER	2
23	127494	WASHER	2
24	12643701	WASHER	2
25	102947	PAD	1
26	15896211	NUT	1
27	60758600	NUT	1
28	127494	WASHER	1
29	12643701	WASHER	1
30	126292	VENT PIPE	1
31	13423379	ELASTIC COLLAR	1
32	10441490	BRACKET	2
33	12575411	NUT	2
34	127557	DRAIN SCREW	2

<022 Cooling System Radiators>

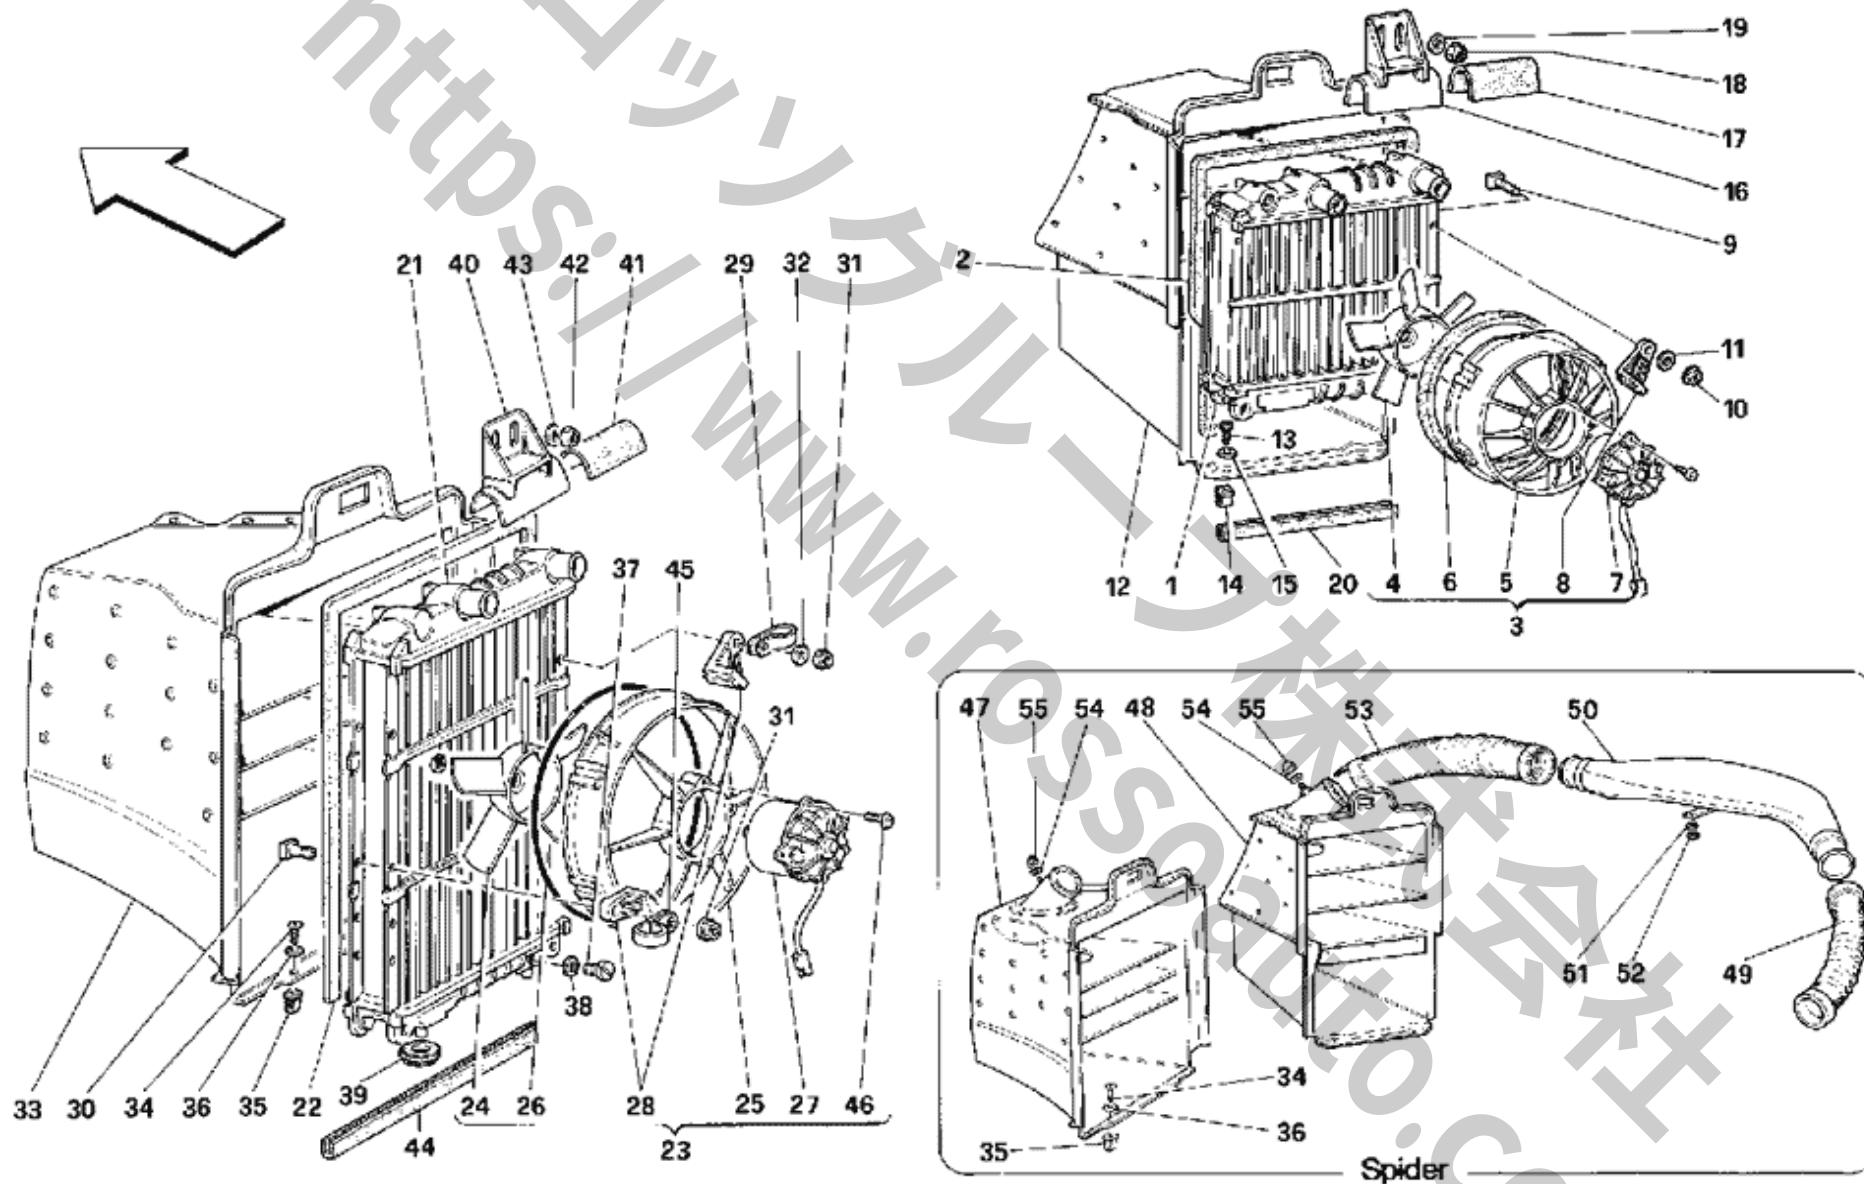


<022 Cooling System Radiators>

No.	Part No.	Name	Qty
1	137619	WATER R.H. RADIATOR	1
2	63370800	UPPER GASKET	1
3	140403	COMPLETE R.H. ELECTROFAN	1
4	143544	BLOWER	1
5	143545	AIR CONVEYOR	1
6	147577	RUBBER EDGE	1
7	143543	MOTOR	1
8	147576	SUPPORT	4
9	11944811	SCREW	4
10	14058411	NUT	4
11	12644401	WASHER	4
12	62097900	R.H. AIR INLET	1
13	15903901	SCREW	2
14	14202580	BLOCK	2
15	12638101	WASHER	2
16	137621	RADIATOR FASTENING BRACKET	1
17	137630	RUBBER THICKNESS	2
18	16104411	NUT	2
19	12646724	WASHER	2
20	63370900	LOWER GASKET	1
21	137617	WATER L.H. RADIATOR	1
22	63370800	UPPER GASKET	1
23	140404	COMPLETE L.H. ELECTROFAN	1
24	147579	BLOWER	1
25	147578	AIR CONVEYOR	1
26	147580	O.R. GASKET	1
27	143543	MOTOR	1
28	147581	SUPPORT	4
29	10418301	BRACKET	2
30	11944511	SCREW	4
31	14058411	NUT	2
32	1264401	WASHER	2
33	62098000	L.H. AIR INLET	1
34	15903901	SCREW	2
35	14202580	BLOCK	2
36	12638101	WASHER	2

37	140149 THREADED PLUG	2
38	140150 GASKET	2
39	137624 PAD	2
40	137621 RADIATOR FASTENING BRACKET	1
41	137630 RUBBER THICKNESS	1
42	161044 NUT	2
43	12646724 WASHER	2
44	63370900 LOWER GASKET	1
45	10418801 BRACKET	2
46	123298 SCREW	8

<https://www.rossoauto.com> 株式会社

<023 Water Pump>

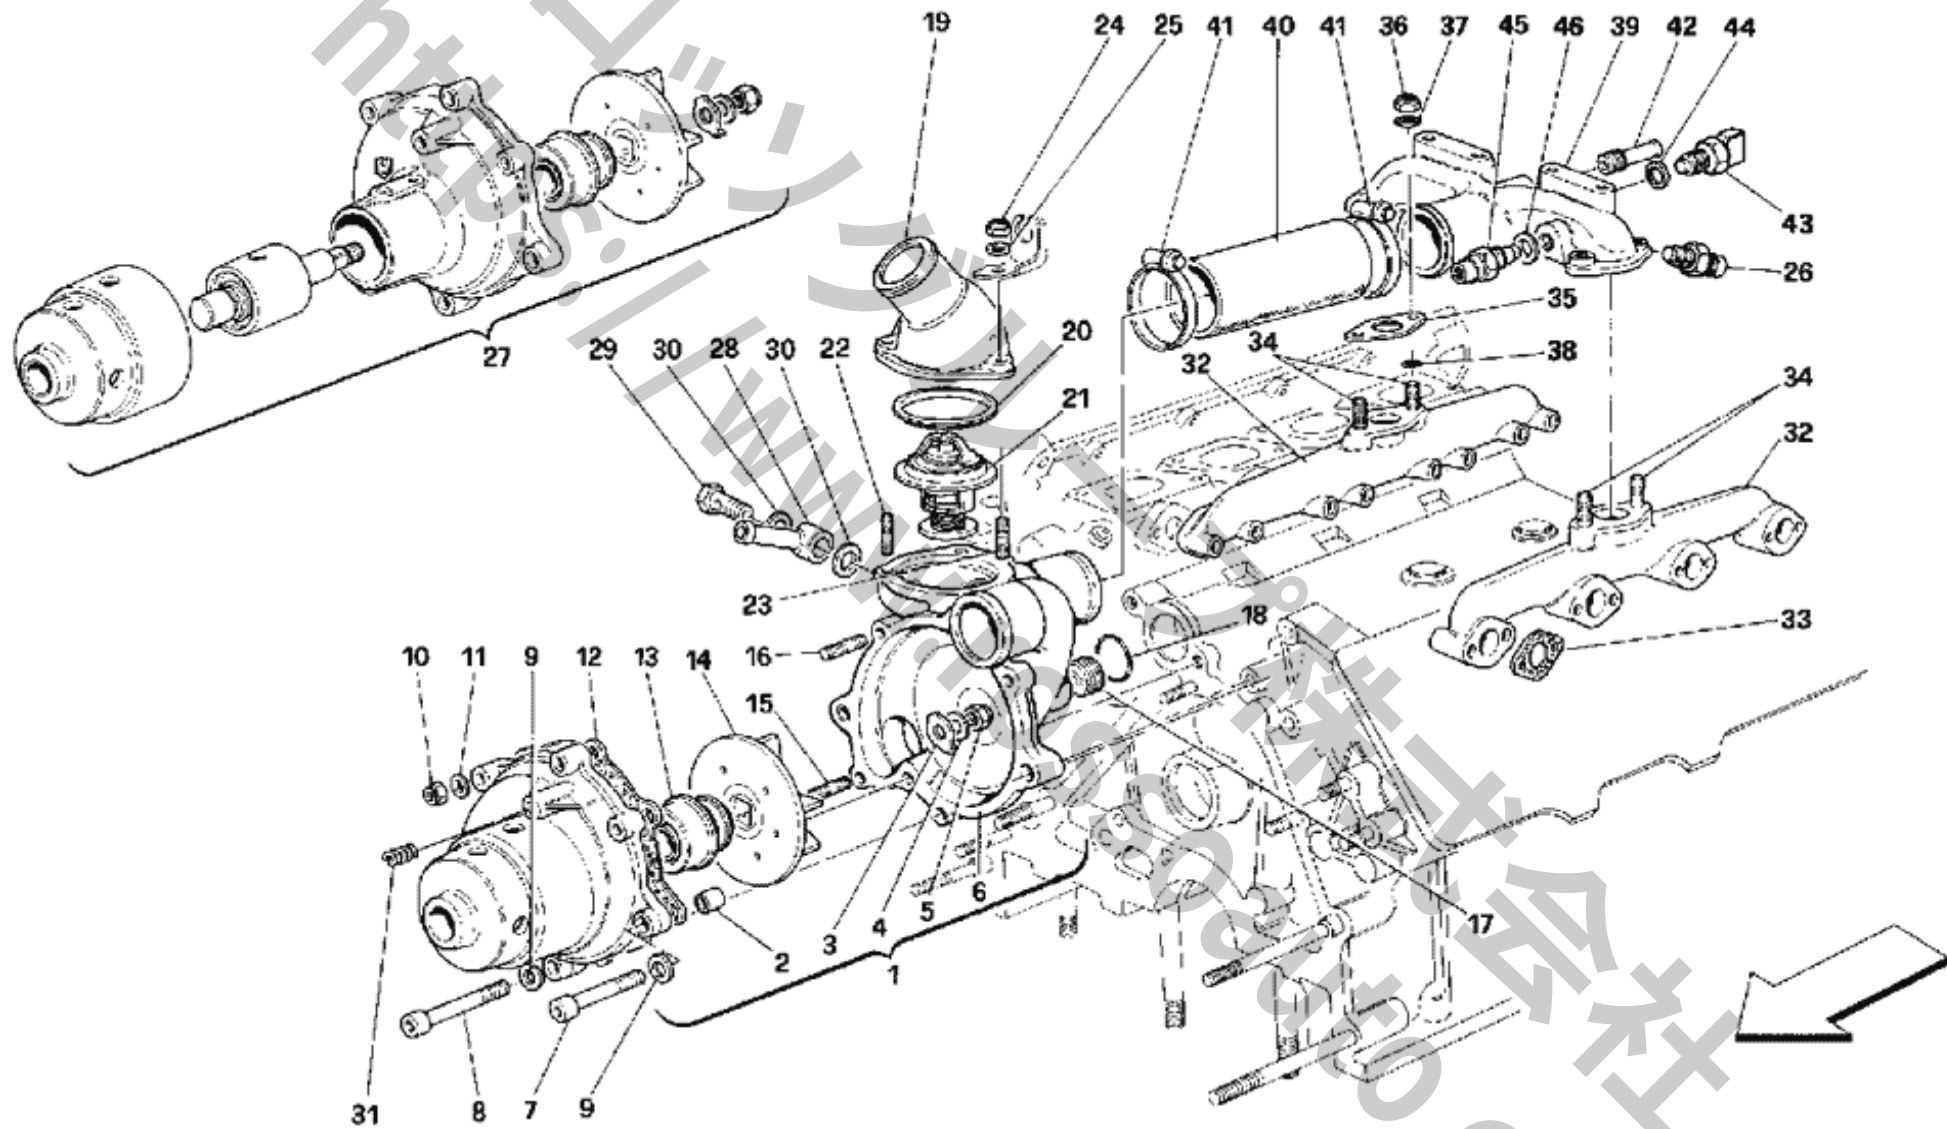


<023 Water Pump>

No.	Part No.	Name	Qty
1	160473	COMPLETE WATER PUMP	1
2	102704	DOWEL	2
3	139457	PLATE	1
4	10730321	WASHER	1
5	100436	NUT	1
6	156350	WATER PUMP BODY WITH STUDS	1
7	14306921	SCREW	2
8	14302221	SCREW	2
9	12601374	WASHER	4
10	12575411	NUT	4
11	12639701	WASHER	4
12	132979	GASKET	1
13	183759	SEAL RING	1
14	132599	WATER PUMP IMPELLER	1
15	13541124	STUD	1
16	13541324	STUD	3
17	10268450	PLUG	1
17	10268450	PLUG	1
18	101044	O.R. GASKET	1
19	136570	THERMOSTATIC VALVE COVER	1
20	105192	GASKET	1
21	165473	THERMOSTAT	1
22	13541124	STUD	2
23	13541221	STUD	1
24	12574211	NUT	3
25	12639701	WASHER	3
26	150919	UNION	1
27	143275	FRONT PART COMPLETE WATER PUMP	1
27	143275/A	FRONT PART COMPLETE WATER PUMP	1
28	152416	UNION	1
29	152417	UNION	1
30	10259960	GASKET	2
31	13525470	THREADED INSERT	1
32	138852	WATER MANIFOLD	2
33	132980	GASKET	8
34	13516821	STUD	4

35	132981 GASKET	2
35	132981 GASKET	2
36	16100811 NUT	4
37	11198079 WASHER	4
38	103039 O.R. GASKET	4
39	138027 WATER OUTLET MANIFOLD CONNECTION DUCT	1
39	144246 WATER OUTLET MANIFOLD CONNECTION DUCT	1
40	139891 SLEEVE	1
41	12177090 SCREW COLLAR	2
42	106241 UNION	1
43	125769 TEMPERATURE SENSOR	2
44	10298460 GASKET	2
45	136304 THERMOMETRIC SWITCH	1
46	10298460 GASKET	1
47	104628 THERMISTOR	1


<024 Clutch and Controls>

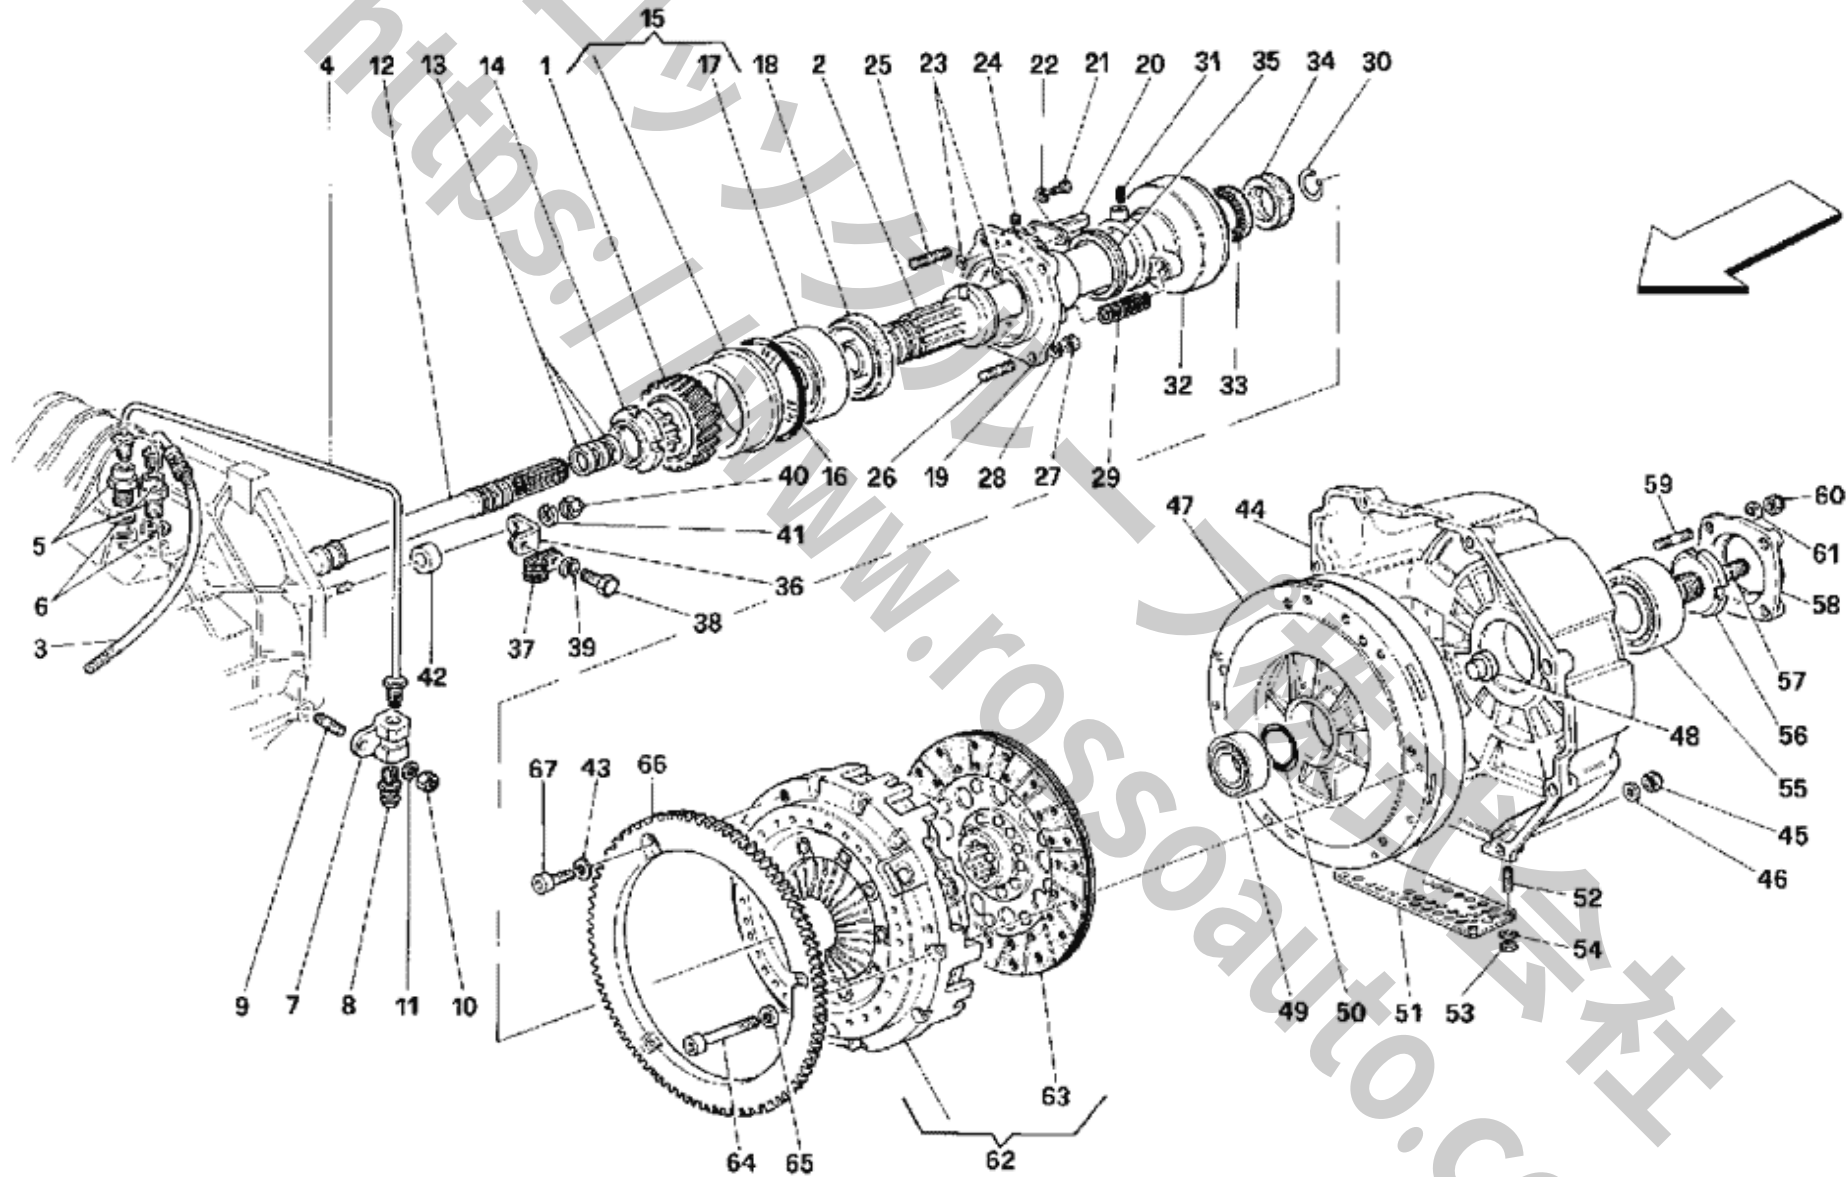

<024 Clutch and Controls>

No.	Part No.	Name	Qty
0	70000595	CLUTCH-PINION SHAFT TRANSMISSION CYLINDRIC TORQUE (25/27 TRANSMISSION RATIO) WITH 10 GROOVE CLUTCH SHAFT	1
0	70000635	CLUTCH-PINION SHAFT TRANSMISSION CYLINDRIC TORQUE (26/27 TRANSMISSION RATIO) WITH 10 GROOVE CLUTCH SHAFT	1
0	70000798	GEAR TRANSMISSION TORQUE (10 GROOVE SHAFT TRANSMISSION RATIO 26/27)	1
0	70000797	GEAR TRANSMISSION TORQUE 10 GROOVE SHAFT- TRANSMISSION RATIO 25/27)	1
0	70000797	GEAR TRANSMISSION TORQUE 10 GROOVE SHAFT- TRANSMISSION RATIO 25/27)	1
1	70000587	GEAR FOR SHAFT	1
2	145427	CLUTCH SHAFT (10 GROOVE)	1
2	145427	CLUTCH SHAFT (10 GROOVE)	1
3	140668	CLUTCH CONTROL PIPE	1
4	139924	DRAIN PIPE	1
5	148604	UNION	2
6	10257060	GASKET	2
7	139921	BLOCK	1
8	121699	DRAIN SCREW	1
9	13546021	STUD	1
10	133988	NUT	1
11	14496601	WASHER	1
12	136899	PROPELLER SHAFT	1
13	137249	SEAL RING	3
14	153009	RING NUT	1
15	148667	BEARING	1
16	143178	O.R. GASKET	1
17	131054	BEARING	1
17	138338	BEARING	1
18	131651	GASKET	1
19	144984	BUSH SUPPORT FLANGE	1
20	138382	PLATE	1
21	10977521	SCREW	2
22	127493	WASHER	2
23	121813	O.R. GASKET	2
24	65928500	PLUG	2
25	12354524	STUD	1
26	13543221	STUD	3
27	16100811	NUT	4
28	127496	WASHER	4
29	121717	PRELOAD SPRING	2
30	13398176	STOP RING	1
31	14163670	PIN	1
32	177784	THRUST BEARING ASSEMBLY WITH FLANGE	1
32	177784	THRUST BEARING ASSEMBLY WITH FLANGE	1
33	139438	GASKET	1
34	138387	SCRAPER RING	1
35	151822	GASKET	1
36	142060	BRACKET	1
37	10440990	BRACKET	1
38	10902011	SCREW	1
39	106850	WASHER	1
40	16100811	NUT	1
41	12601374	WASHER	1
42	12647121	WASHER	2
43	147683	SPACER	1
44	139436	GASKET	1

<025 Clutch Release Control -Not for GD->

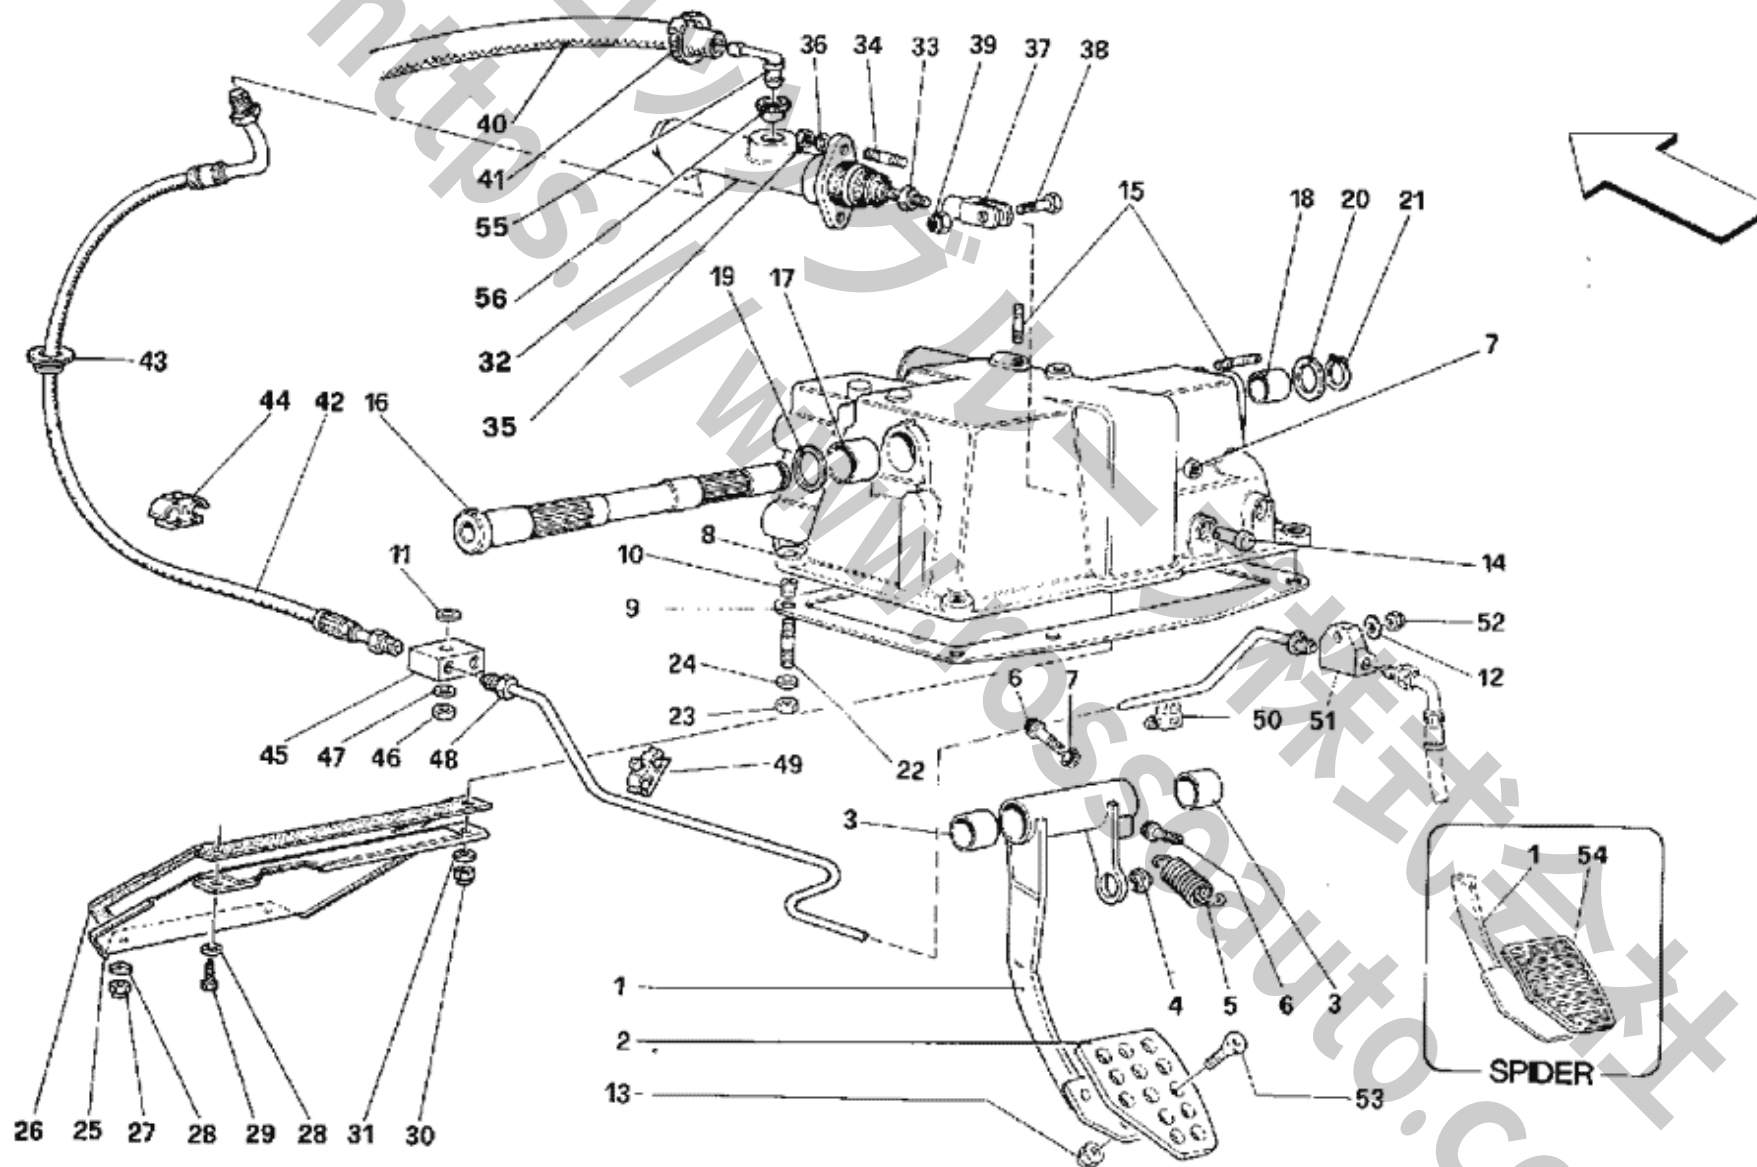


<025 Clutch Release Control -Not for GD->

No.	Part No.	Name	Qty
Ask	Ask	Ask	Ask

ロッシェングループ株式会社
<https://www.rossoauto.com>

<026 Clutch Release Control -Valid for GD->

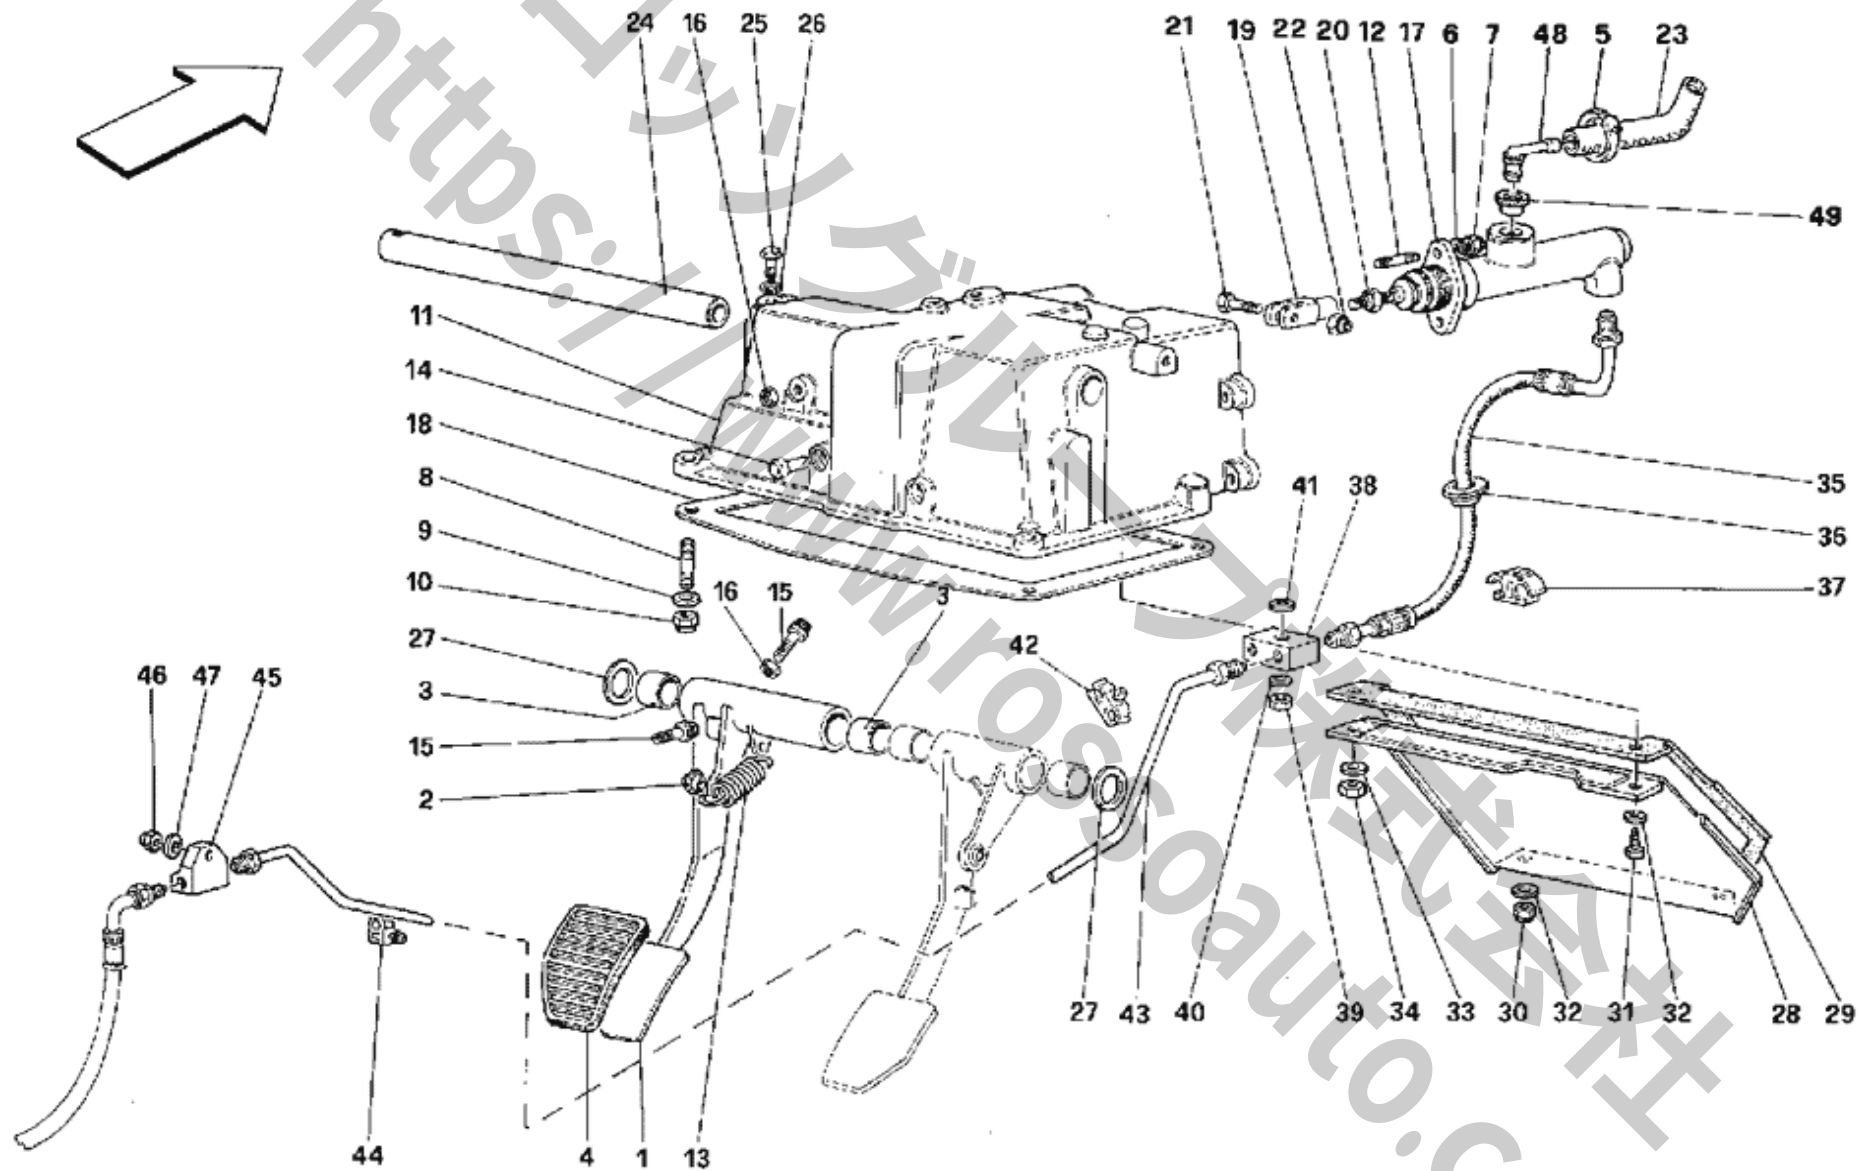


<026 Clutch Release Control -Valid for GD->

No.	Part No.	Name	Qty
Ask	Ask	Ask	Ask

ロッシェングループ株式会社
<https://www.rossoauto.com>

<027 Gearbox Differential Housing and Intermediate Casing>

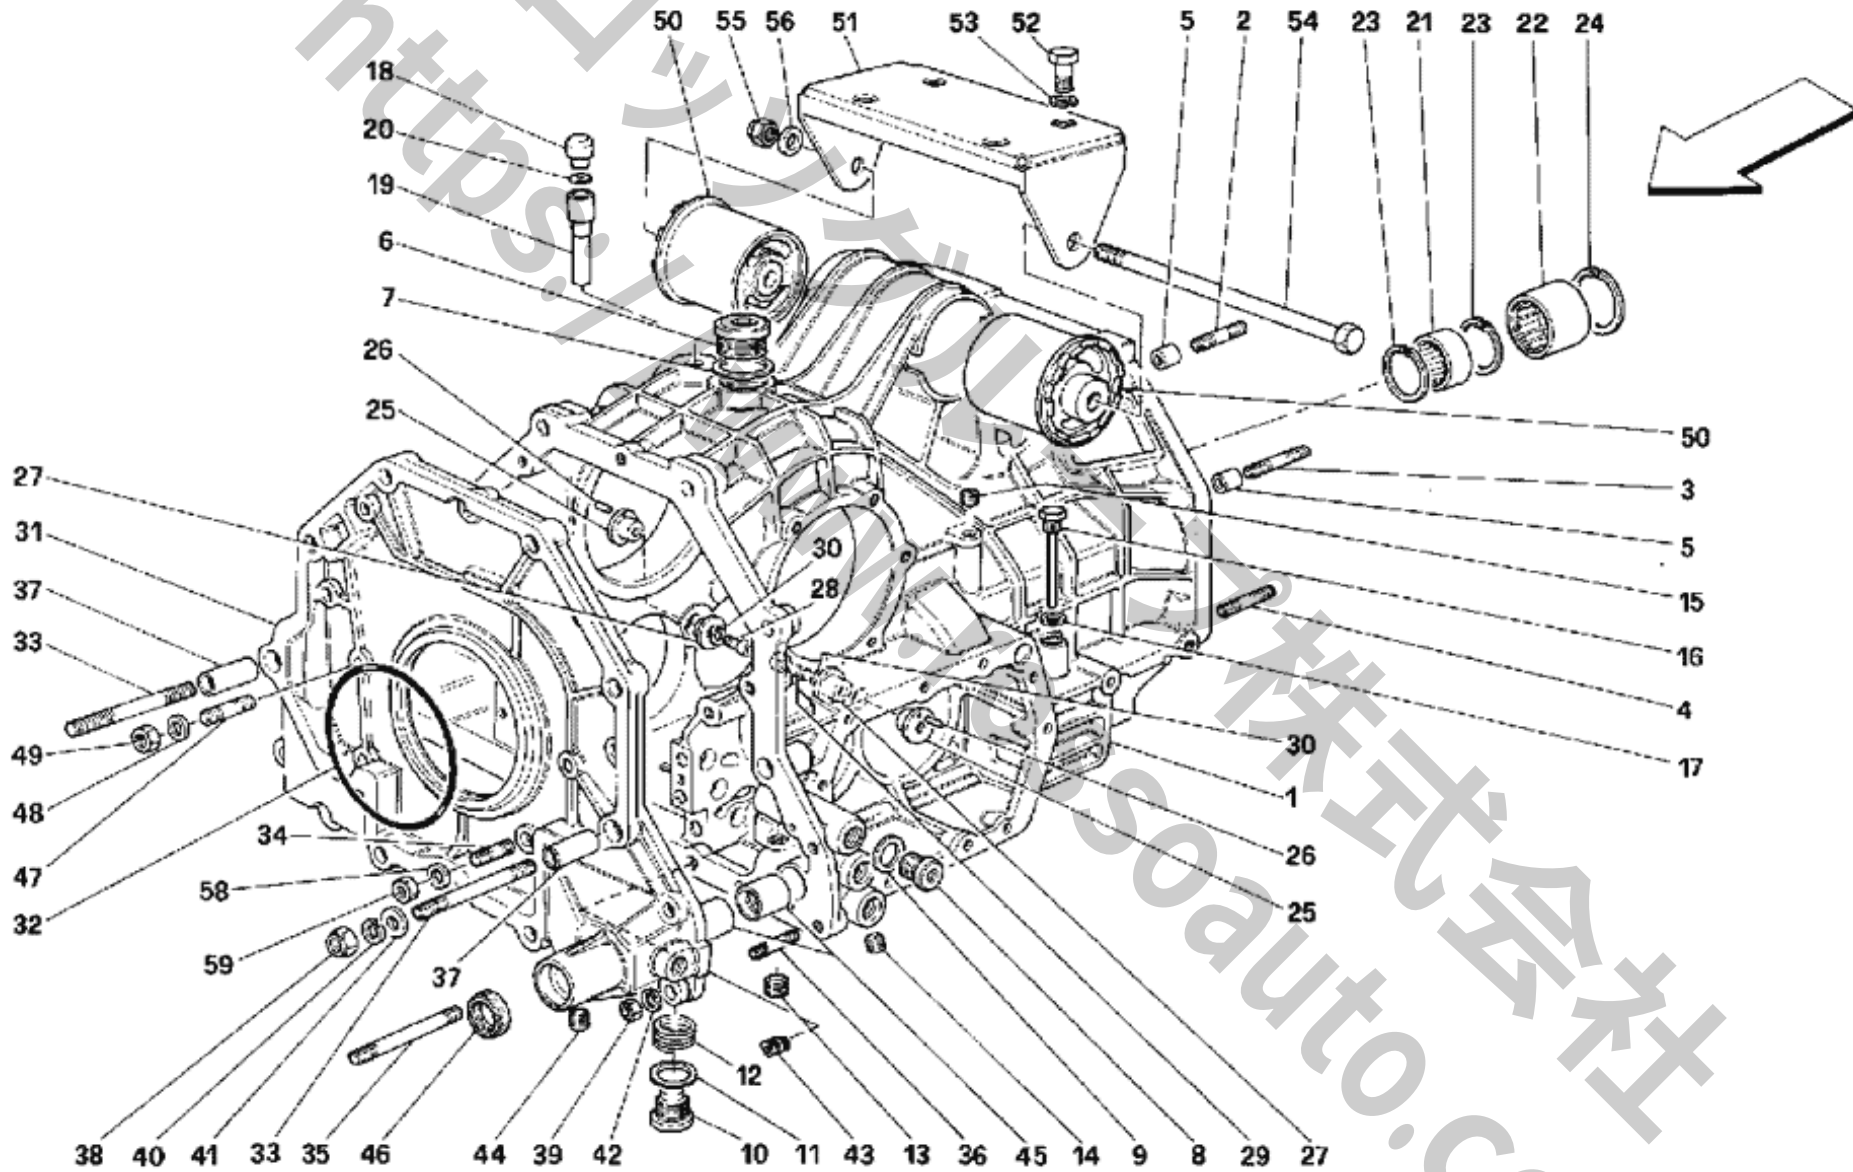


<027 Gearbox Differential Housing and Intermediate Casing>

No.	Part No.	Name	Qty
Ask	Ask	Ask	Ask

ロッシェングループ株式会社
<https://www.rossoauto.com>

<028 Gearbox Covers>

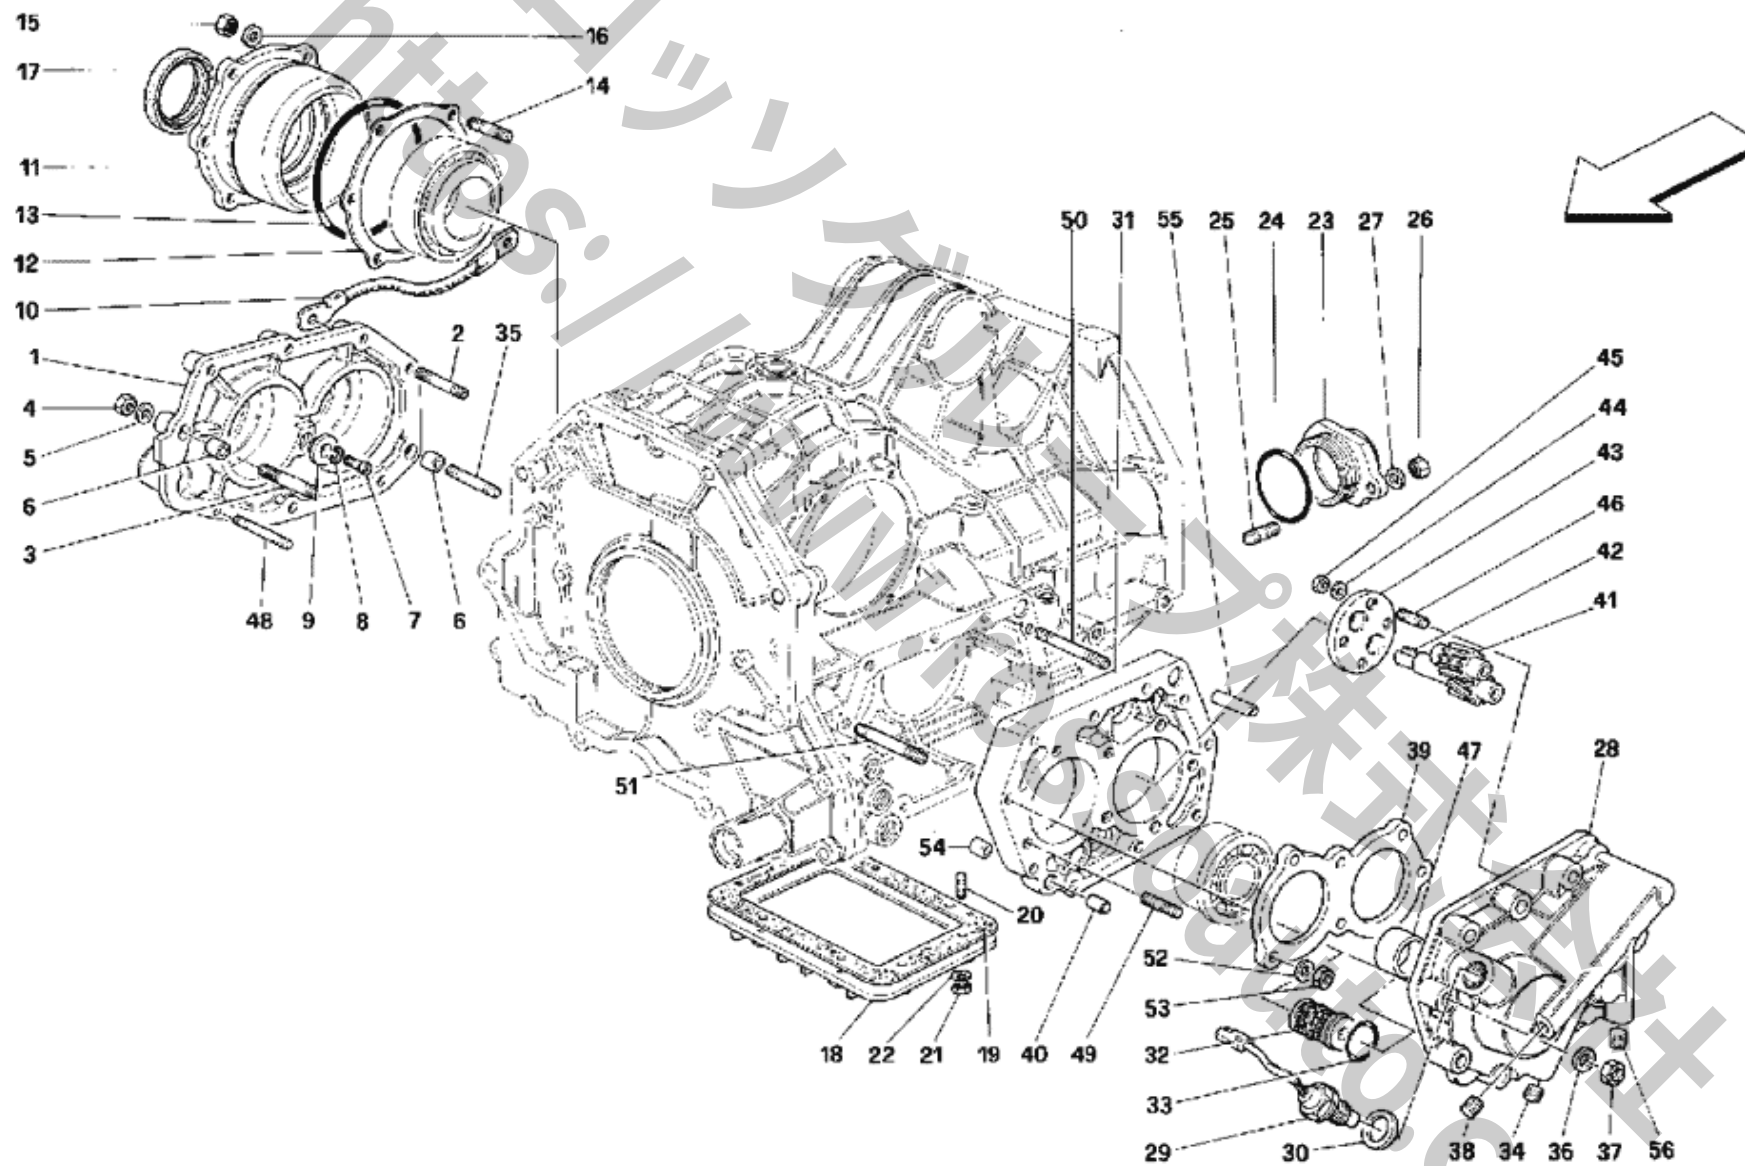


<028 Gearbox Covers>

No.	Part No.	Name	Qty
Ask	Ask	Ask	Ask

ロッシングループ株式会社
<https://www.rossoauto.com>

<029 Main Shaft Gears>

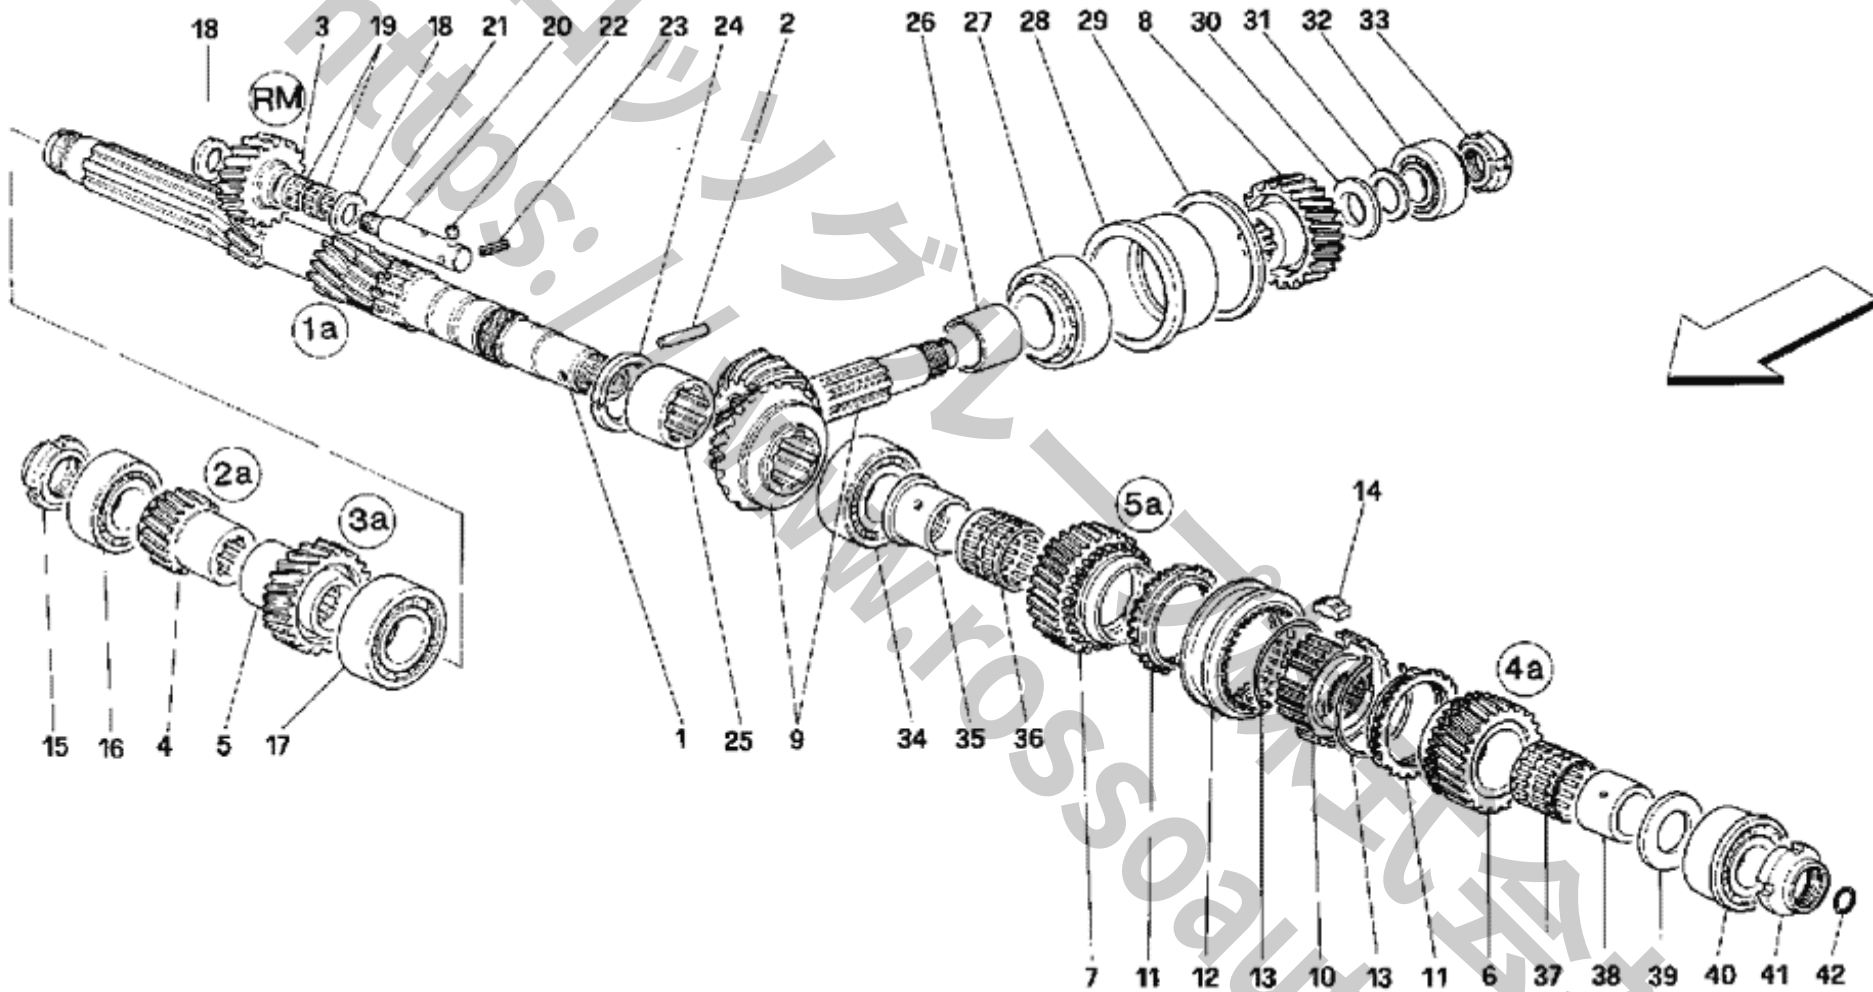


<029 Main Shaft Gears>

No.	Part No.	Name	Qty
Ask	Ask	Ask	Ask

ロッシェングループ株式会社
<https://www.rossoauto.com>

<030 Lay Shaft Gears>

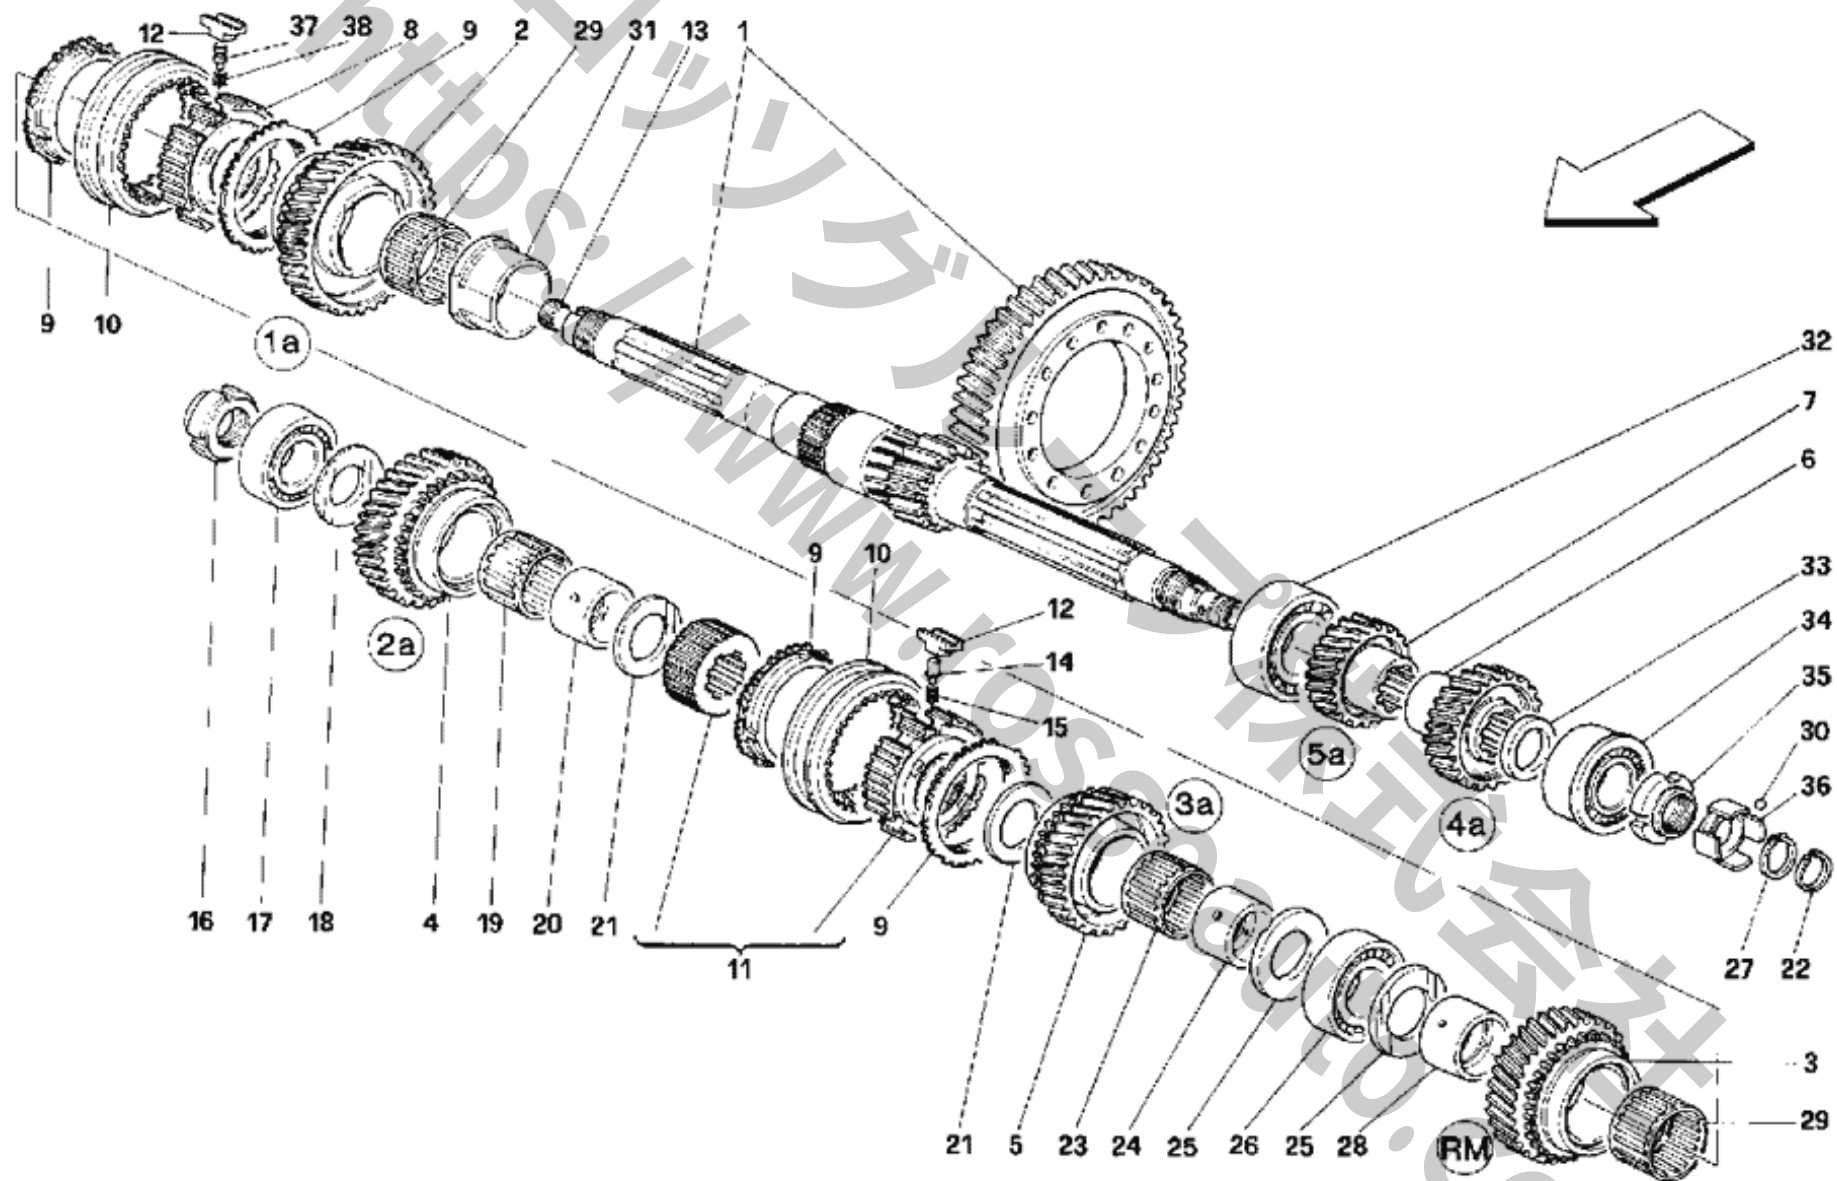


<030 Lay Shaft Gears>

No.	Part No.	Name	Qty
Ask	Ask	Ask	Ask

ロッシングループ株式会社
<https://www.rossoauto.com>

<031 Inside Gearbox Controls>

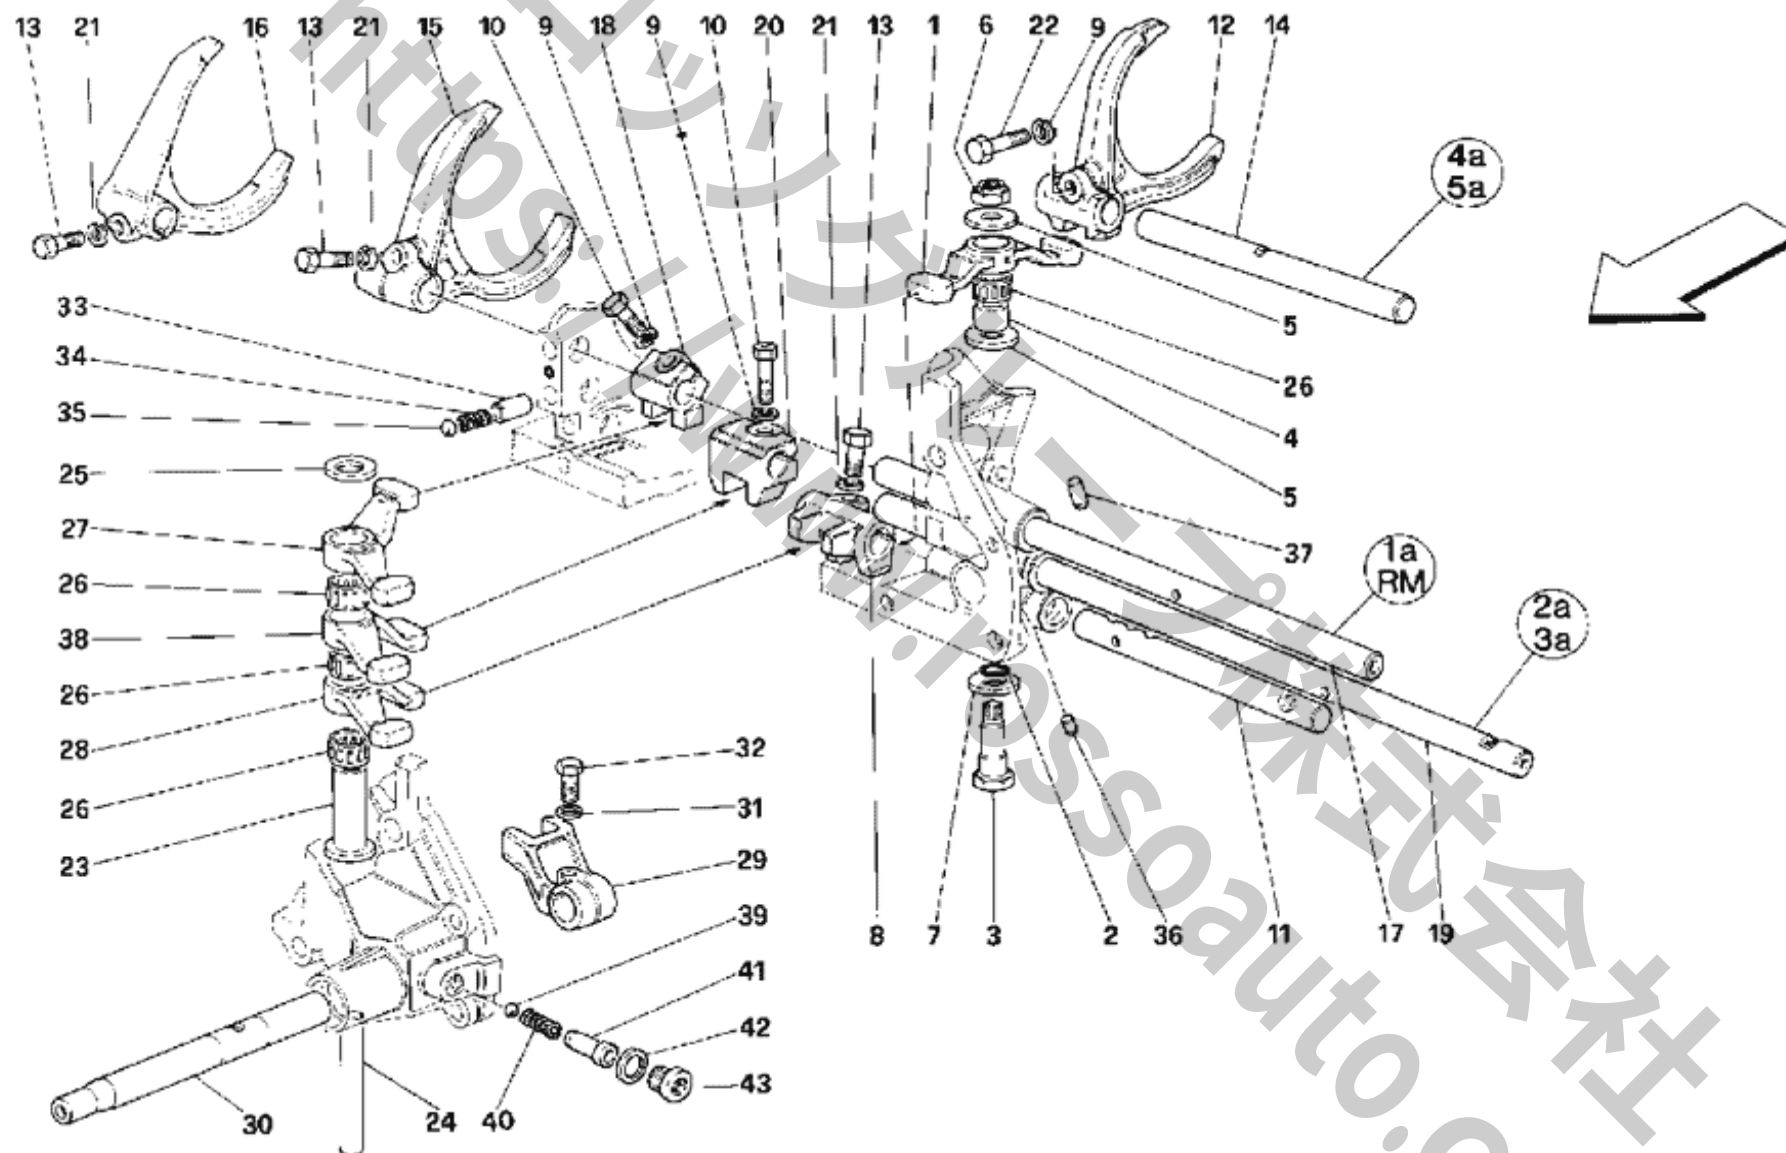


<031 Inside Gearbox Controls>

No.	Part No.	Name	Qty
Ask	Ask	Ask	Ask

ロッシングループ株式会社
<https://www.rossoauto.com>

<032 Outside Gearbox Controls>

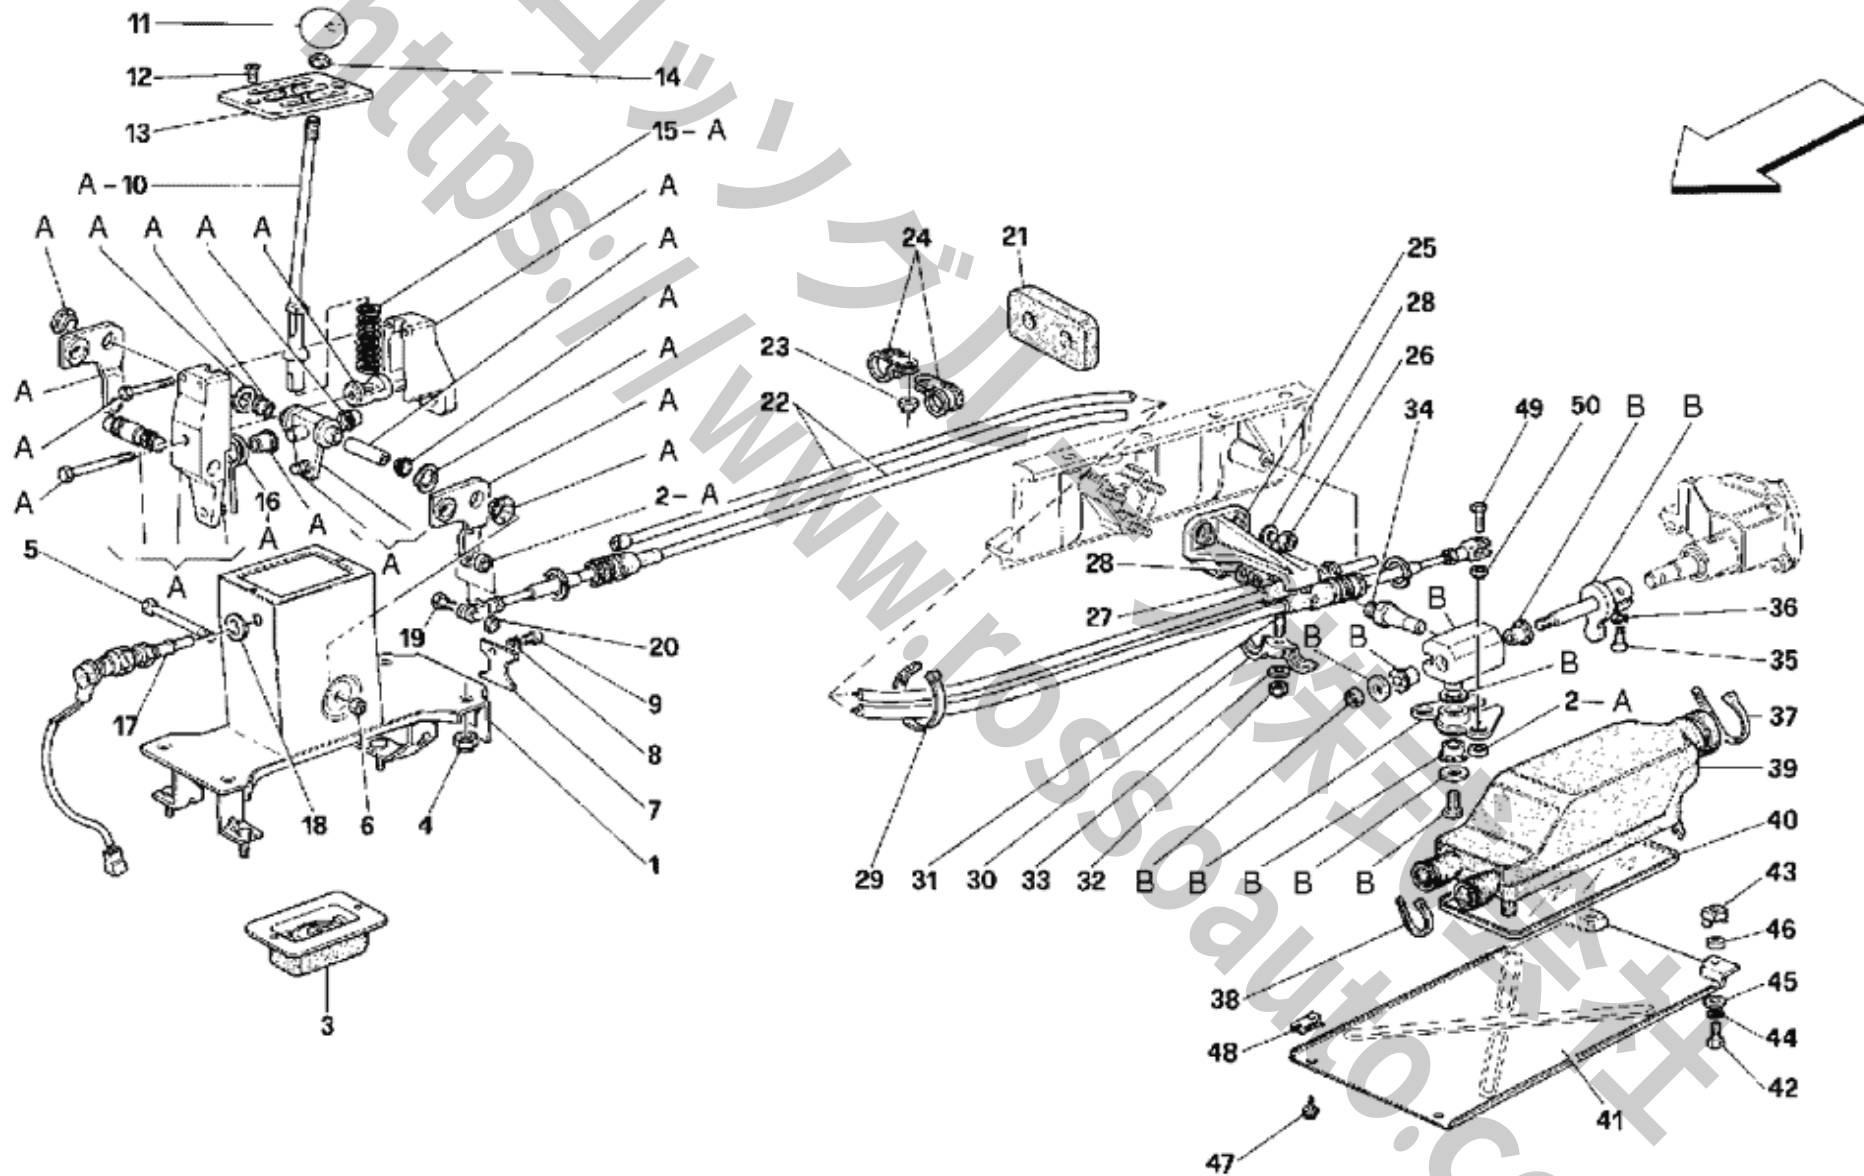


<032 Outside Gearbox Controls>

No.	Part No.	Name	Qty
Ask	Ask	Ask	Ask

ロッシングループ株式会社
<https://www.rossoauto.com>

<033 Differential and Axle Shaft>

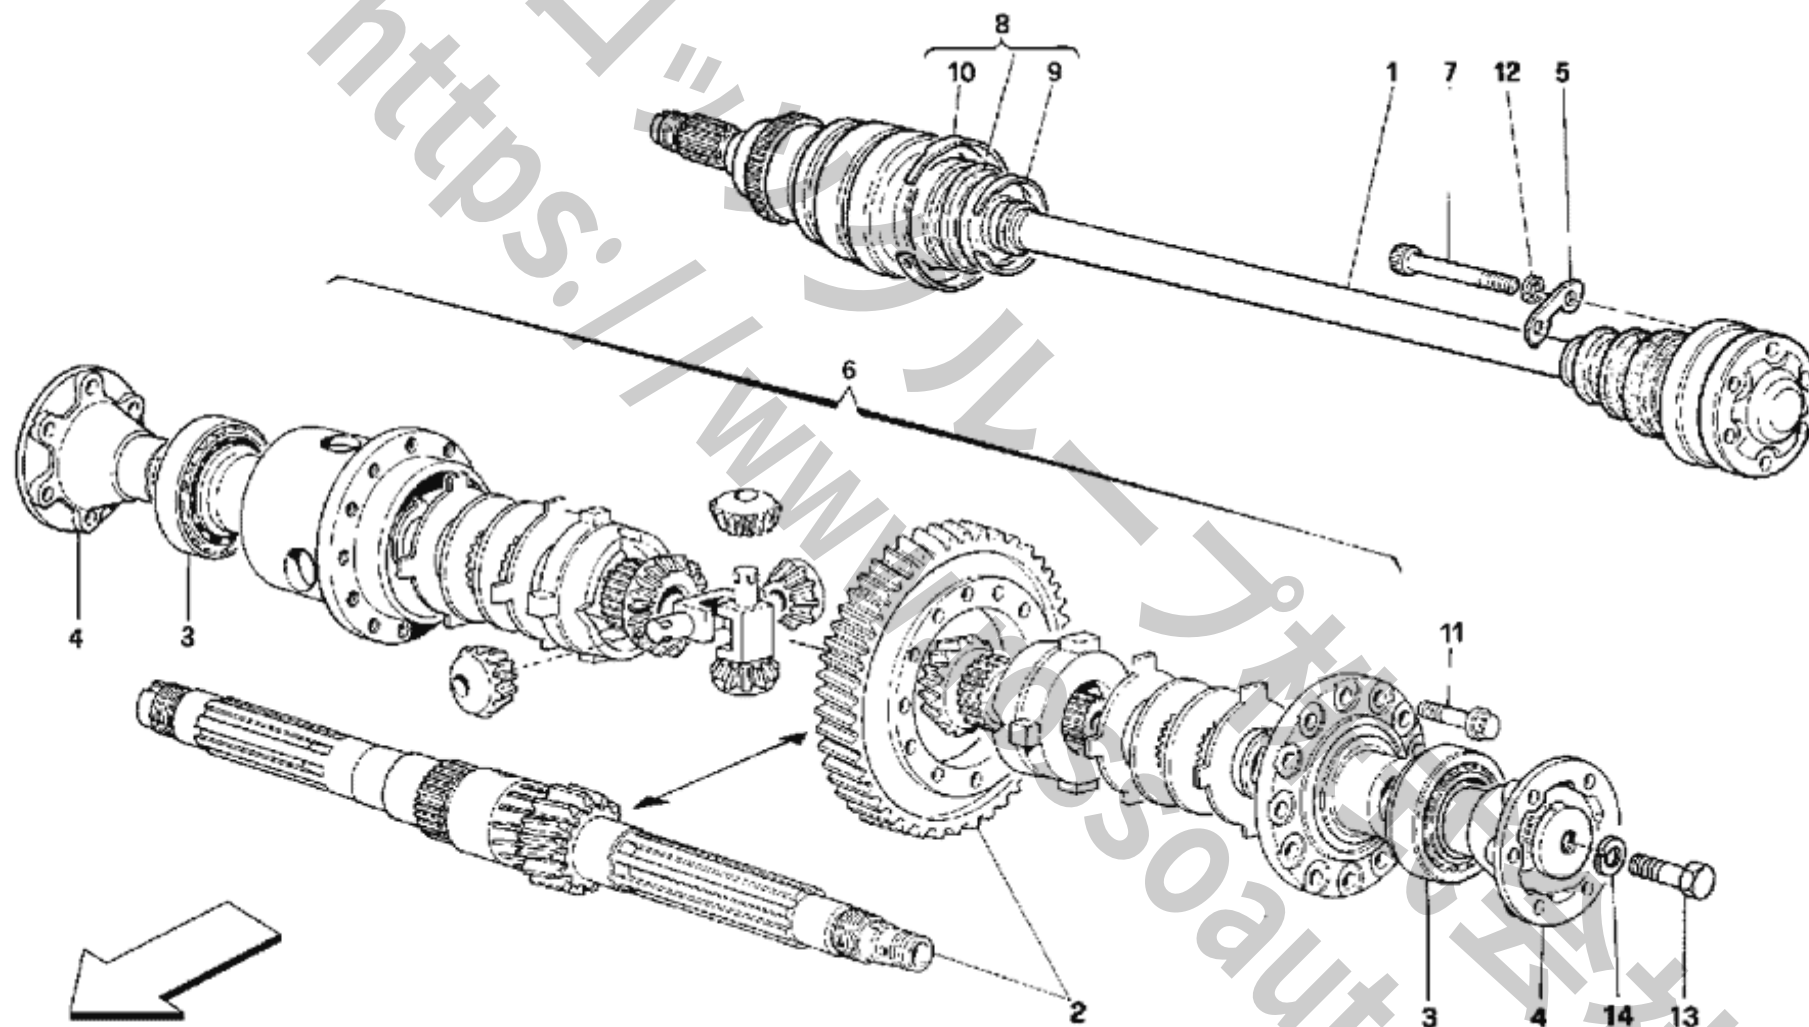


<033 Differential and Axle Shaft>

No.	Part No.	Name	Qty
Ask	Ask	Ask	Ask

ロッシェングループ株式会社
<https://www.rossoauto.com>

<034 Brake Hidraulic -Not for GD->

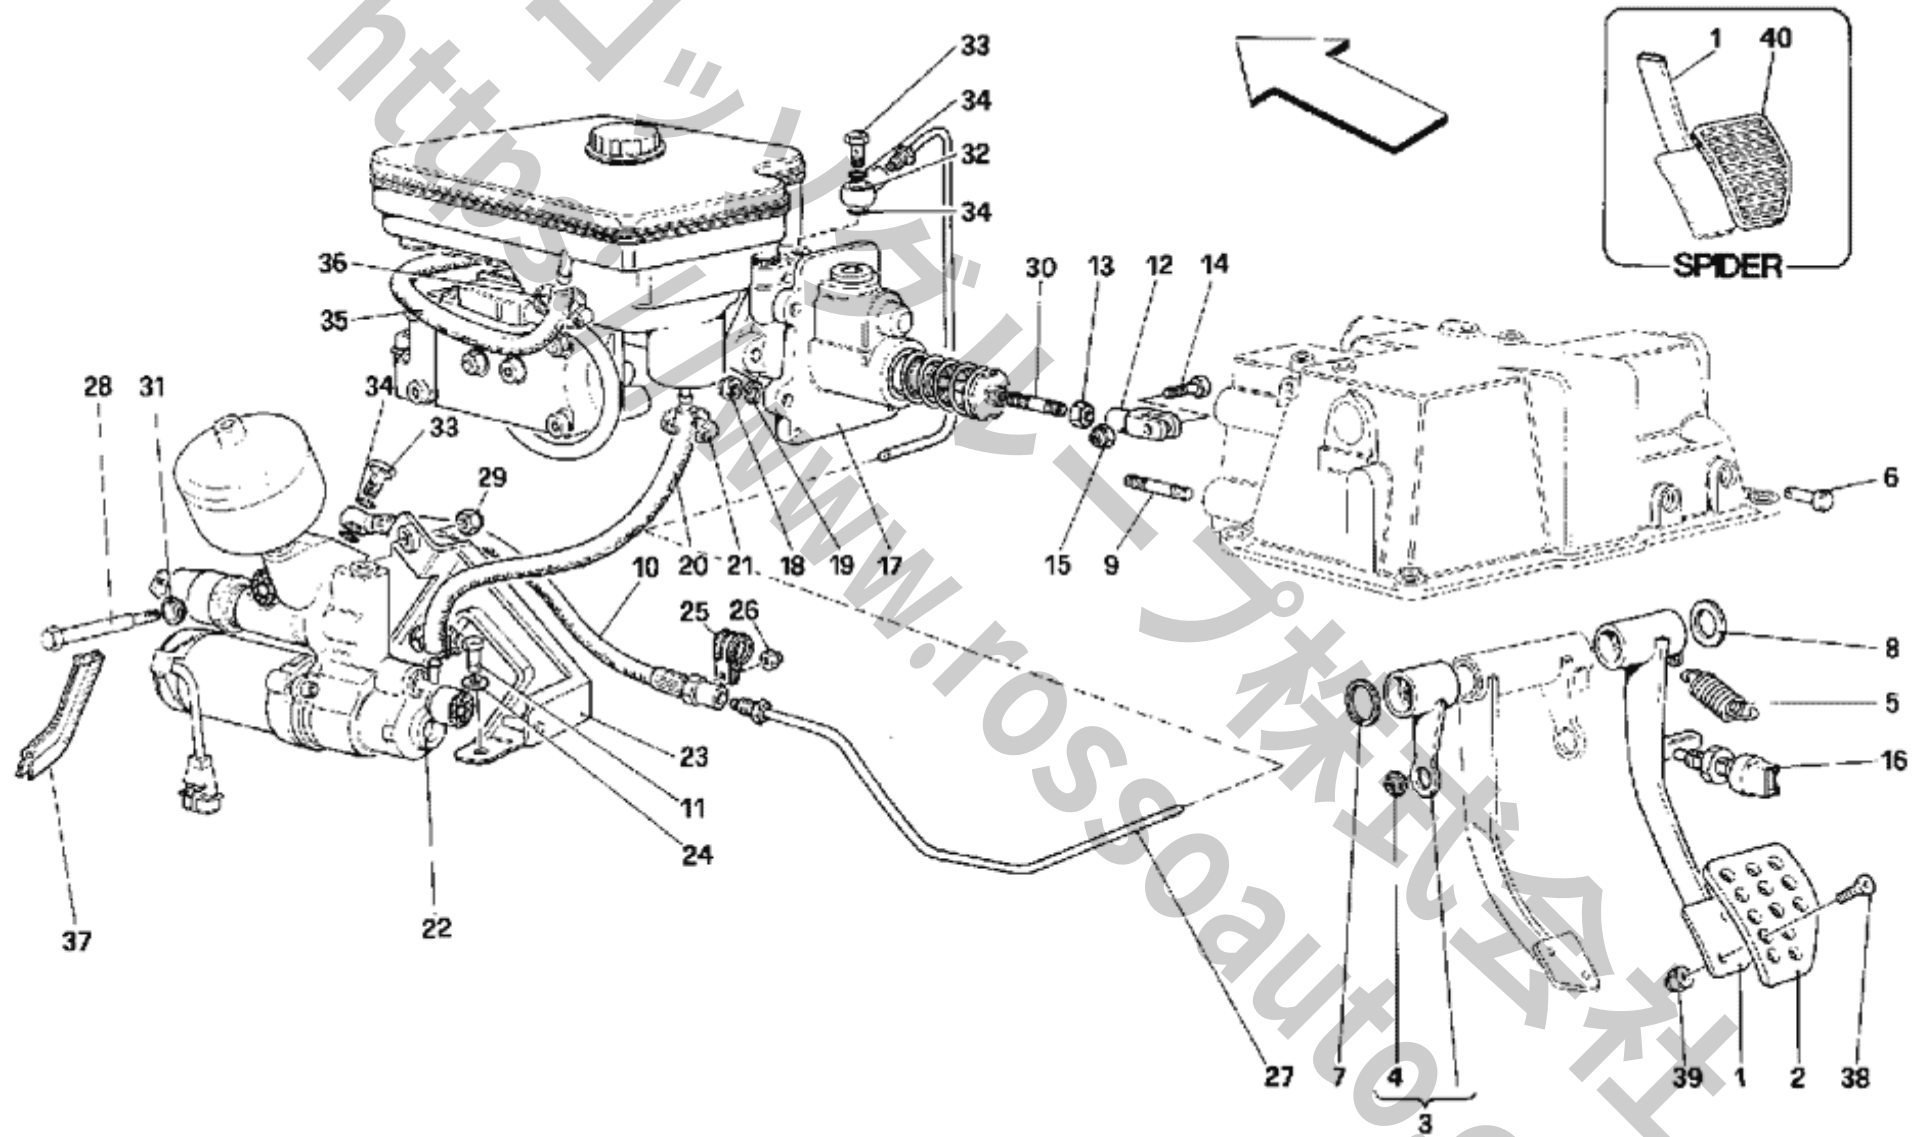


<034 Brake Hidraulic -Not for GD->

No.	Part No.	Name	Qty
Ask	Ask	Ask	Ask

ロッシングループ株式会社
<https://www.rossoauto.com>

<035 Throttle Pedal and Brake Hydraulic System -Valid for GD->

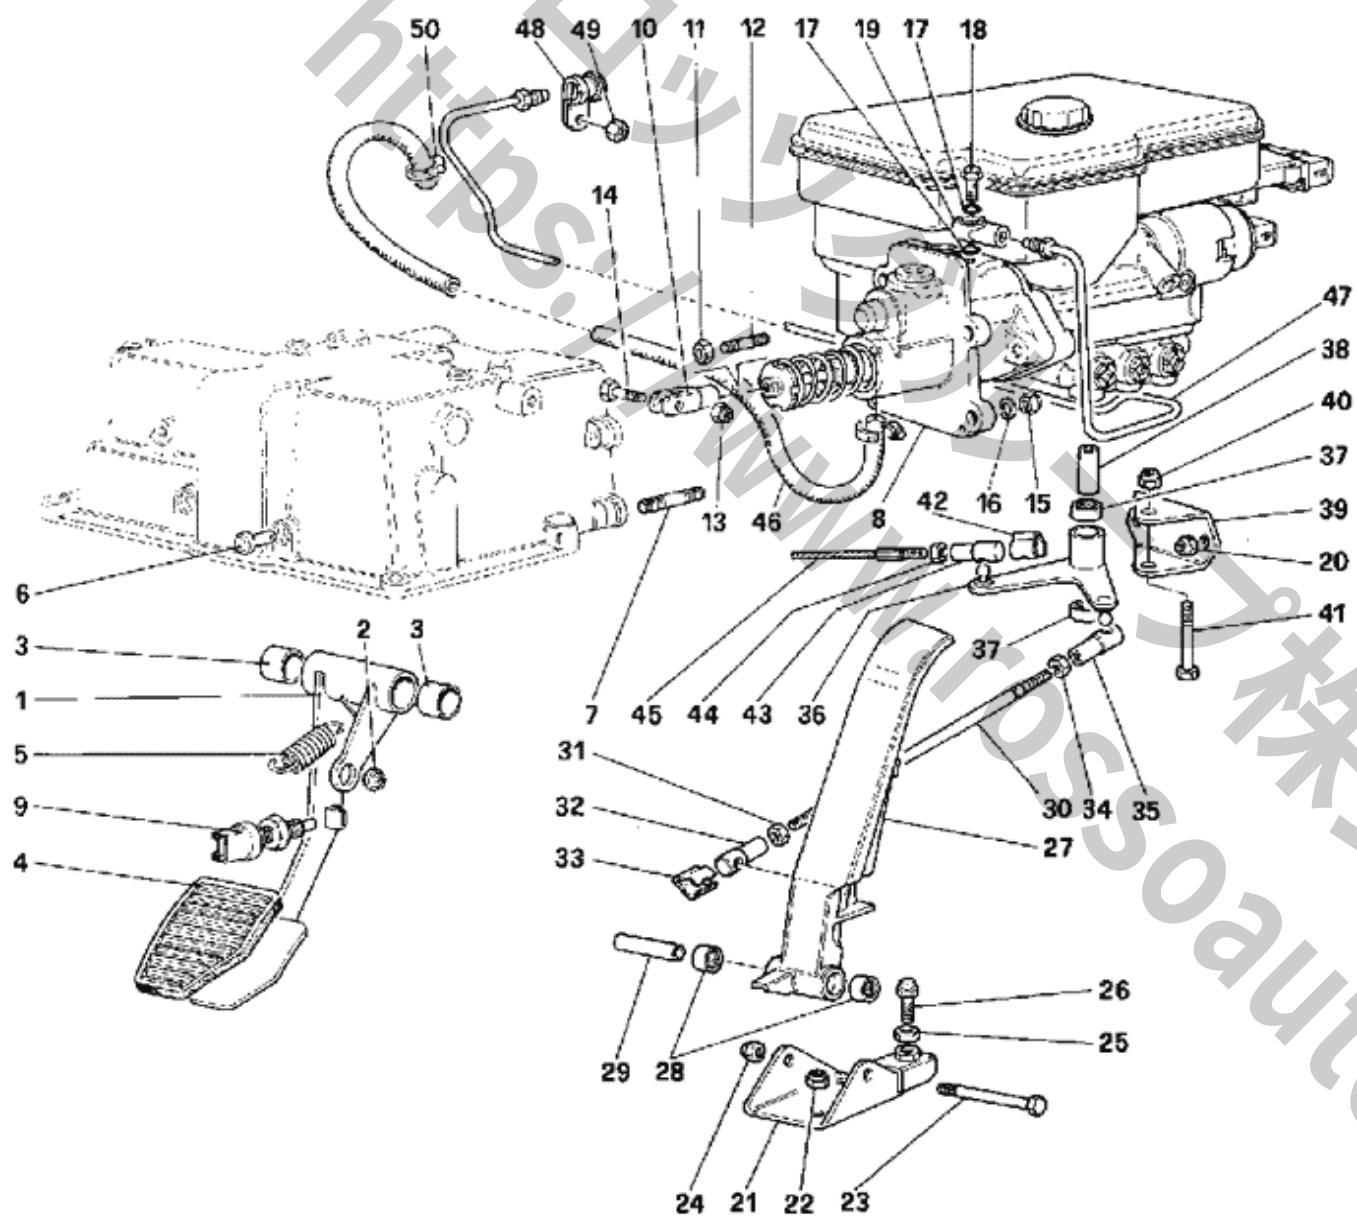


<035 Throttle Pedal and Brake Hydraulic System -Valid for GD->

No.	Part No.	Name	Qty
Ask	Ask	Ask	Ask

ロッシングループ株式会社
<https://www.rossoauto.com>

<036 Hydraulic System for Antiskid>

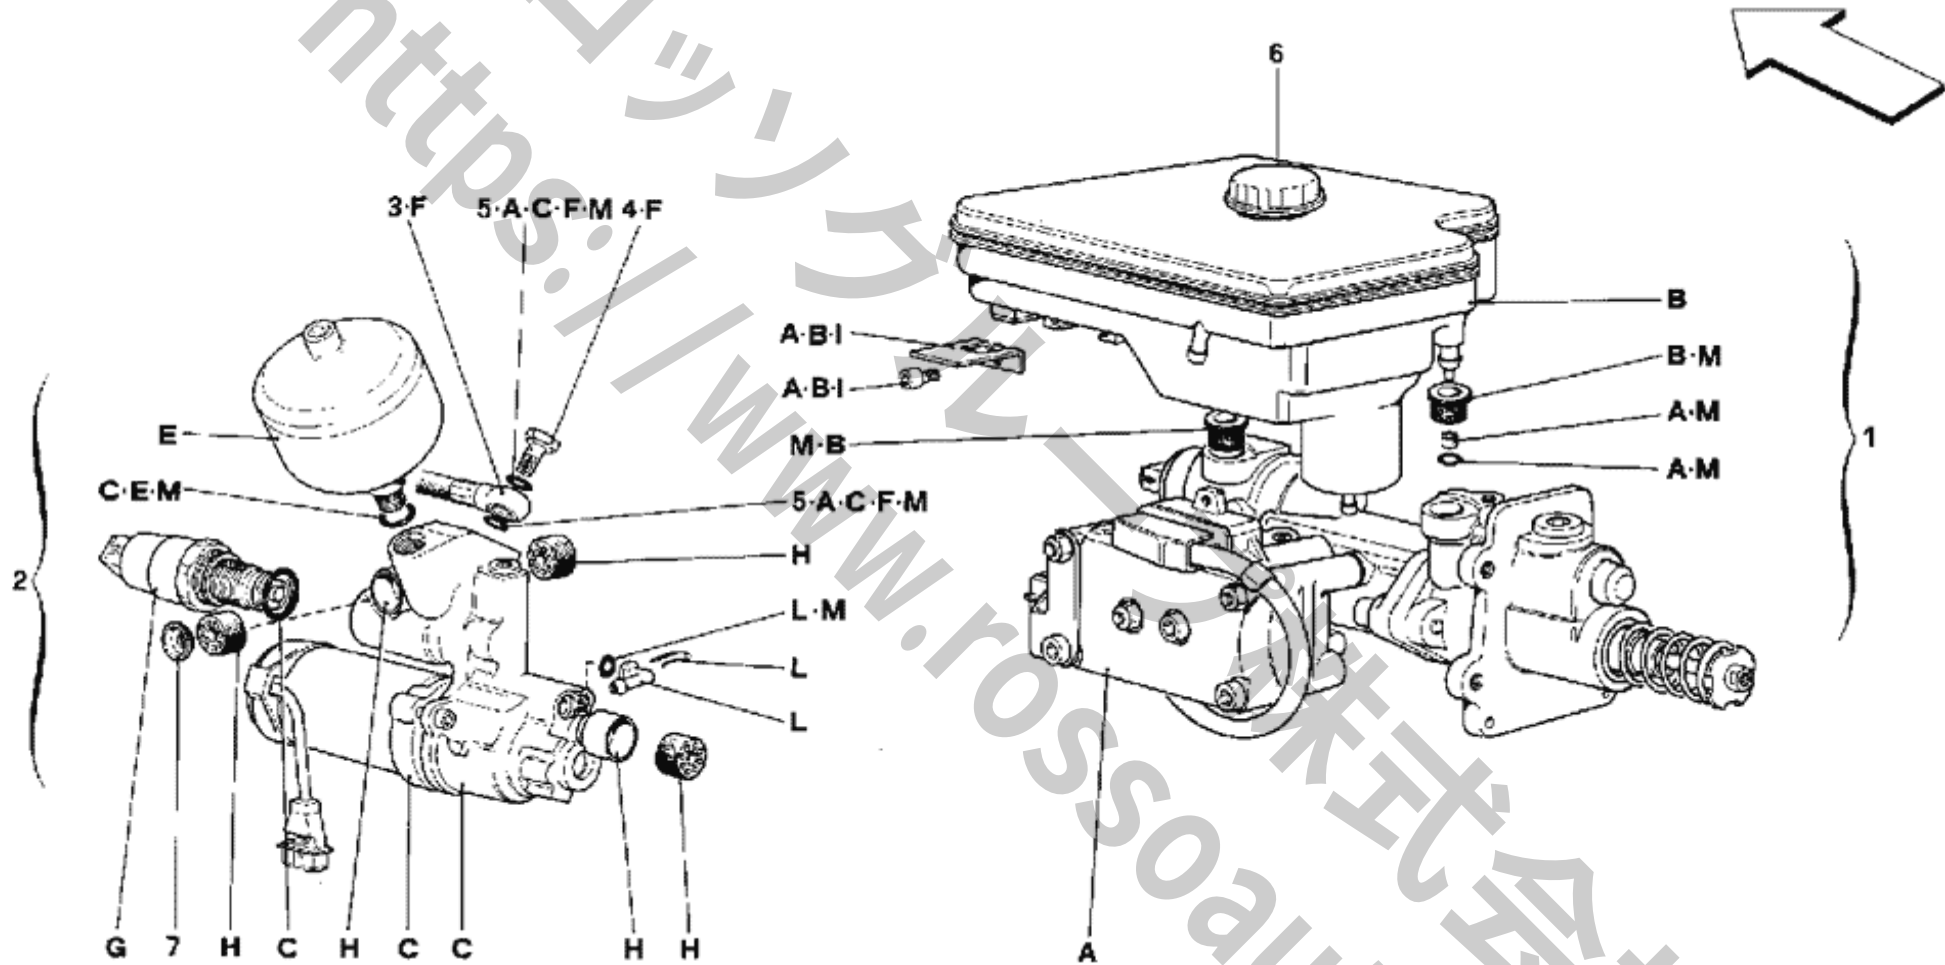


<036 Hydraulic System for Antiskid>

No.	Part No.	Name	Qty
Ask	Ask	Ask	Ask

ロッシェングループ株式会社
<https://www.rossoauto.com>

<037 Brake System>

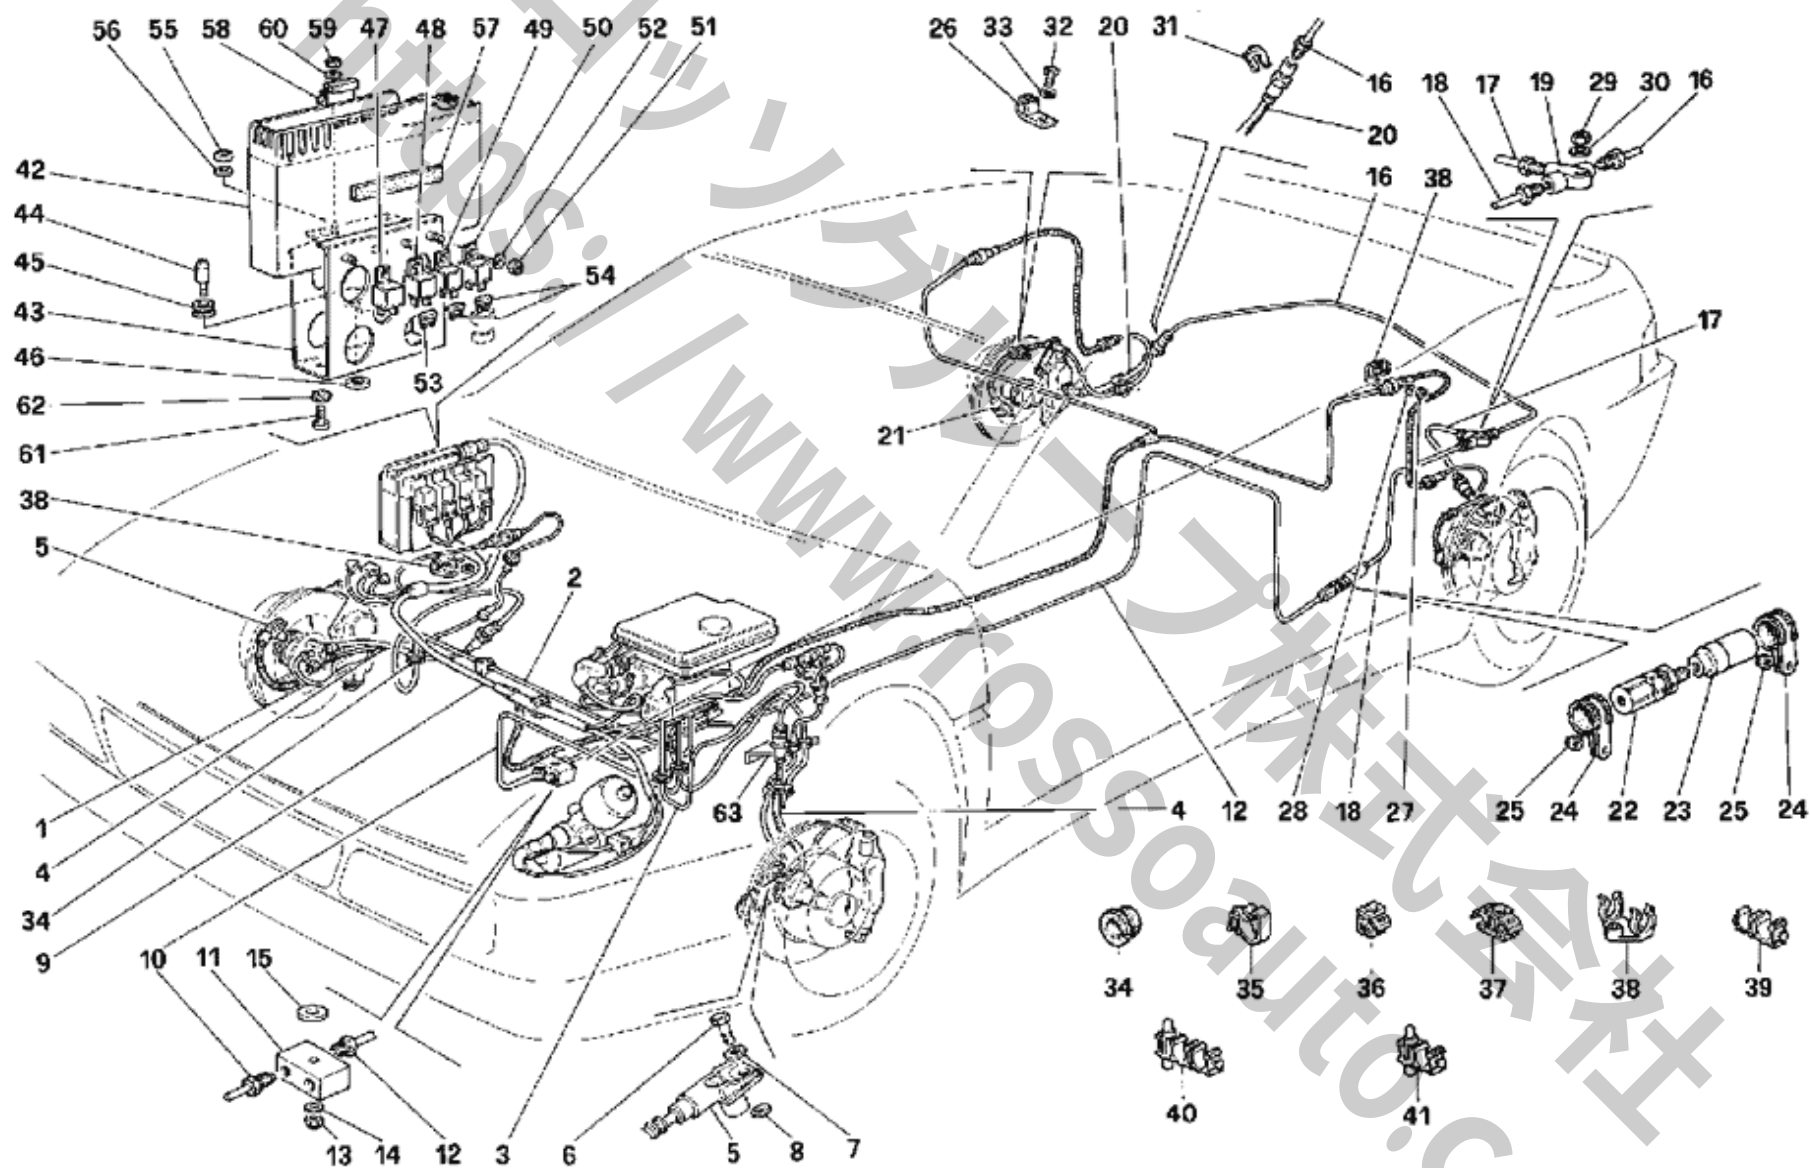


<037 Brake System>

No.	Part No.	Name	Qty
Ask	Ask	Ask	Ask

ロッシングループ株式会社
<https://www.rossoauto.com>

<038 Calipers for Front and Rear Brakes>

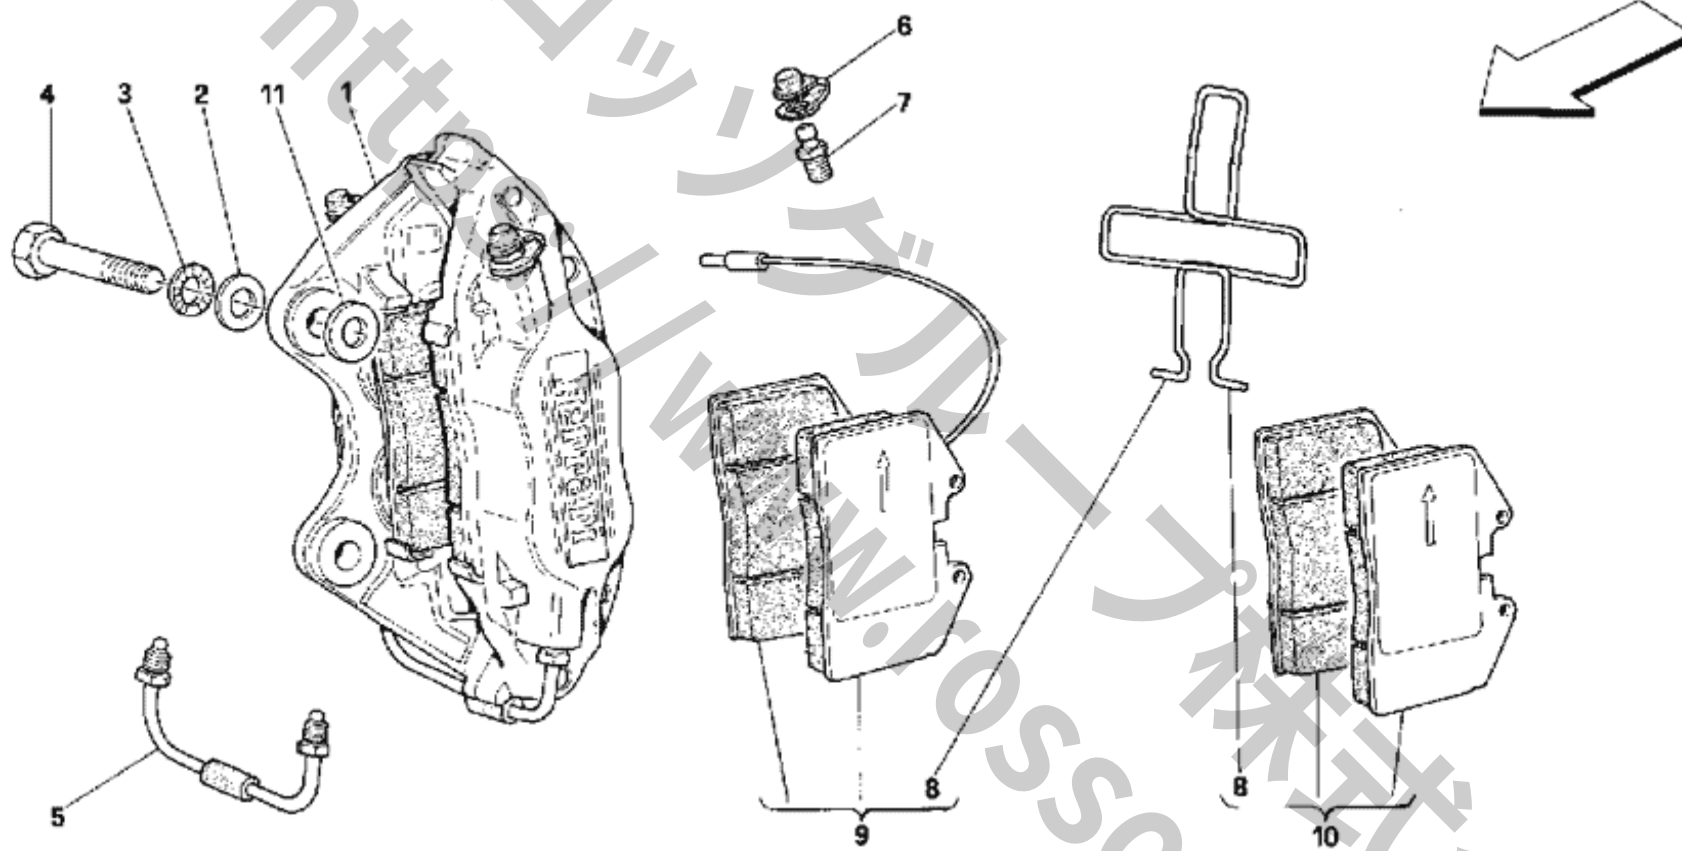

<038 Calipers for Front and Rear Brakes>

No.	Part No.	Name	Qty
Ask	Ask	Ask	Ask


ロッシングループ株式会社
<https://www.rossoauto.com>

<039 Hand-Brake Control>

This diagram illustrates the assembly of a hand-brake control system. The components are numbered as follows:

- Top Assembly (Wheel and Drum):** 22 (Wheel), 32 (Pin), 16 (Pin), 26 (Pin), 24 (Pin), 23 (Pin), 25 (Pin), 31 (Pin), 28 (Pin), 27 (Pin), 30 (Pin), 19 (Pin), 18 (Pin), 29 (Pin), 17 (Pin).
- Bottom Assembly (Hand-Brake Lever and Cable):** 5 (Pin), 4 (Pin), 6 (Pin), 7 (Pin), 8 (Pin), 2 (Pin), 3 (Pin), 11 (Pin), 10 (Pin), 9 (Pin), 33 (Pin), 34 (Pin), 14 (Pin), 13 (Pin), 12 (Pin), 15 (Pin), 20 (Pin), 33 (Pin), 34 (Pin).

The diagram shows the relationship between the hand-brake lever, the control cable, and the wheel assembly, with arrows indicating the direction of assembly.

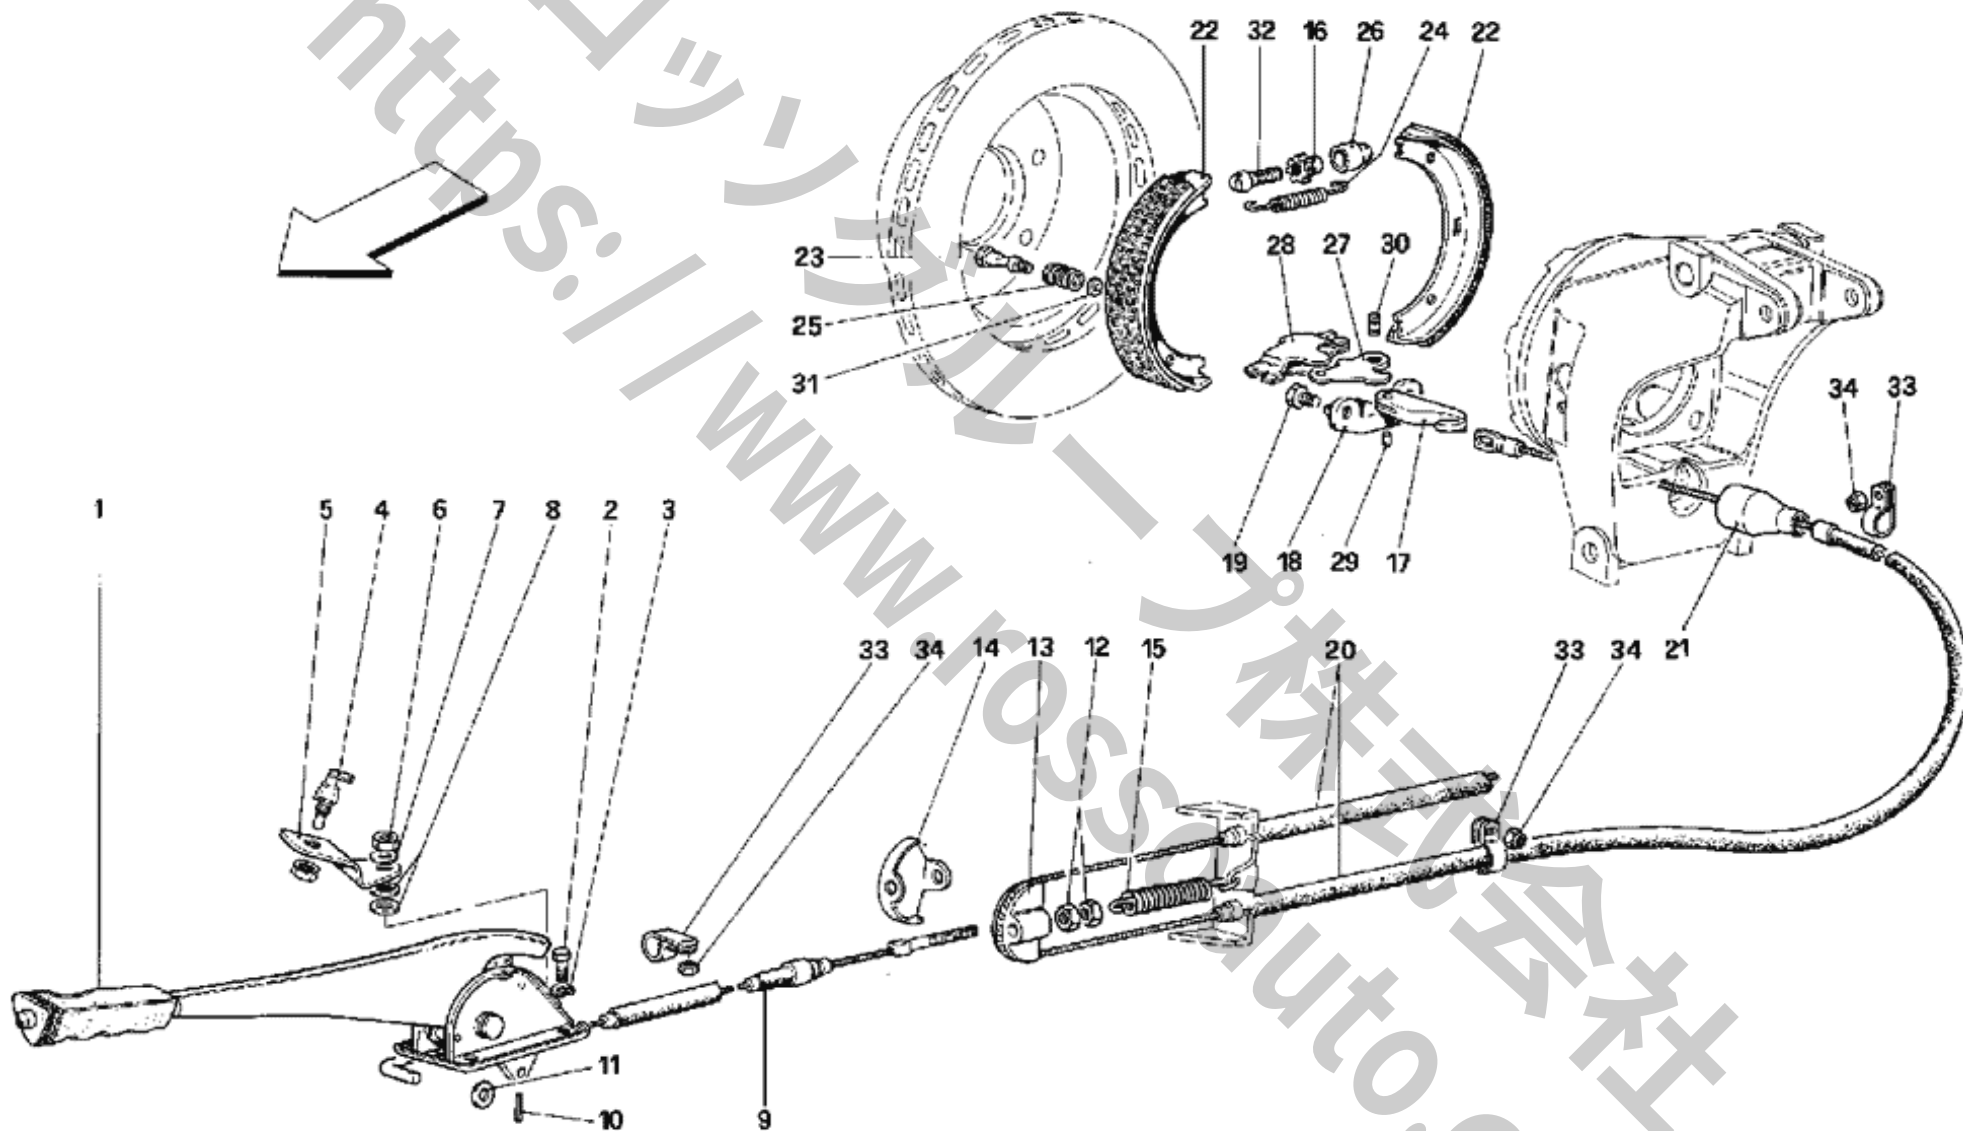


<039 Hand-Brake Control>

No.	Part No.	Name	Qty
Ask	Ask	Ask	Ask

ロッシングループ株式会社
<https://www.rossoauto.com>

<040 Steering Box and Linkage>

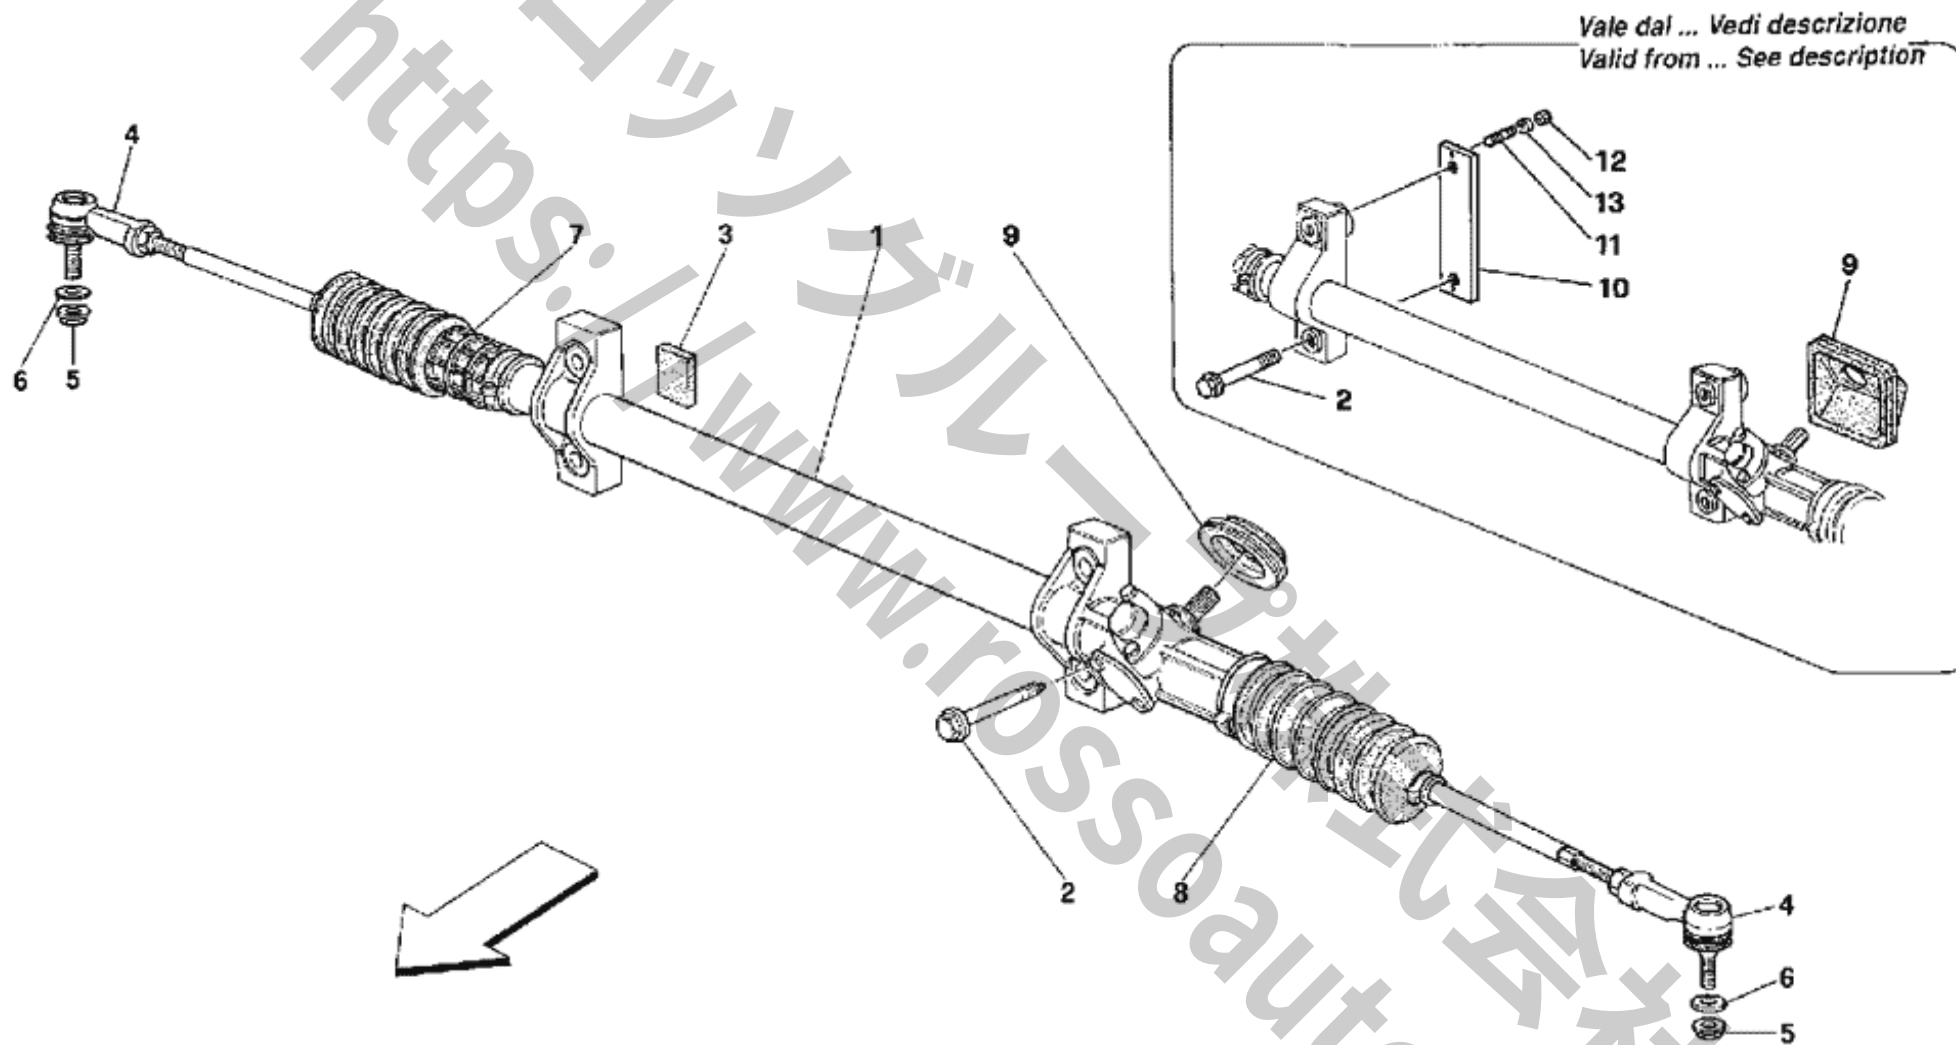


<040 Steering Box and Linkage>

No.	Part No.	Name	Qty
Ask	Ask	Ask	Ask

ロッシェングループ株式会社
<https://www.rossoauto.com>

<041 Steering Column>

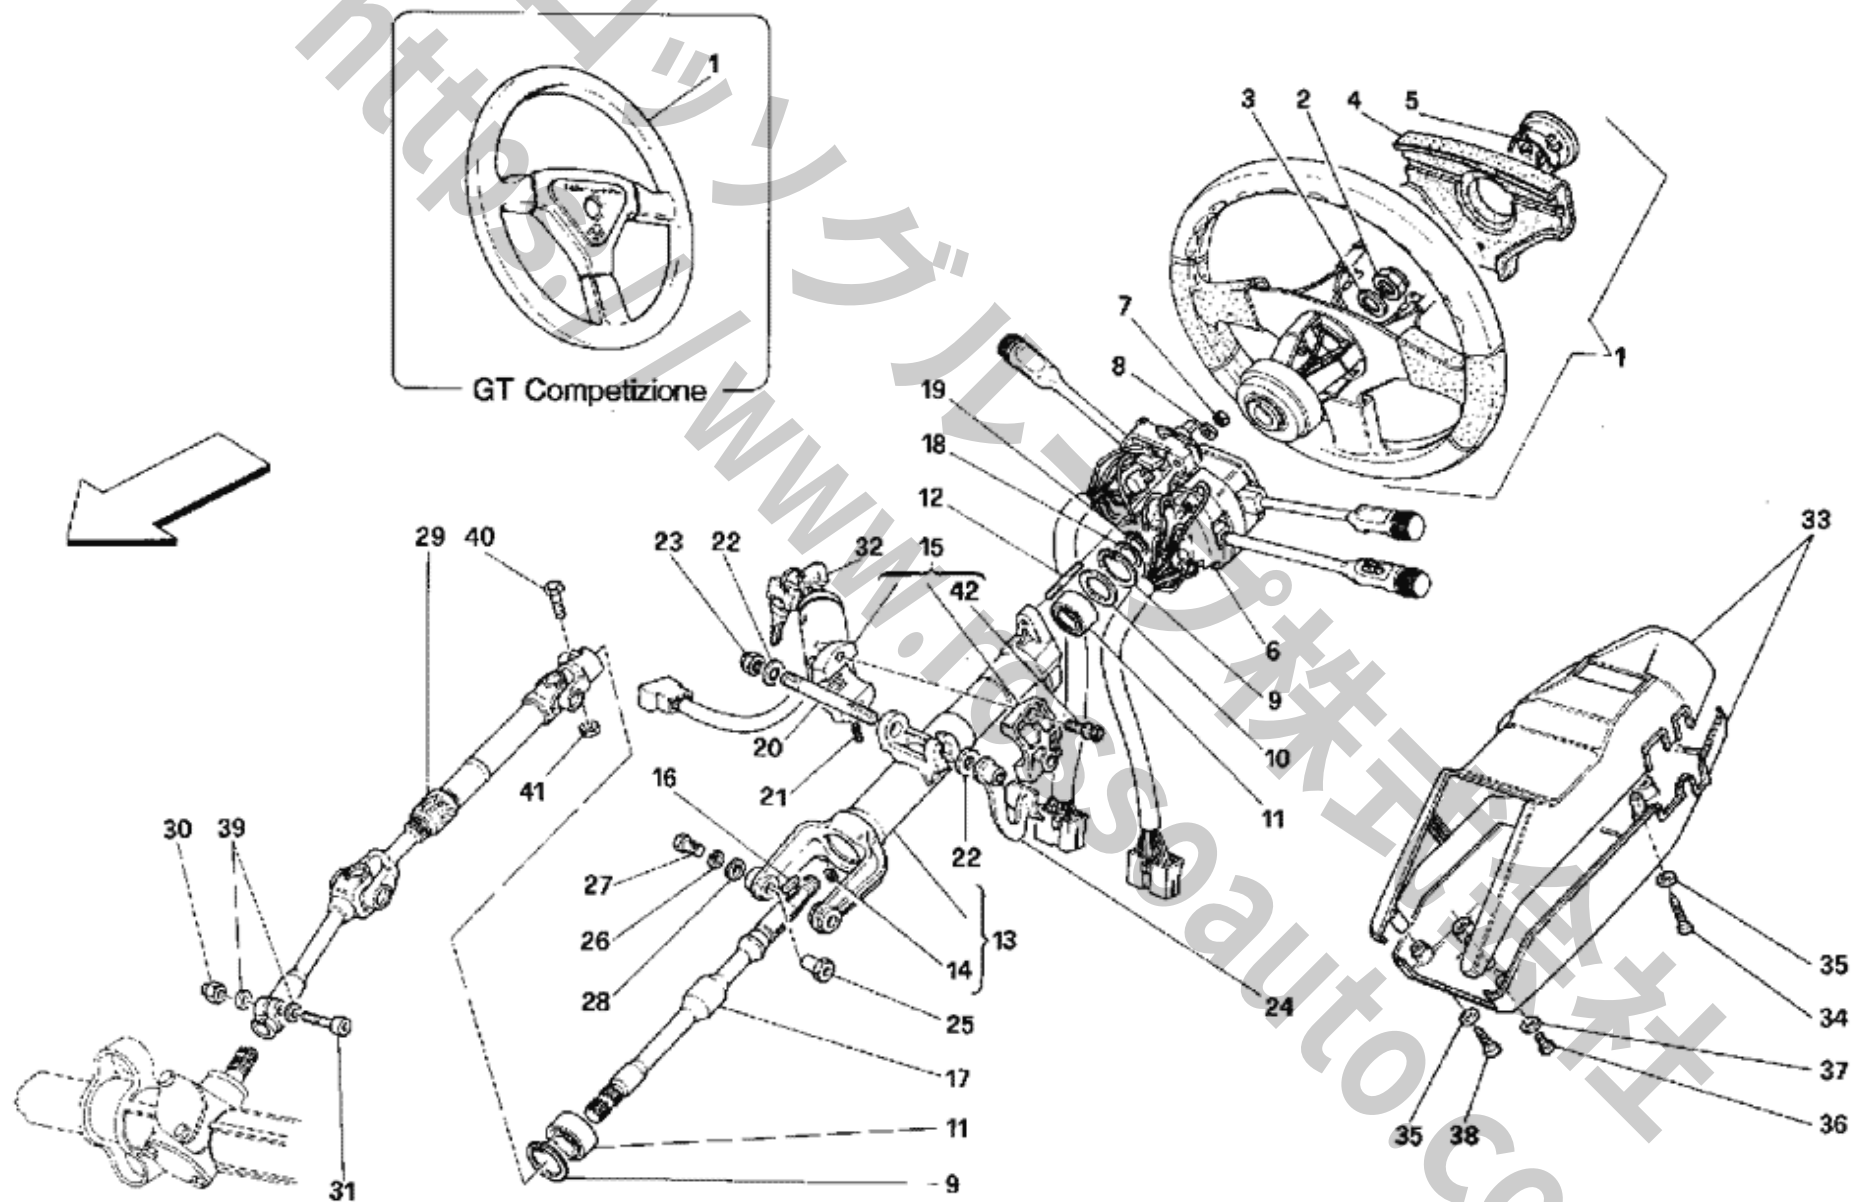


<041 Steering Column>

No.	Part No.	Name	Qty
Ask	Ask	Ask	Ask

ロッシングループ株式会社
<https://www.rossoauto.com>

<042 Front Suspension - Shock Absorber and Brake Disc>

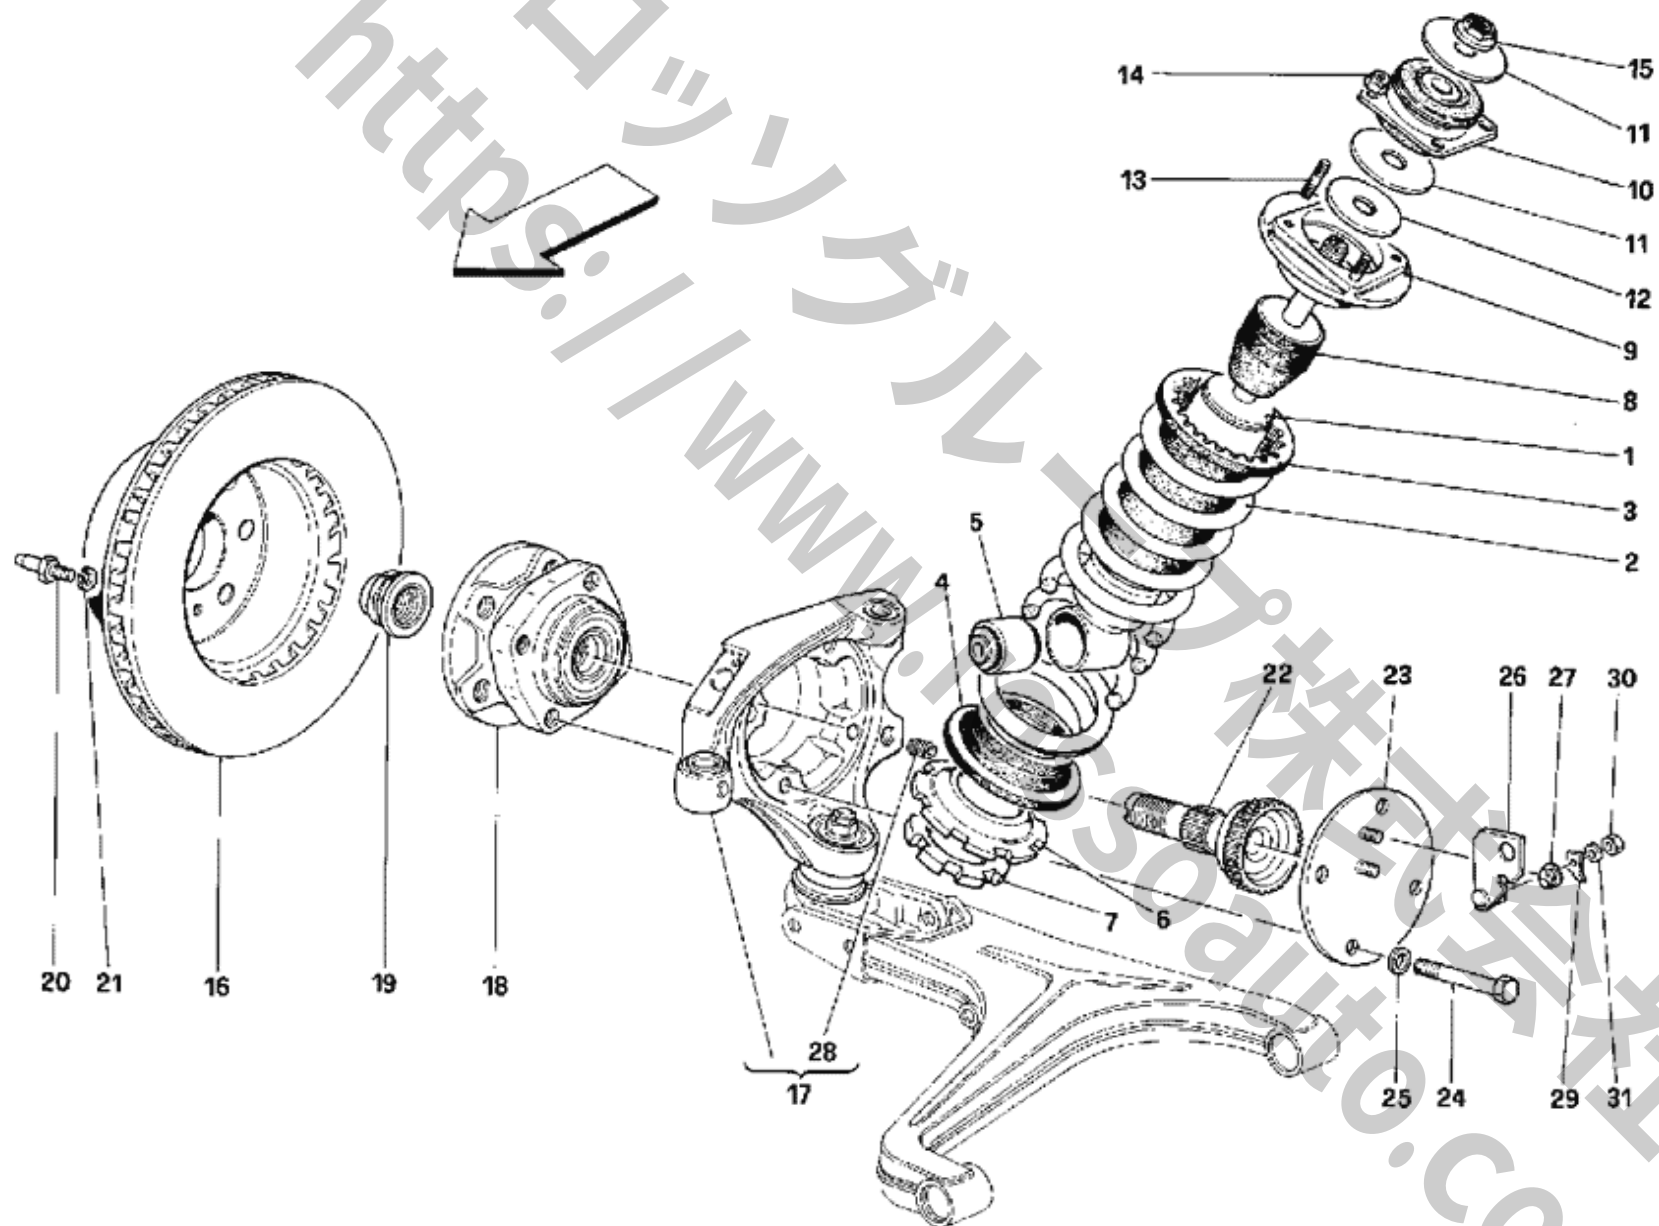


<042 Front Suspension - Shock Absorber and Brake Disc>

No.	Part No.	Name	Qty
Ask	Ask	Ask	Ask

ロッシングループ株式会社
<https://www.rossoauto.com>

<043 Front Suspension - Wishbones>

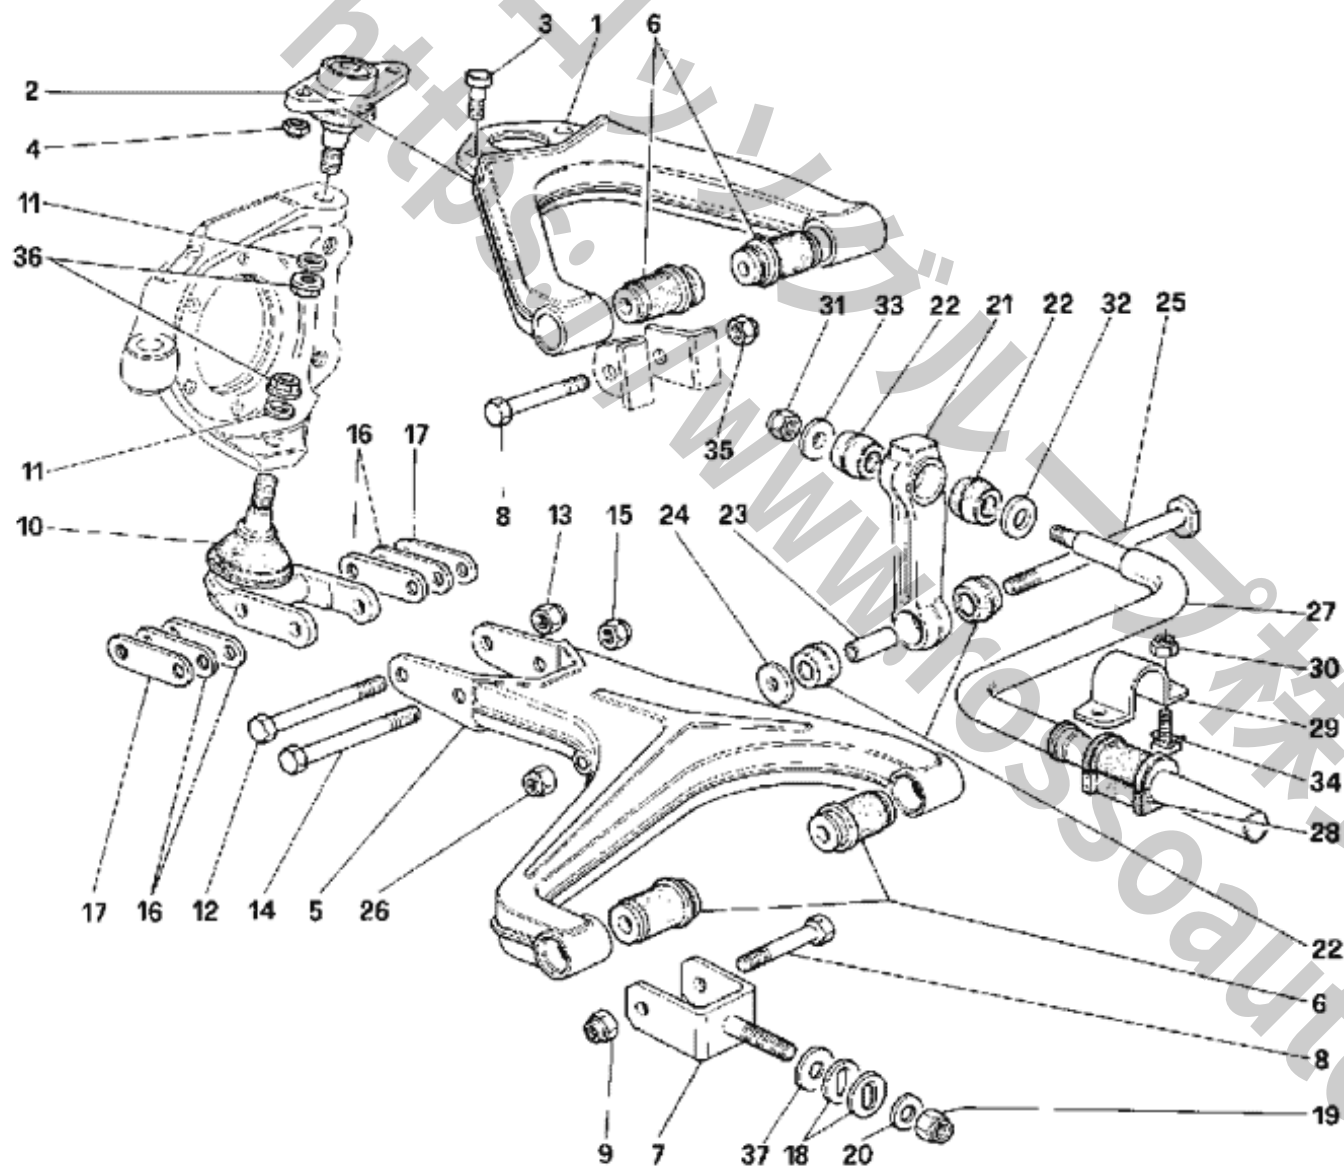


<043 Front Suspension - Wishbones>

No.	Part No.	Name	Qty
Ask	Ask	Ask	Ask

ロッシェングループ株式会社
<https://www.rossoauto.com>

<044 Rear Suspension - Shock Absorber and Brake Disc>

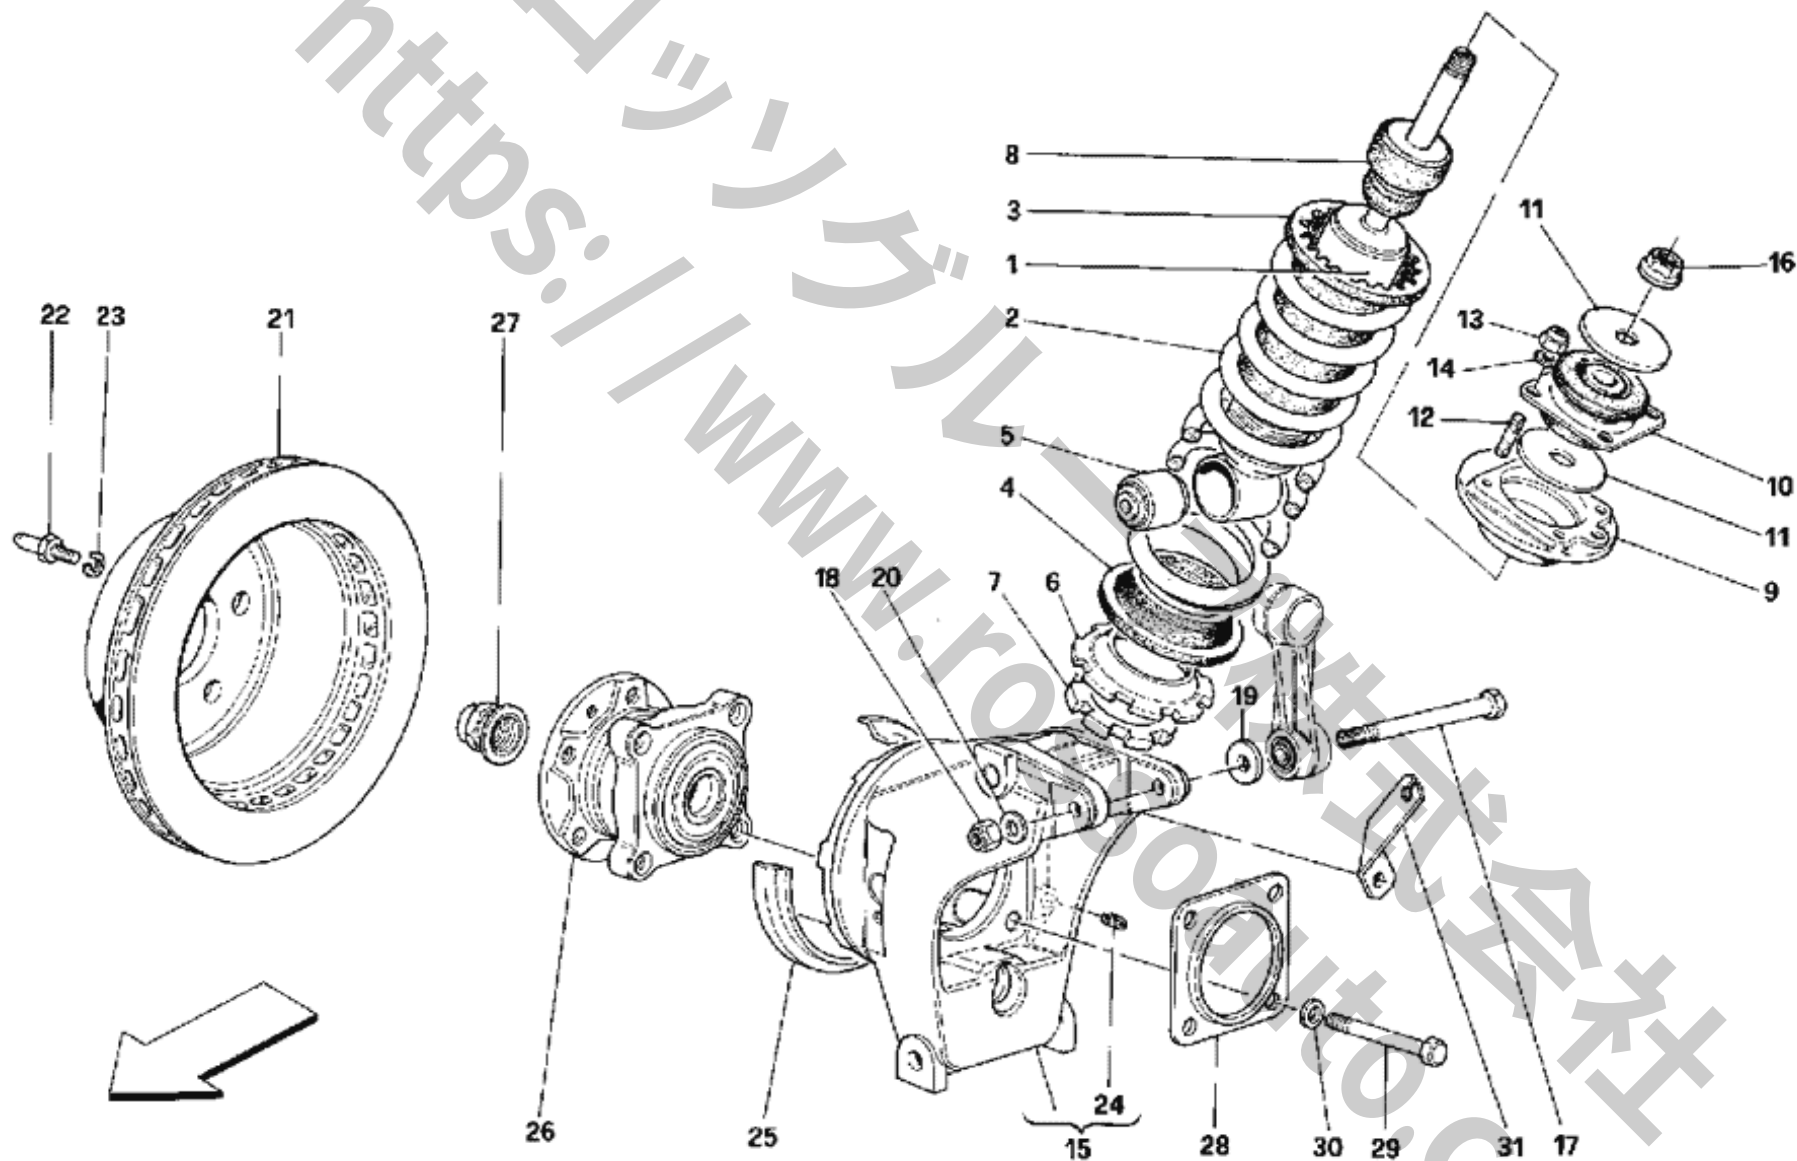


<044 Rear Suspension - Shock Absorber and Brake Disc>

No.	Part No.	Name	Qty
Ask	Ask	Ask	Ask

ロッシングループ株式会社
<https://www.rossoauto.com>

<045 Rear Suspension - Wishbones>



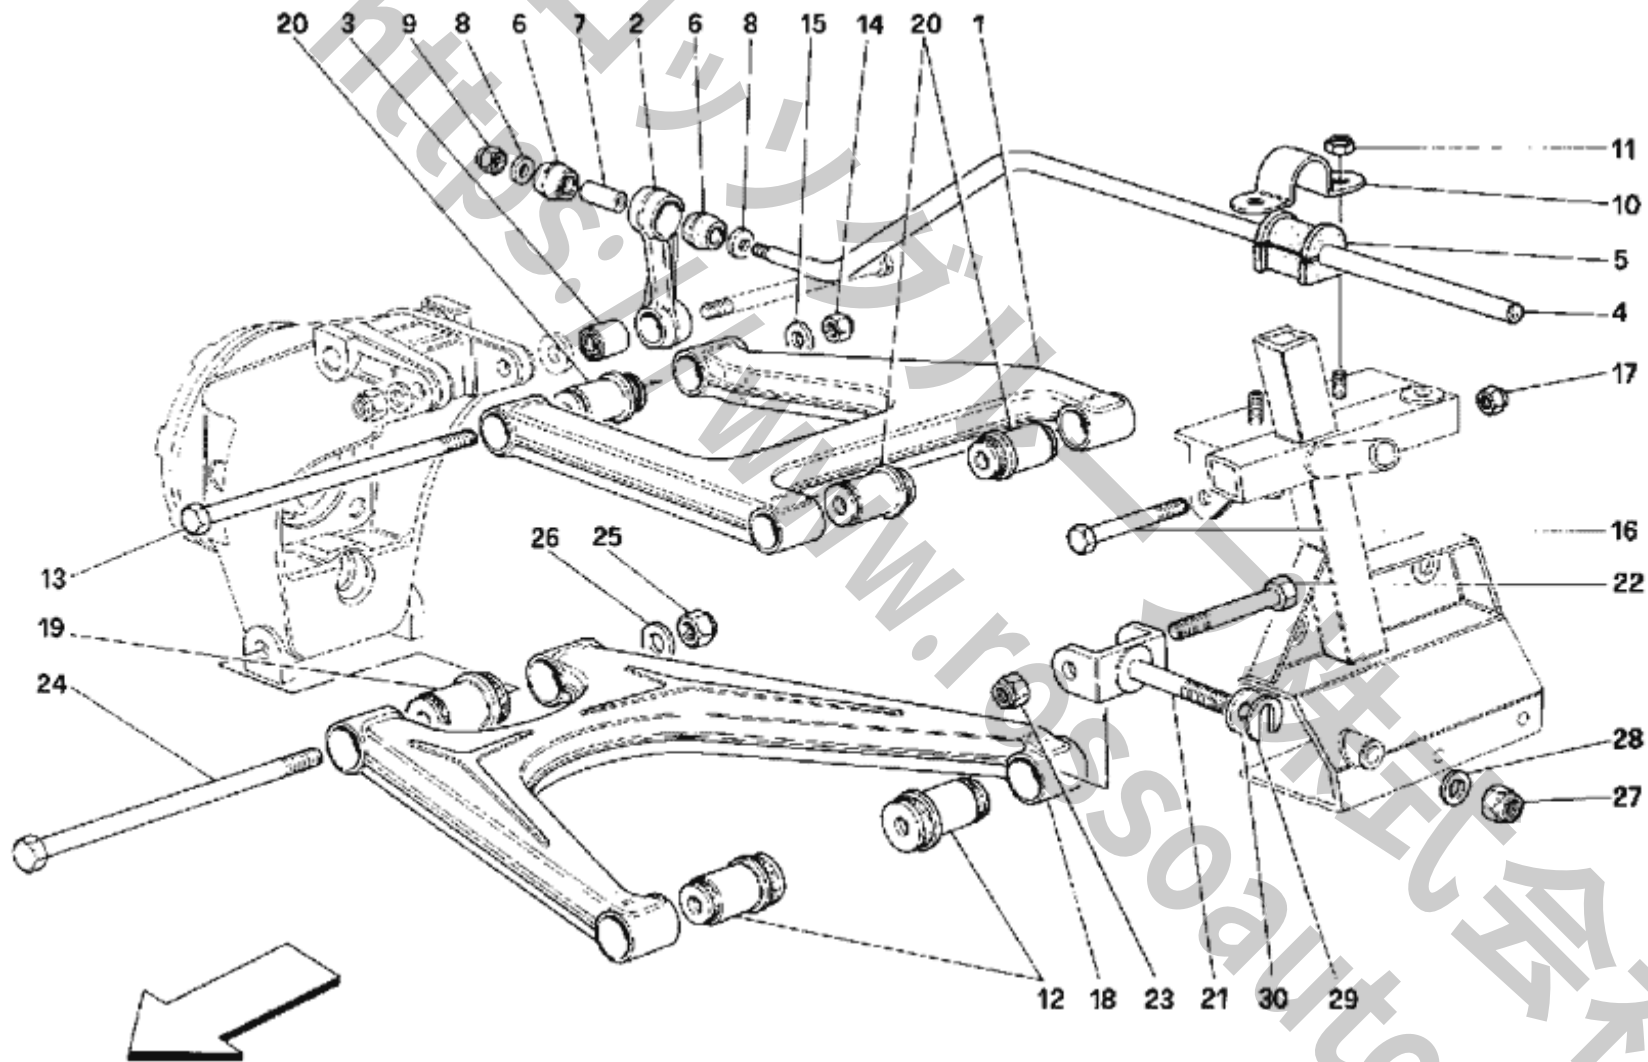


<045 Rear Suspension - Wishbones>

No.	Part No.	Name	Qty
Ask	Ask	Ask	Ask

ロッシングループ株式会社
<https://www.rossoauto.com>

<046 Wheels>

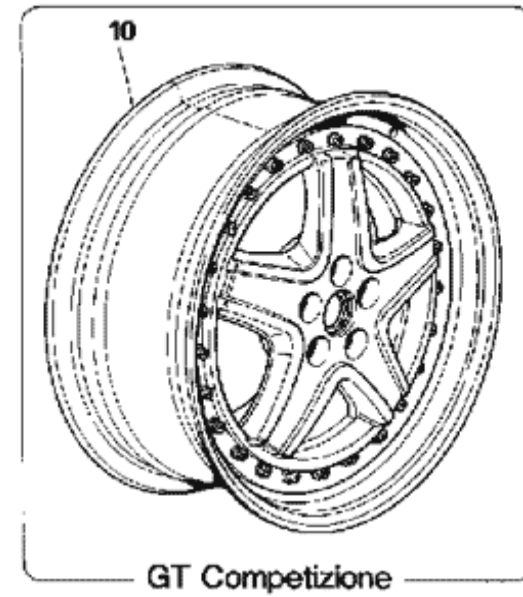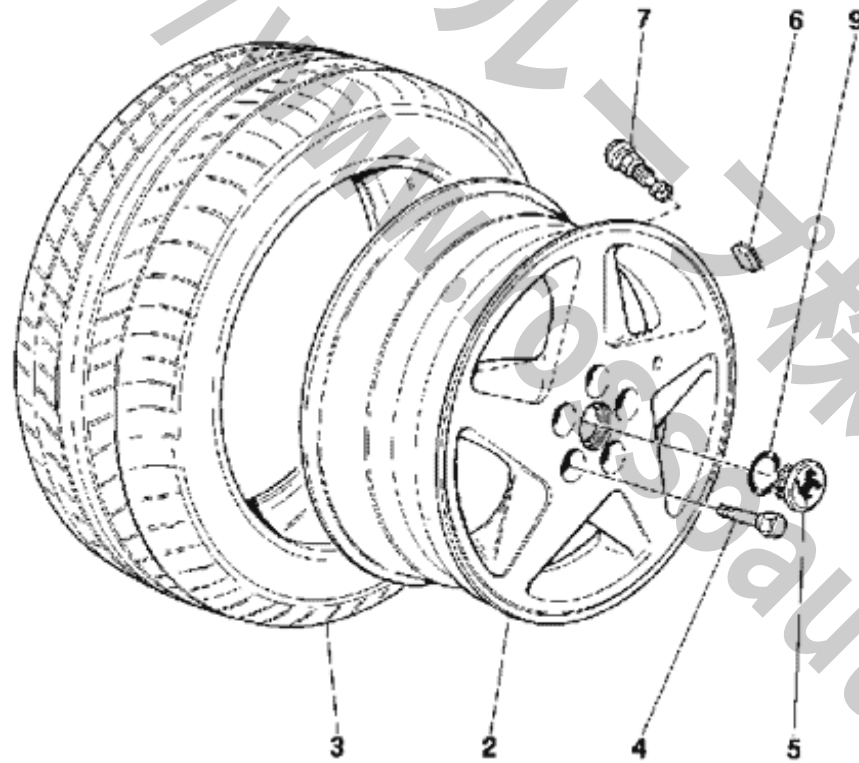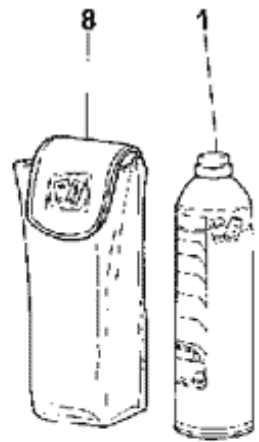


<046 Wheels>

No.	Part No.	Name	Qty
Ask	Ask	Ask	Ask

ロッシングループ株式会社
<https://www.rossoauto.com>

<047 Current Generator - Starting Motor>

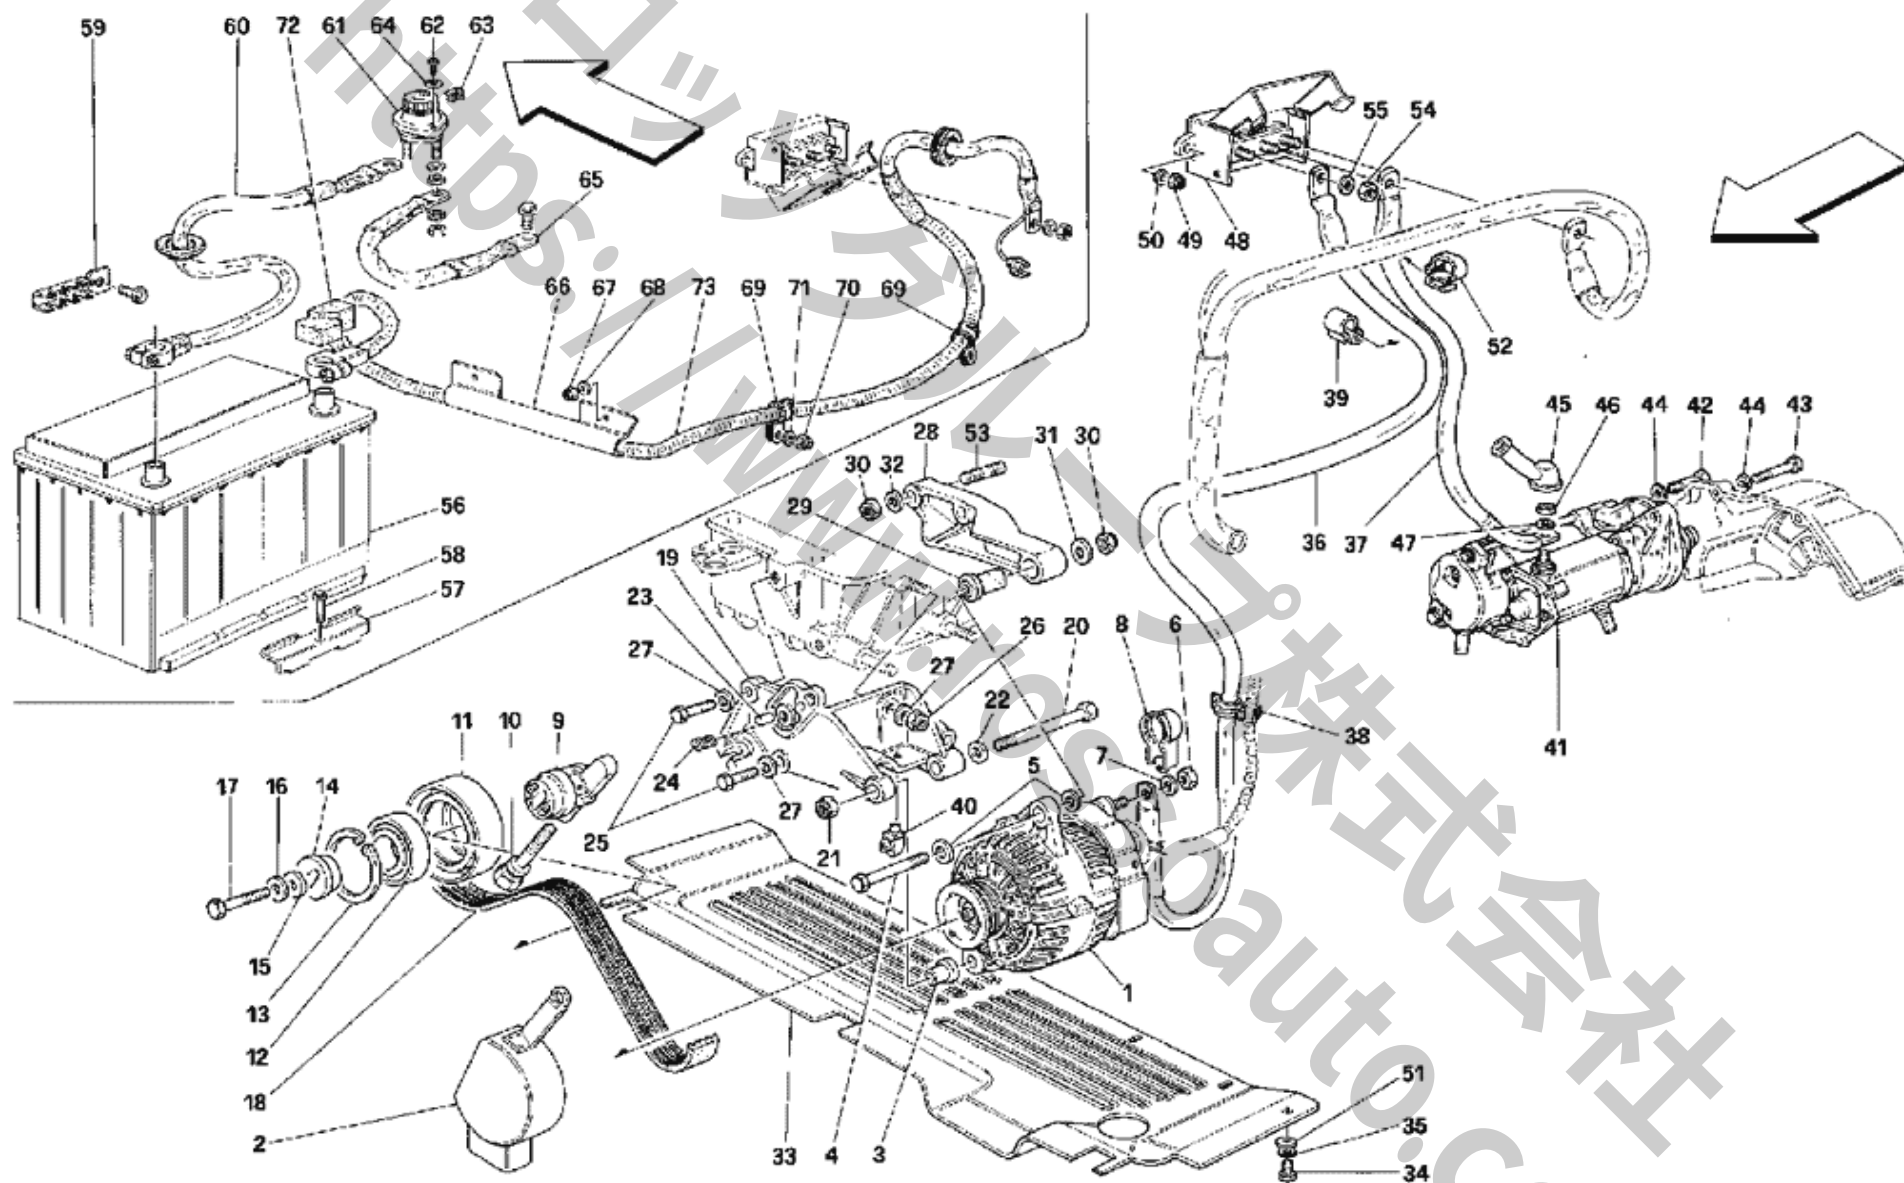


<047 Current Generator - Starting Motor>

No.	Part No.	Name	Qty
Ask	Ask	Ask	Ask

ロッシングループ株式会社
<https://www.rossoauto.com>

<048 Air Conditioning Compressor>

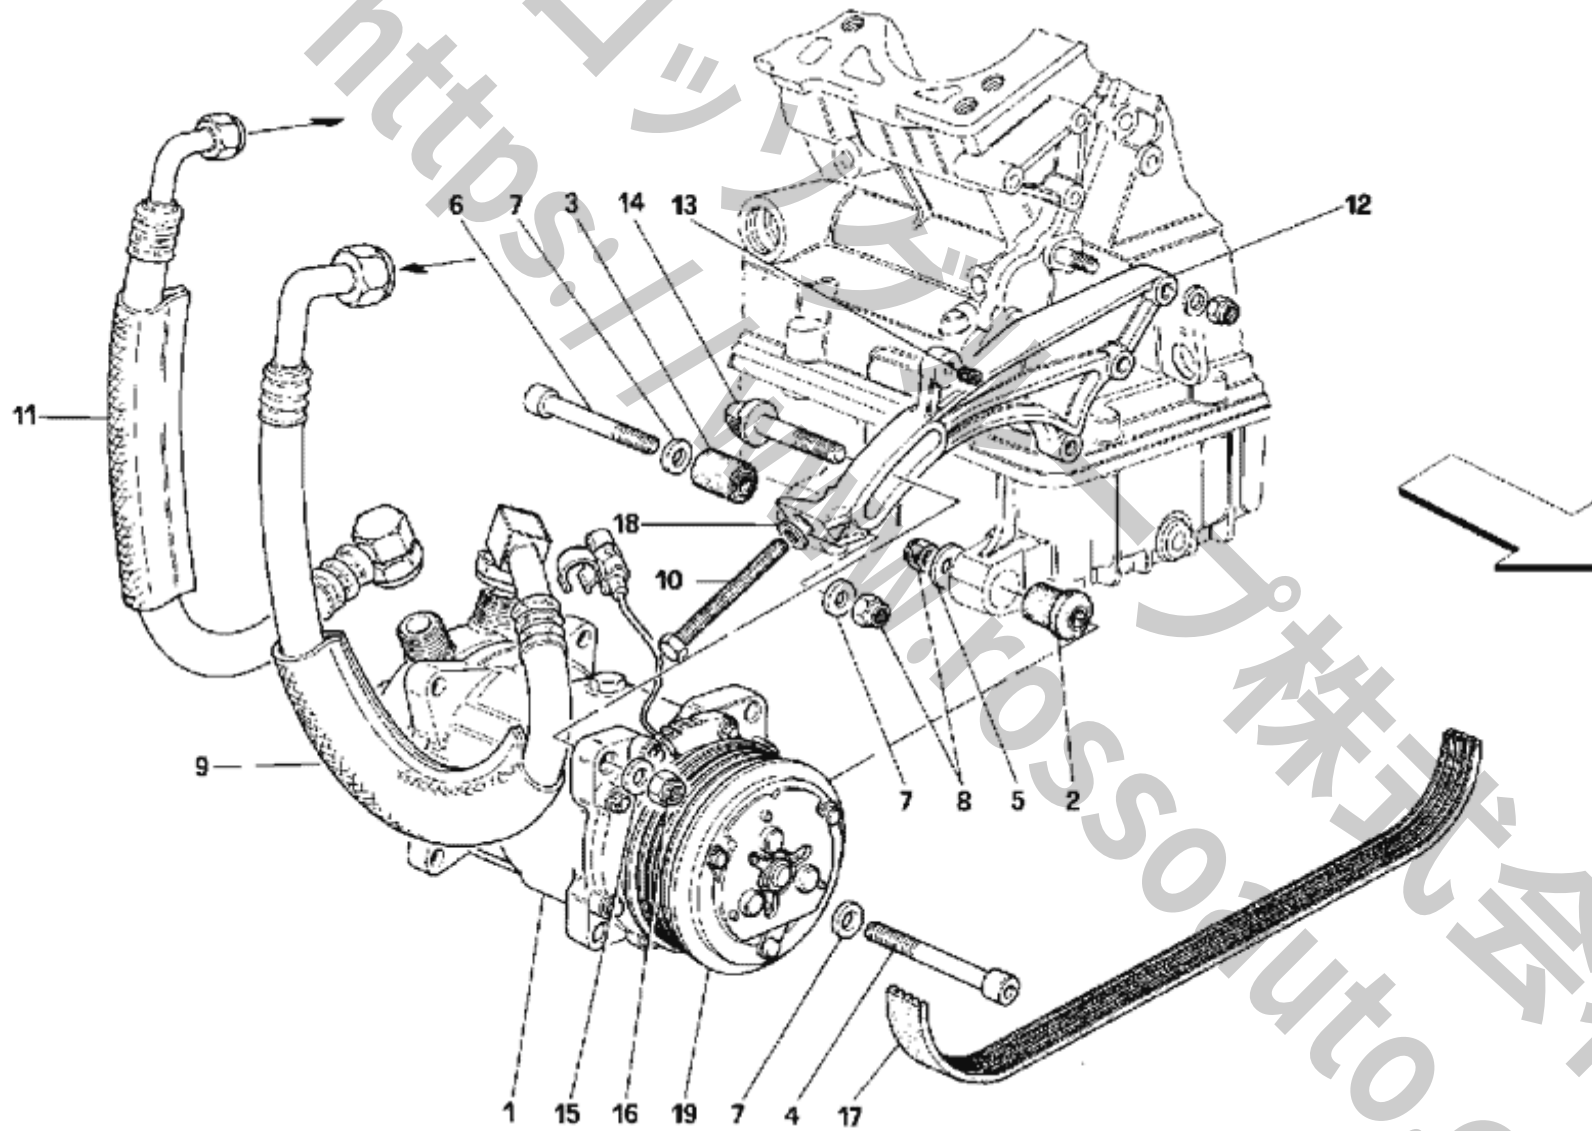


<048 Air Conditioning Compressor>

No.	Part No.	Name	Qty
Ask	Ask	Ask	Ask

ロッシェングループ株式会社
<https://www.rossoauto.com>

<049 Tools Equipment>

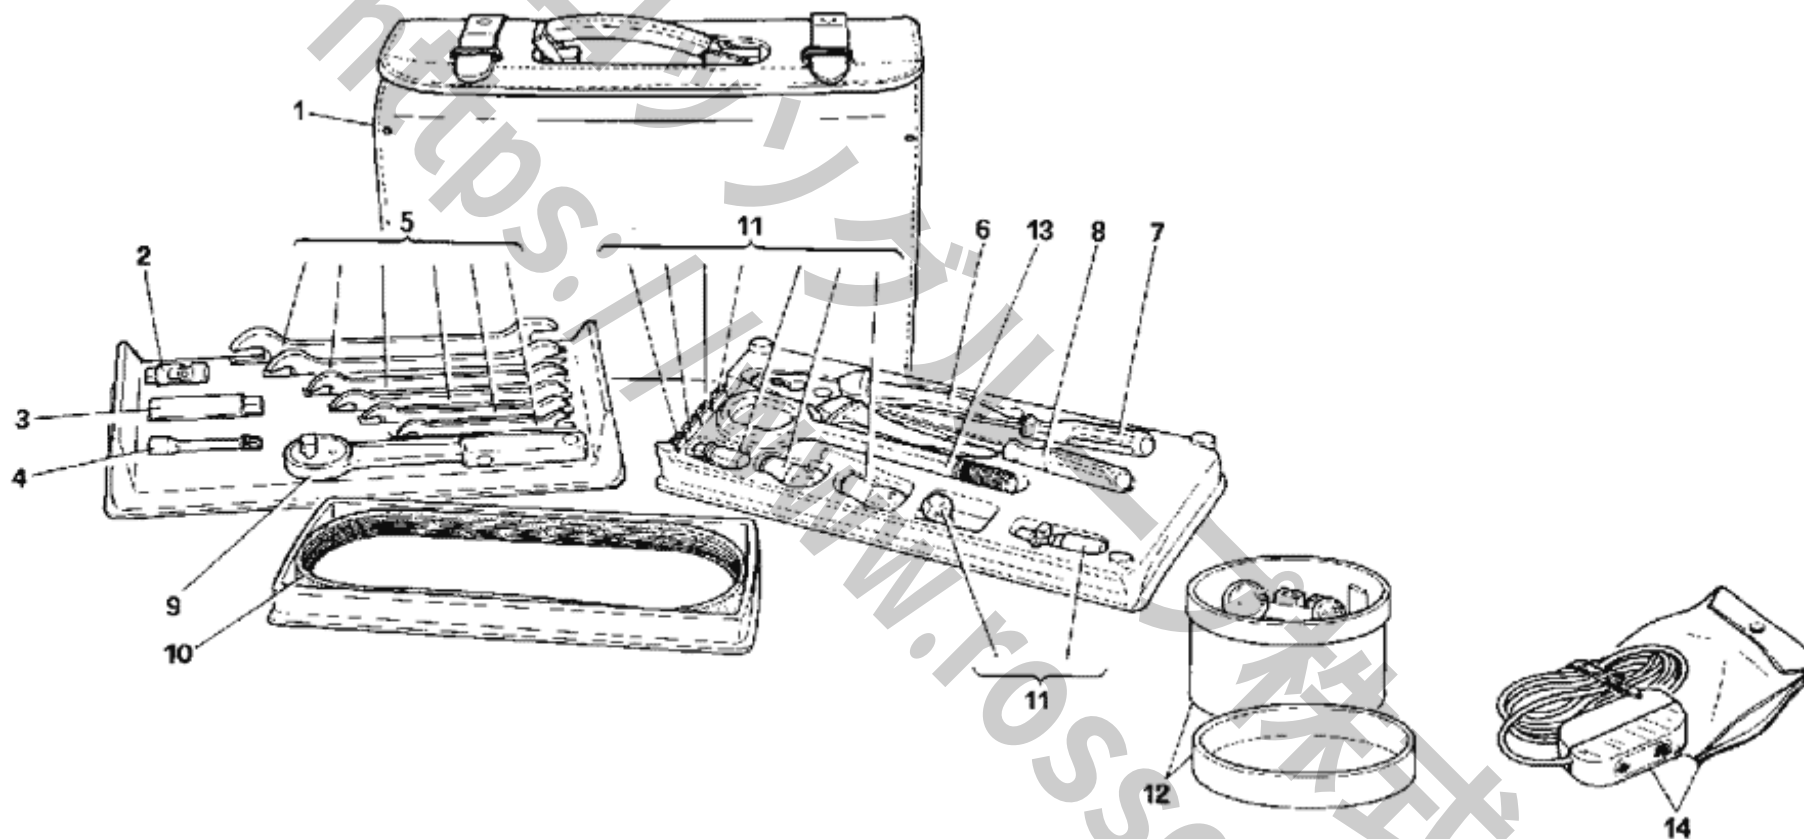


<049 Tools Equipment>

No.	Part No.	Name	Qty
Ask	Ask	Ask	Ask

ロッシェングループ株式会社
<https://www.rossoauto.com>

<101 Body - General Units>

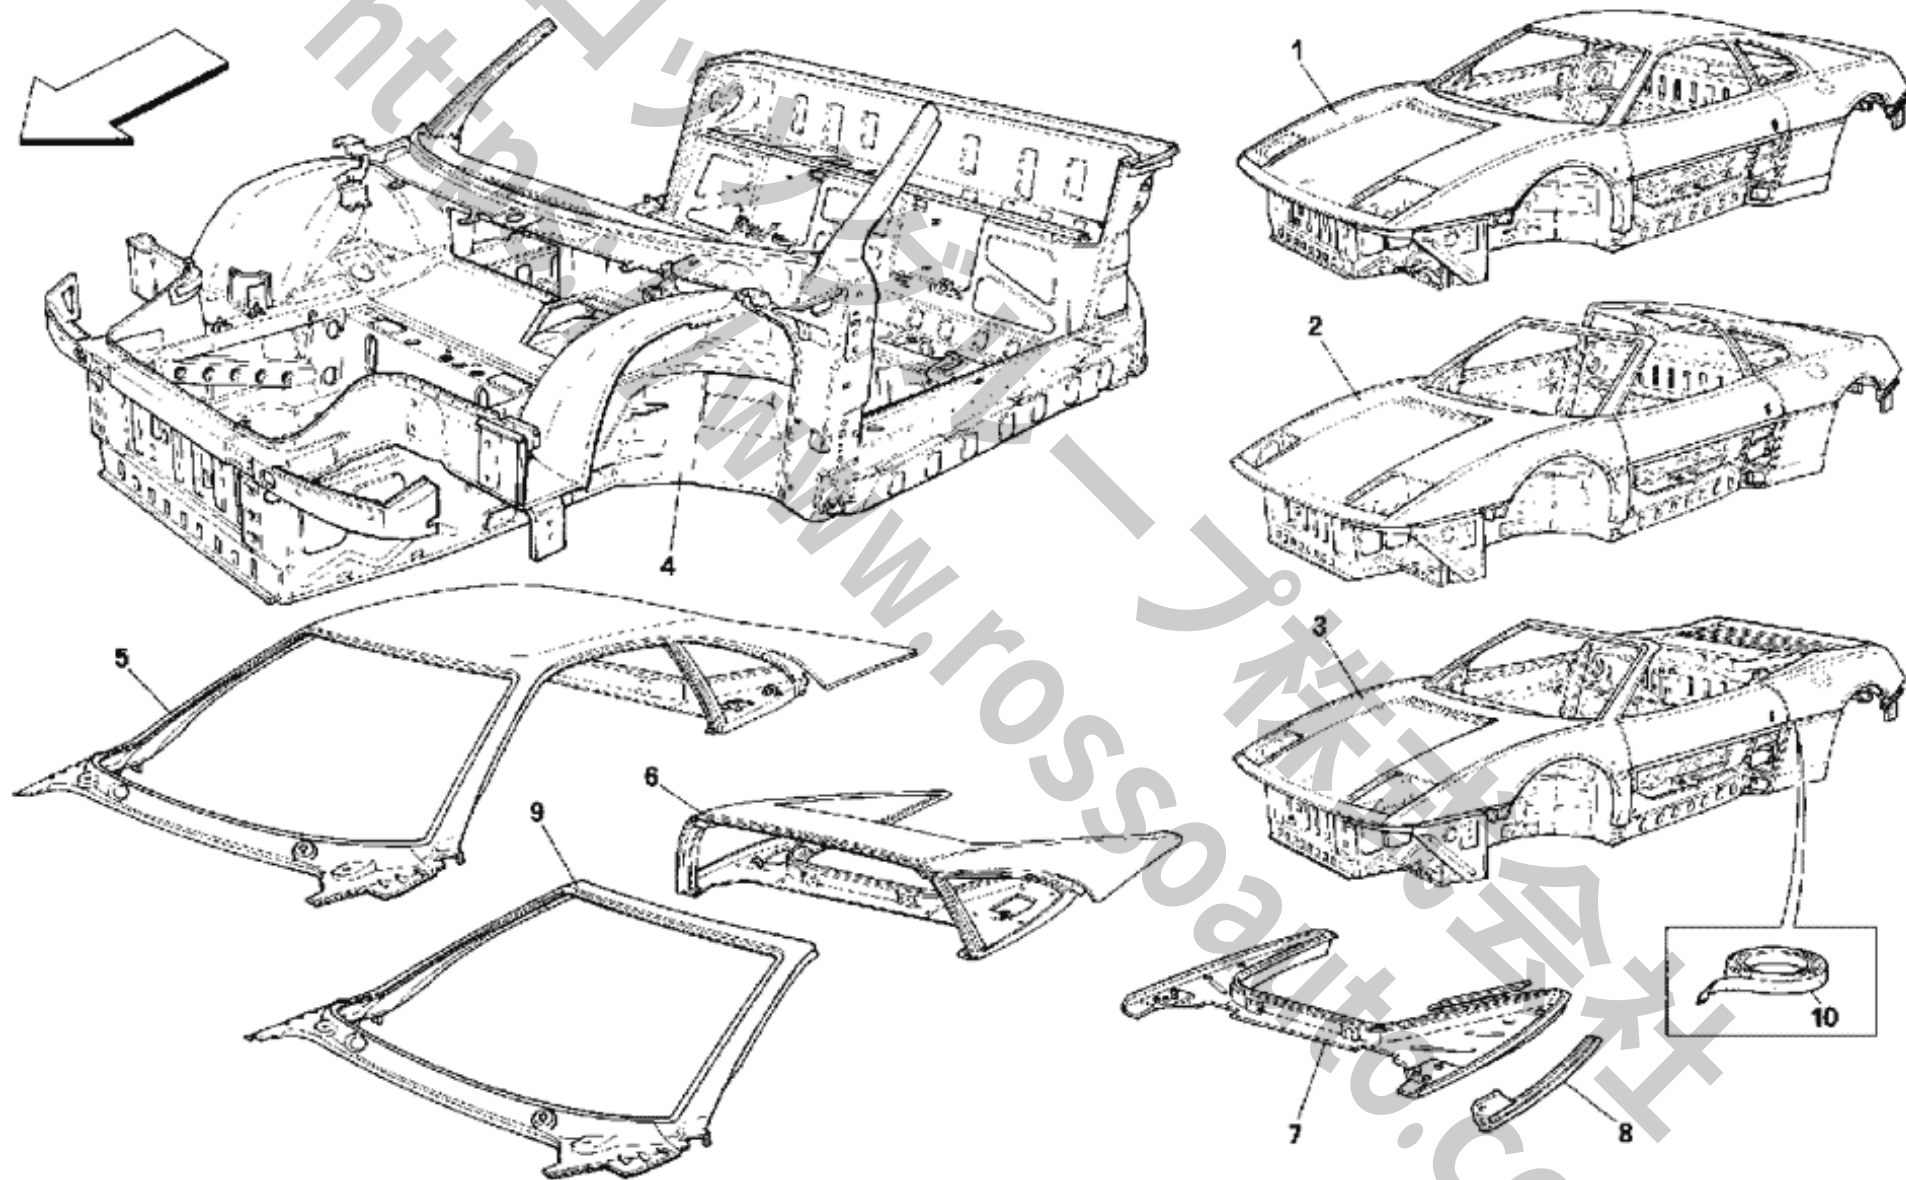


<101 Body - General Units>

No.	Part No.	Name	Qty
Ask	Ask	Ask	Ask

ロッシングループ株式会社
<https://www.rossoauto.com>

<102 Front Part Structures>

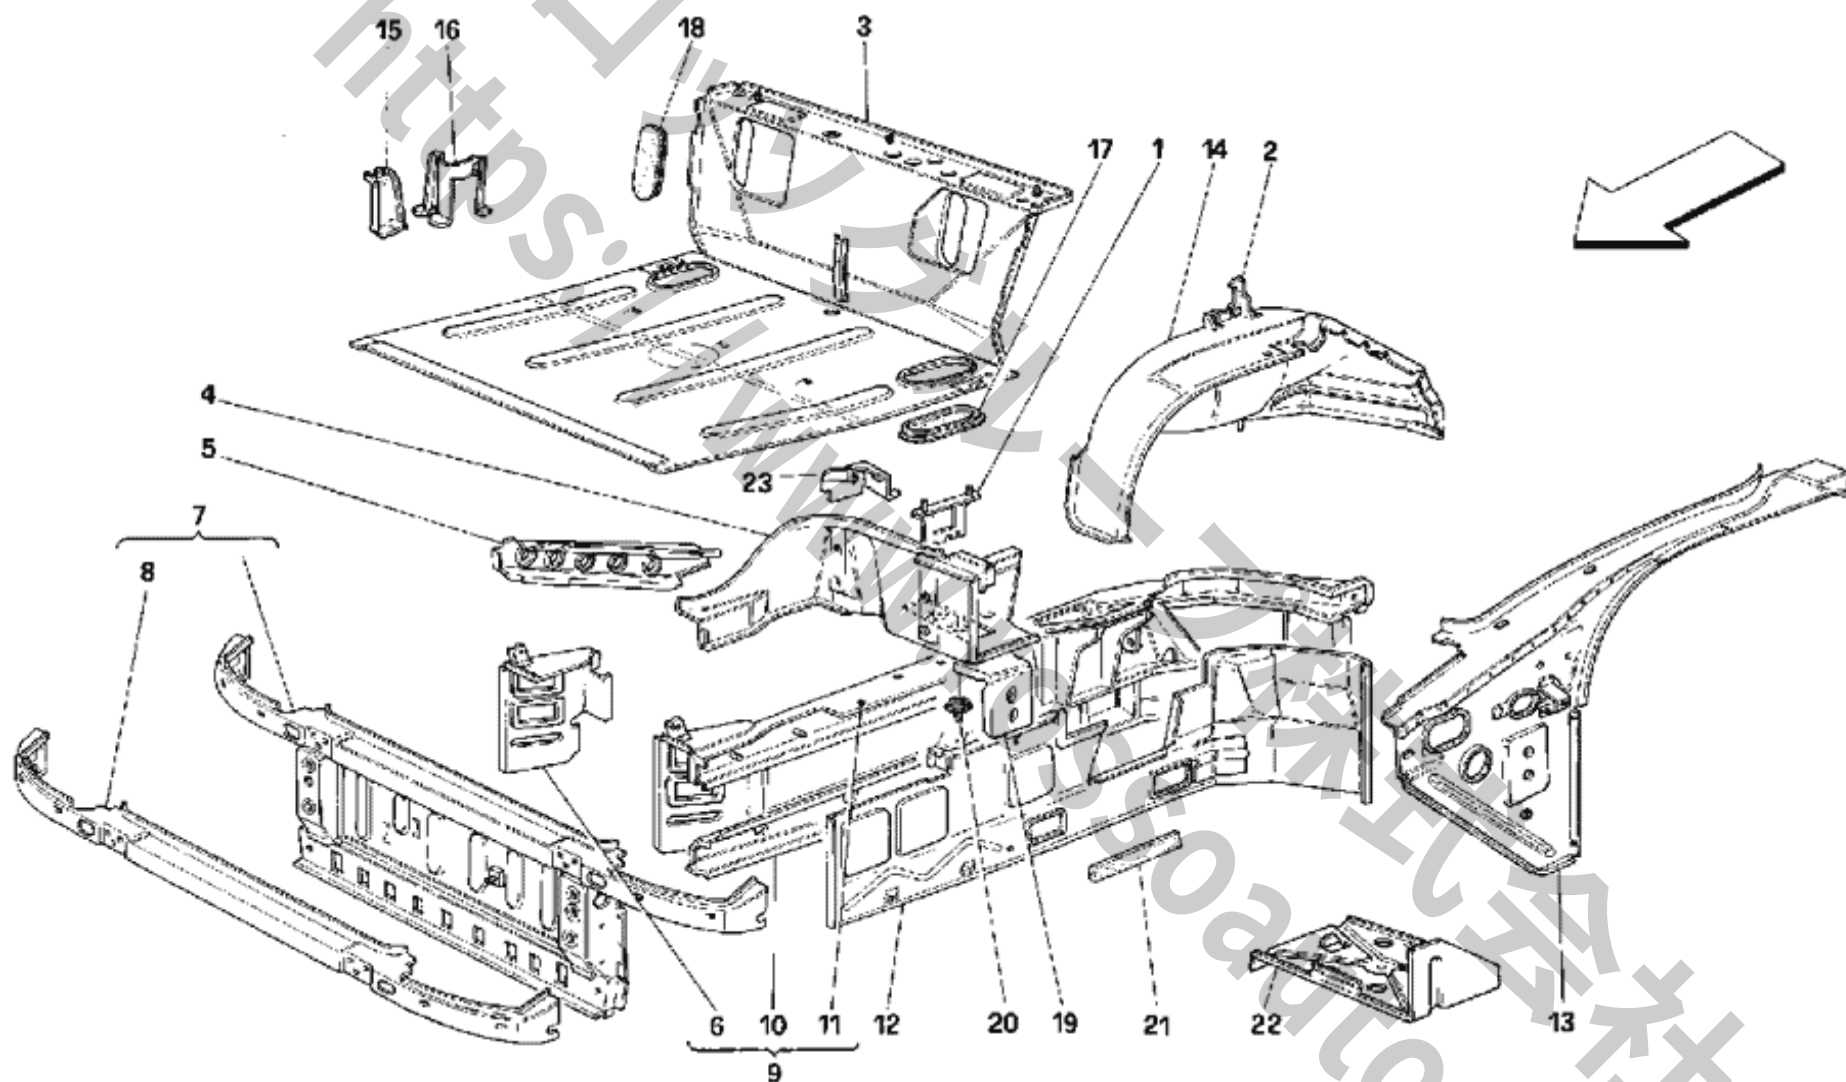


<102 Front Part Structures>

No.	Part No.	Name	Qty
Ask	Ask	Ask	Ask

ロッシングループ株式会社
<https://www.rossoauto.com>

<103 Central Part Structures>

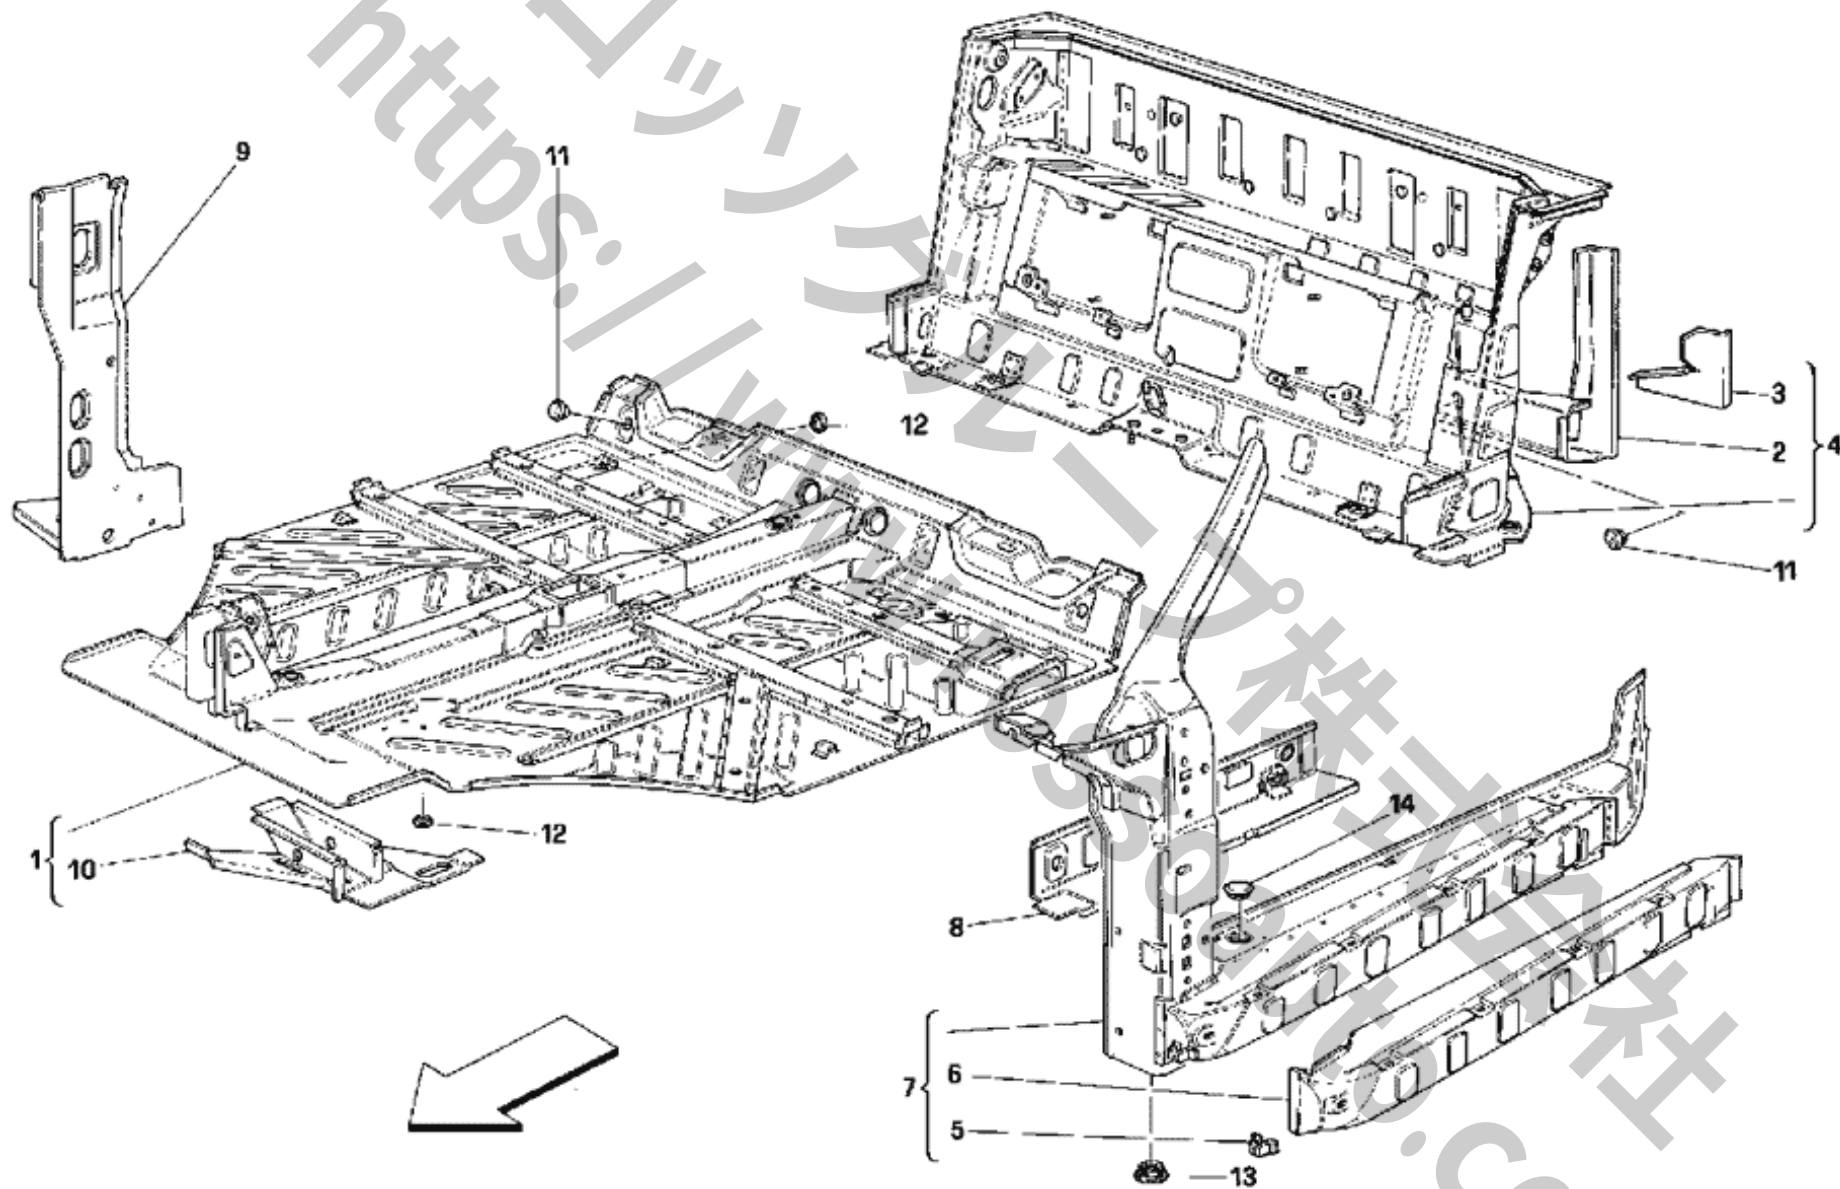


<103 Central Part Structures>

No.	Part No.	Name	Qty
Ask	Ask	Ask	Ask

ロッシングループ株式会社
<https://www.rossoauto.com>

<104 Frame - Rear Part Elements>

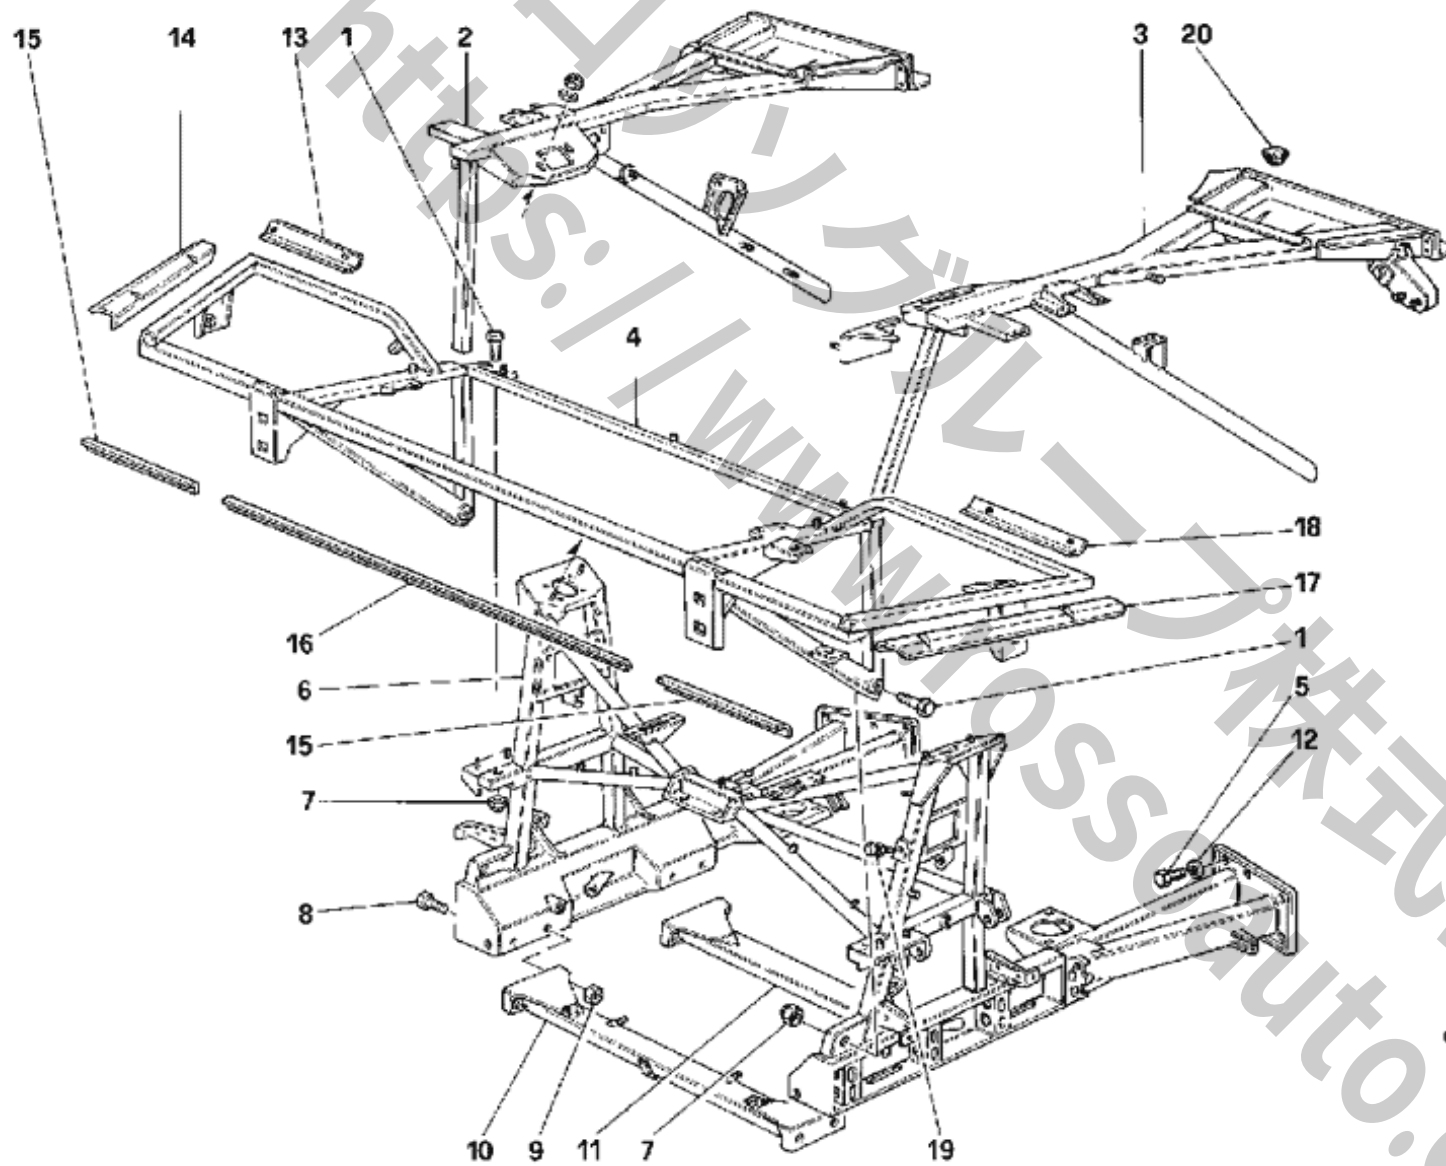


<104 Frame - Rear Part Elements>

No.	Part No.	Name	Qty
Ask	Ask	Ask	Ask

ロッシングループ株式会社
<https://www.rossoauto.com>

<105 Roof - Outer Trims>

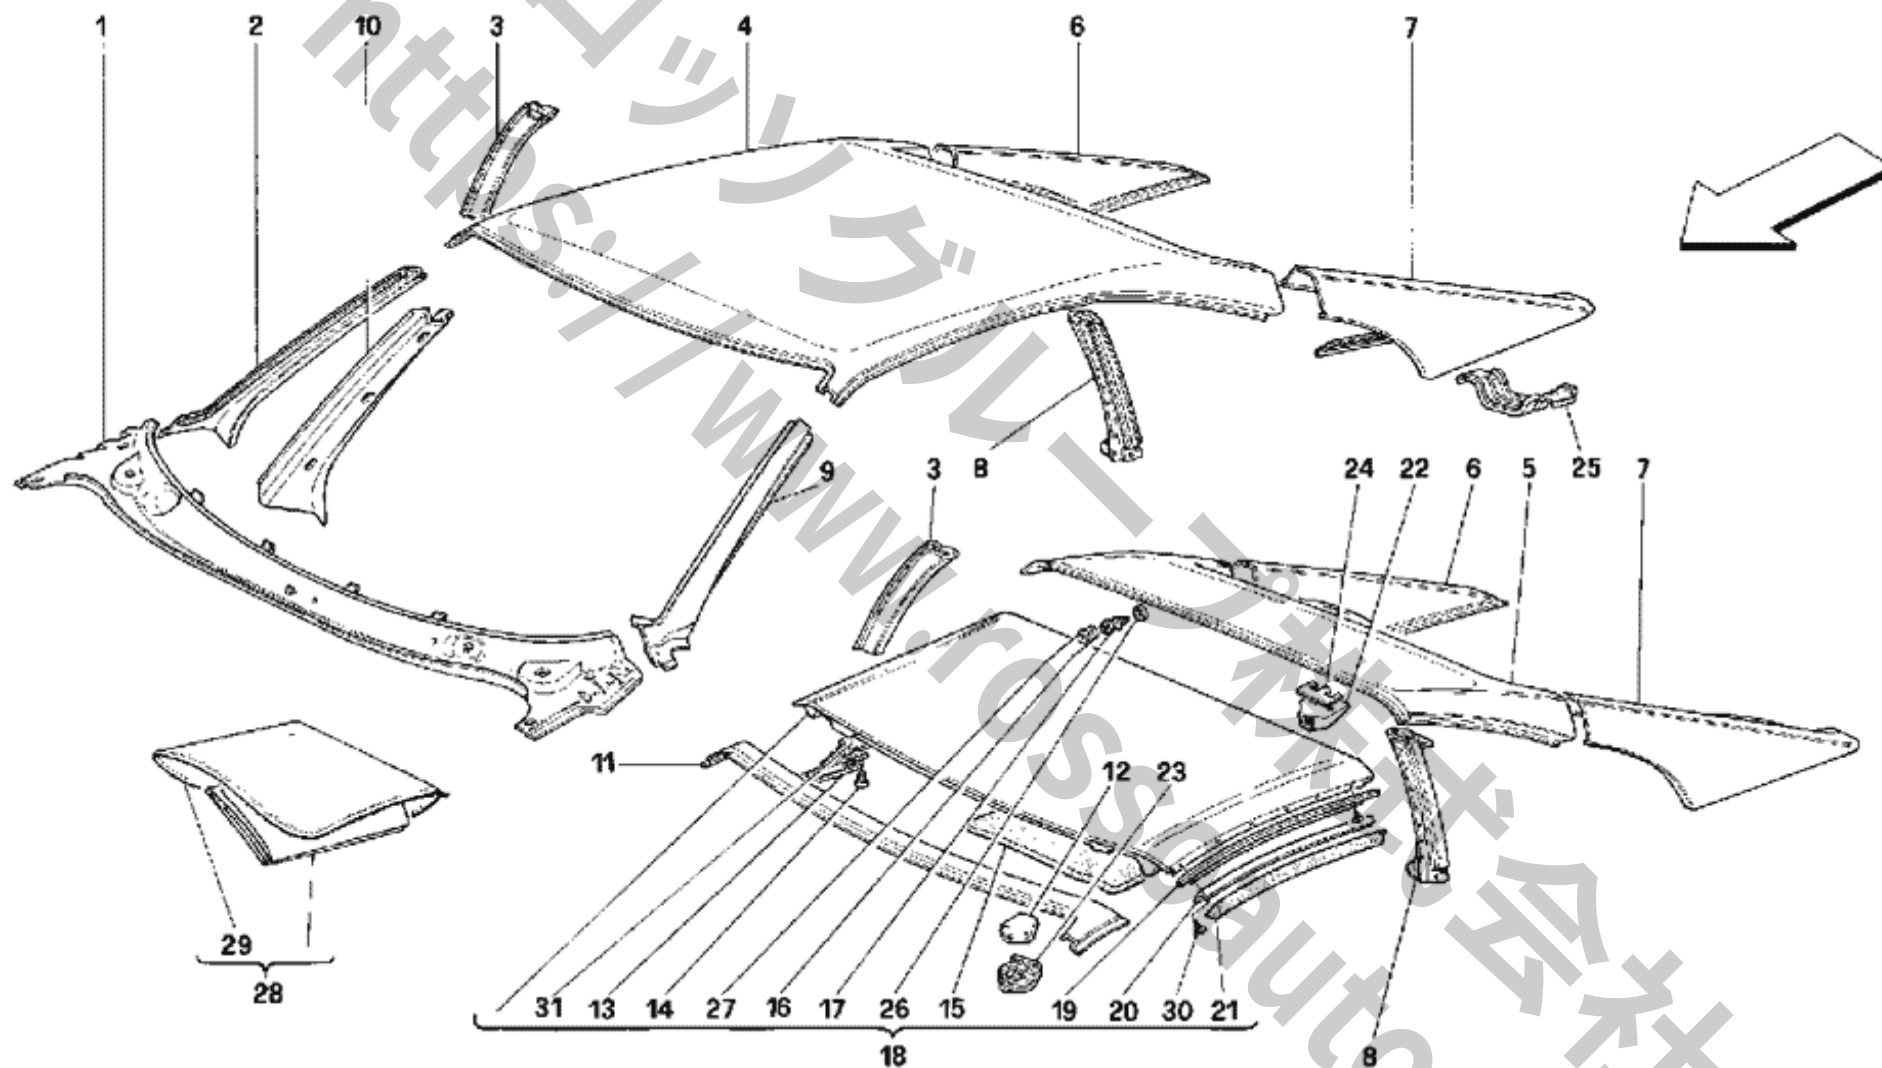


<105 Roof - Outer Trims>

No.	Part No.	Name	Qty
Ask	Ask	Ask	Ask

ロッシェングループ株式会社
<https://www.rossoauto.com>

<106 Body - Outer Trims>

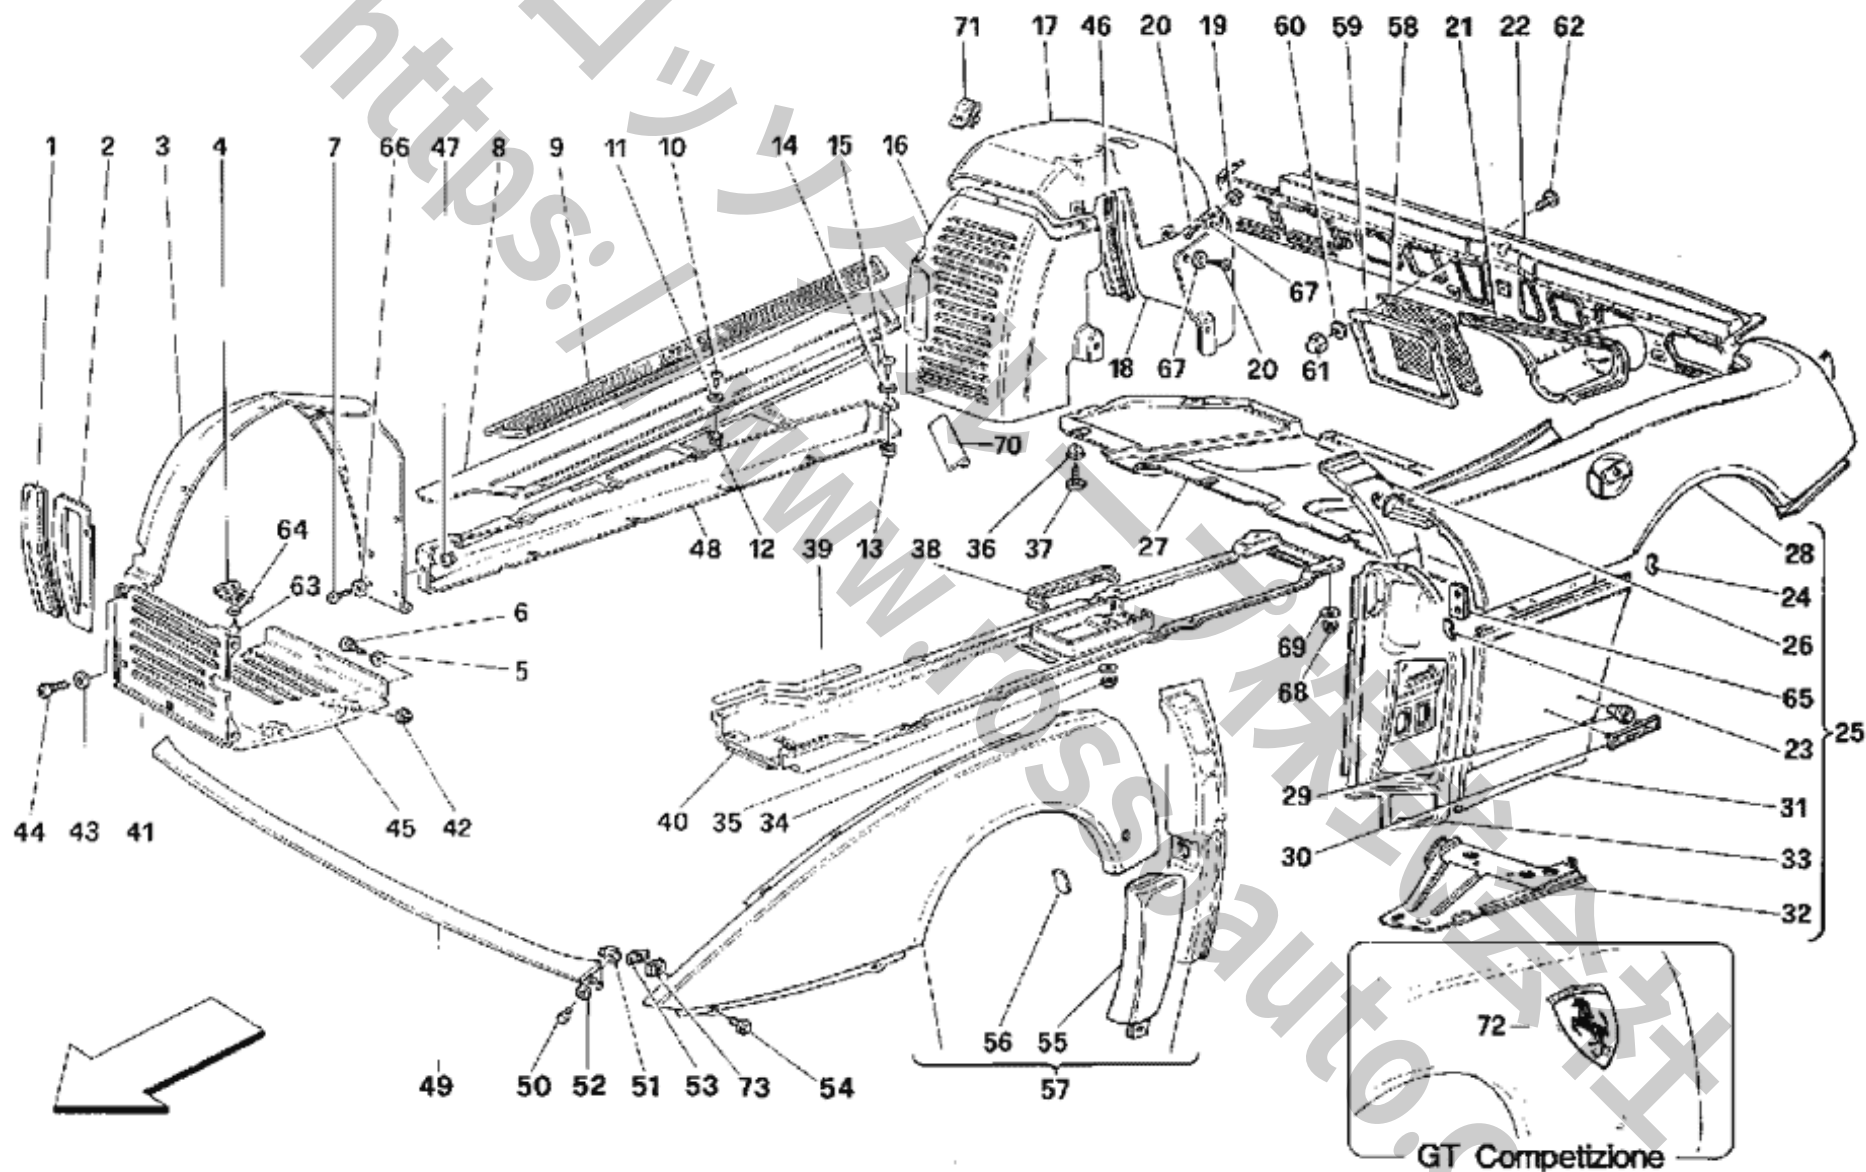


<106 Body - Outer Trims>




No.	Part No.	Name	Qty
Ask	Ask	Ask	Ask

ロッシェングループ株式会社
<https://www.rossoauto.com>

<107 Passengers Comp. Insulations -Valid for GTB_GTS -Valid for USA->

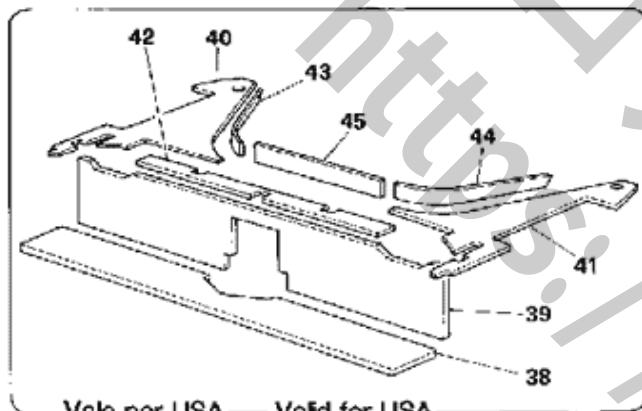

Vale per USA — Valid for USA

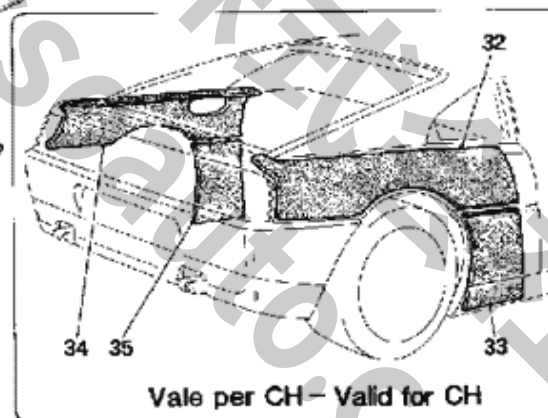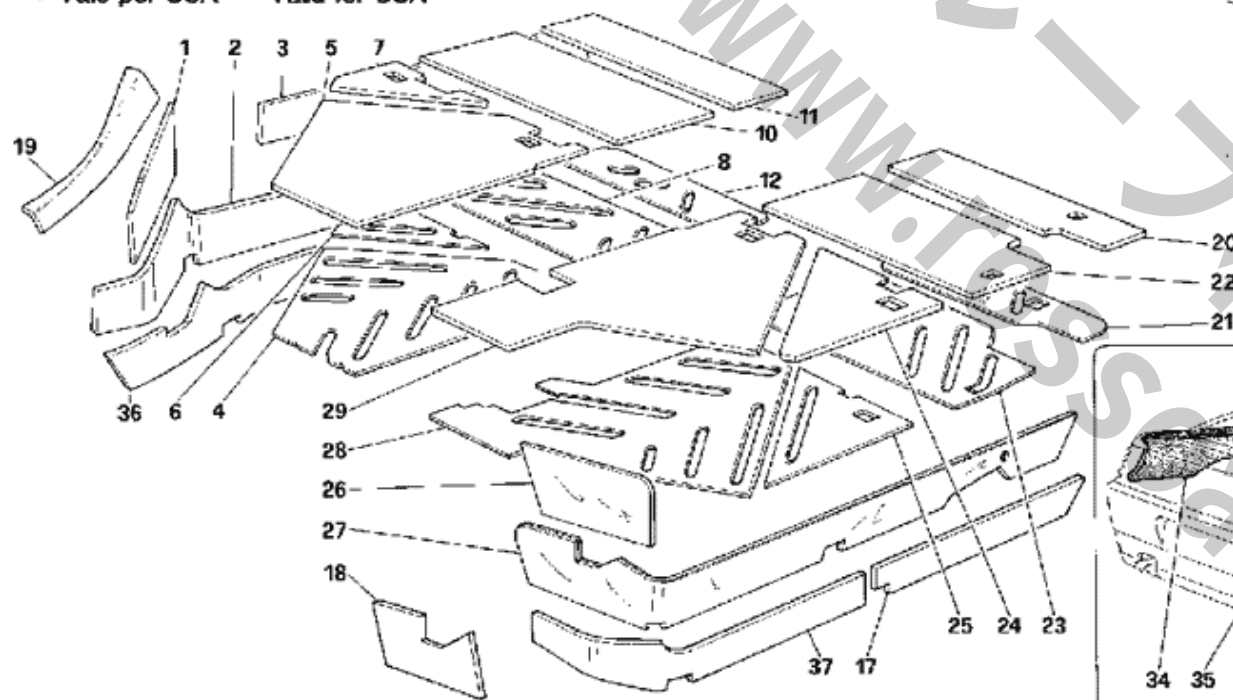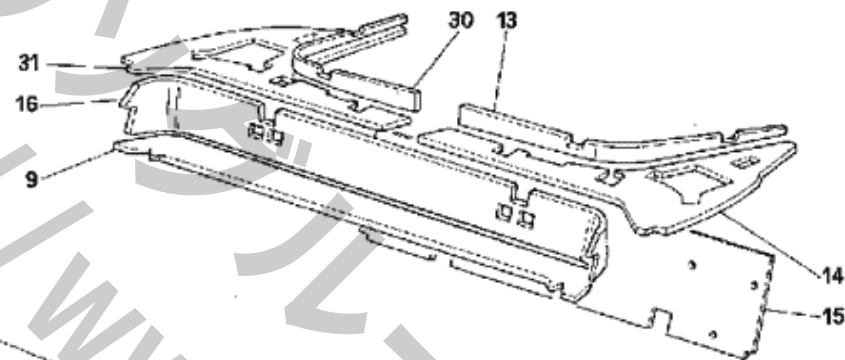


Vale per CH — Valid for CH

<107 Passengers Comp. Insulations -Valid for GTB_GTS -Valid for USA->

No.	Part No.	Name	Qty
Ask	Ask	Ask	Ask

ロッシングループ株式会社
<https://www.rossoauto.com>

<108 Passengers Comp. Insulations -Valid for Spider - Not for USA->

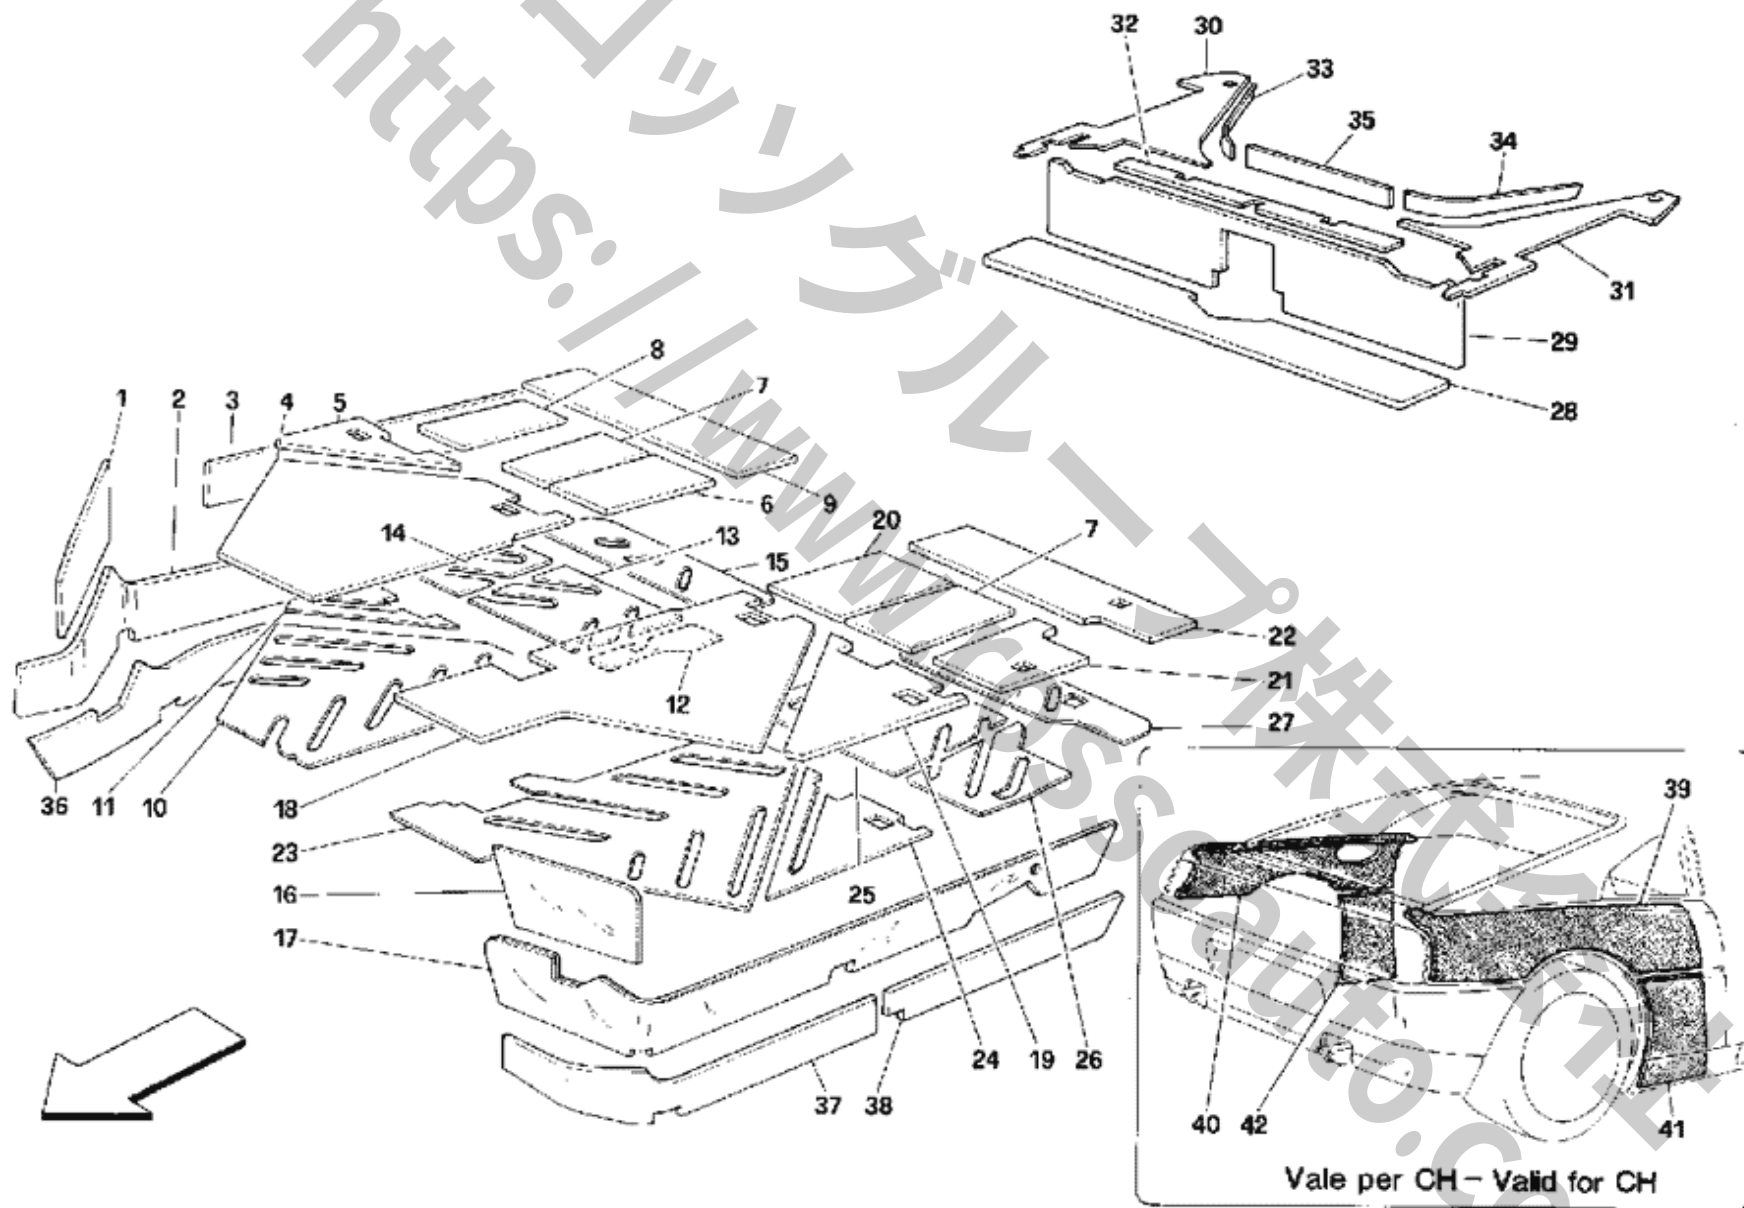


<108 Passengers Comp. Insulations -Valid for Spider - Not for USA->

No.	Part No.	Name	Qty
Ask	Ask	Ask	Ask

ロッシングループ株式会社
<https://www.rossoauto.com>

<109 Passengers Compartment Carpets -Not for Spider->

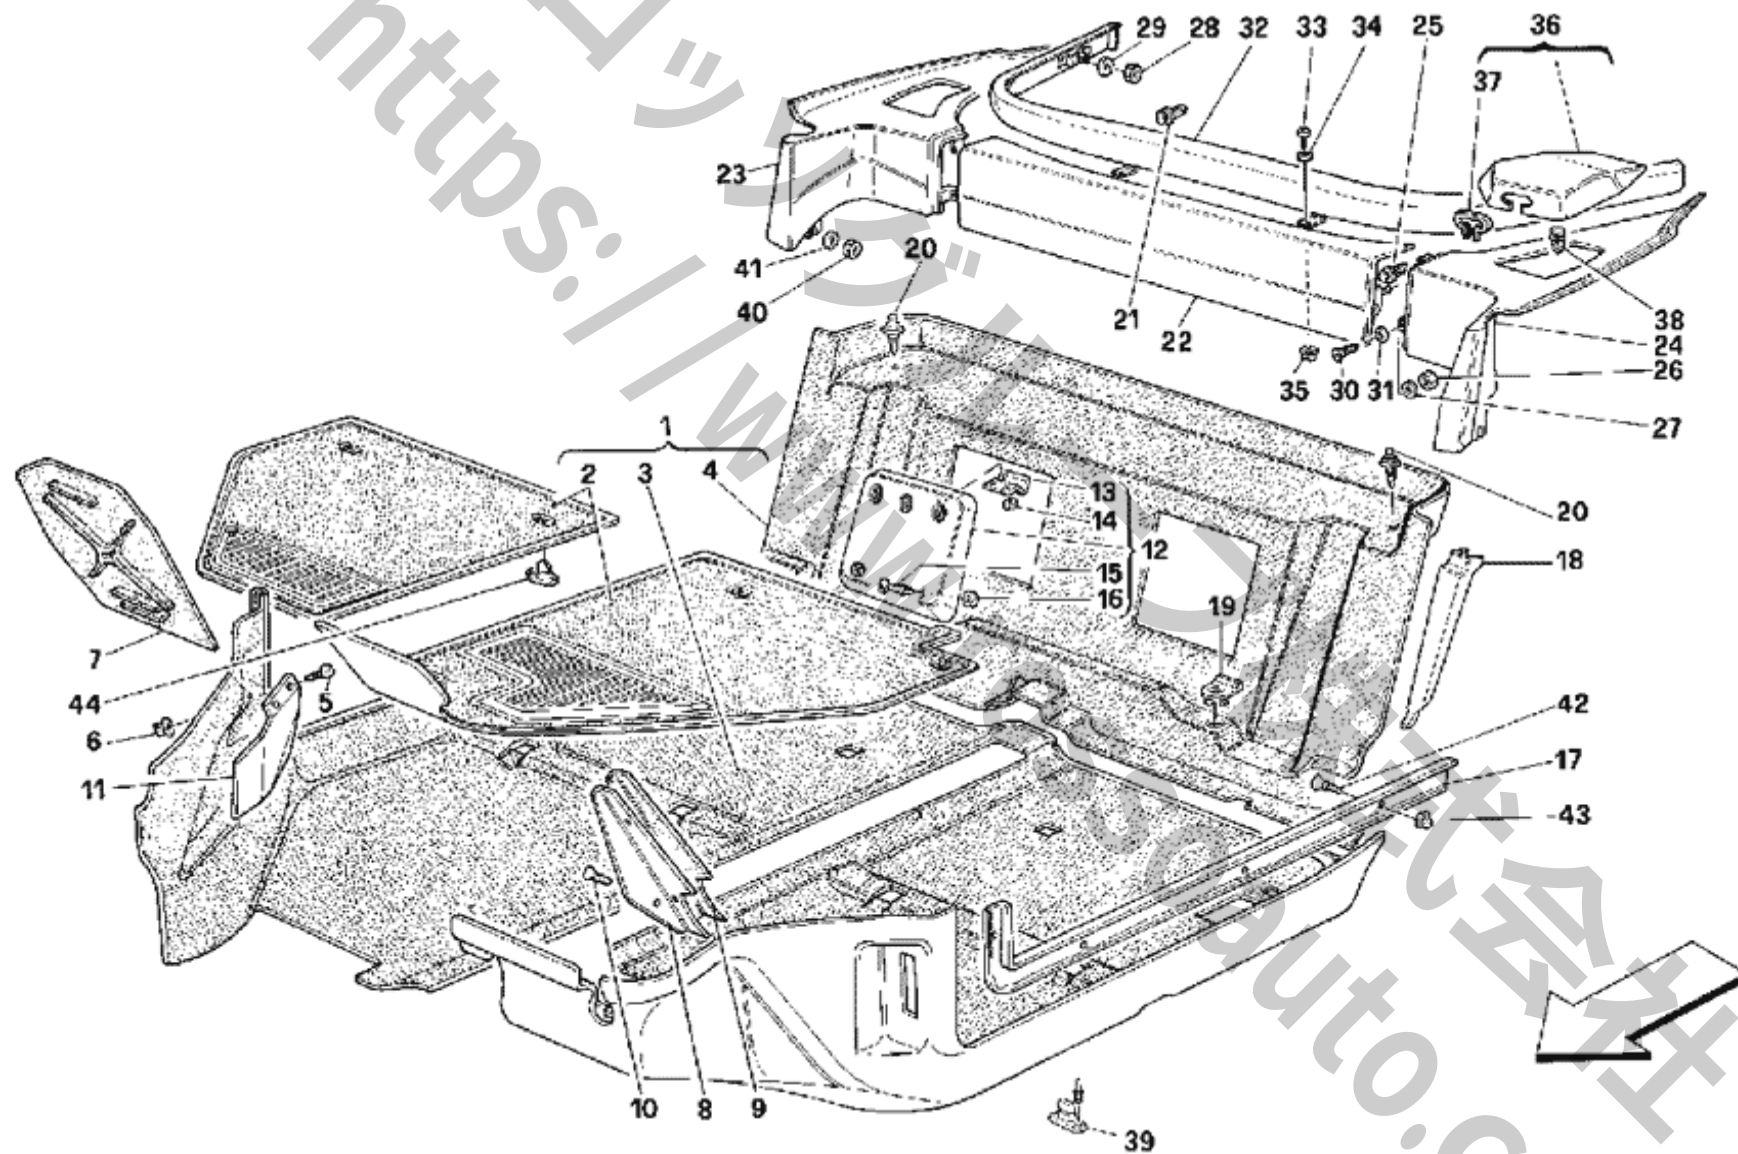


<109 Passengers Compartment Carpets -Not for Spider->

No.	Part No.	Name	Qty
Ask	Ask	Ask	Ask

ロッシェングループ株式会社
<https://www.rossoauto.com>

<110 Passengers Compartment Carpets -Valid for Spider->

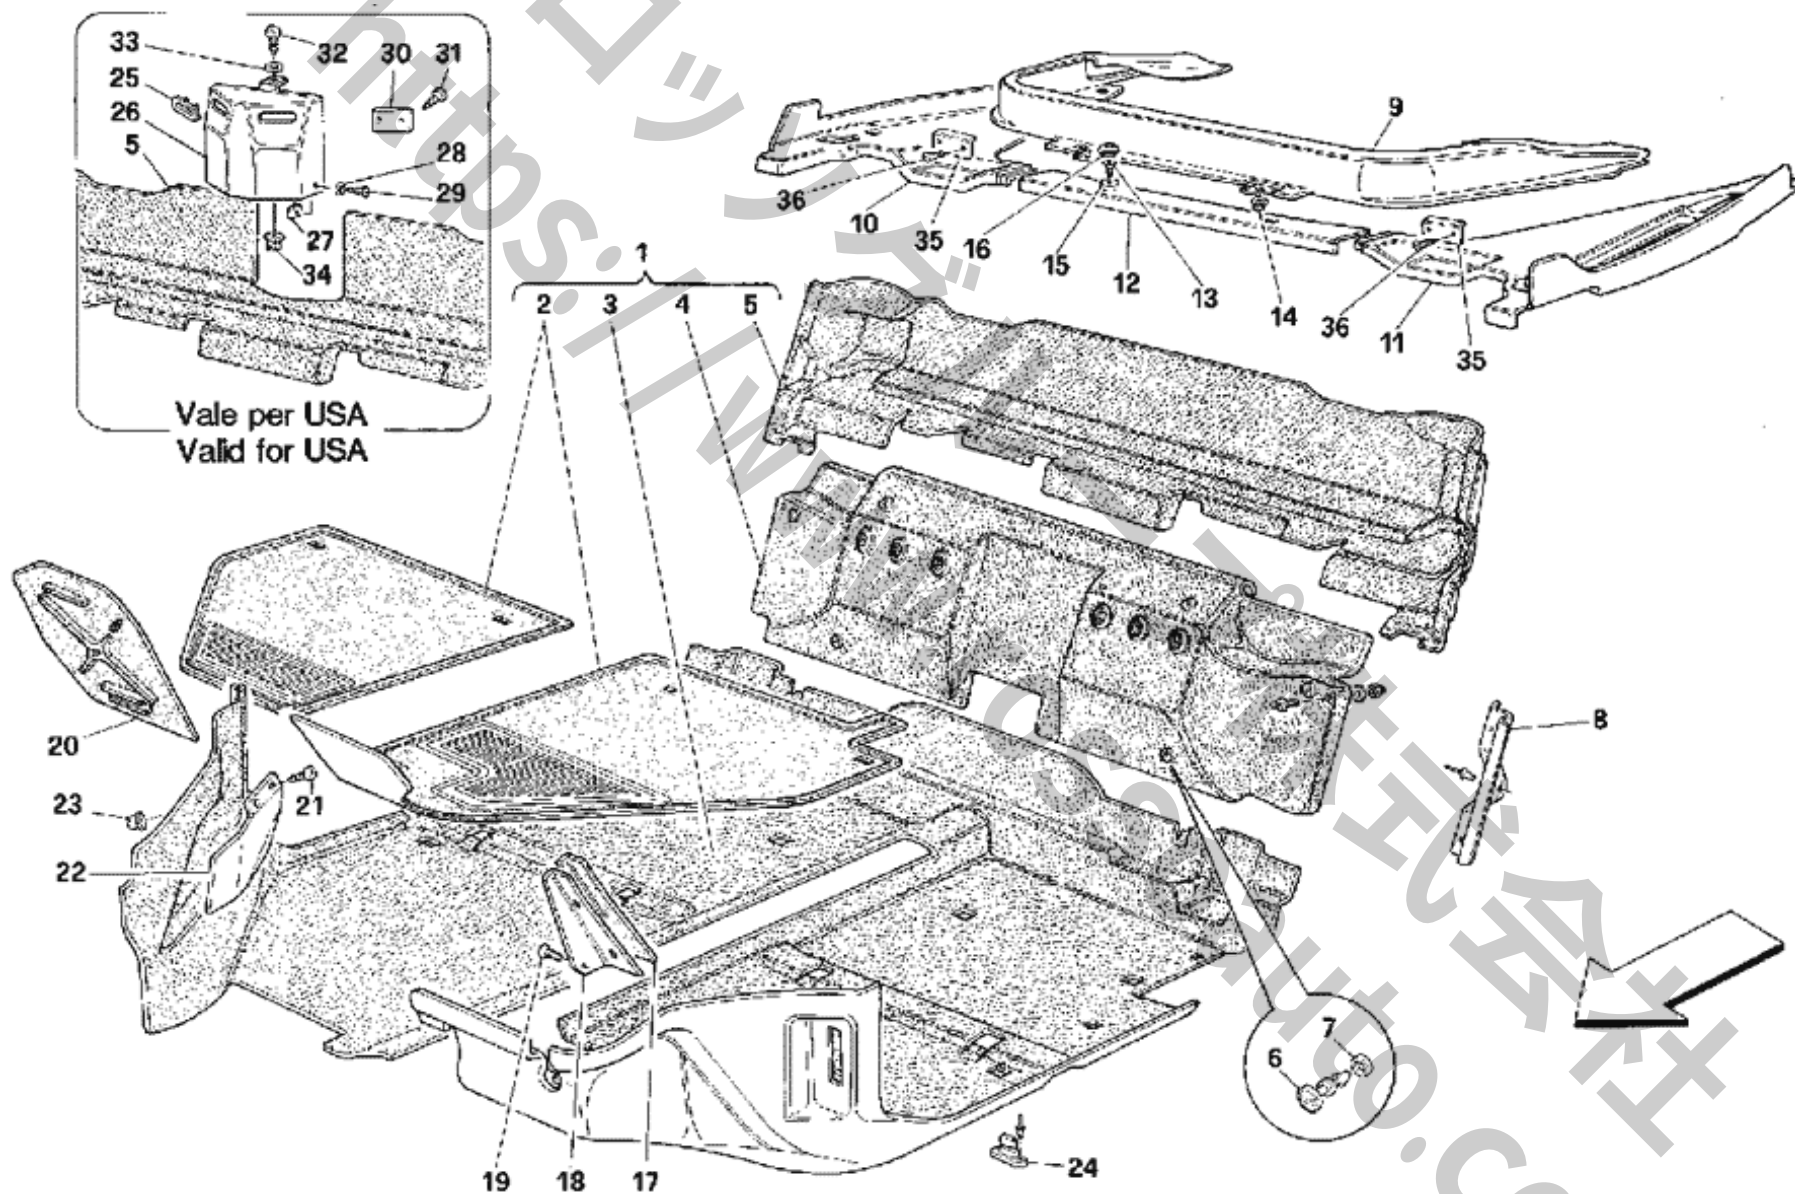


<110 Passengers Compartment Carpets -Valid for Spider->

No.	Part No.	Name	Qty
Ask	Ask	Ask	Ask

ロッシェングループ株式会社
<https://www.rossoauto.com>

<111 Front Compartments Carpets>

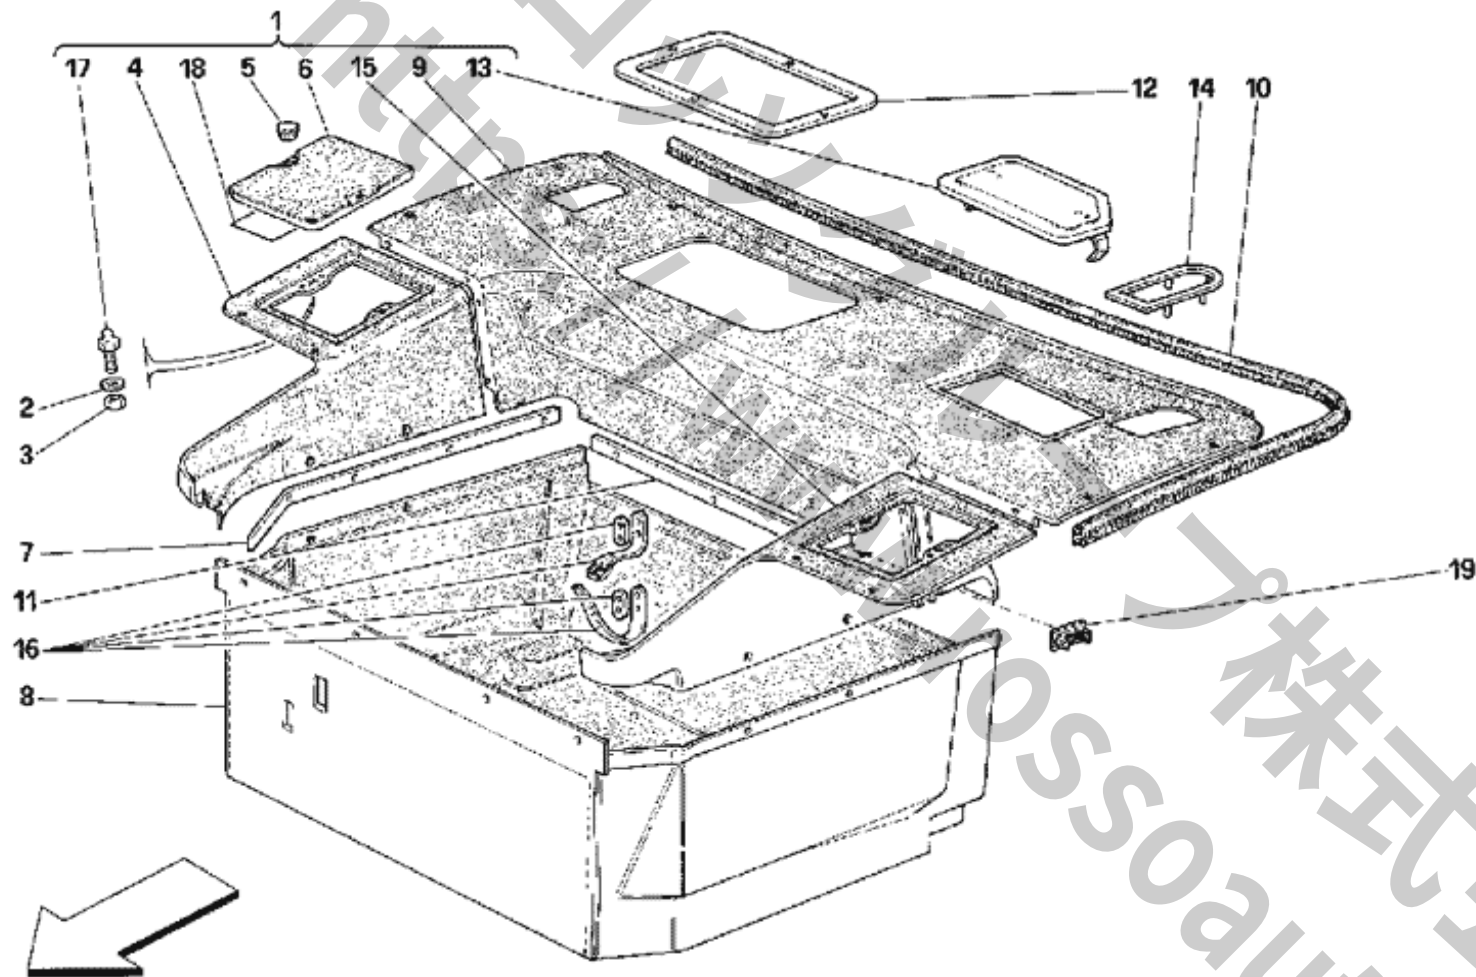


<111 Front Compartments Carpets>

No.	Part No.	Name	Qty
Ask	Ask	Ask	Ask

ロッシェングループ株式会社
<https://www.rossoauto.com>

<112 Roof Trims -Valid for GTB->

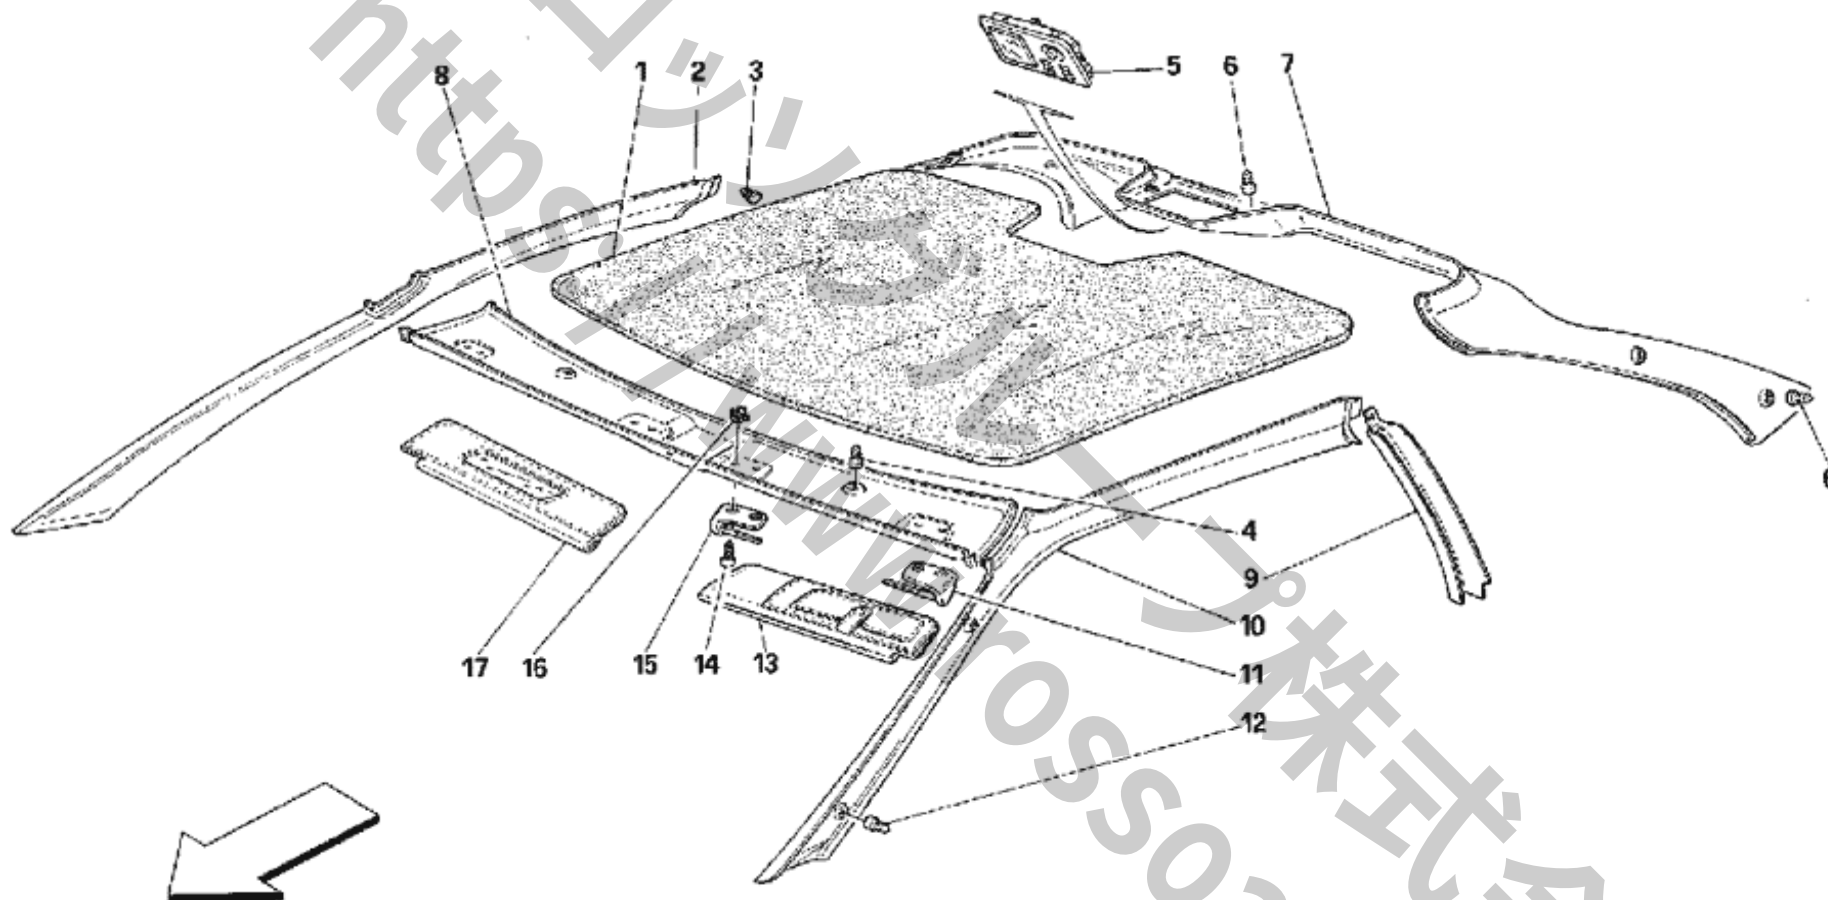


<112 Roof Trims -Valid for GTB->

No.	Part No.	Name	Qty
Ask	Ask	Ask	Ask

ロッシェングループ株式会社
<https://www.rossoauto.com>

<113 Roof Trims -Valid for GTS and Spider->

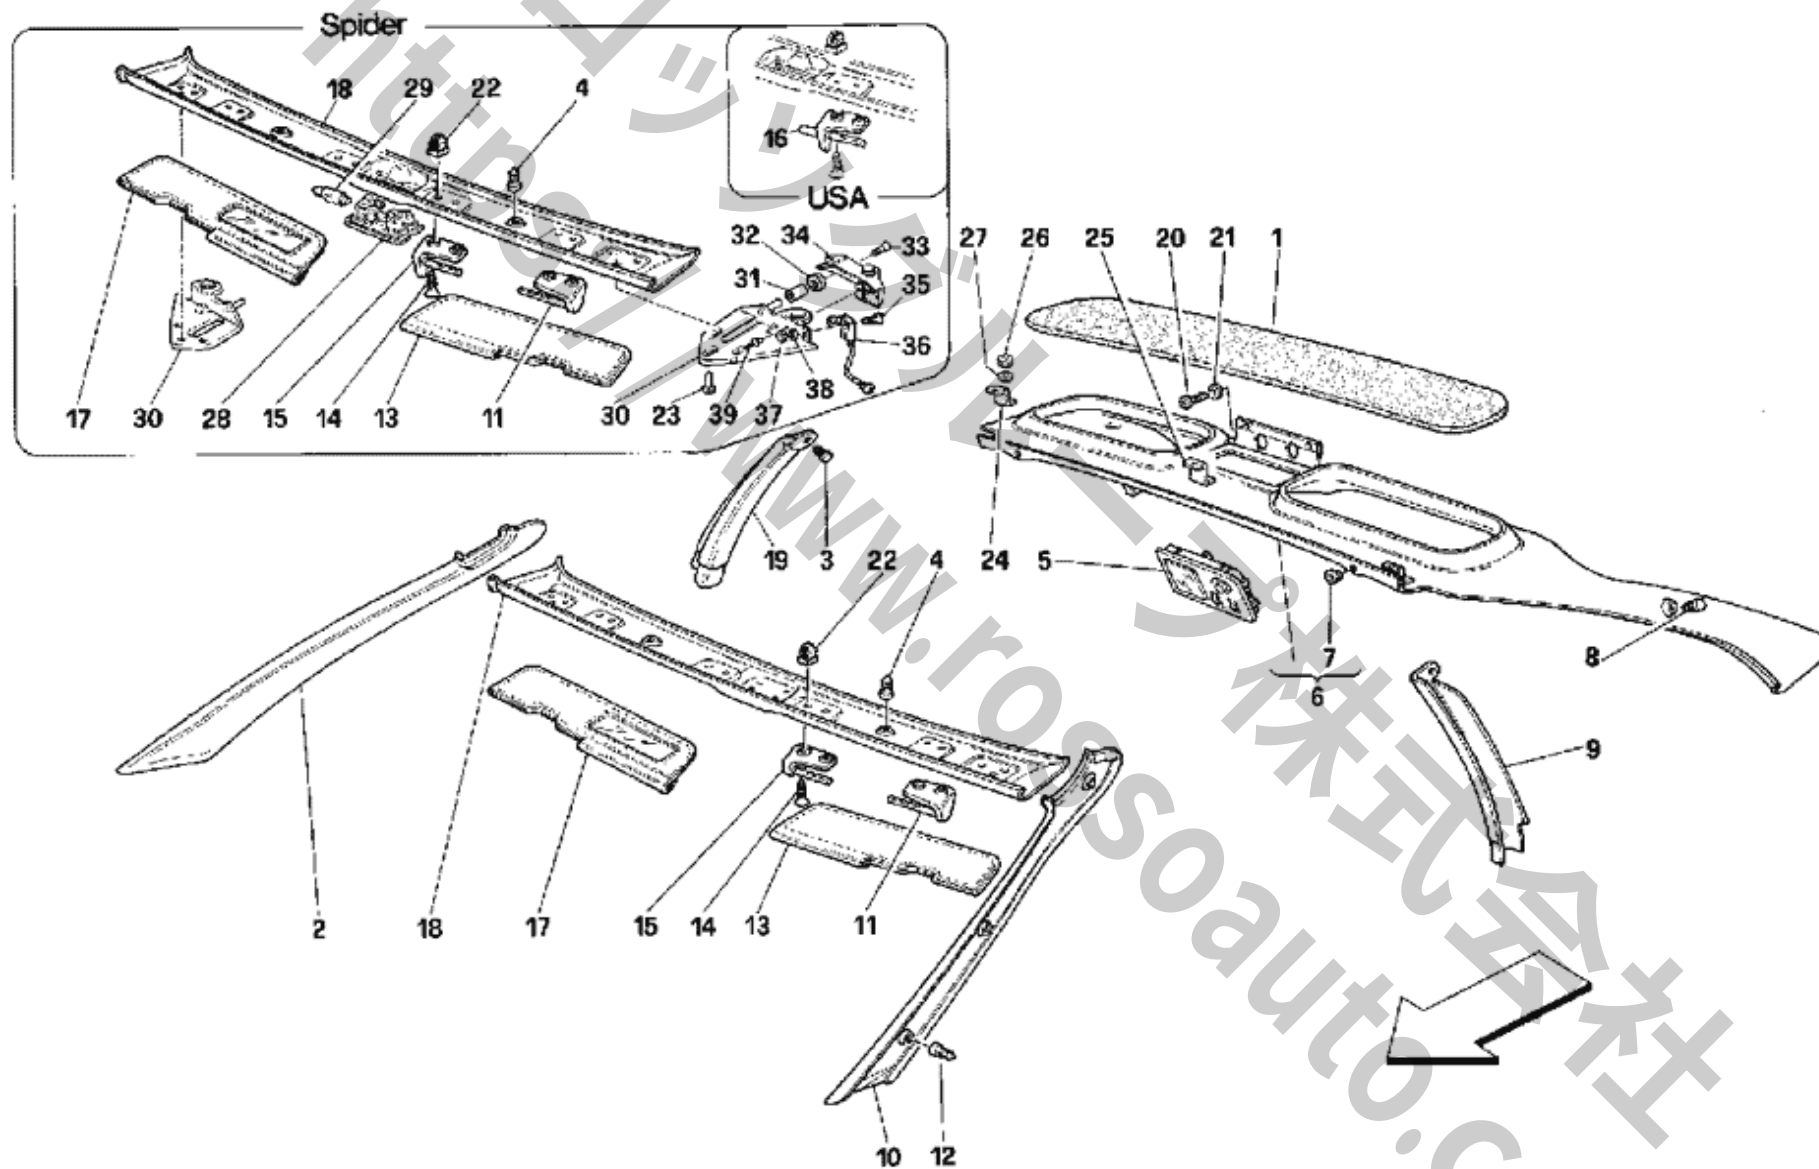


<113 Roof Trims -Valid for GTS and Spider->

No.	Part No.	Name	Qty
Ask	Ask	Ask	Ask

ロッシェングループ株式会社
<https://www.rossoauto.com>

<114 Top -Valid for Spider->

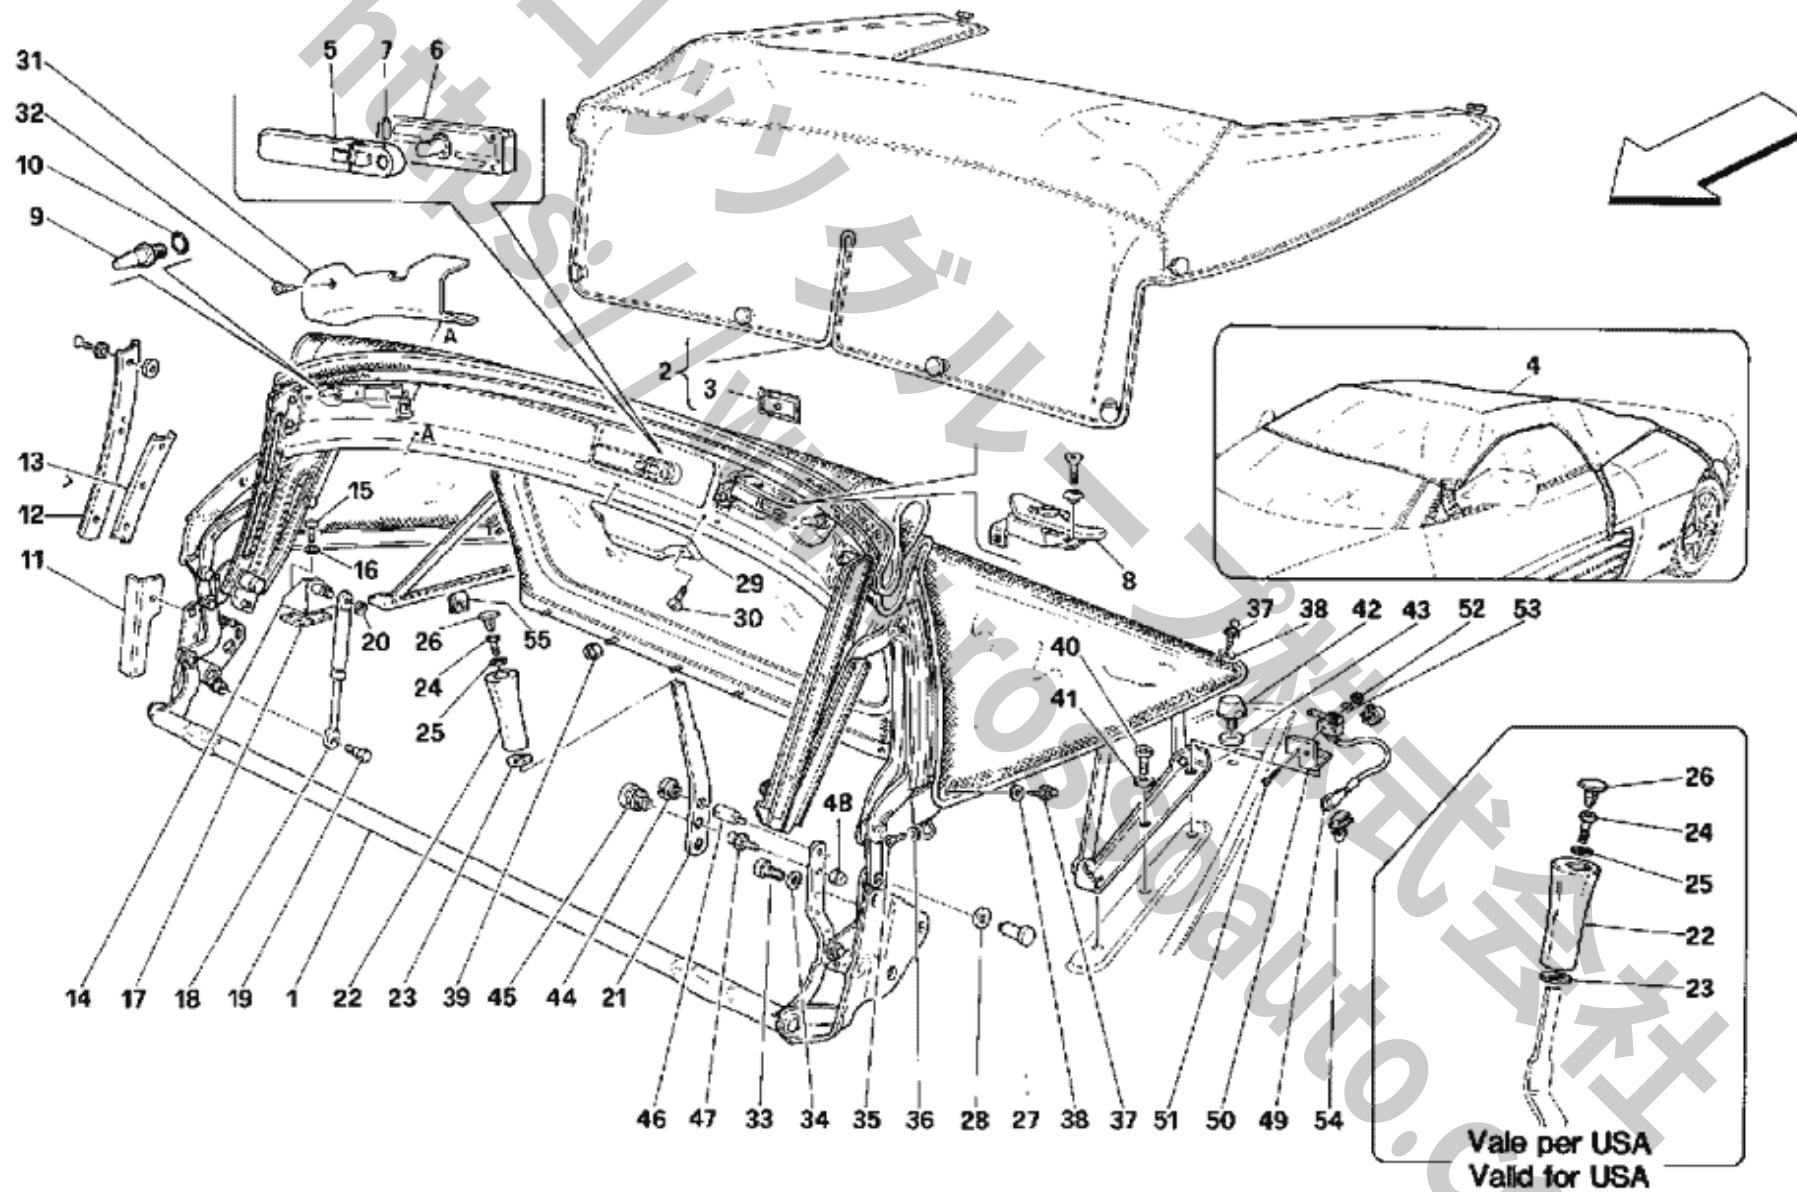


<114 Top -Valid for Spider->

No.	Part No.	Name	Qty
Ask	Ask	Ask	Ask

ロッシングループ株式会社
<https://www.rossoauto.com>

<115 Front Hood>

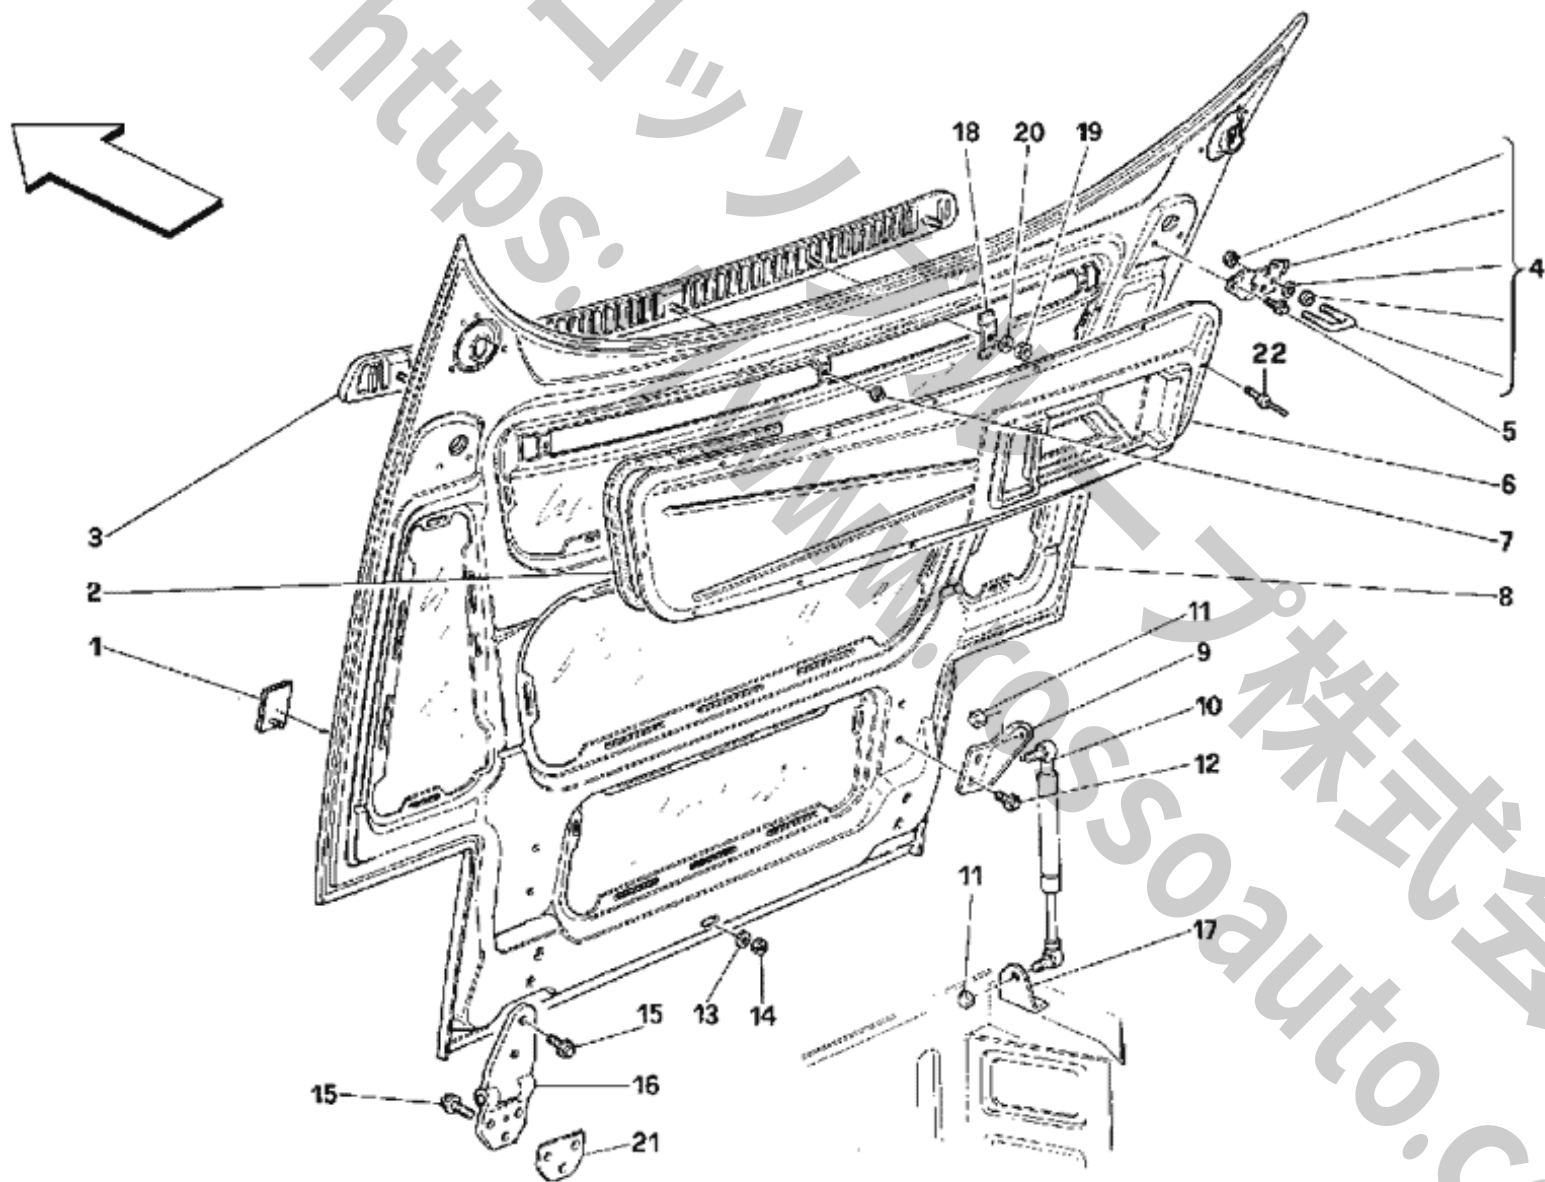


<115 Front Hood>

No.	Part No.	Name	Qty
Ask	Ask	Ask	Ask

ロッシェングループ株式会社
<https://www.rossoauto.com>

<116 Opening Device for Front Hood>

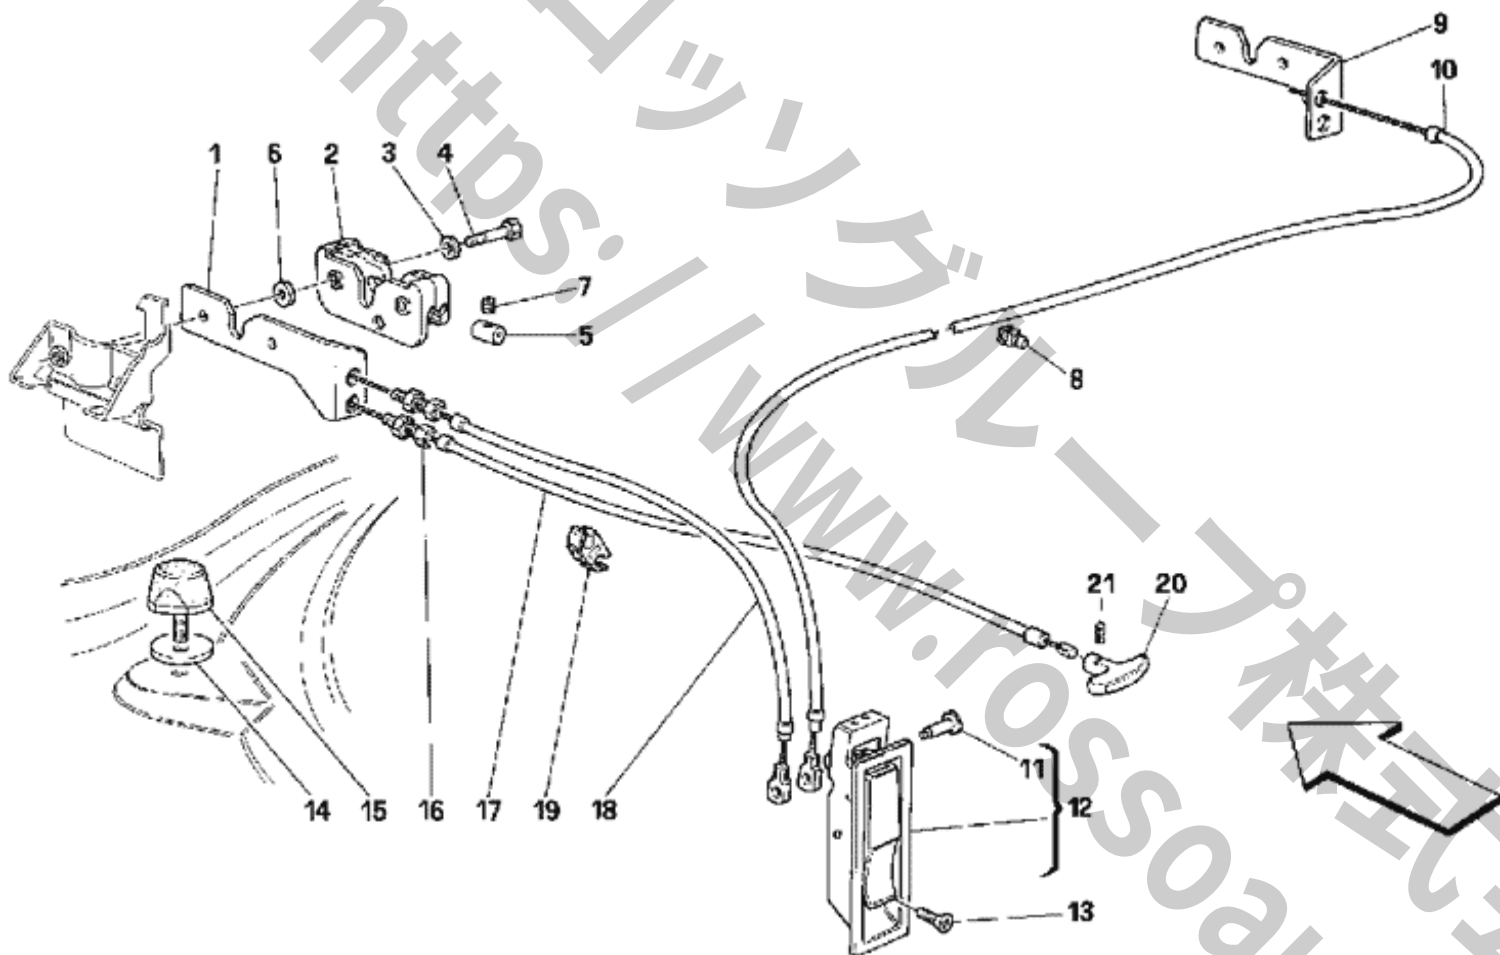


<116 Opening Device for Front Hood>

No.	Part No.	Name	Qty
Ask	Ask	Ask	Ask

ロッシングループ株式会社
<https://www.rossoauto.com>

<117 Rear Hood>

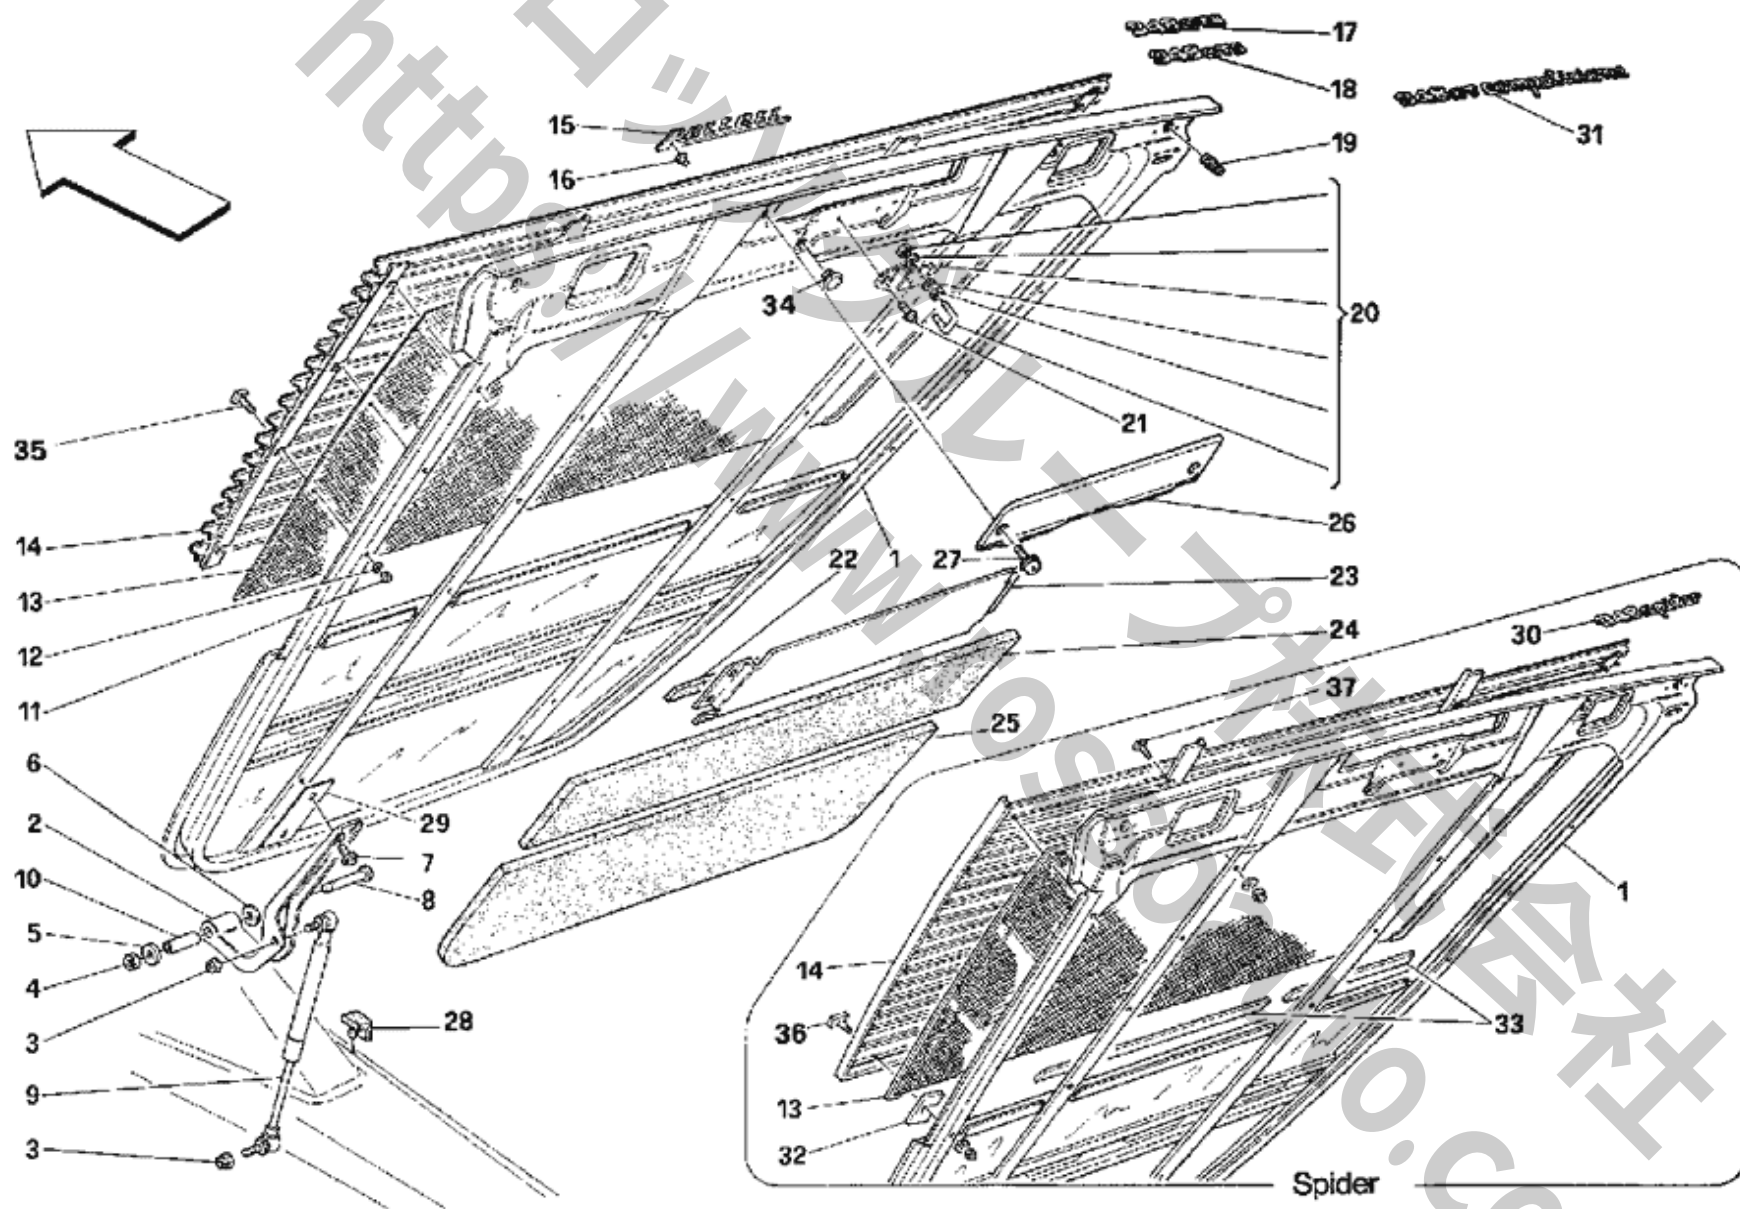


<117 Rear Hood>

No.	Part No.	Name	Qty
Ask	Ask	Ask	Ask

ロッシングループ株式会社
<https://www.rossoauto.com>

<118 Opening Devices for Rear Hood and Gas Door>

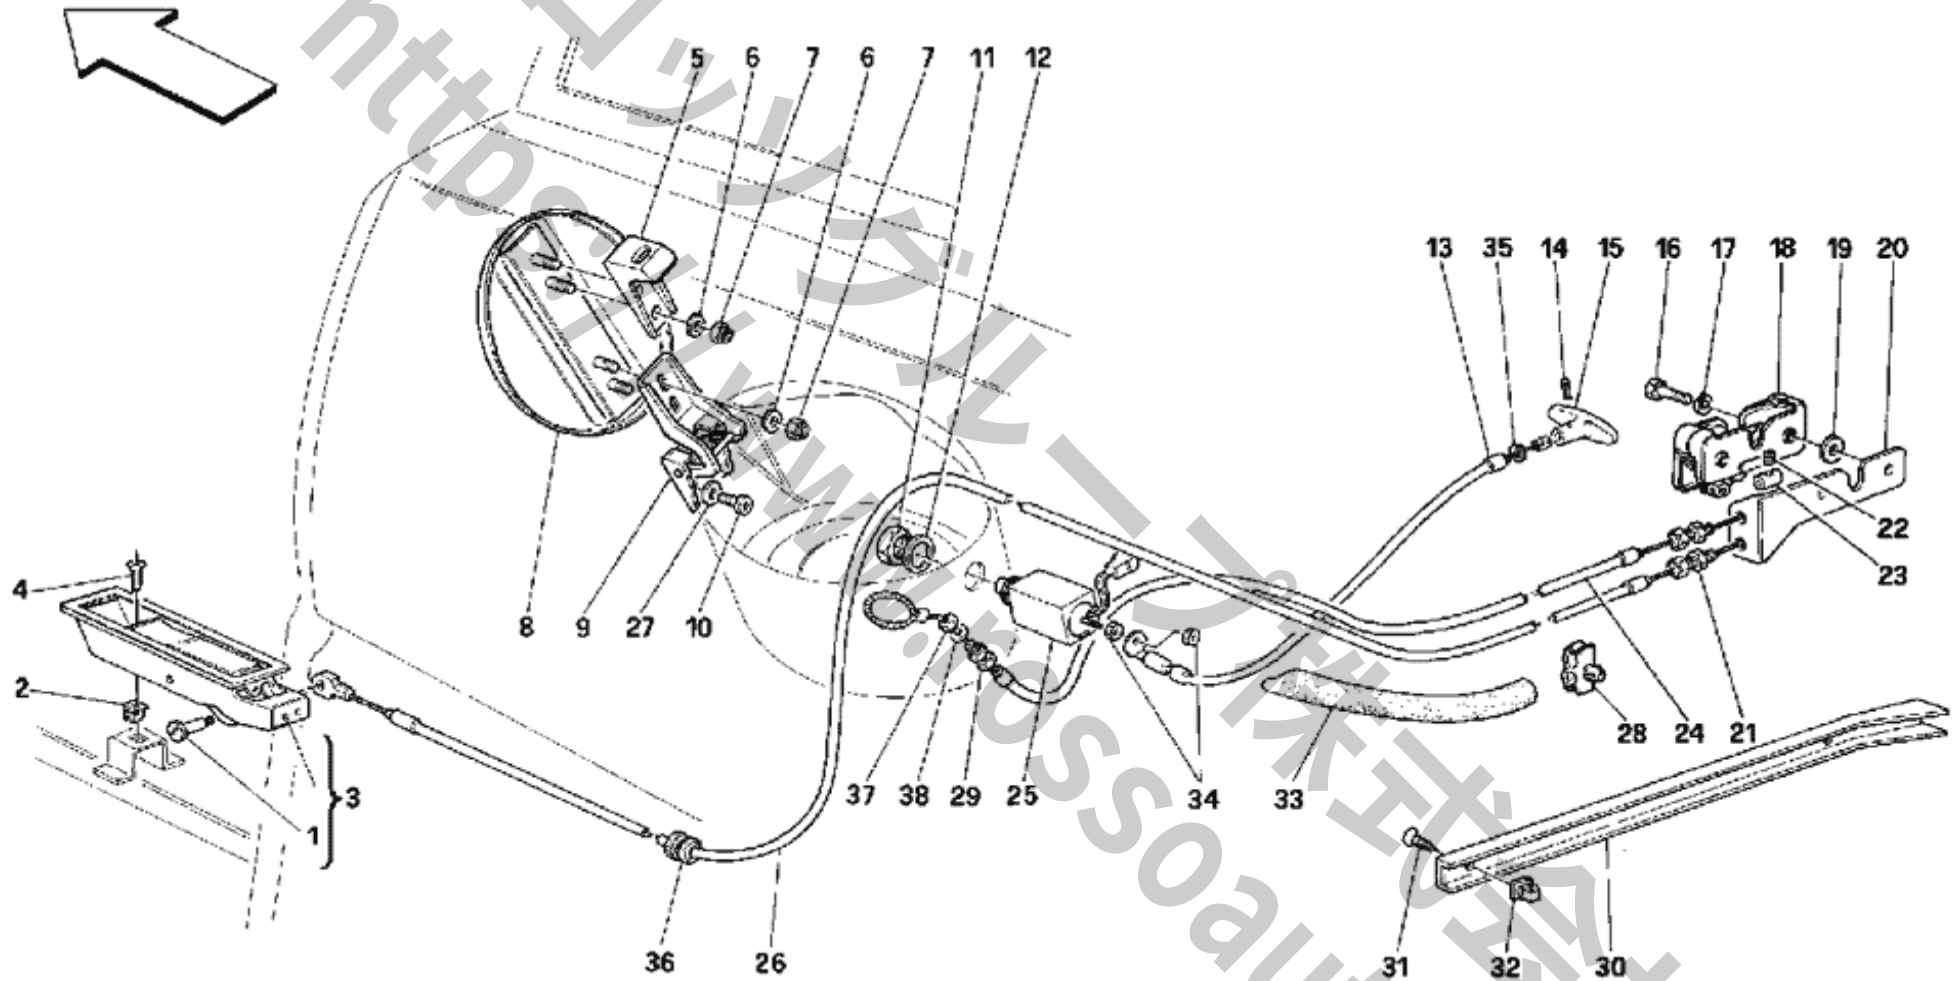


<118 Opening Devices for Rear Hood and Gas Door>

No.	Part No.	Name	Qty
Ask	Ask	Ask	Ask

ロッシェングループ株式会社
<https://www.rossoauto.com>

<119 Doors - Framework and Rear Mirror>

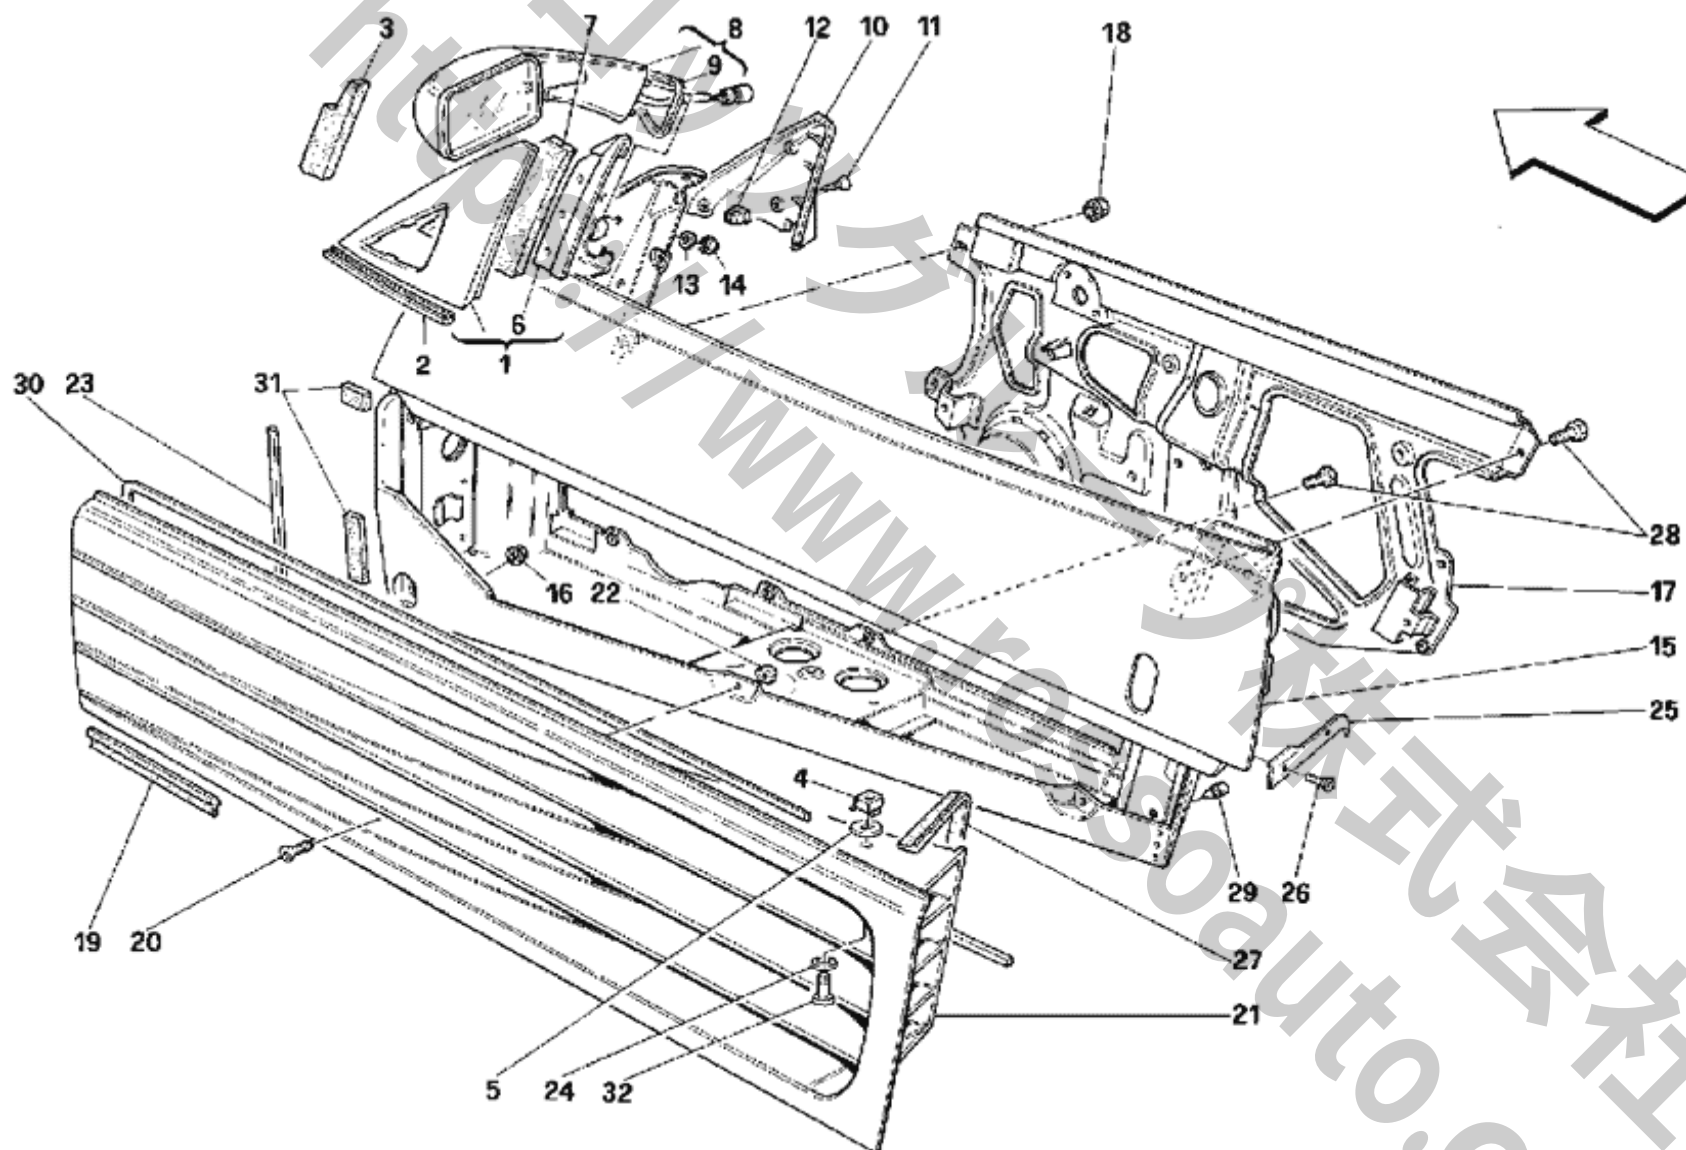


<119 Doors - Framework and Rear Mirror>

No.	Part No.	Name	Qty
Ask	Ask	Ask	Ask

ロッシェングループ株式会社
<https://www.rossoauto.com>

<120 Doors - Opening Control and Hinges>

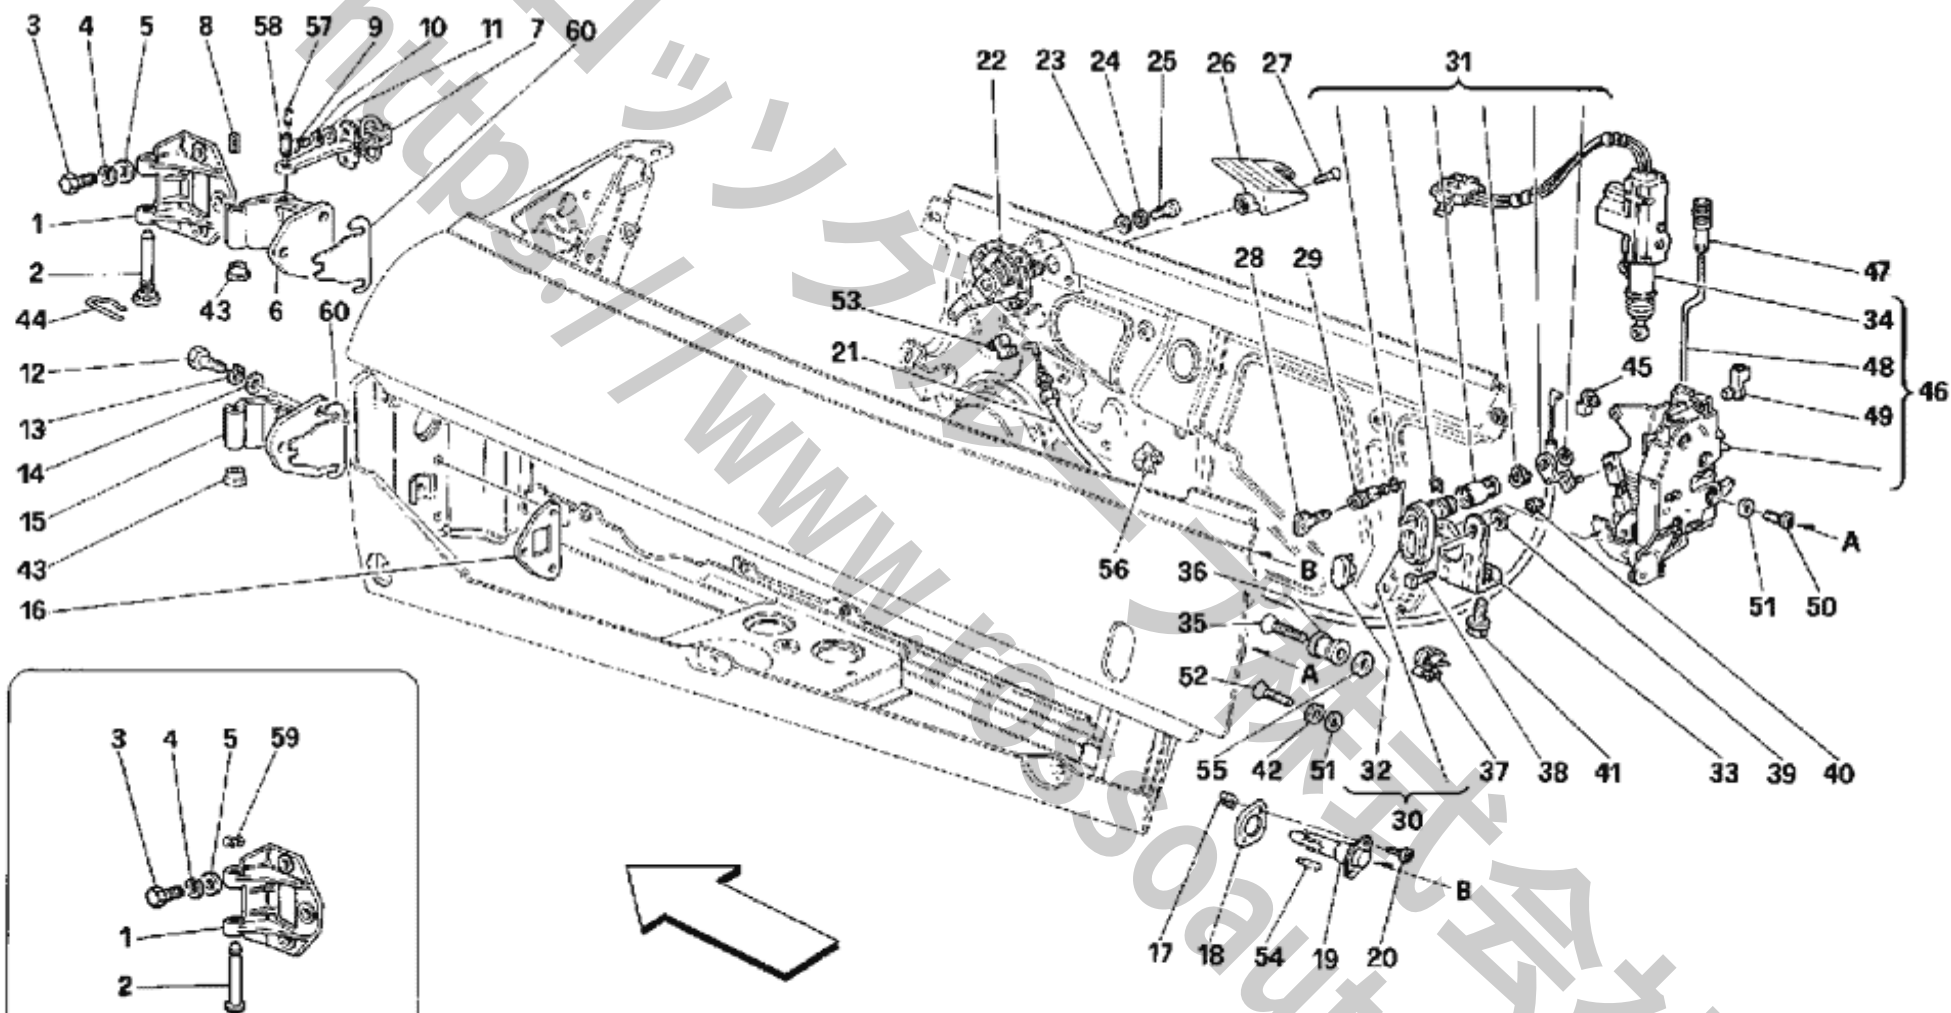


Vale per SPIDER
Valid for SPIDER

<120 Doors - Opening Control and Hinges>

No.	Part No.	Name	Qty
Ask	Ask	Ask	Ask

ロッシェングループ株式会社
<https://www.rossoauto.com>

<121 Doors - Glass Lifting Device>

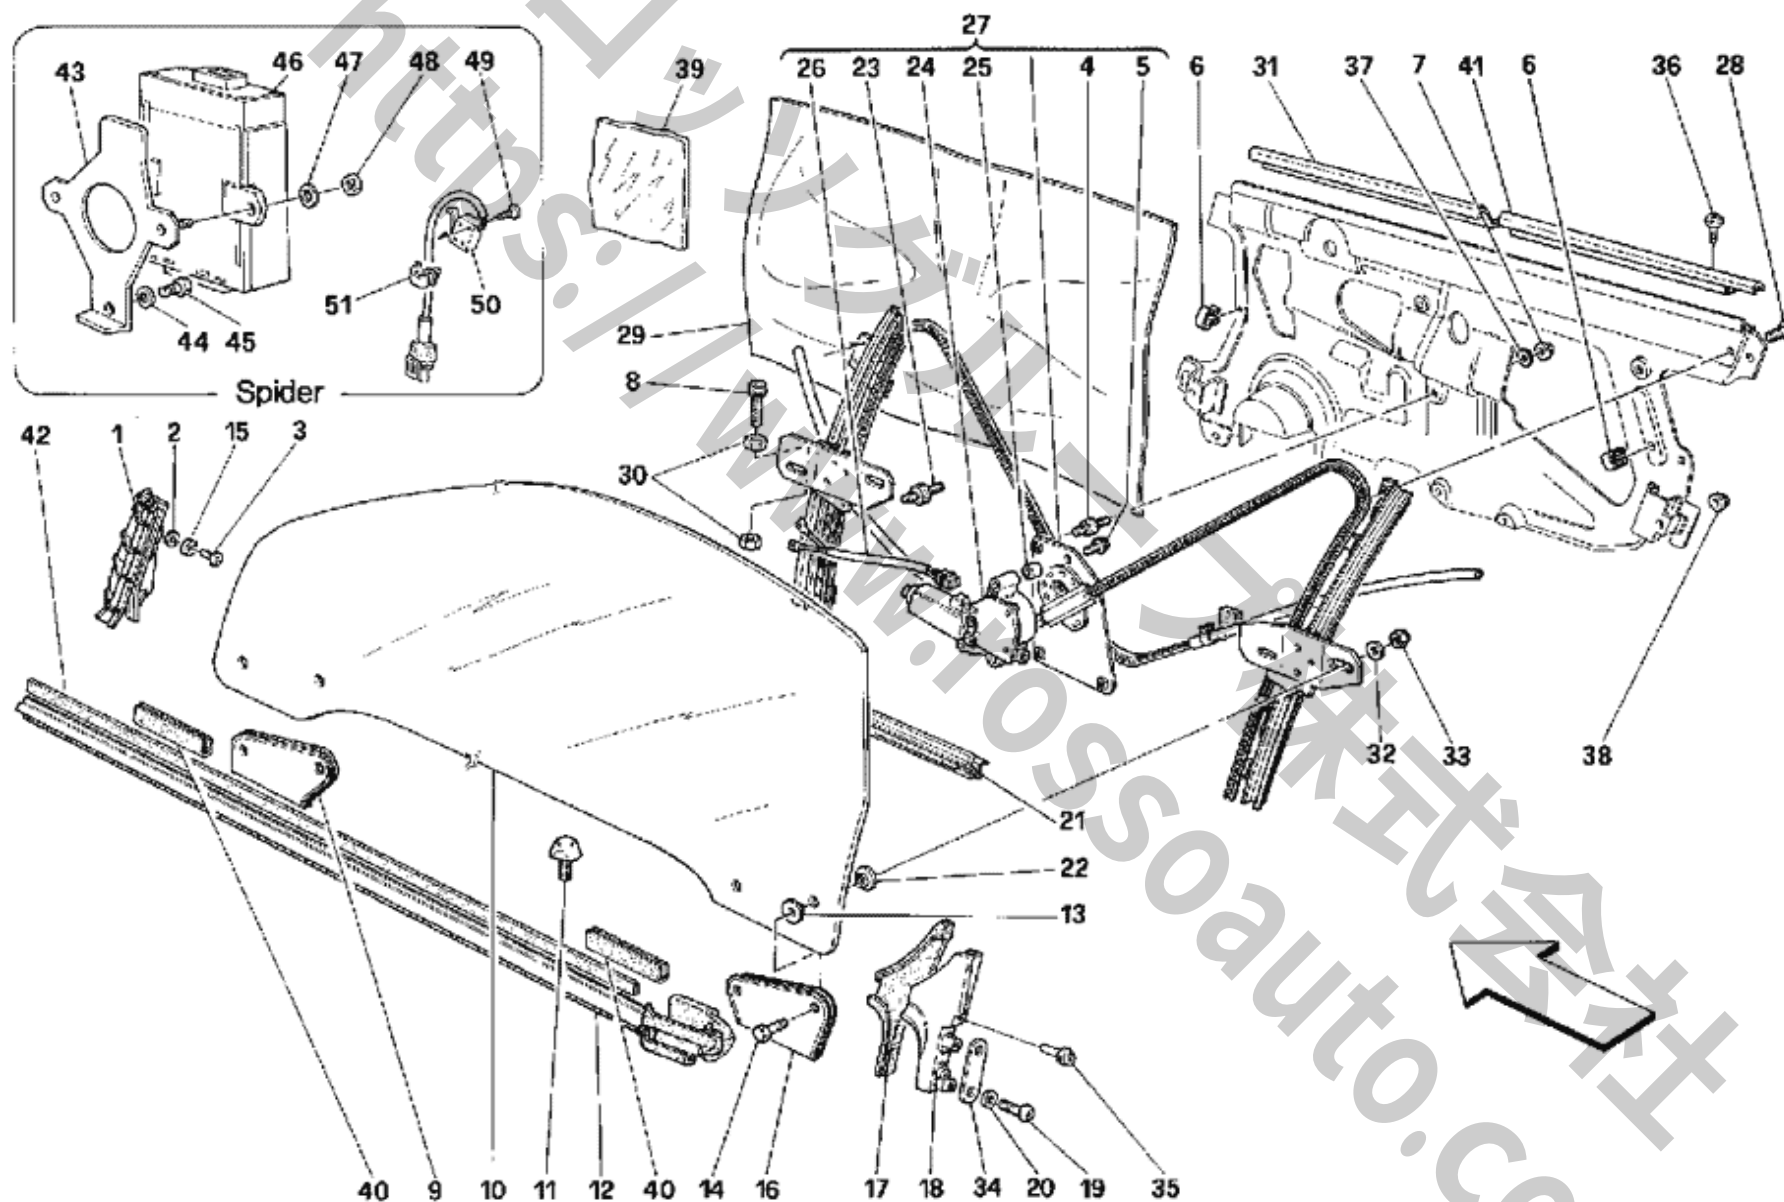


<121 Doors - Glass Lifting Device>

No.	Part No.	Name	Qty
Ask	Ask	Ask	Ask

ロッシェングループ株式会社
<https://www.rossoauto.com>

<122 Doors - Inner Trims -Not for Spider>

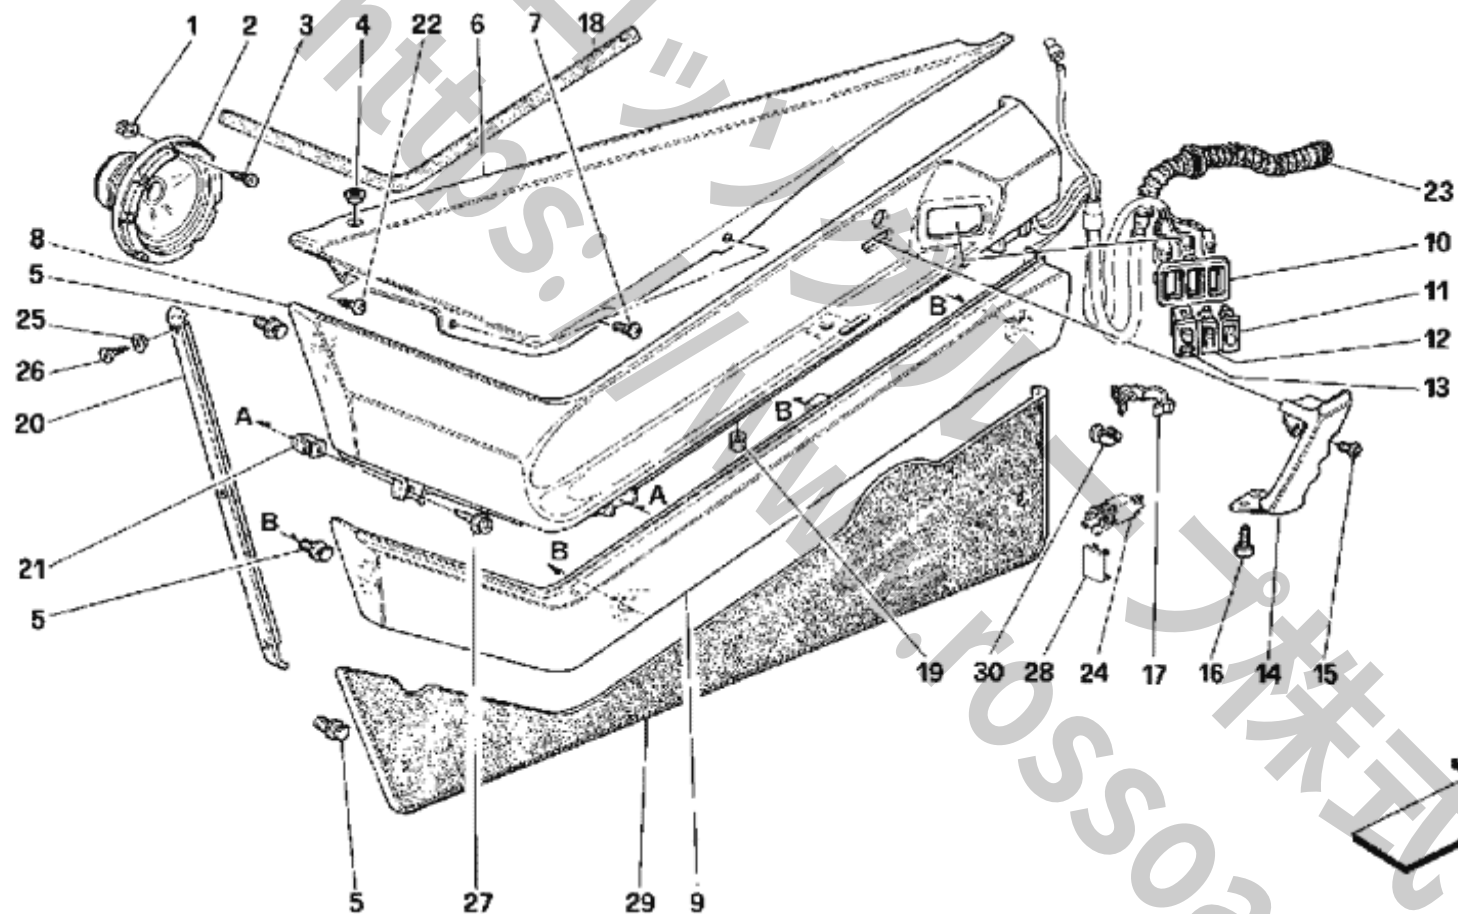


<122 Doors - Inner Trims -Not for Spider>

No.	Part No.	Name	Qty
Ask	Ask	Ask	Ask

ロッシェングループ株式会社
<https://www.rossoauto.com>

<123 Doors - Inner Trims -Valid for Spider>

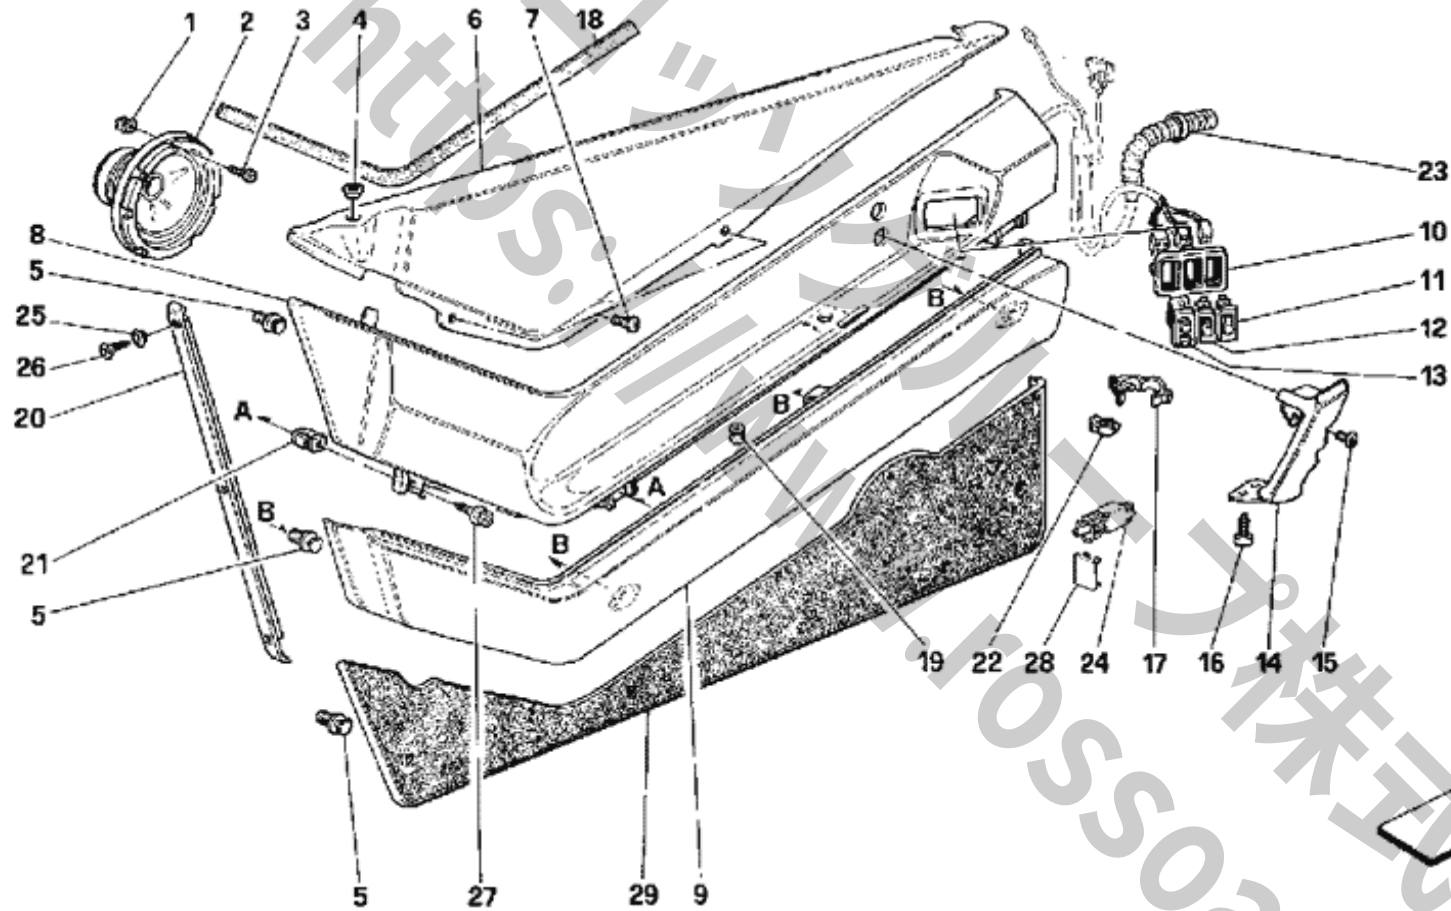


<123 Doors - Inner Trims -Valid for Spider>

No.	Part No.	Name	Qty
Ask	Ask	Ask	Ask

ロッシェングループ株式会社
<https://www.rossoauto.com>

<124 Front Bumper>

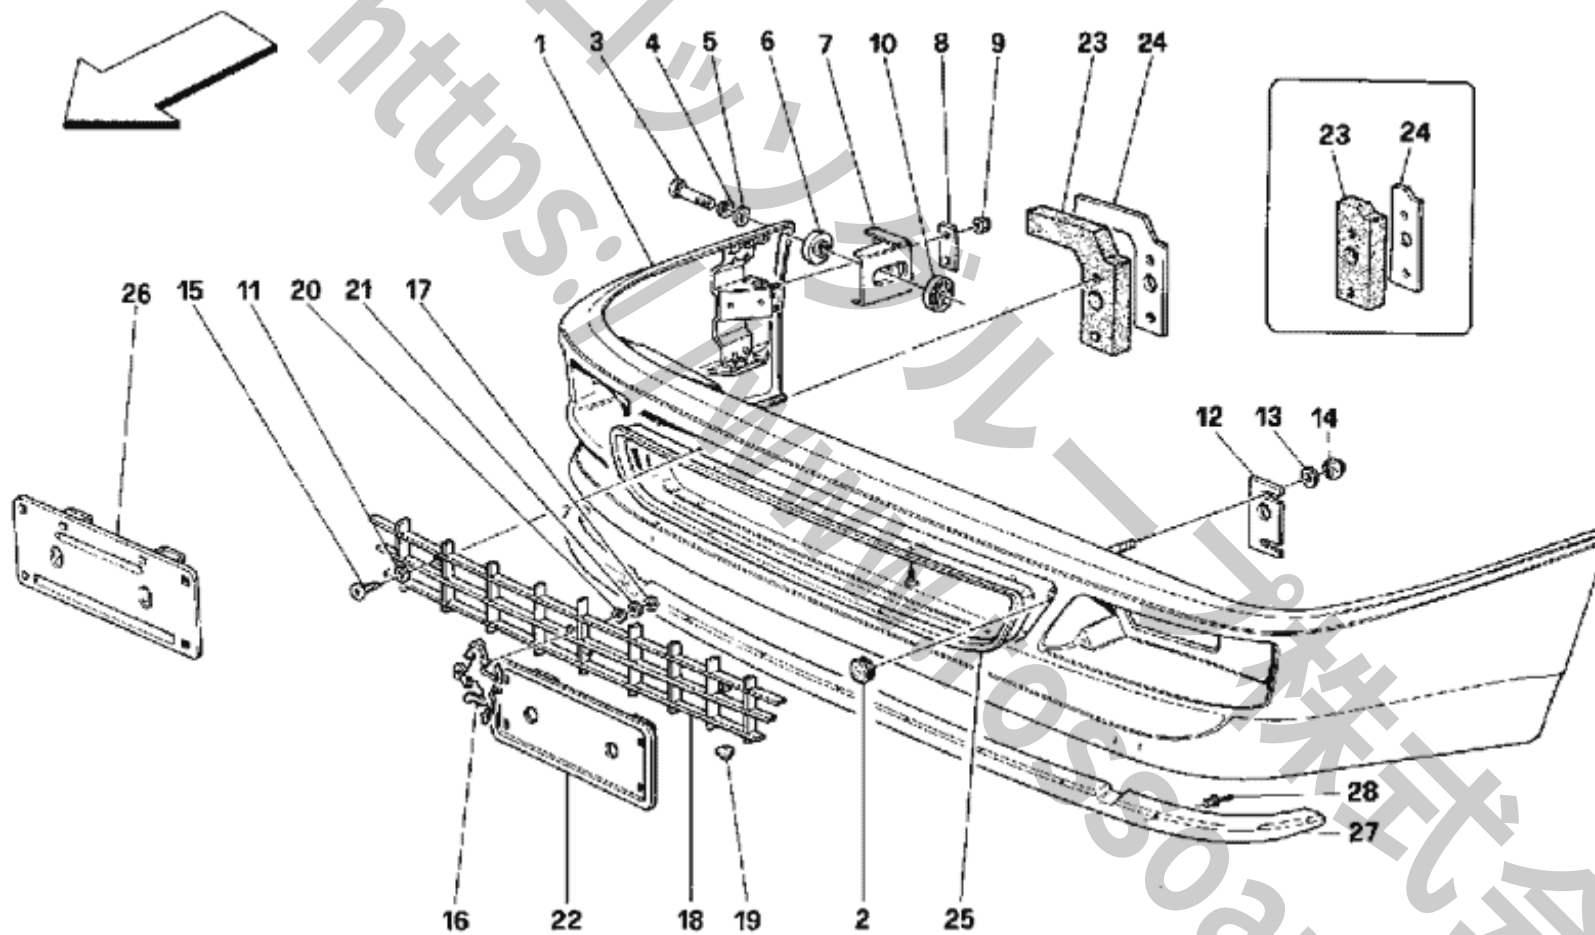


<124 Front Bumper>

No.	Part No.	Name	Qty
Ask	Ask	Ask	Ask

ロッシングループ株式会社
<https://www.rossoauto.com>

<125 Rear Bumper>

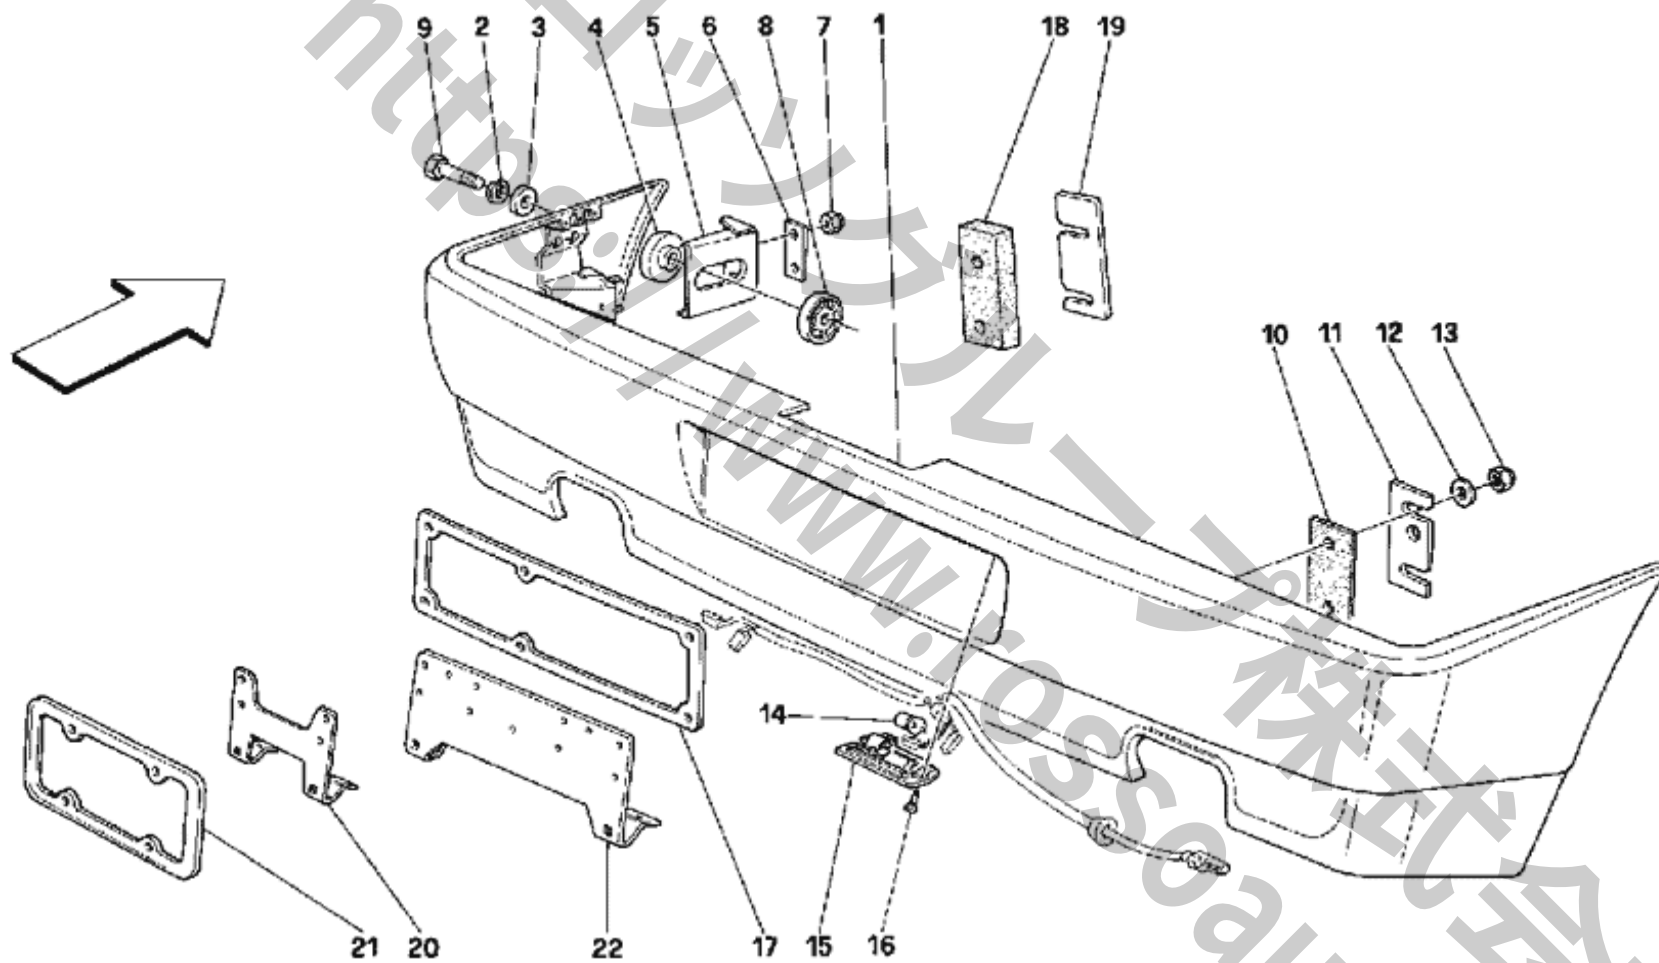


<125 Rear Bumper>

No.	Part No.	Name	Qty
Ask	Ask	Ask	Ask

ロッシングループ株式会社
<https://www.rossoauto.com>

<126 Glasses and Gaskets>

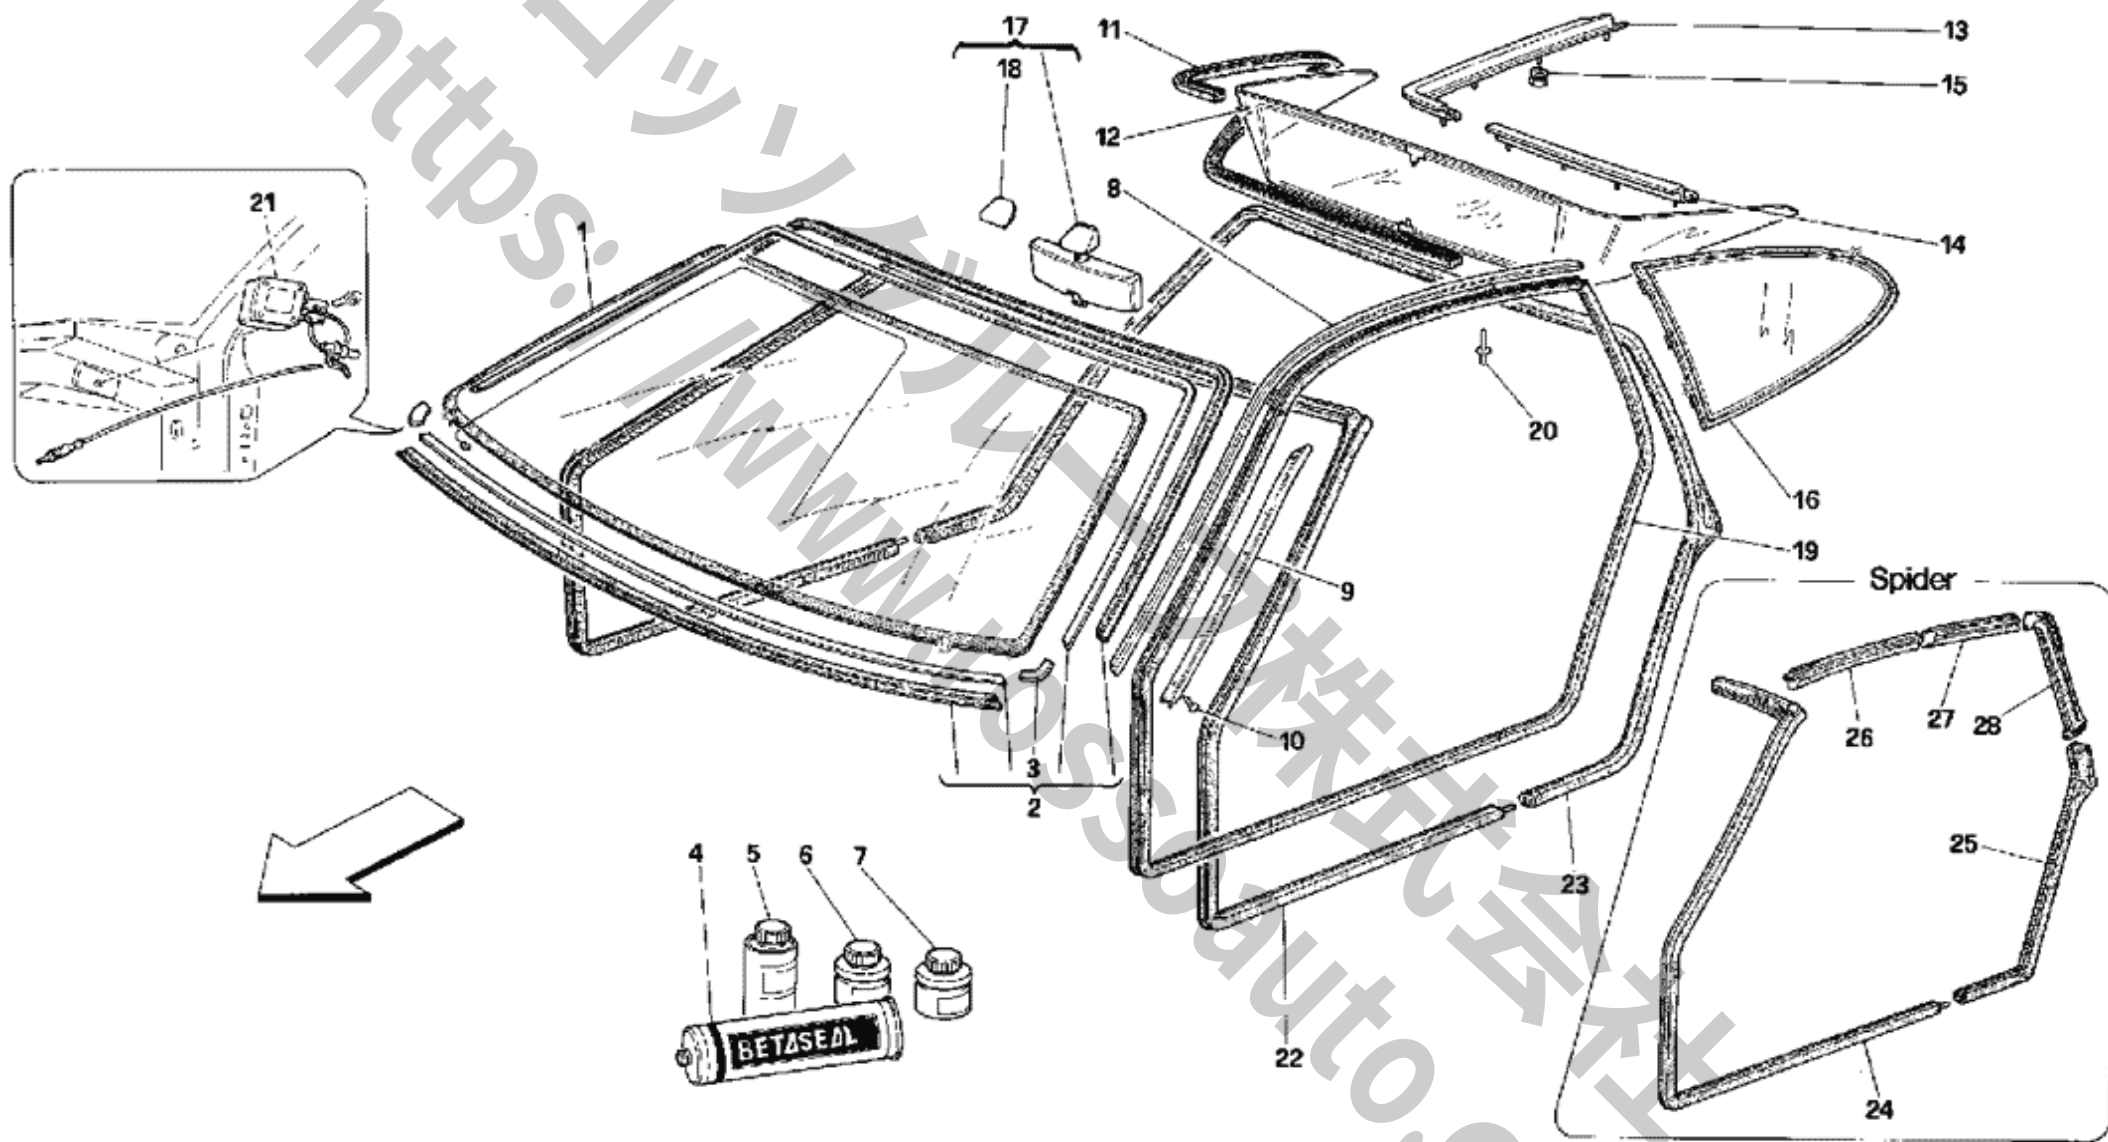


<126 Glasses and Gaskets>

No.	Part No.	Name	Qty
Ask	Ask	Ask	Ask

ロッシングループ株式会社
<https://www.rossoauto.com>

<127 Seats and Safety Belts -Not for Spider->

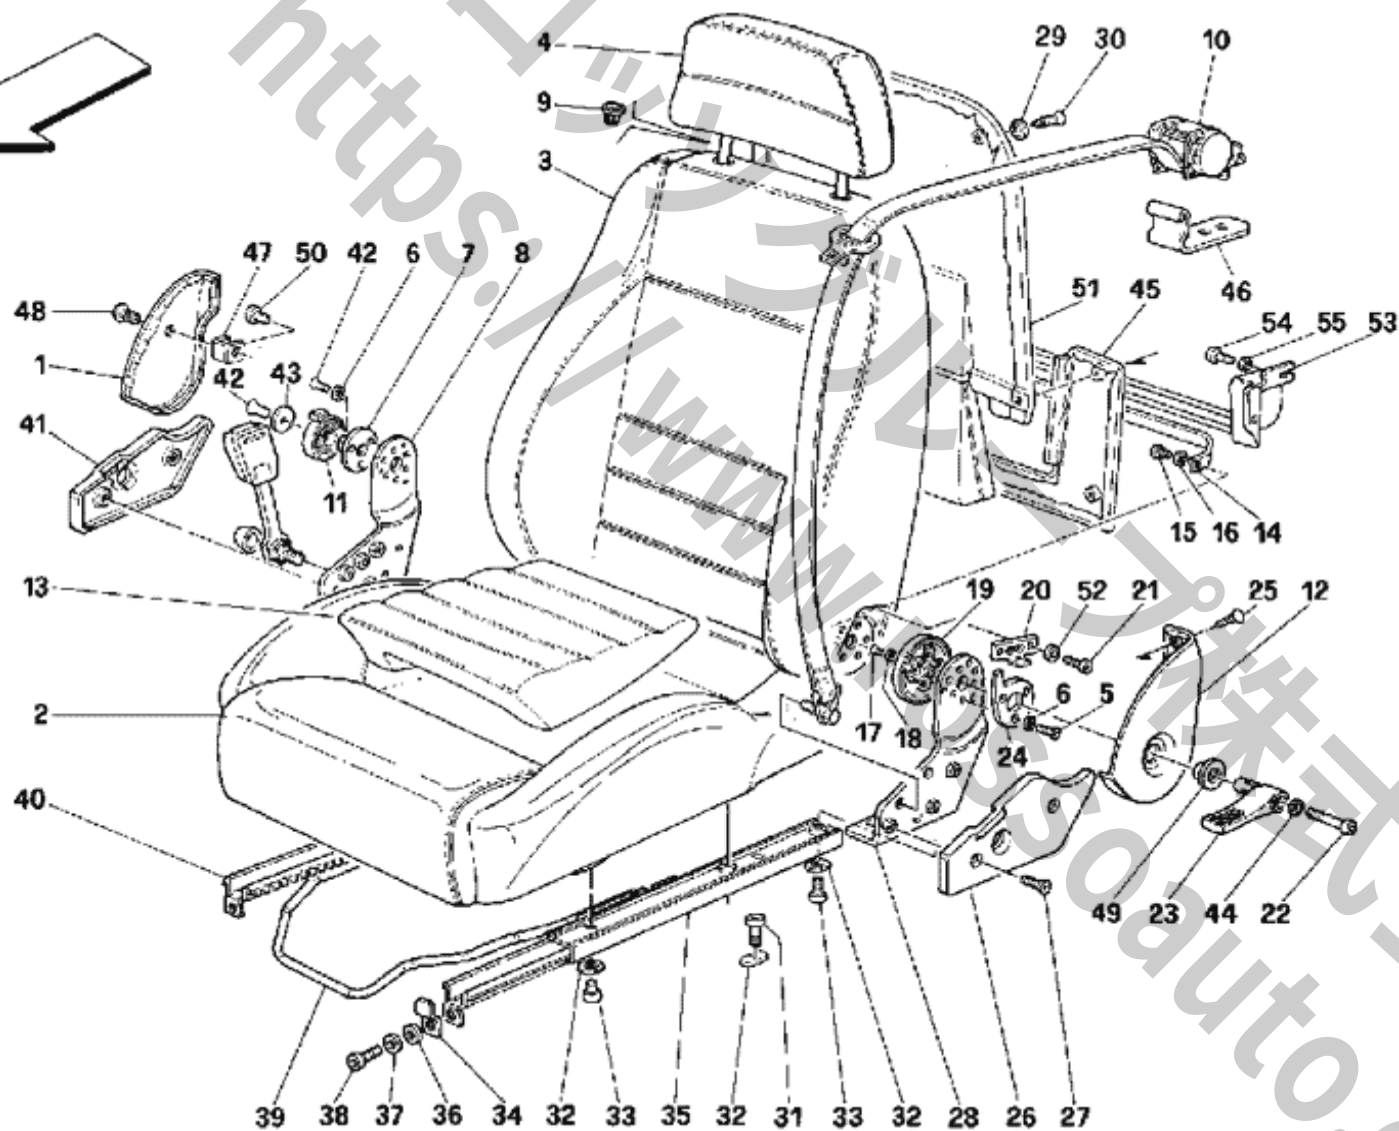


<127 Seats and Safety Belts -Not for Spider->

No.	Part No.	Name	Qty
Ask	Ask	Ask	Ask

ロッシェングループ株式会社
<https://www.rossoauto.com>

<128 Seats and Safety Belts -Valid for Spider - Not for USA->

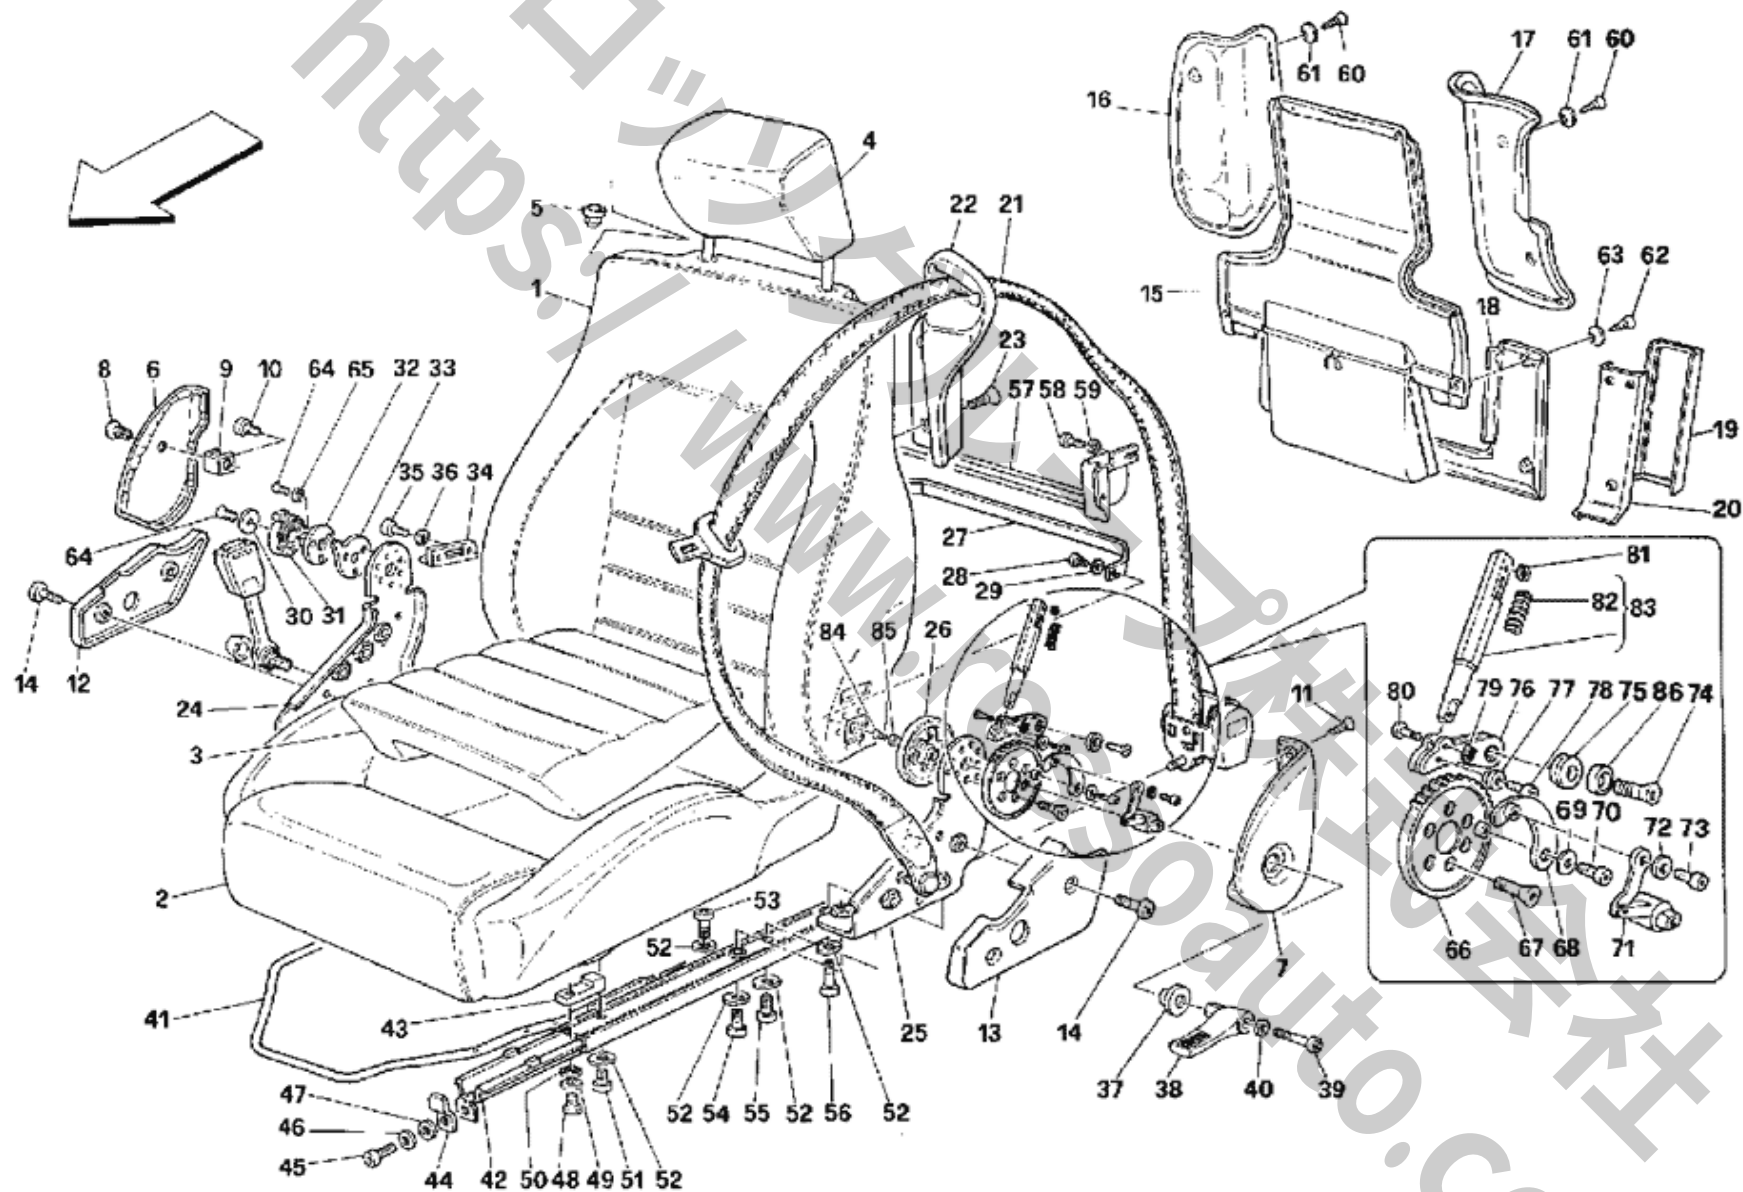


<128 Seats and Safety Belts -Valid for Spider - Not for USA->

No.	Part No.	Name	Qty
Ask	Ask	Ask	Ask

ロッシングループ株式会社
<https://www.rossoauto.com>

<129 Seats and Safety Belts -Valid for USA->

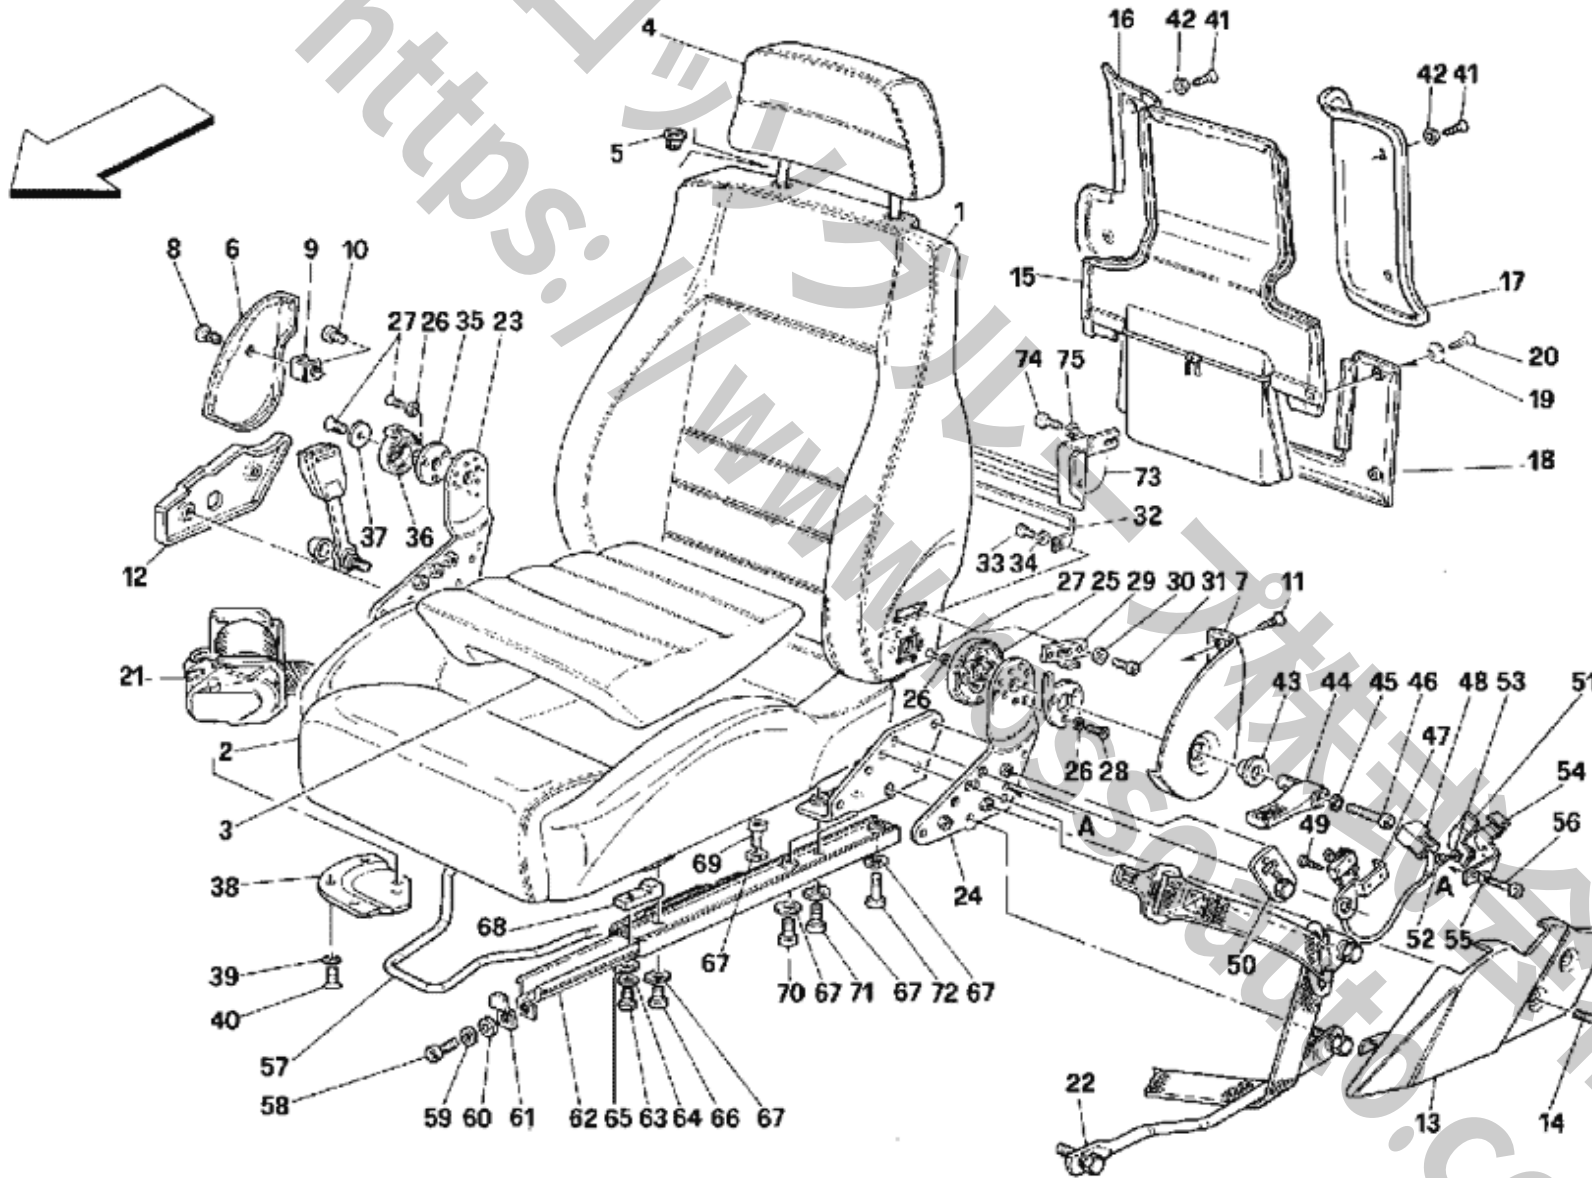


<129 Seats and Safety Belts -Valid for USA->

No.	Part No.	Name	Qty
Ask	Ask	Ask	Ask

ロッシェングループ株式会社
<https://www.rossoauto.com>

<130 Seats -Valid for 348 Comp.->

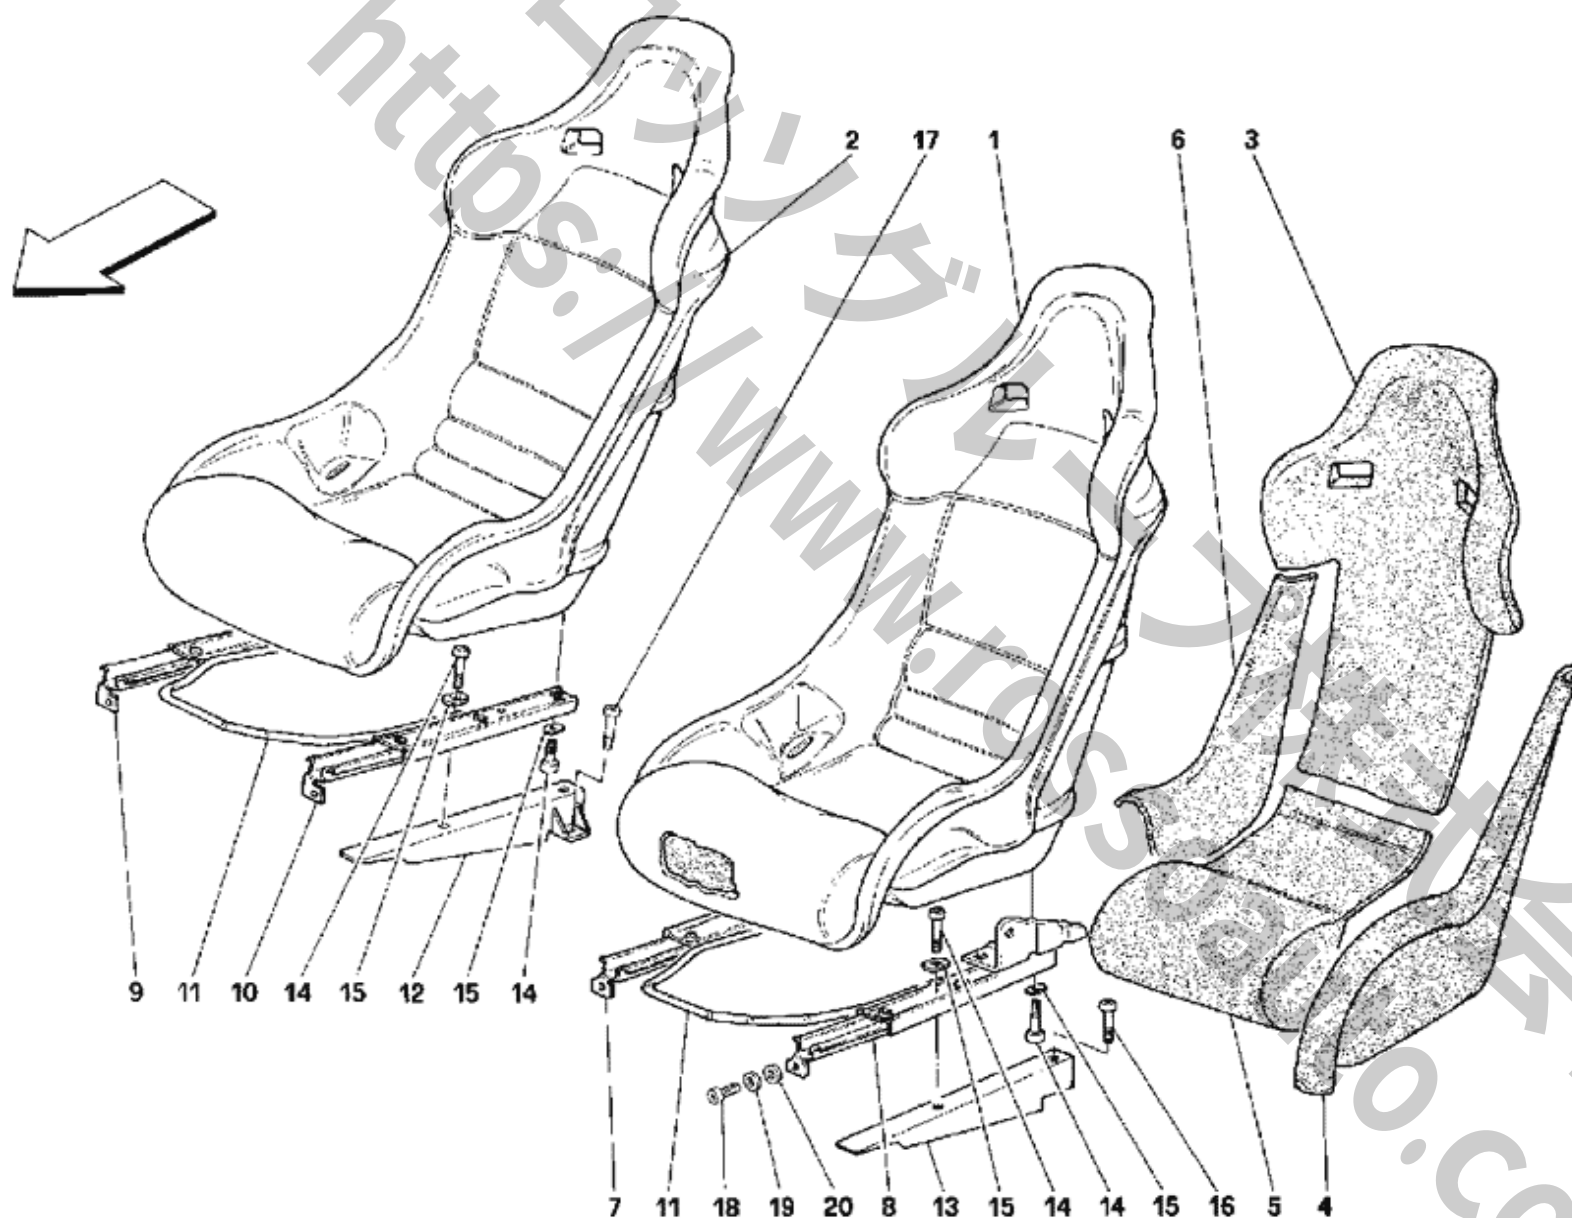


<130 Seats -Valid for 348 Comp.->

No.	Part No.	Name	Qty
Ask	Ask	Ask	Ask

ロッシングループ株式会社
<https://www.rossoauto.com>

<131 Passive Safety Belts System -Valid for USA->

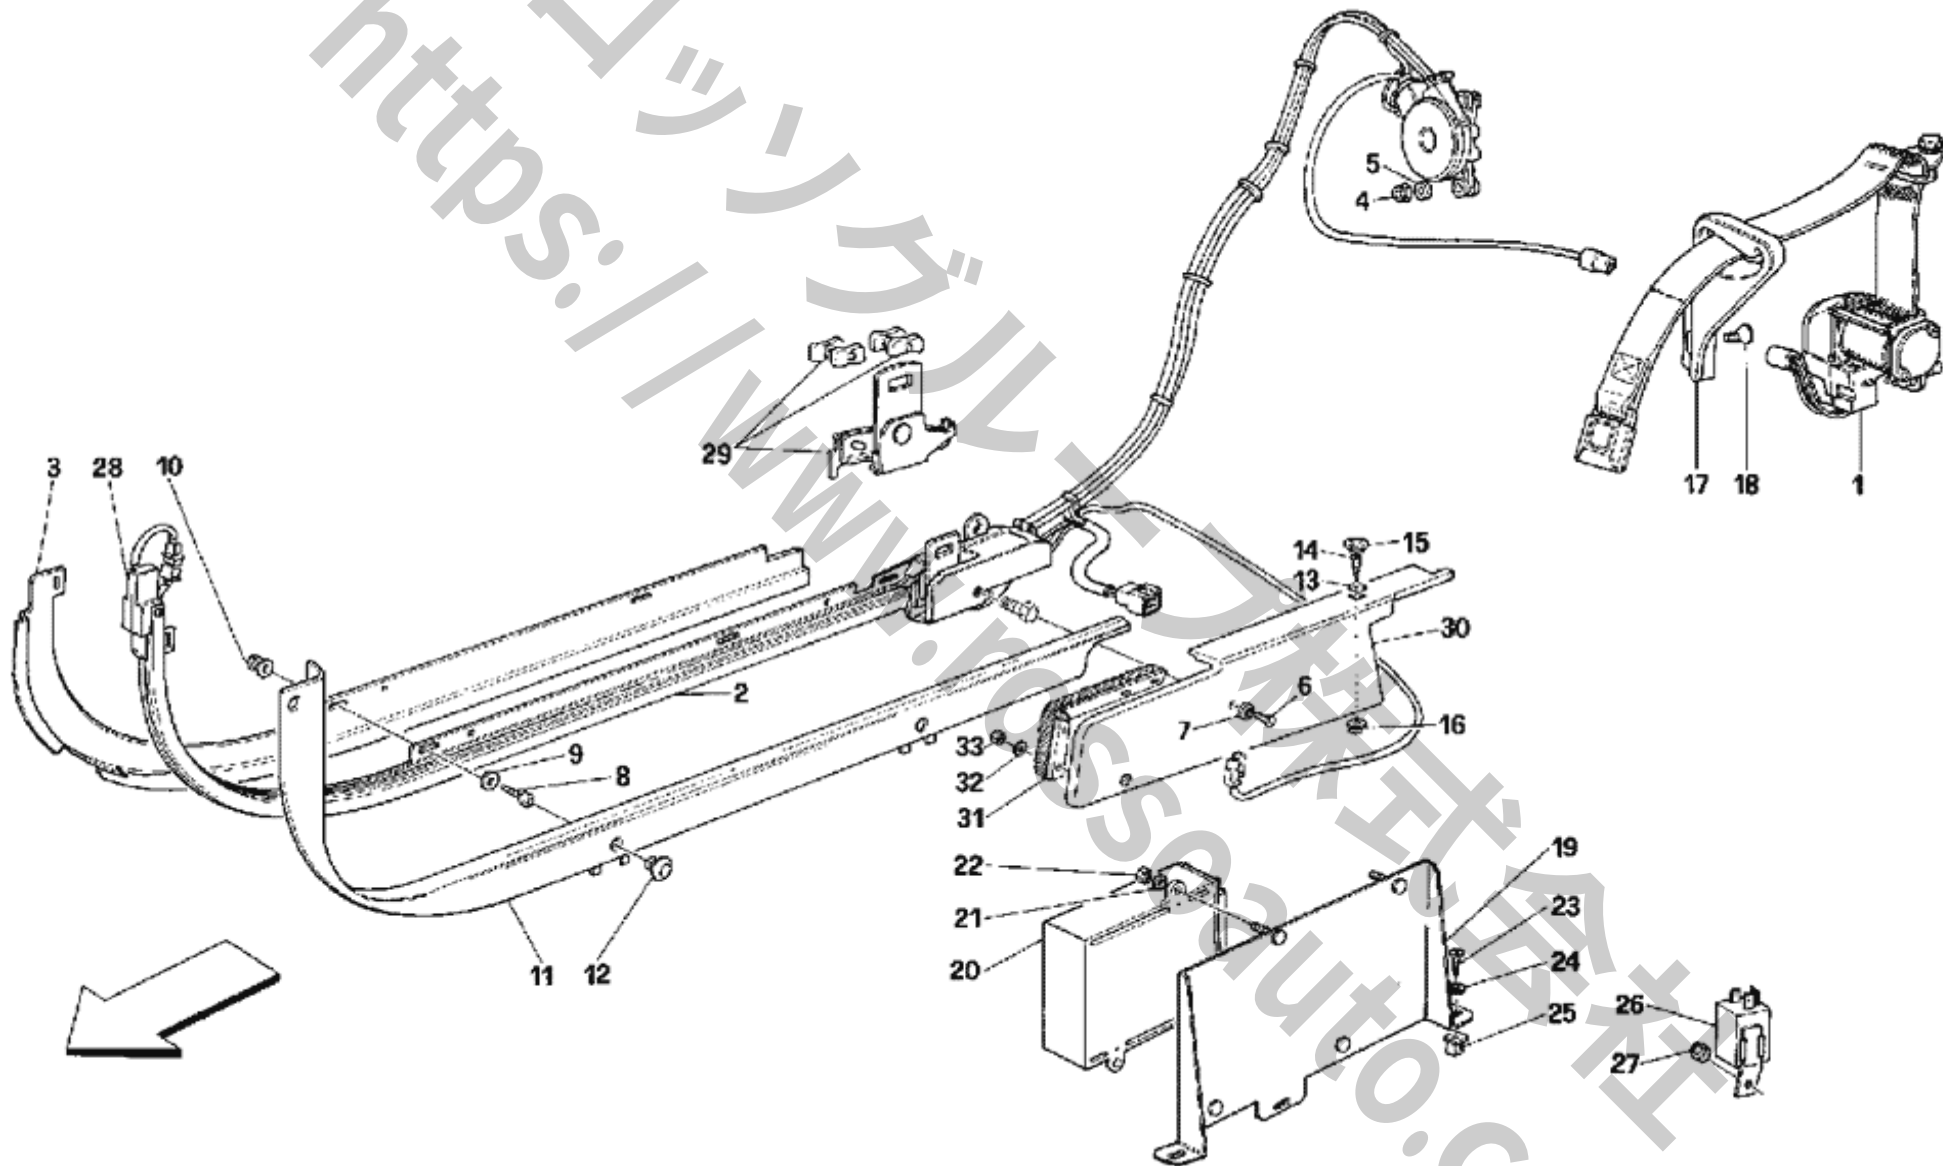


<131 Passive Safety Belts System -Valid for USA->

No.	Part No.	Name	Qty
Ask	Ask	Ask	Ask

ロッシェングループ株式会社
<https://www.rossoauto.com>

<132 Tunnel - Framework and Trims>

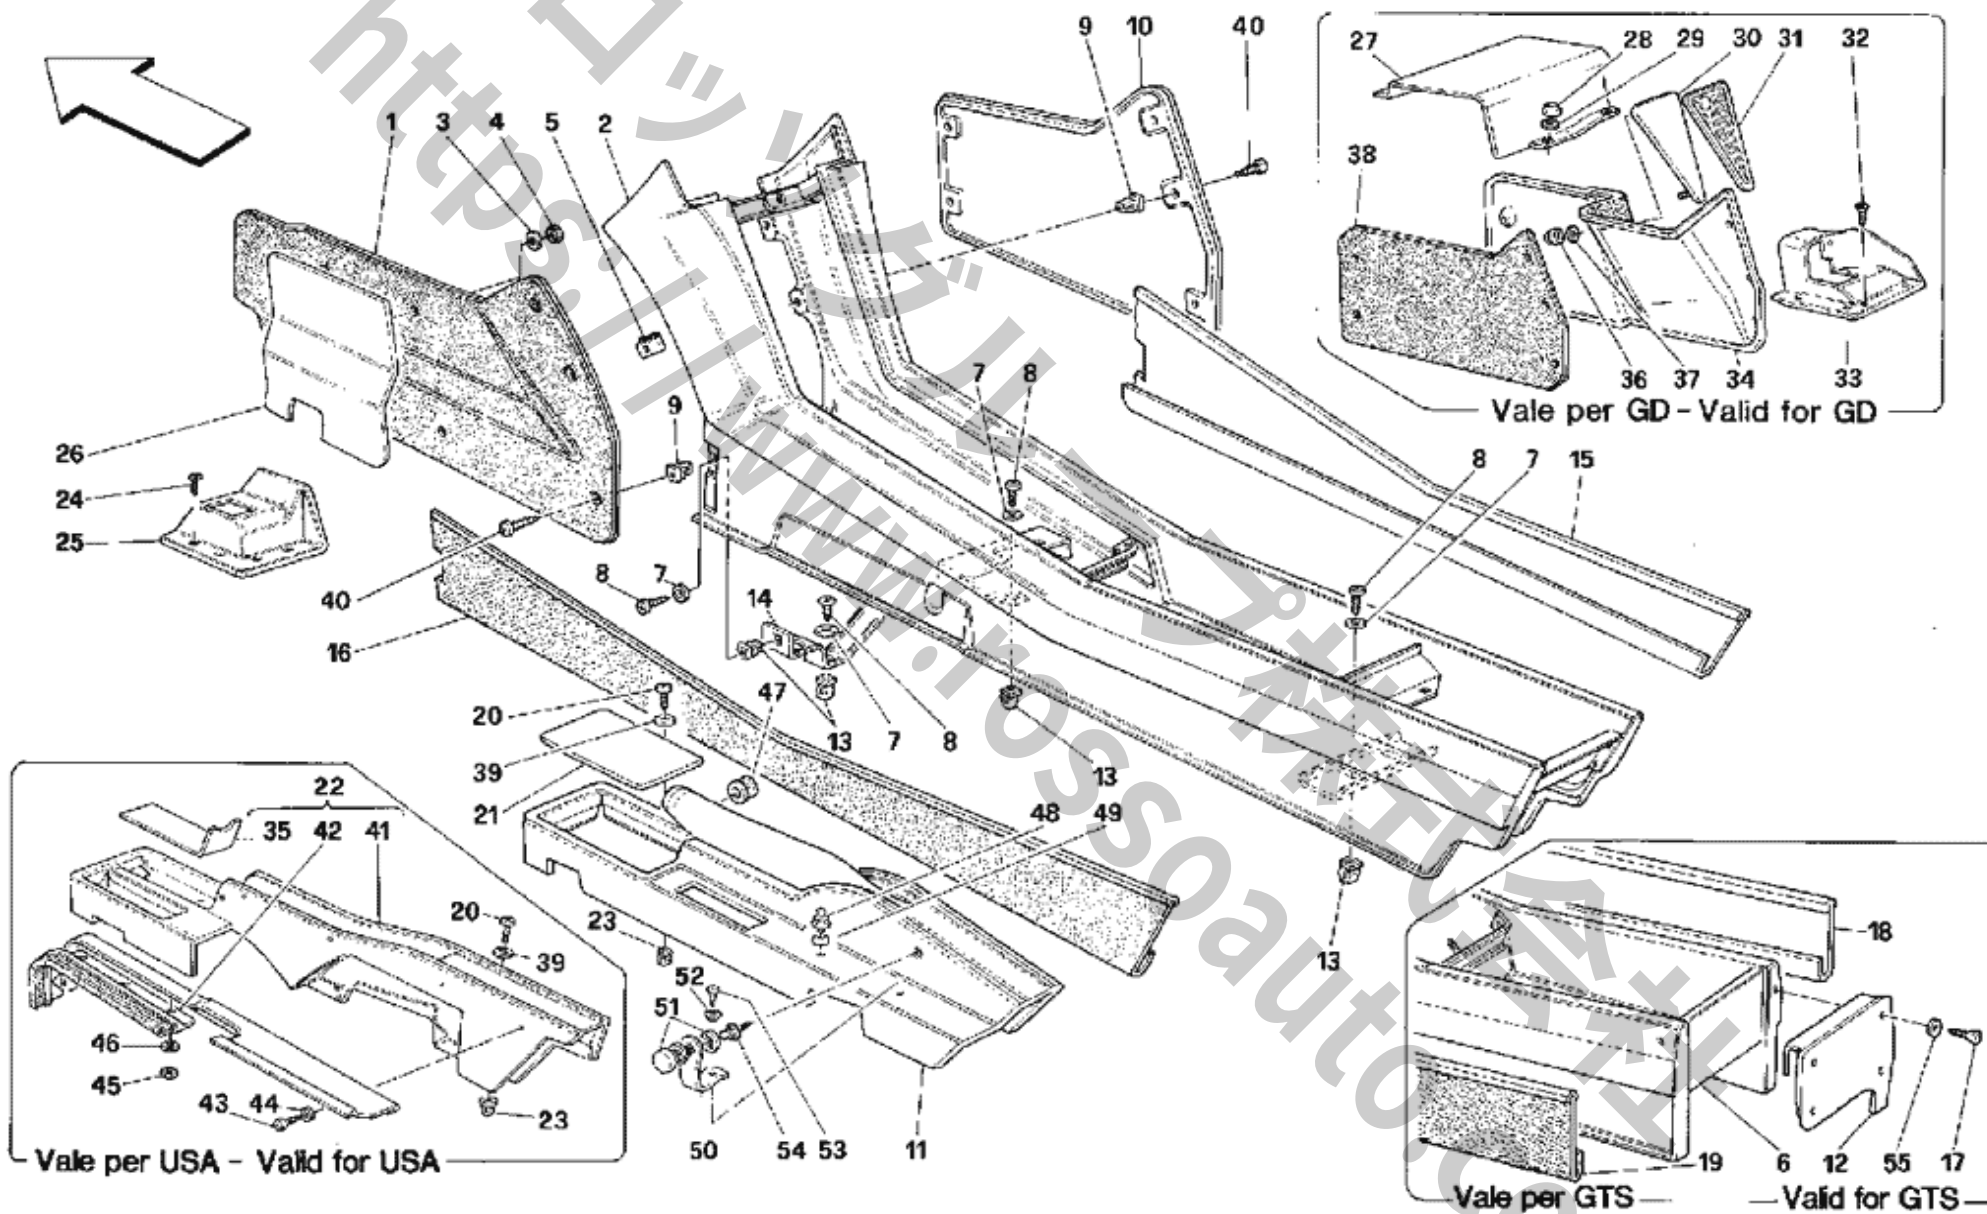


<132 Tunnel - Framework and Trims>

No.	Part No.	Name	Qty
Ask	Ask	Ask	Ask

ロッシェングループ株式会社
<https://www.rossoauto.com>

<133 Tunnel - Accessories>

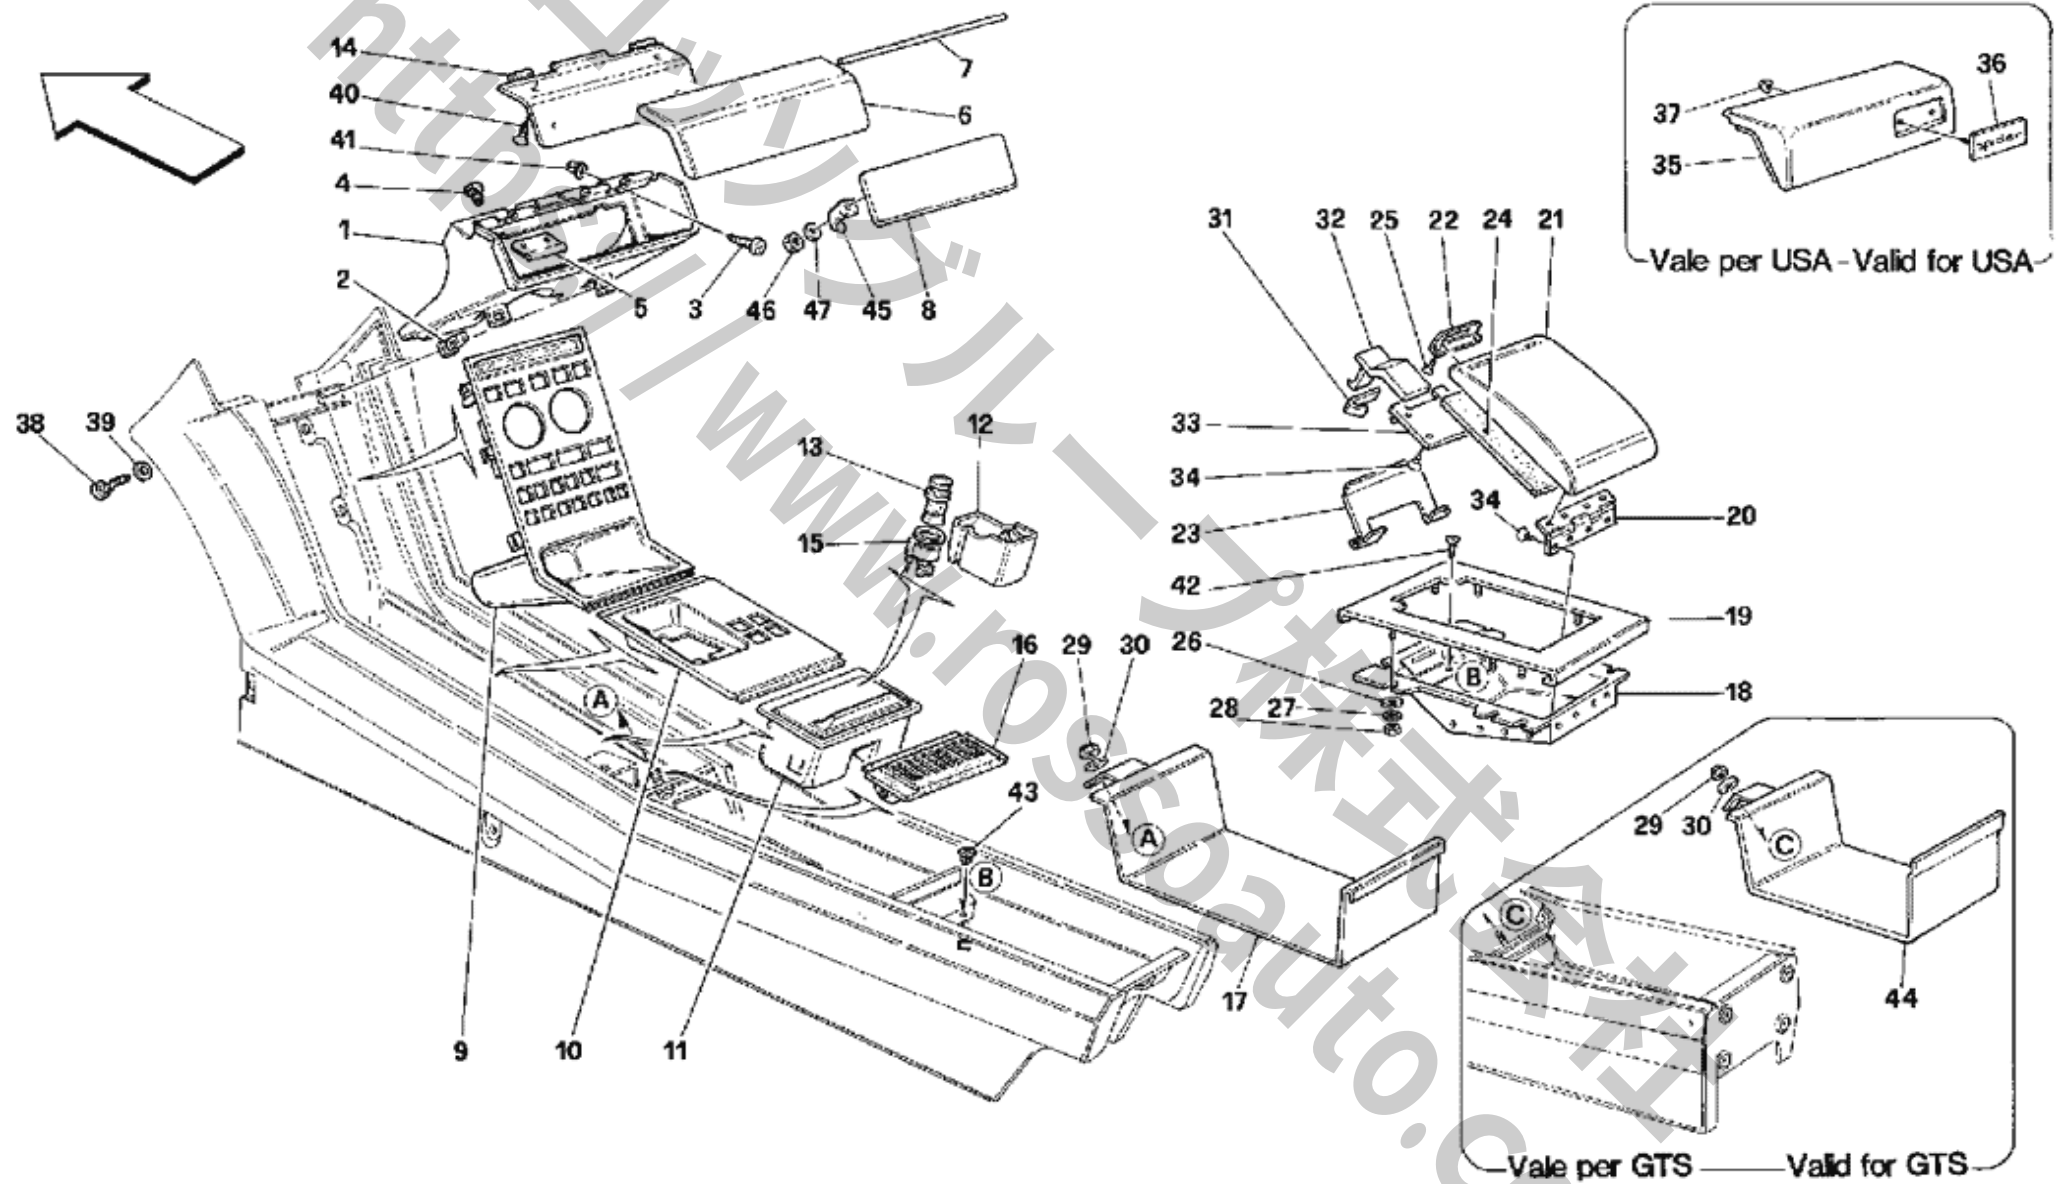


<133 Tunnel - Accessories>

No.	Part No.	Name	Qty
Ask	Ask	Ask	Ask

ロッシングループ株式会社
<https://www.rossoauto.com>

<134 Dashboard - Structure and Supports -Not for USA->

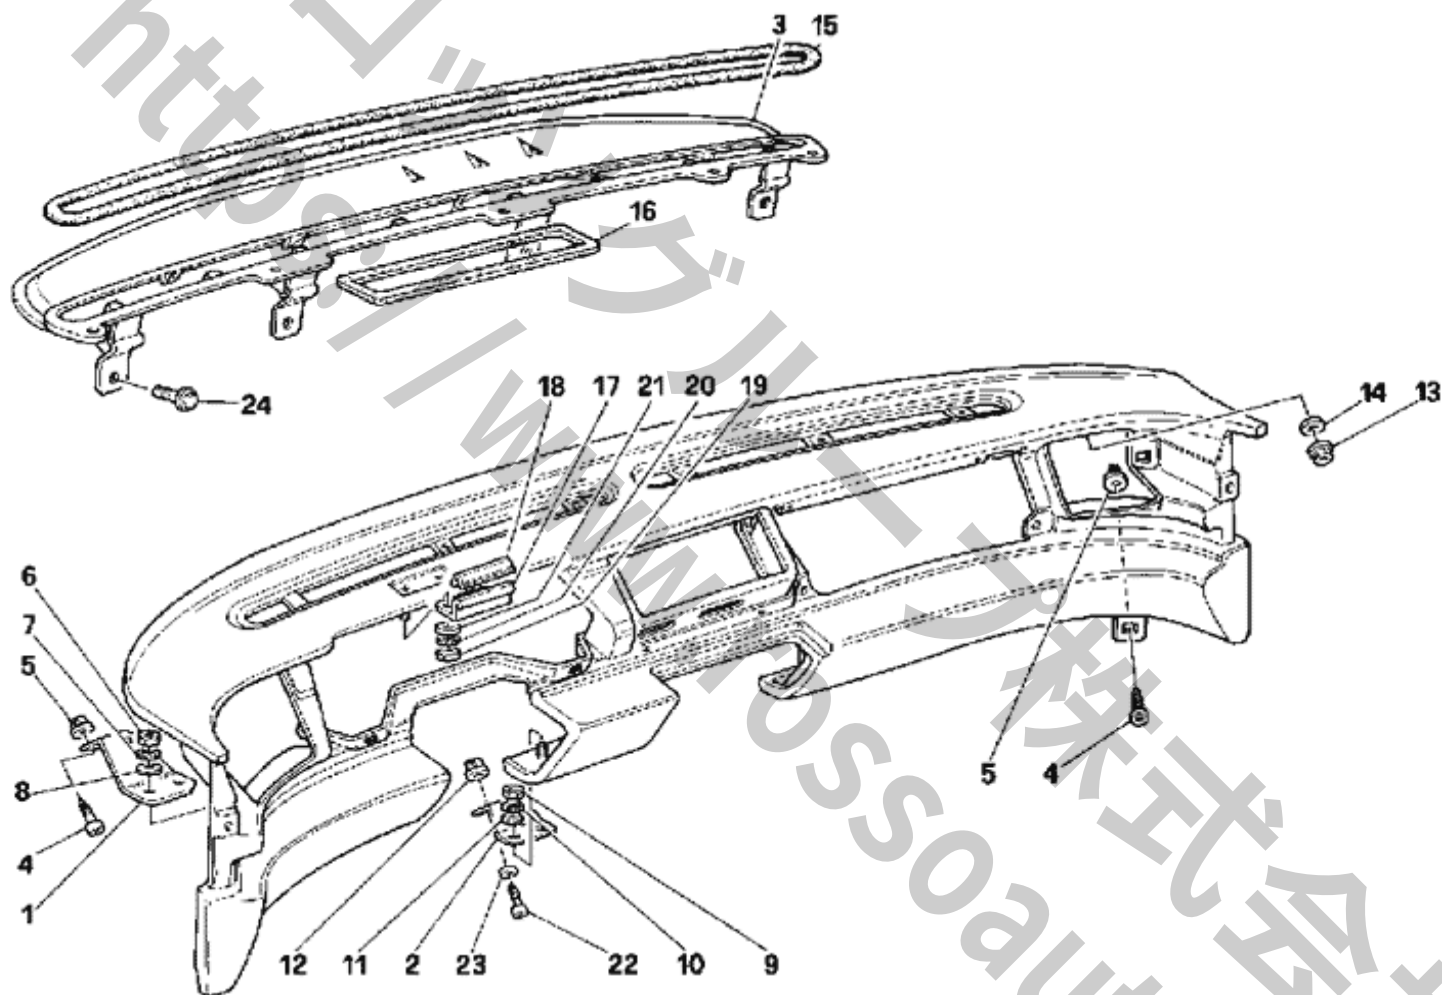


<134 Dashboard - Structure and Supports -Not for USA->

No.	Part No.	Name	Qty
Ask	Ask	Ask	Ask

ロッシングループ株式会社
<https://www.rossoauto.com>

<135 Dashboard - Trim and Accessories -Not for USA->

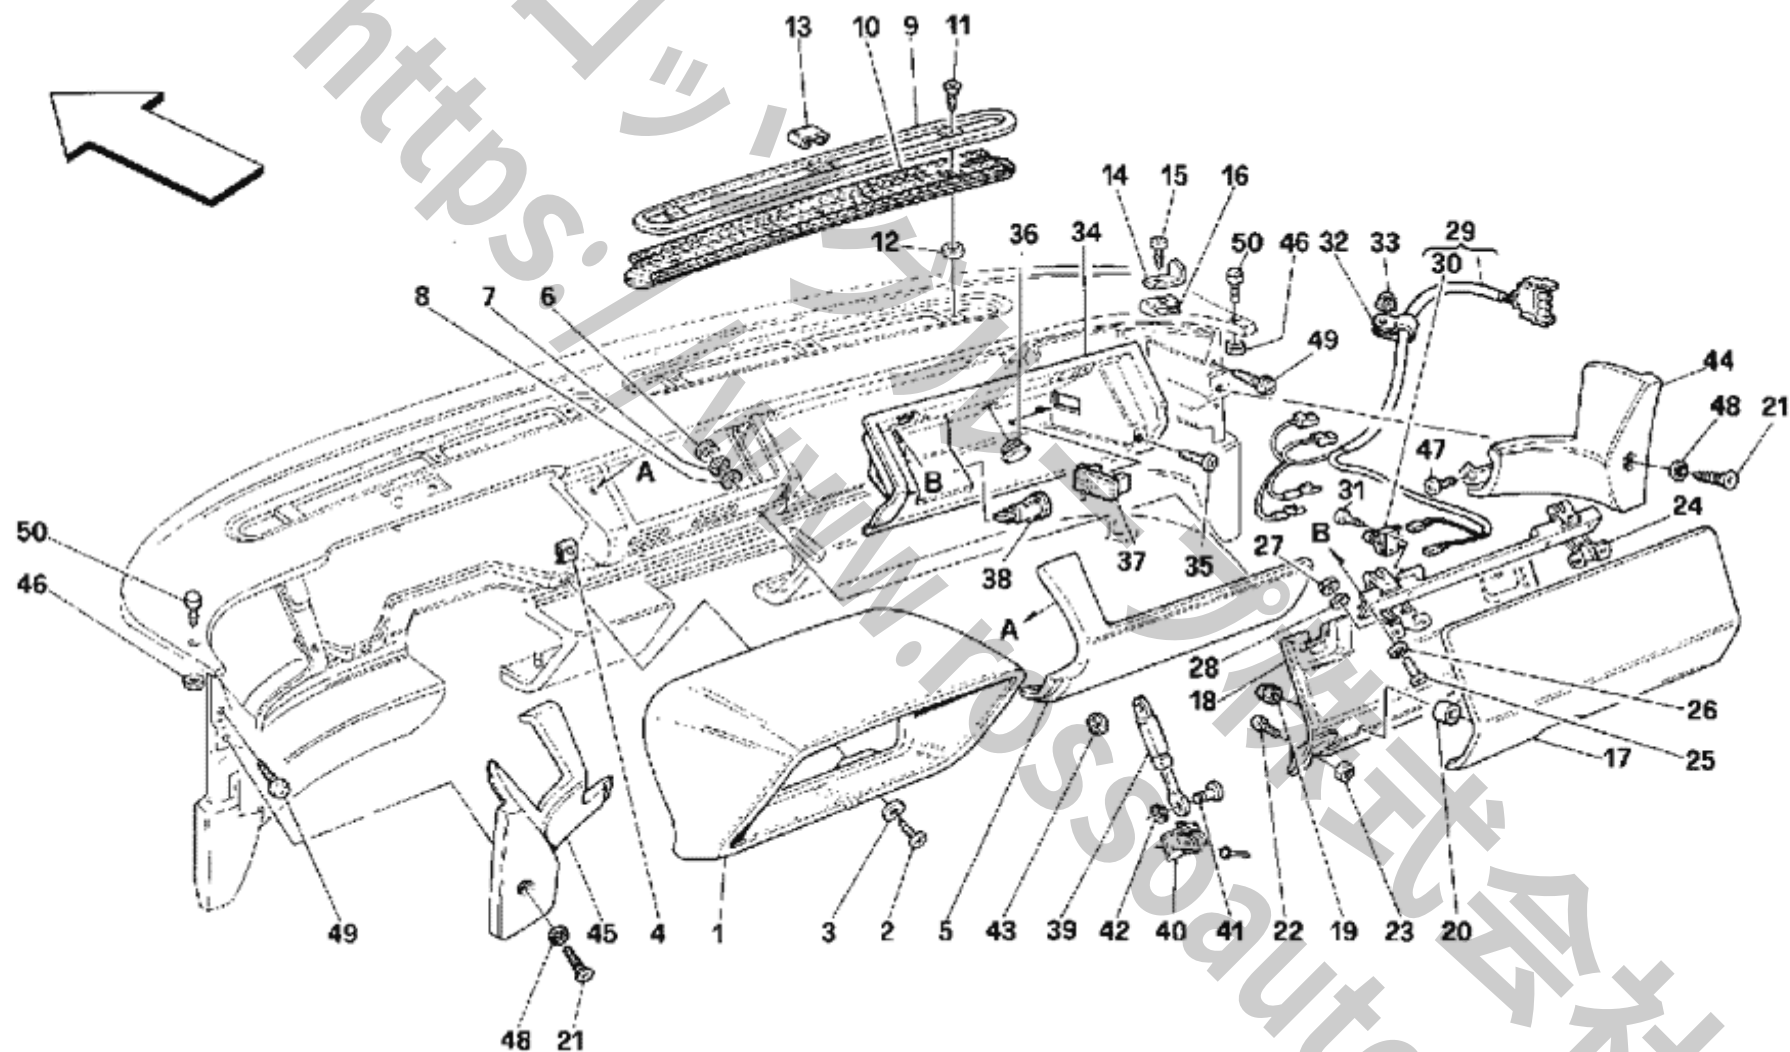


<135 Dashboard - Trim and Accessories -Not for USA->

No.	Part No.	Name	Qty
Ask	Ask	Ask	Ask

ロッシェングループ株式会社
<https://www.rossoauto.com>

<136 Dashboard - Structure and Supports -Valid for USA->

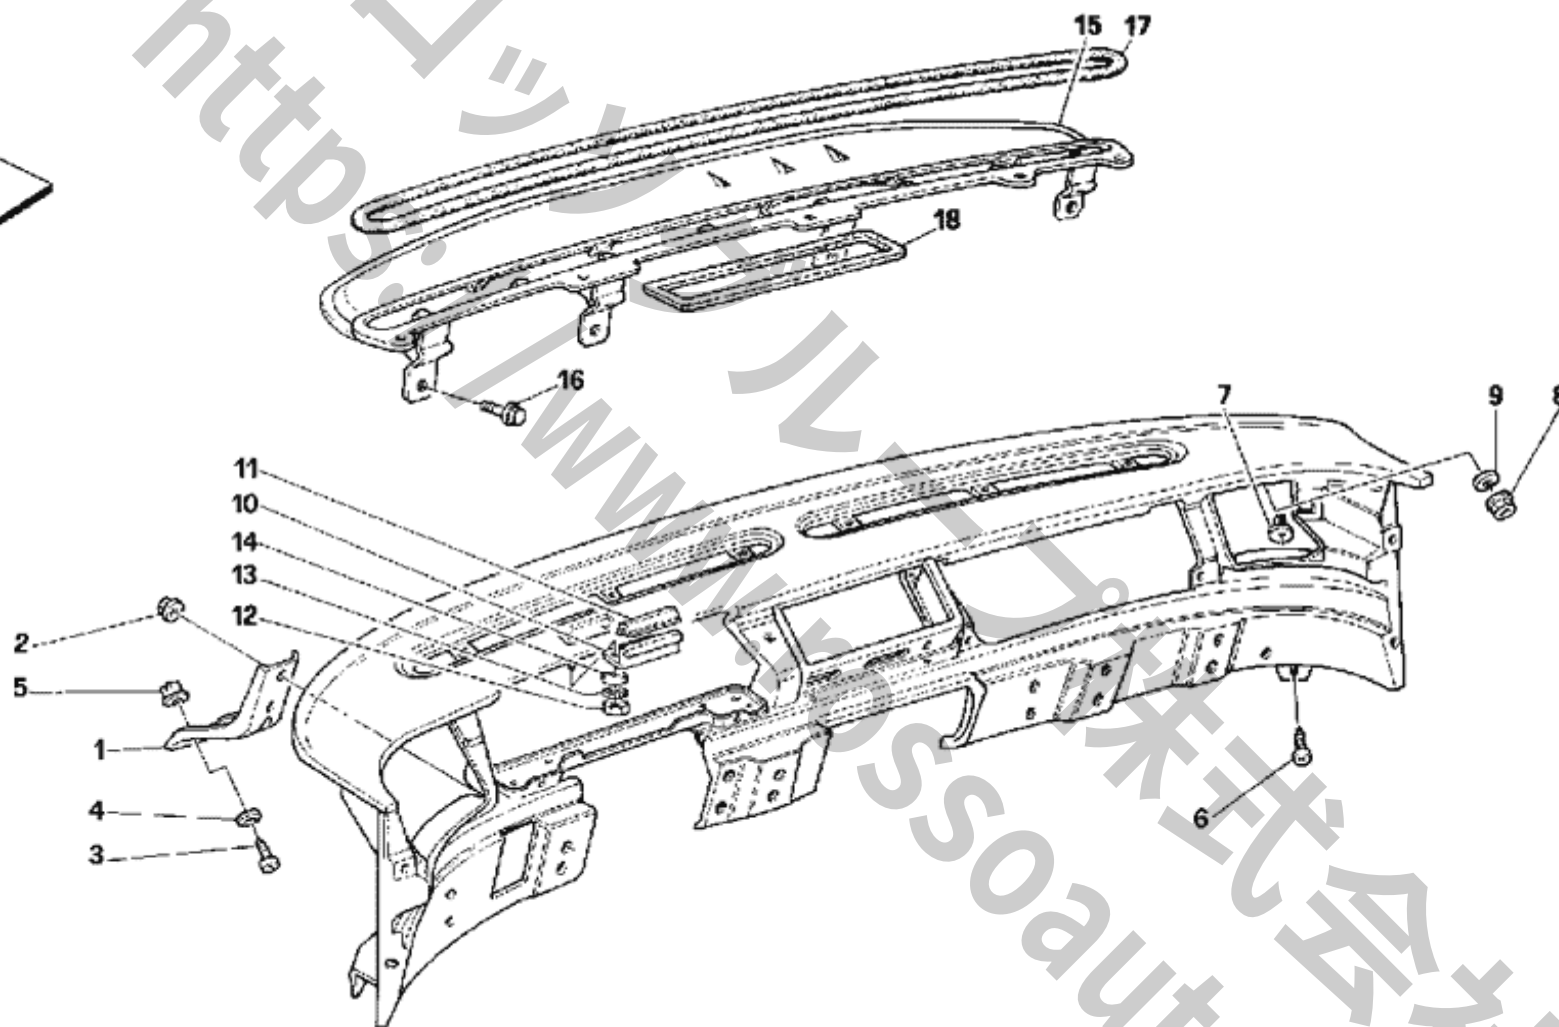


<136 Dashboard - Structure and Supports -Valid for USA->

No.	Part No.	Name	Qty
Ask	Ask	Ask	Ask

ロッシェングループ株式会社
<https://www.rossoauto.com>

<137 Dashboard - Trim and Accessories -Valid for USA->

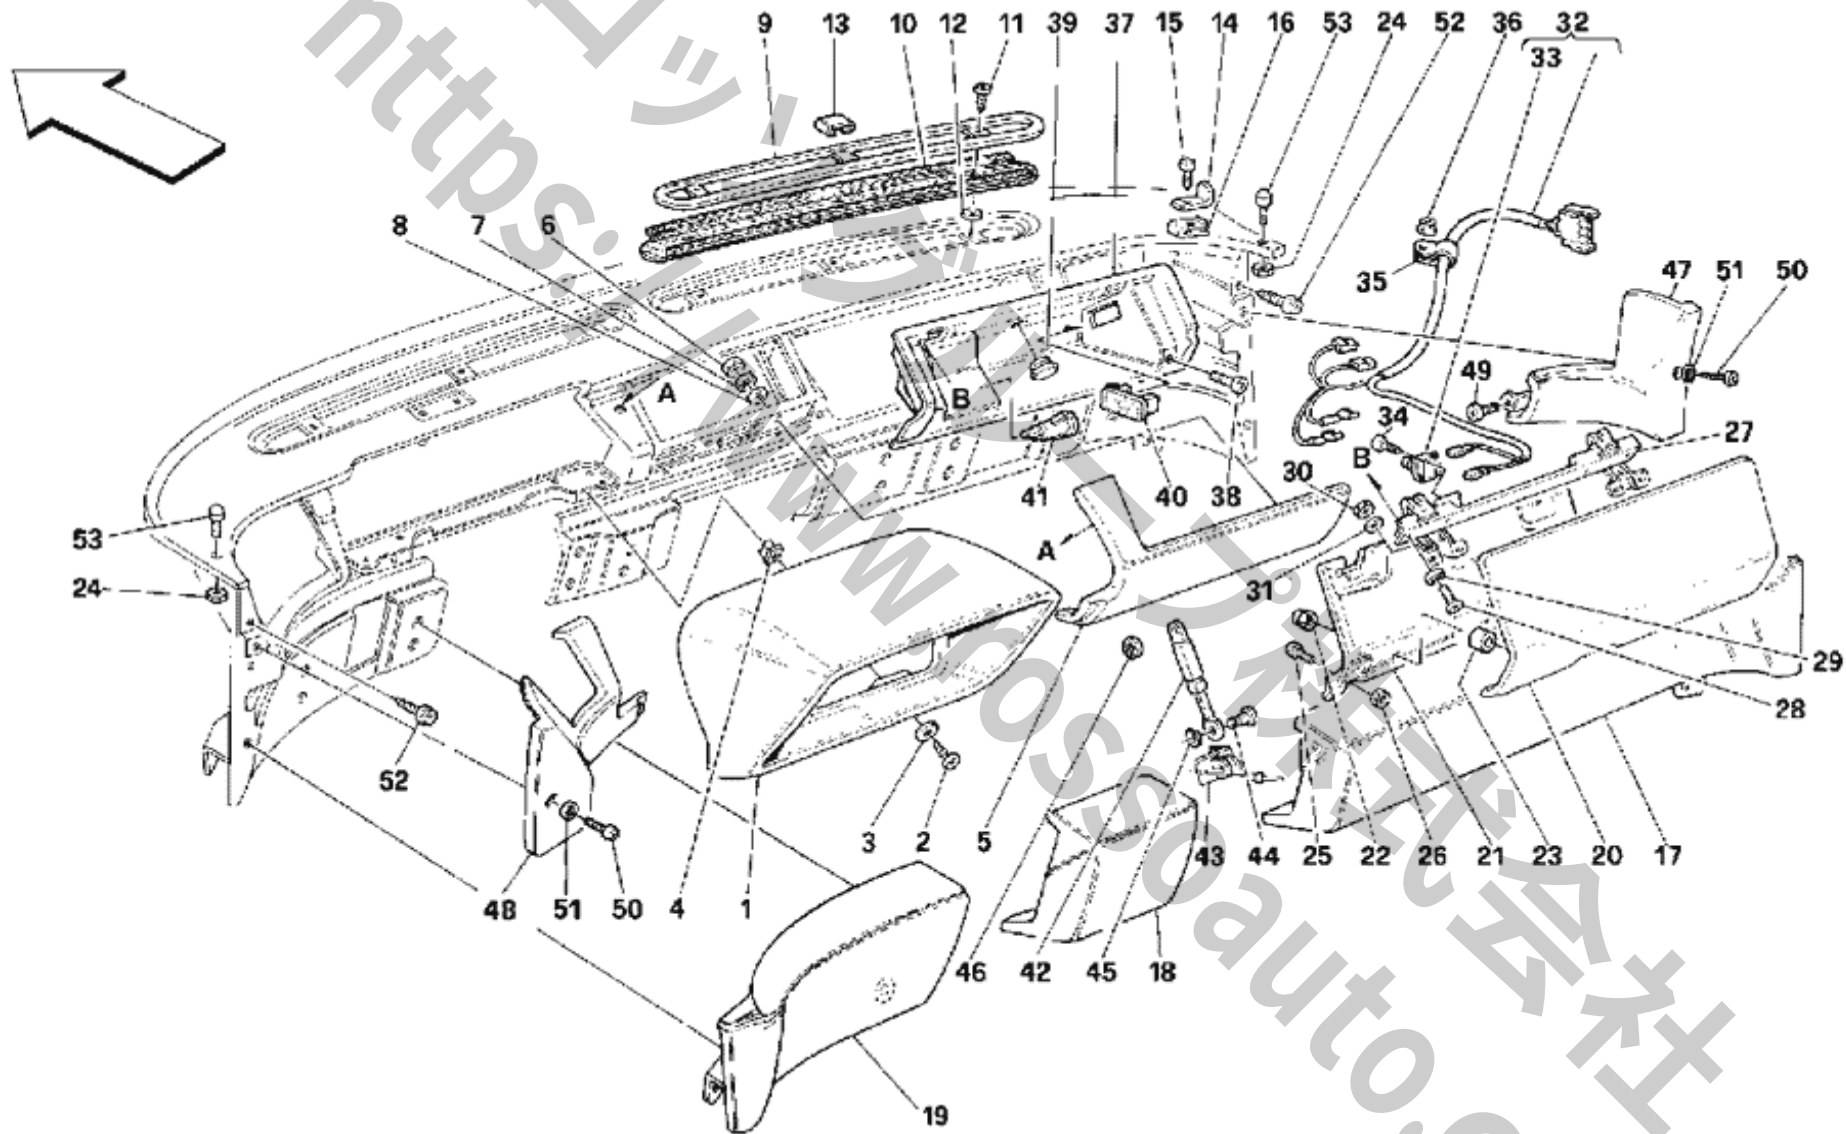


<137 Dashboard - Trim and Accessories -Valid for USA->

No.	Part No.	Name	Qty
Ask	Ask	Ask	Ask

ロッシェングループ株式会社
<https://www.rossoauto.com>


<138 Instruments>

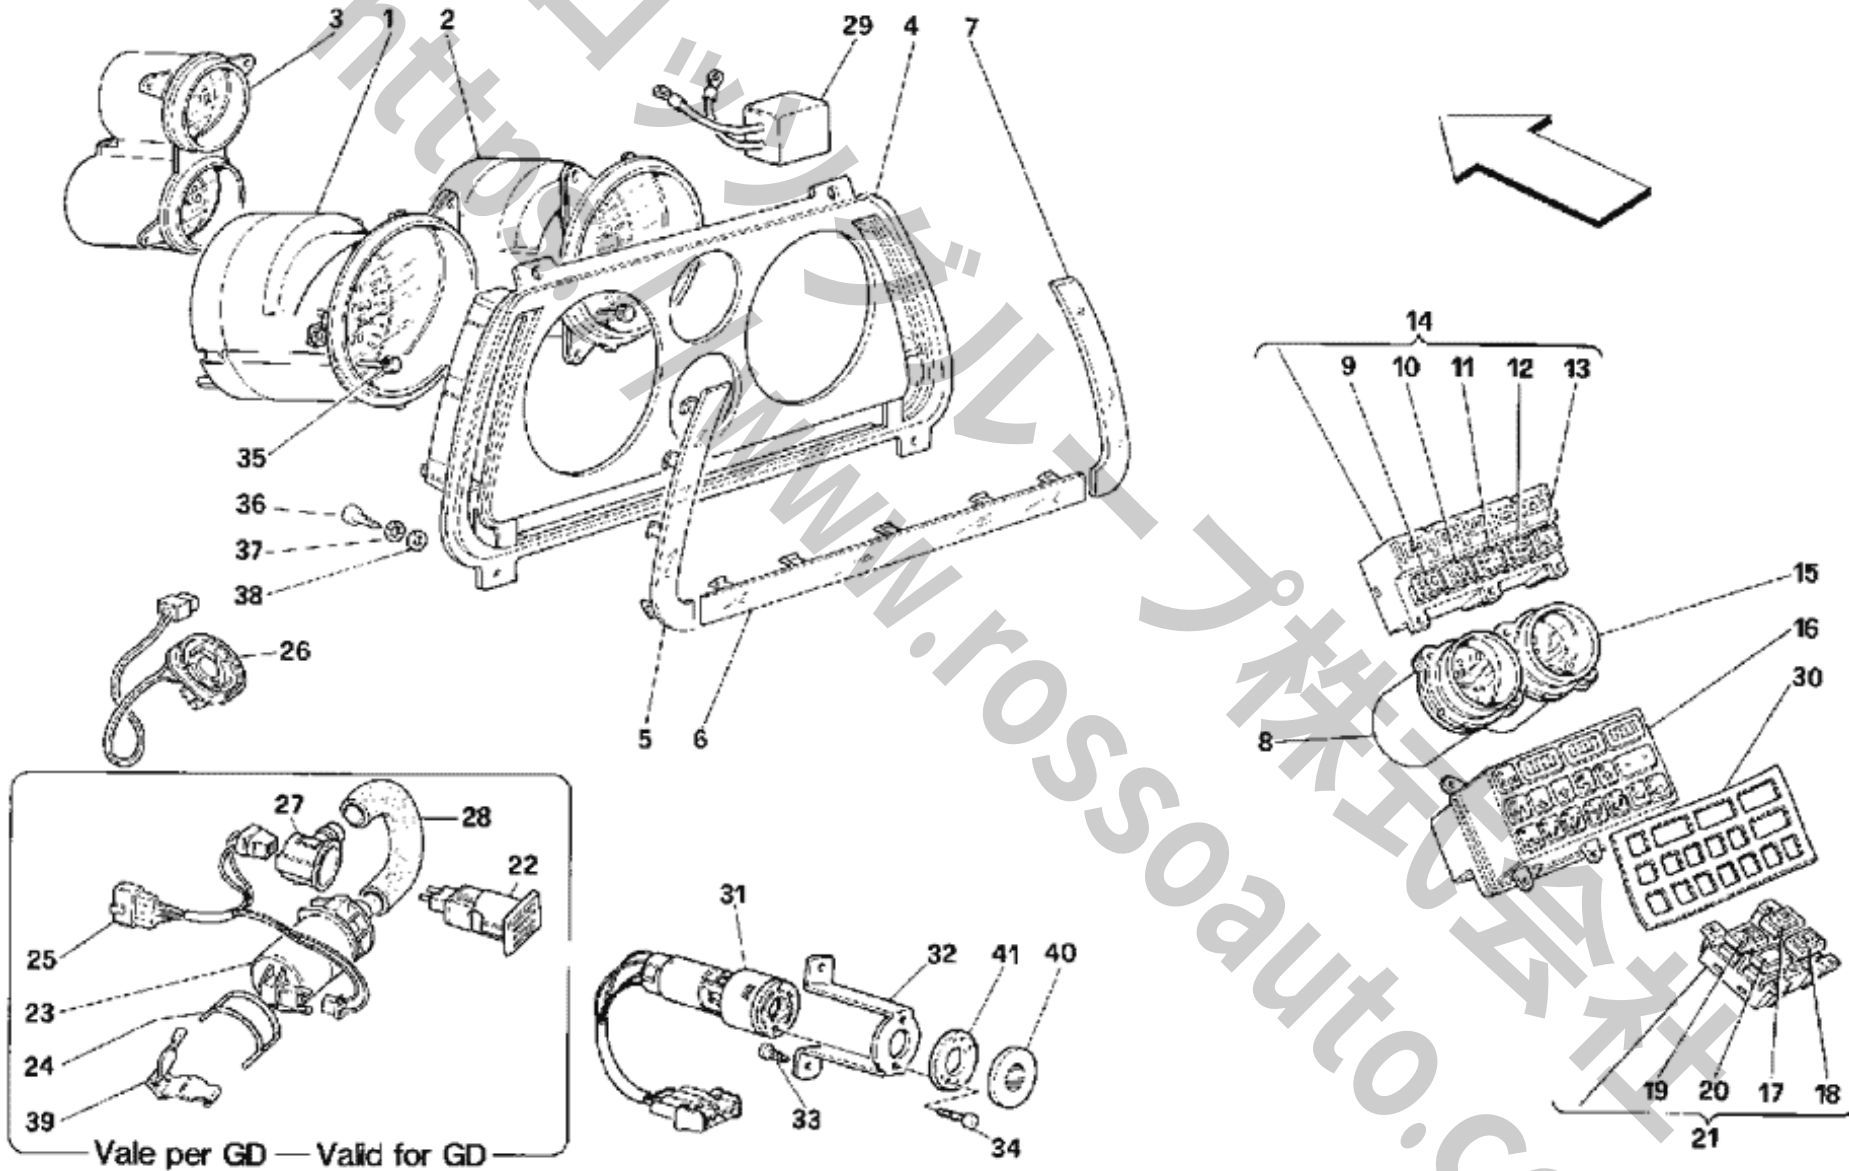

<138 Instruments>

No.	Part No.	Name	Qty
Ask	Ask	Ask	Ask

ロッシングループ株式会社
<https://www.rossoauto.com>


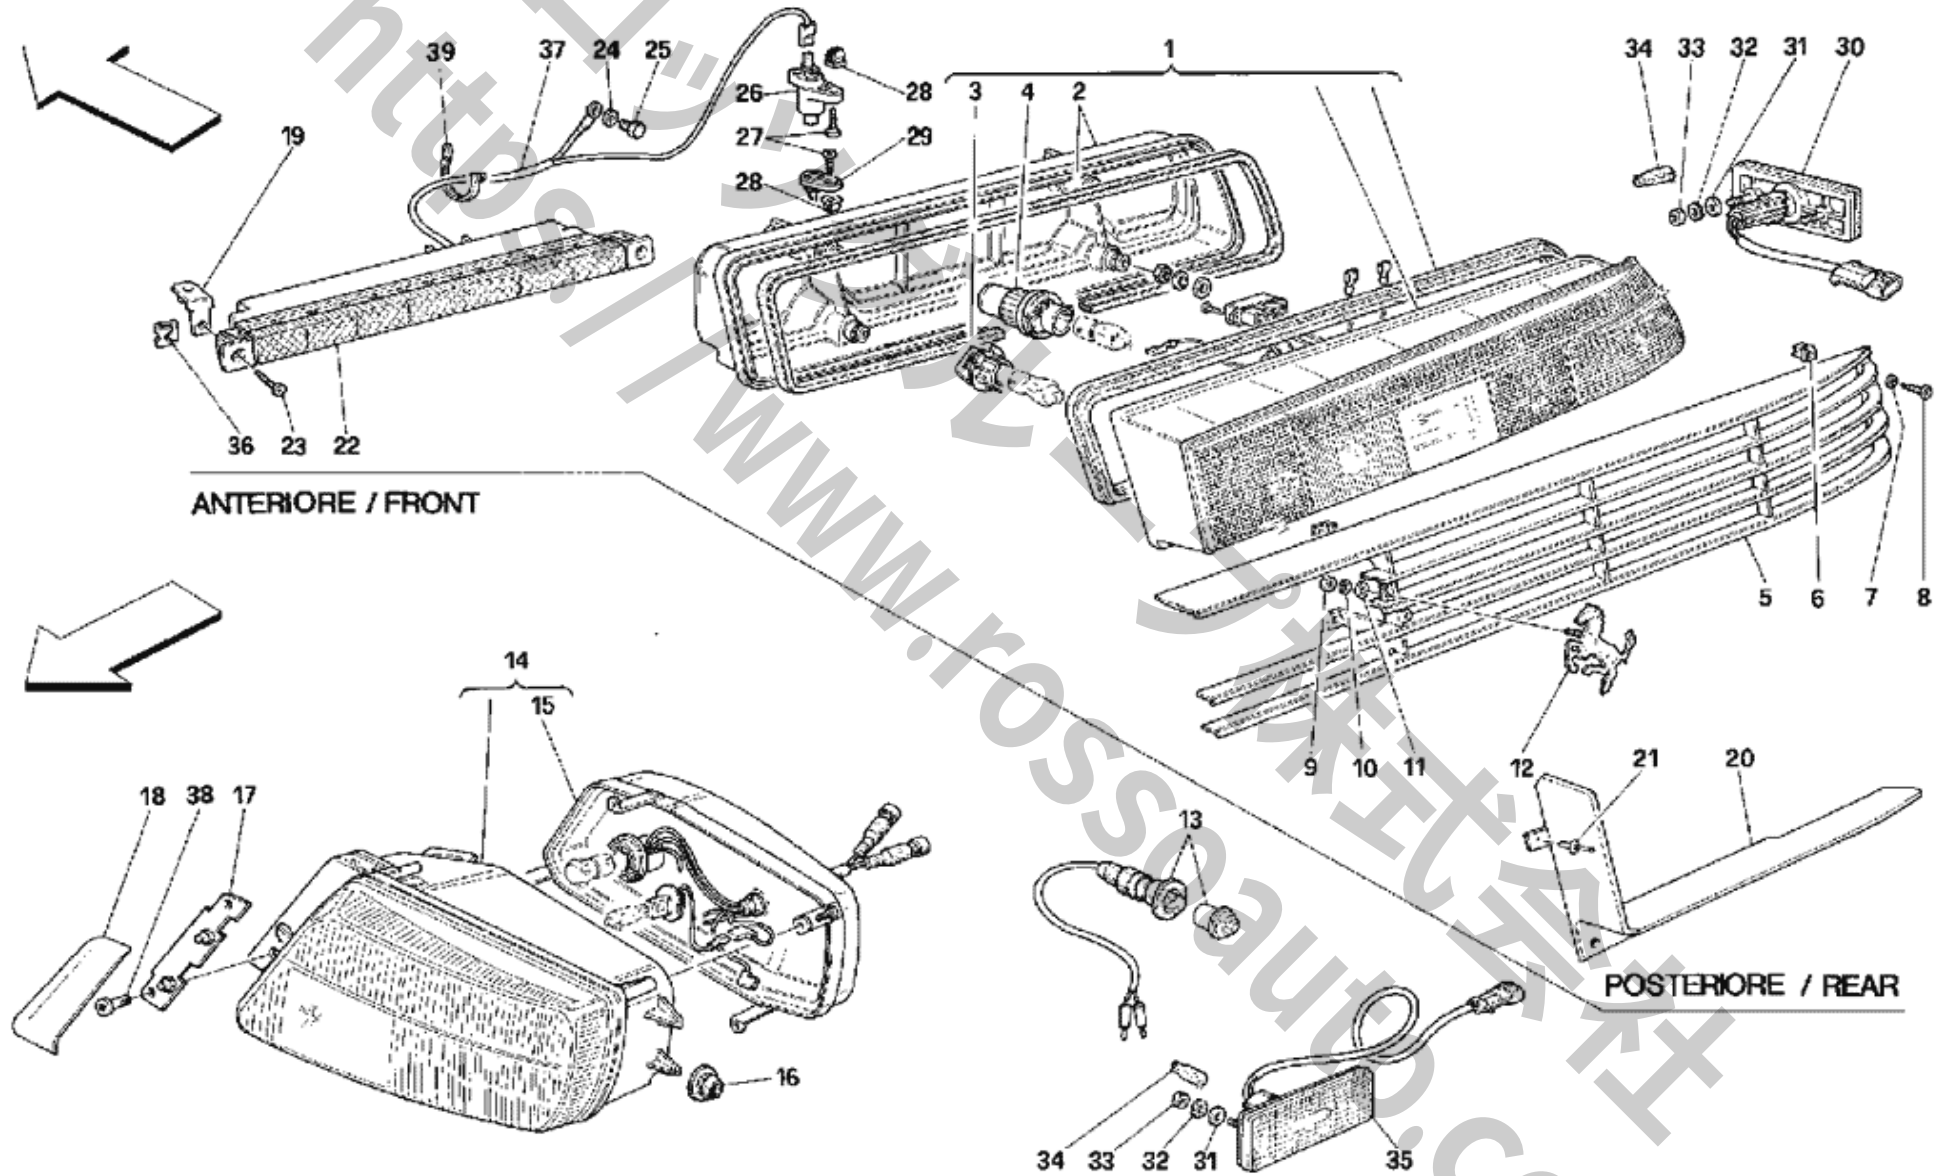
[illegible]

<139 Front and Rear Lights>

No.	Part No.	Name	Qty
Ask	Ask	Ask	Ask

ロッシングループ株式会社
<https://www.rossoauto.com>

<140 Lights Lifting Device and Headlights>

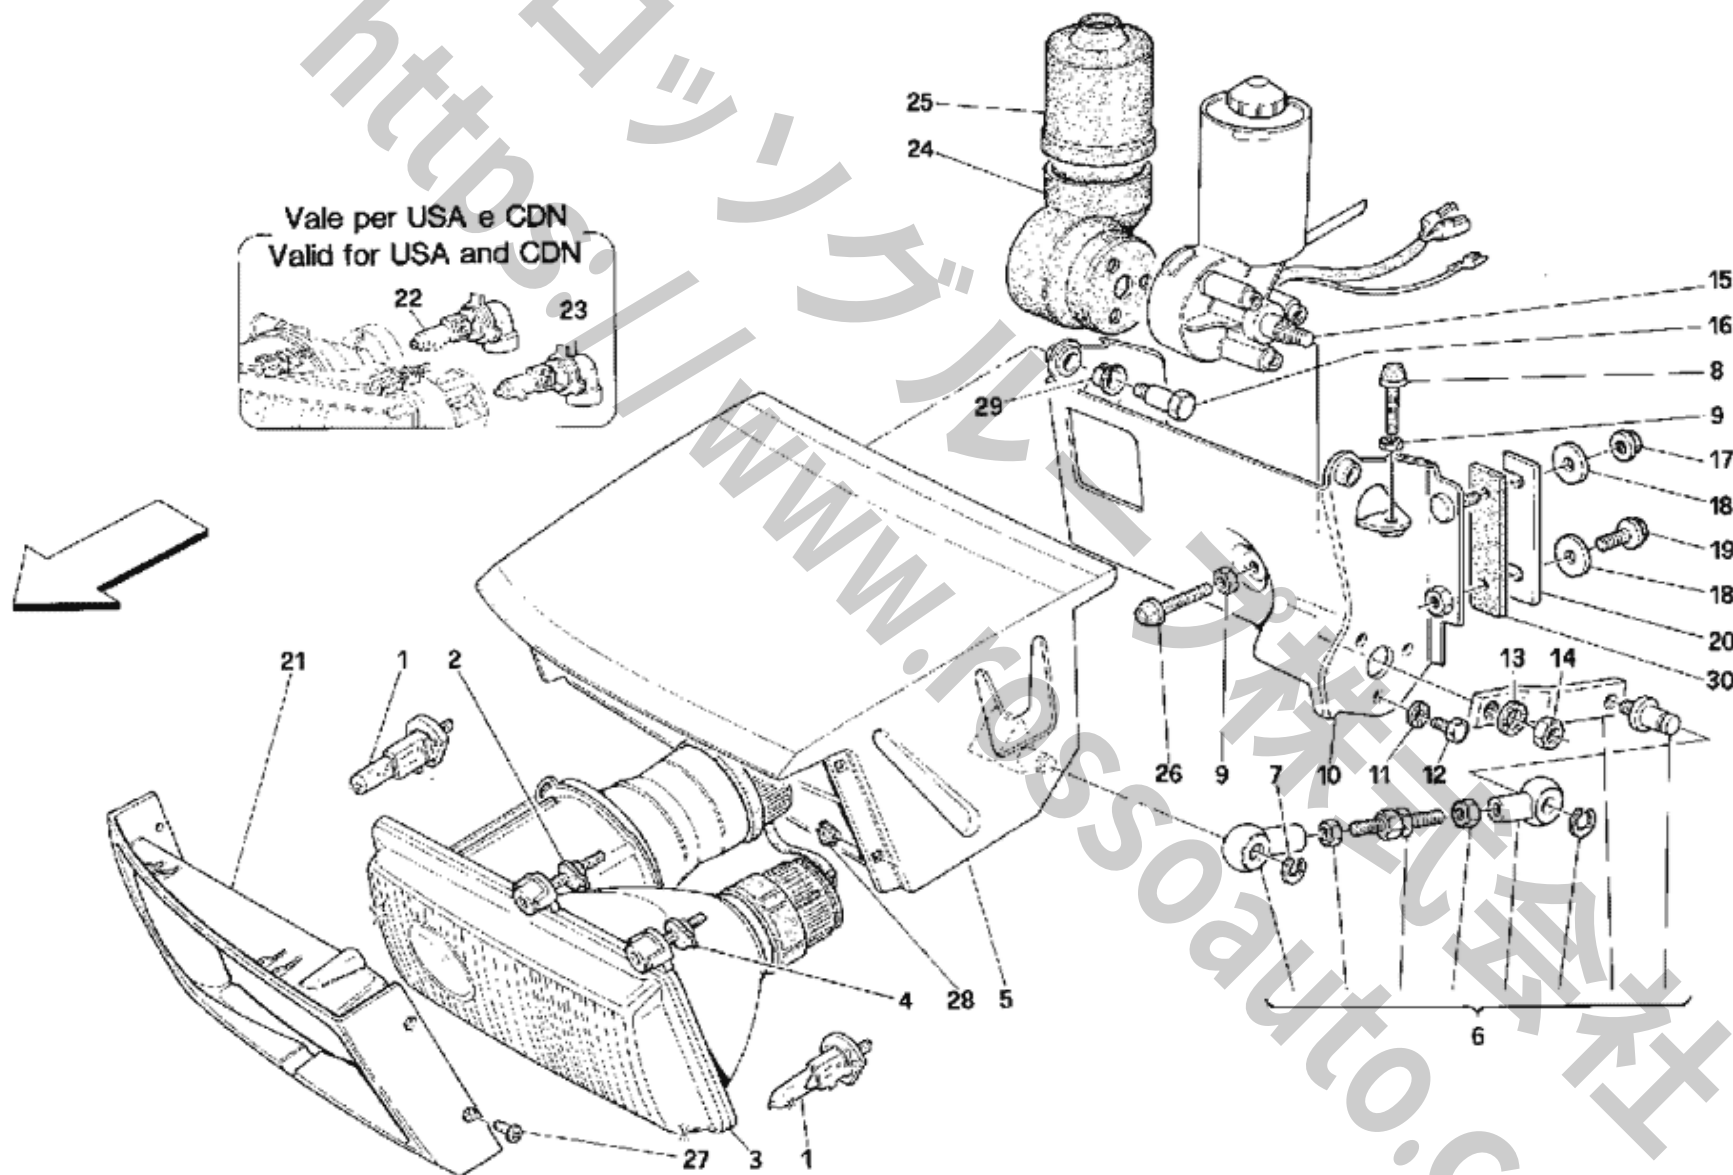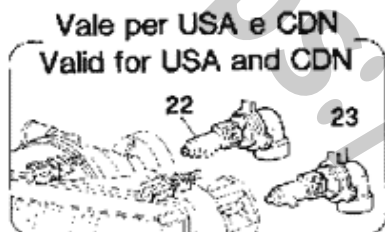


<140 Lights Lifting Device and Headlights>

No.	Part No.	Name	Qty
Ask	Ask	Ask	Ask

ロッシェングループ株式会社
<https://www.rossoauto.com>

<141 Windshield Wiper and Controls>

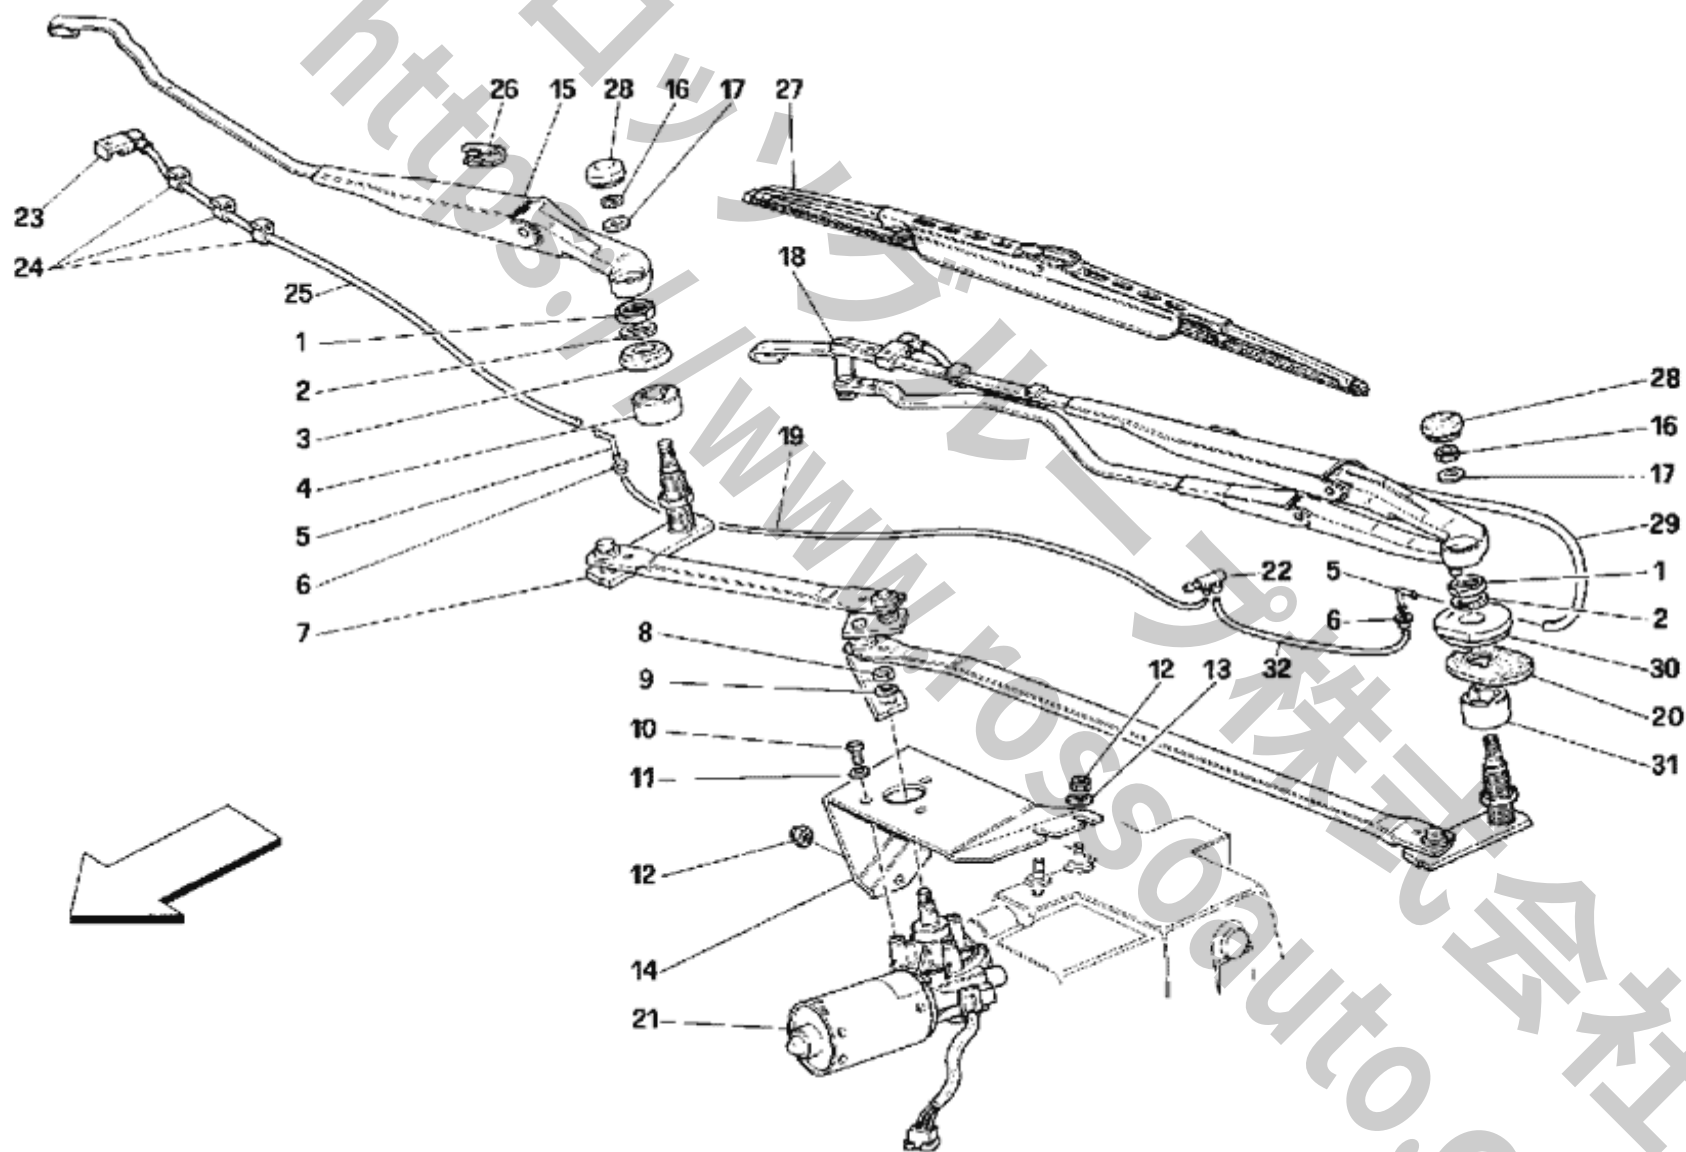

<141 Windshield Wiper and Controls>

No.	Part No.	Name	Qty
Ask	Ask	Ask	Ask

ロッシェングループ株式会社
<https://www.rossoauto.com>

<142 Glass Washer and Horns>

2 1 3 21 9 24 6 5 10 11 12 13 14 15 22 16 23 4 7 8 3 25 20 19 18 17 3




<142 Glass Washer and Horns>

No.	Part No.	Name	Qty
Ask	Ask	Ask	Ask

ロッシングループ株式会社
<https://www.rossoauto.com>

<143 Electrical System -Not for USA and CDN->

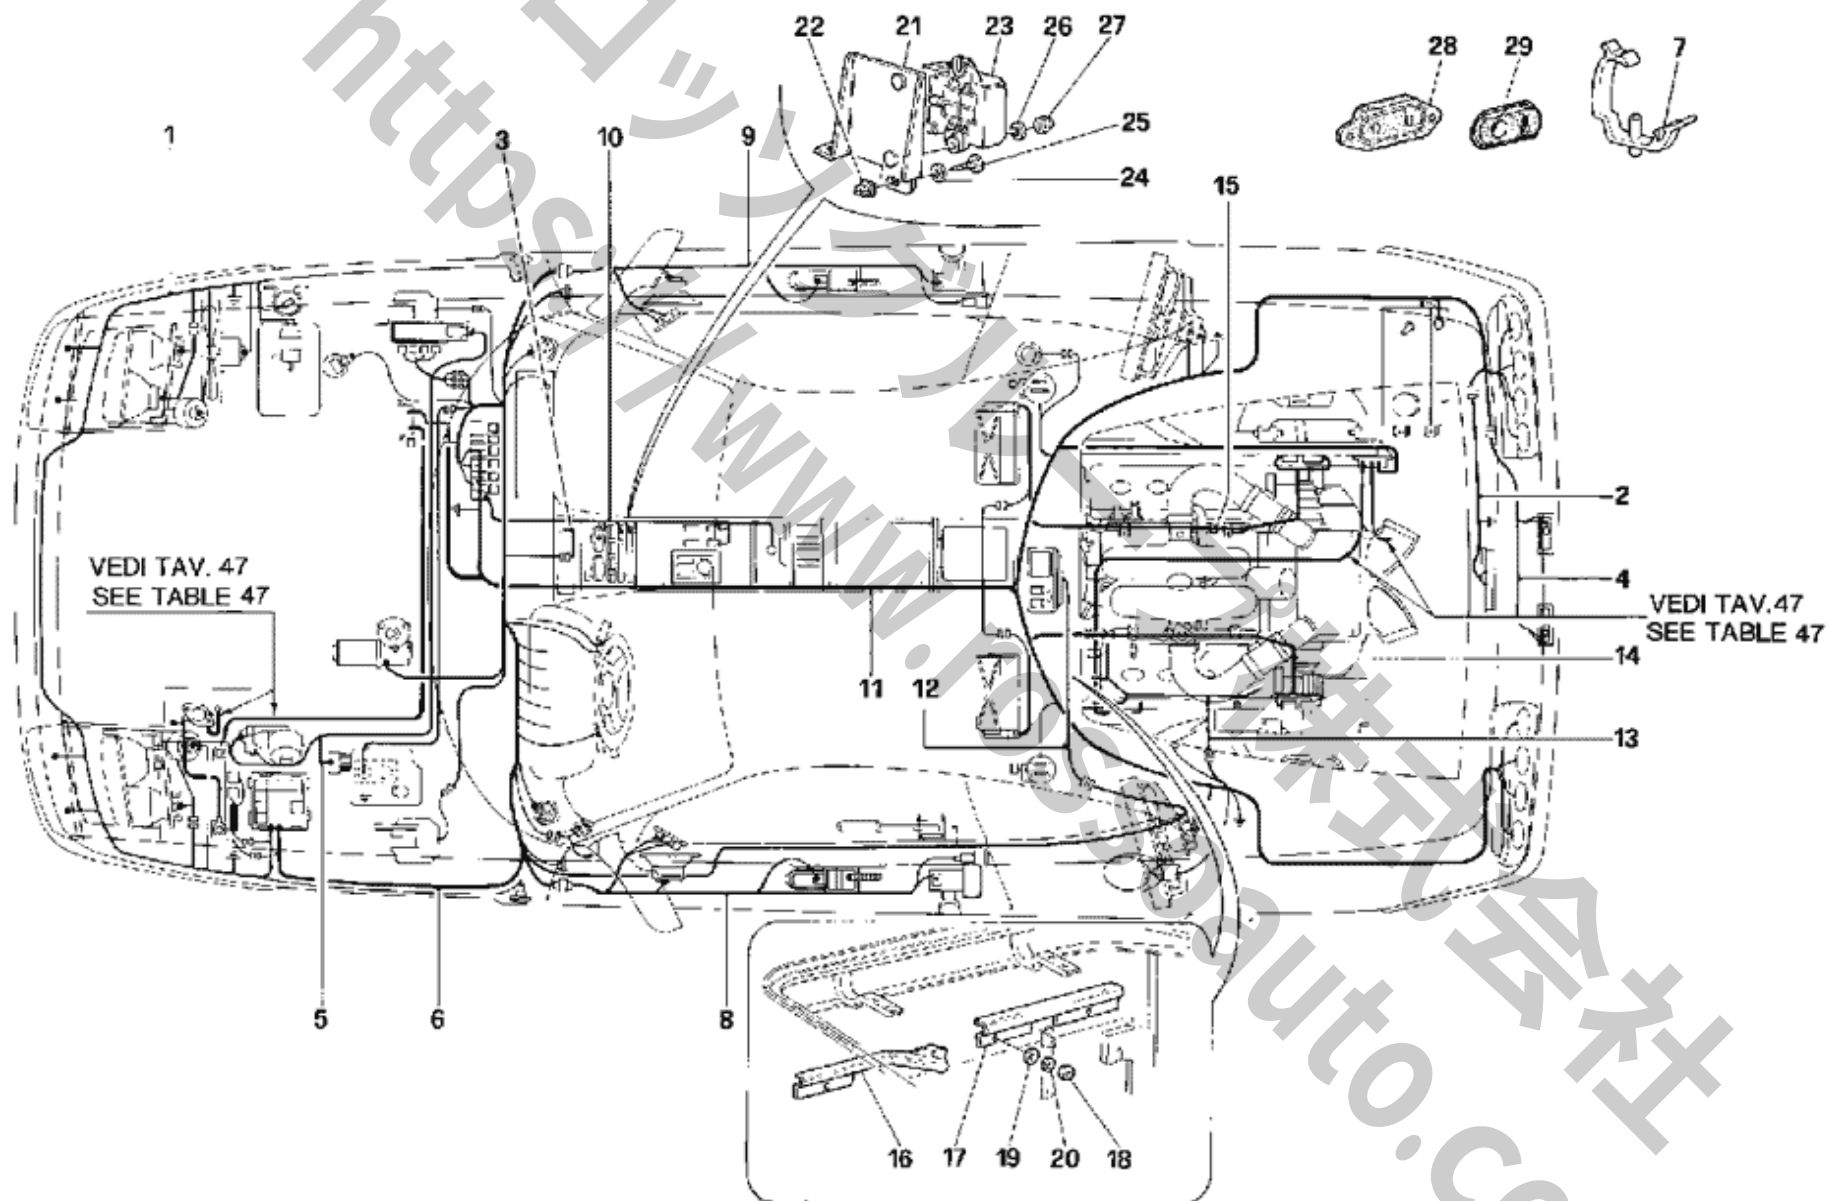


<143 Electrical System -Not for USA and CDN->

No.	Part No.	Name	Qty
Ask	Ask	Ask	Ask

ロッシェングループ株式会社
<https://www.rossoauto.com>

<144 Electrical System -Valid for USA and CDN->

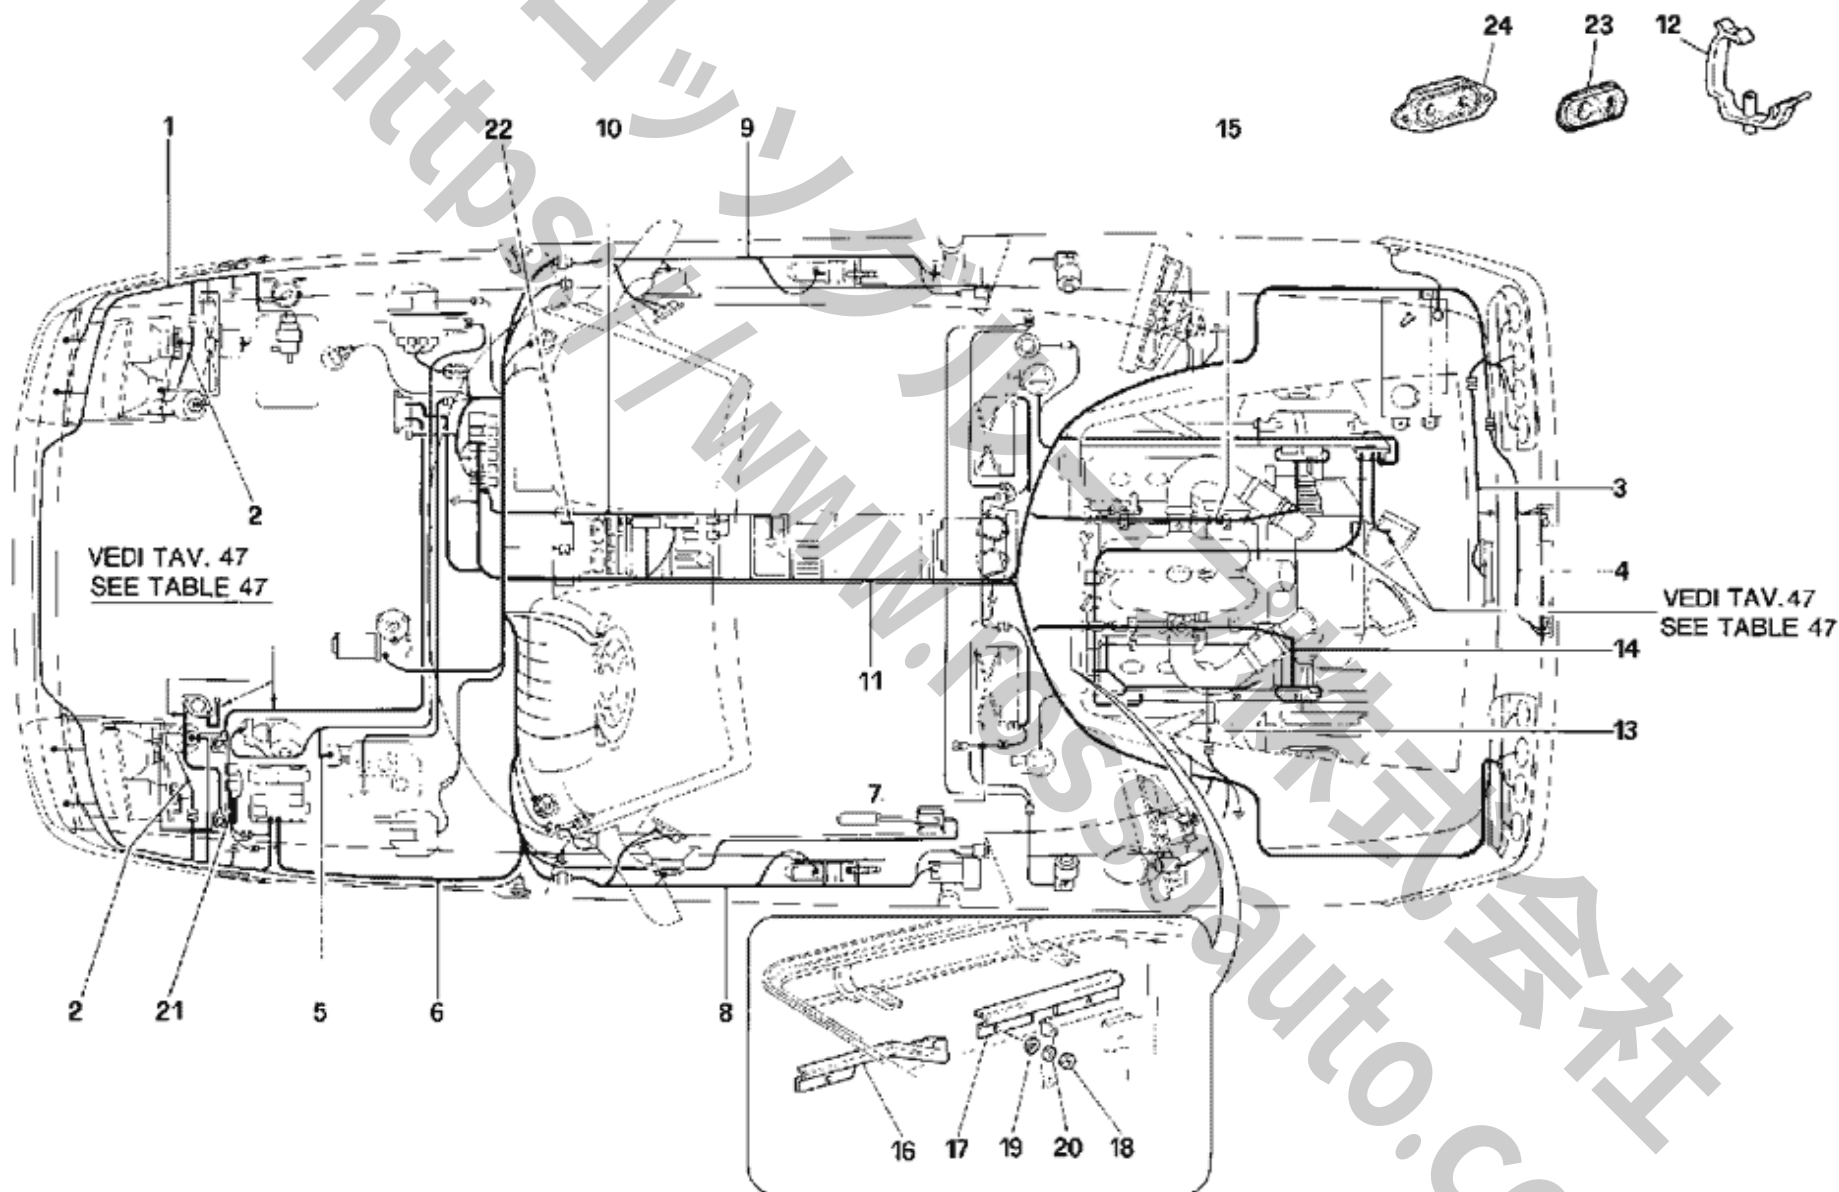


<144 Electrical System -Valid for USA and CDN->

No.	Part No.	Name	Qty
Ask	Ask	Ask	Ask

ロッシェングループ株式会社
<https://www.rossoauto.com>

<145 Electrical Boards>

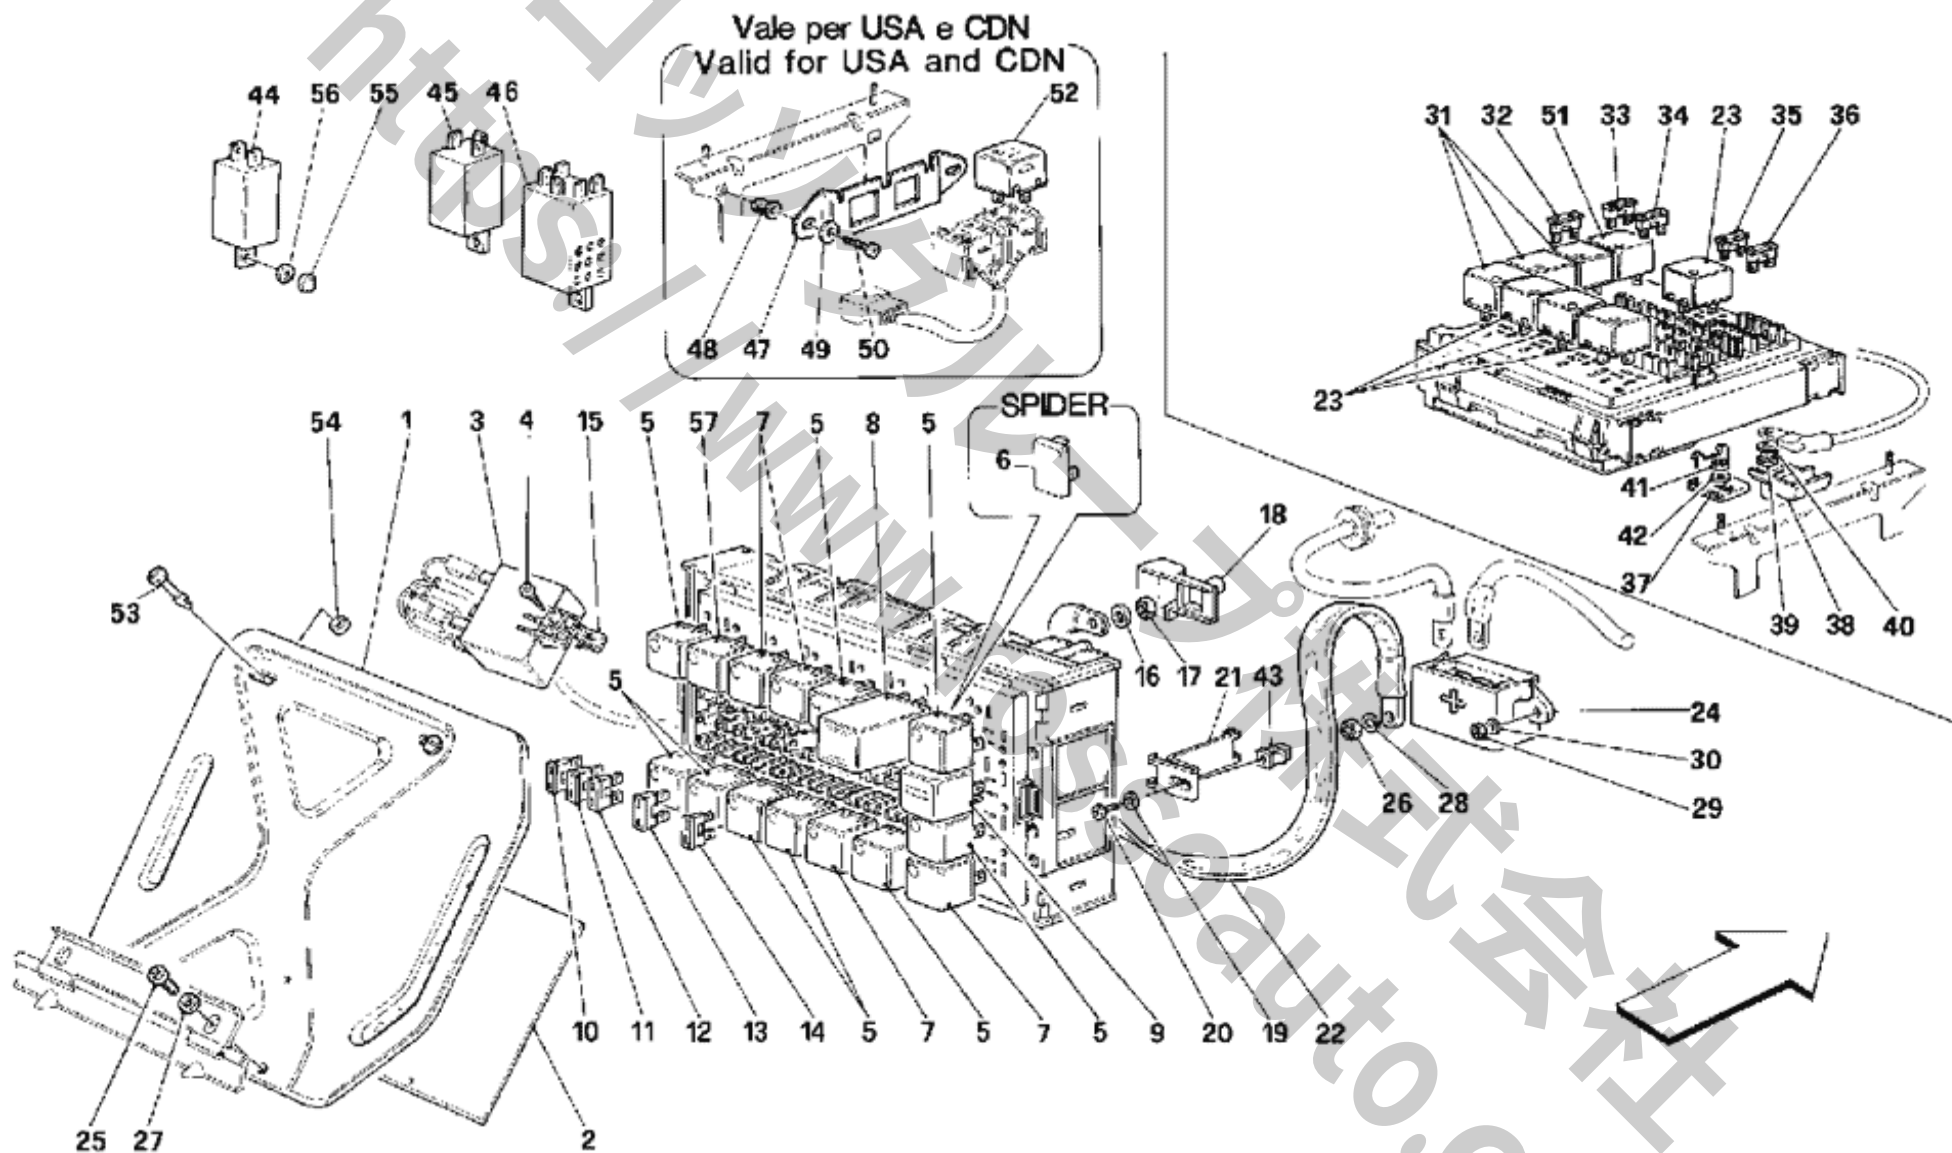


<145 Electrical Boards>

No.	Part No.	Name	Qty
Ask	Ask	Ask	Ask

ロッシングループ株式会社
<https://www.rossoauto.com>

<146 Evaporator Unit and Passengers Compartment Aerating>

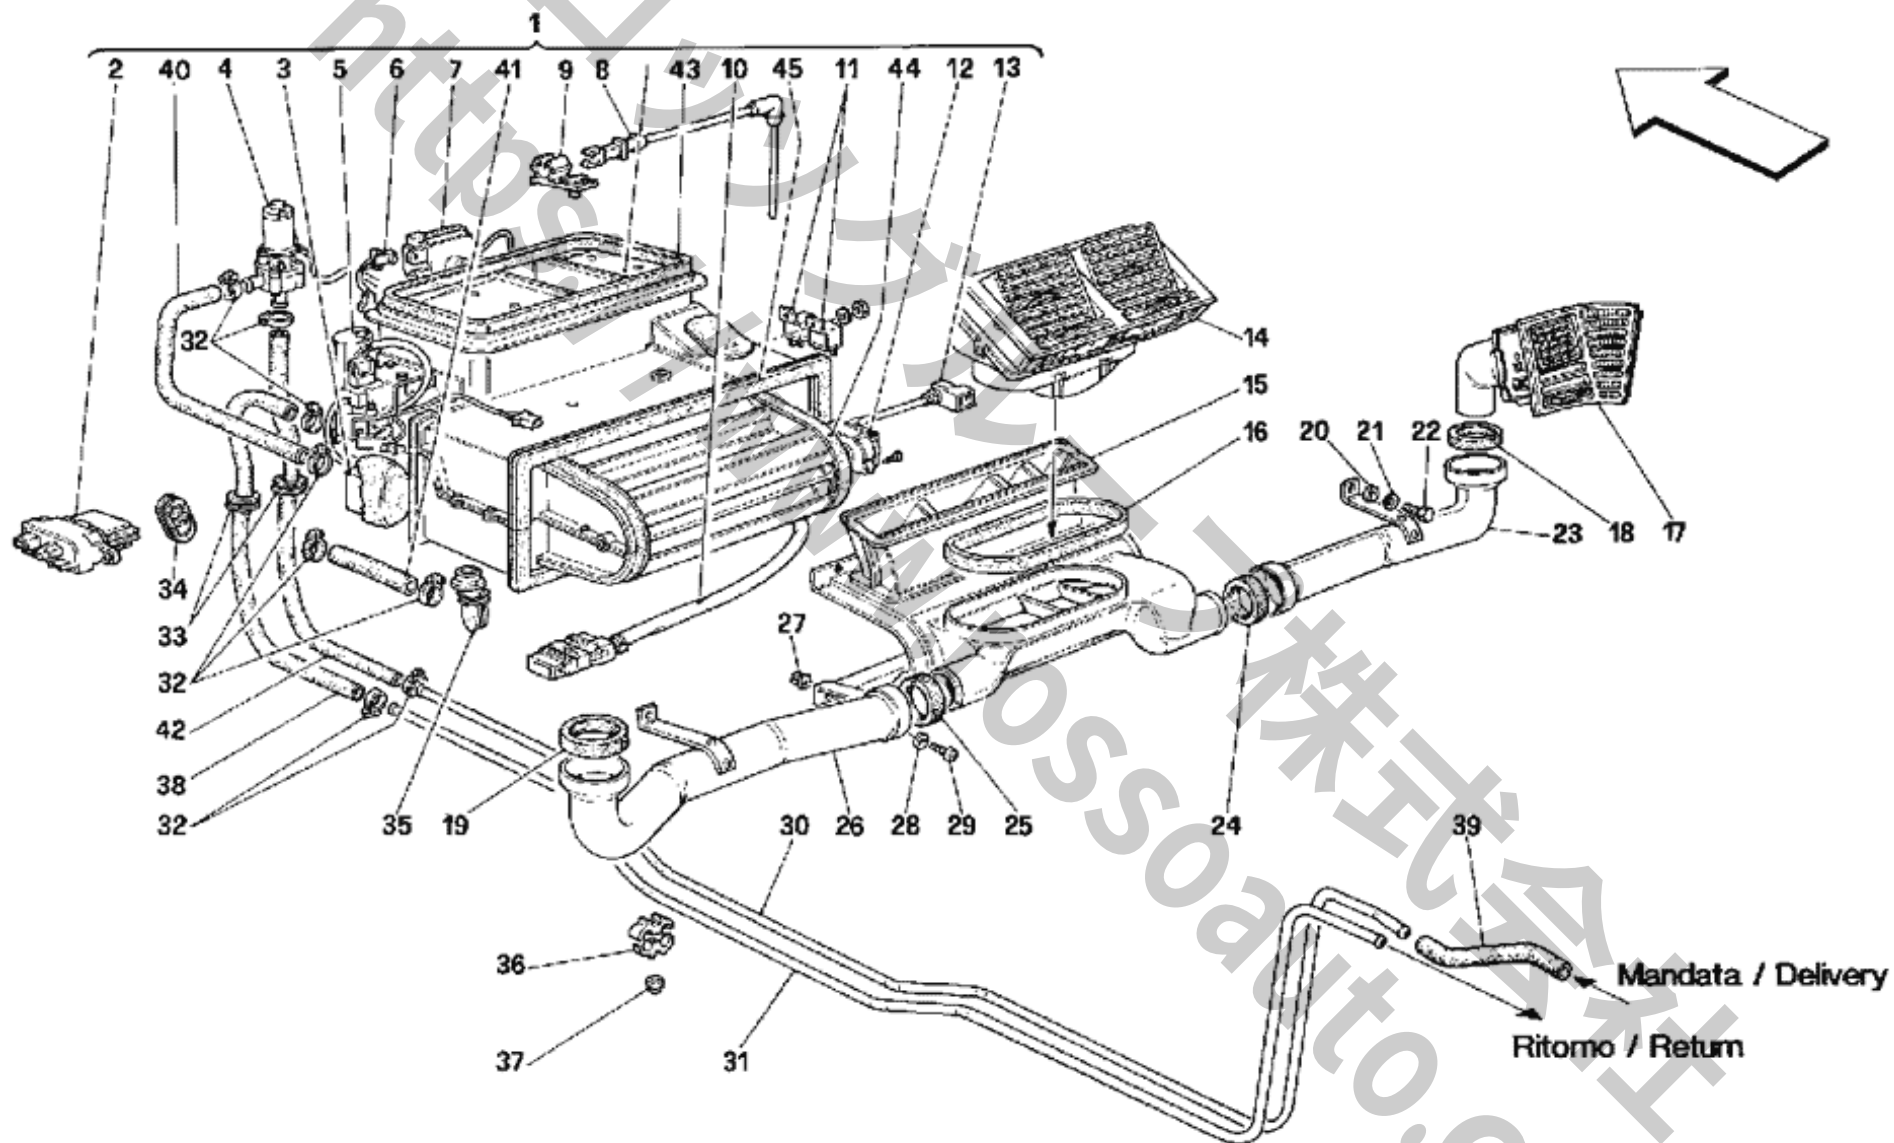


<146 Evaporator Unit and Passengers Compartment Aerating>

No.	Part No.	Name	Qty
Ask	Ask	Ask	Ask

ロッシェングループ株式会社
<https://www.rossoauto.com>

<147 Air Conditioning System>

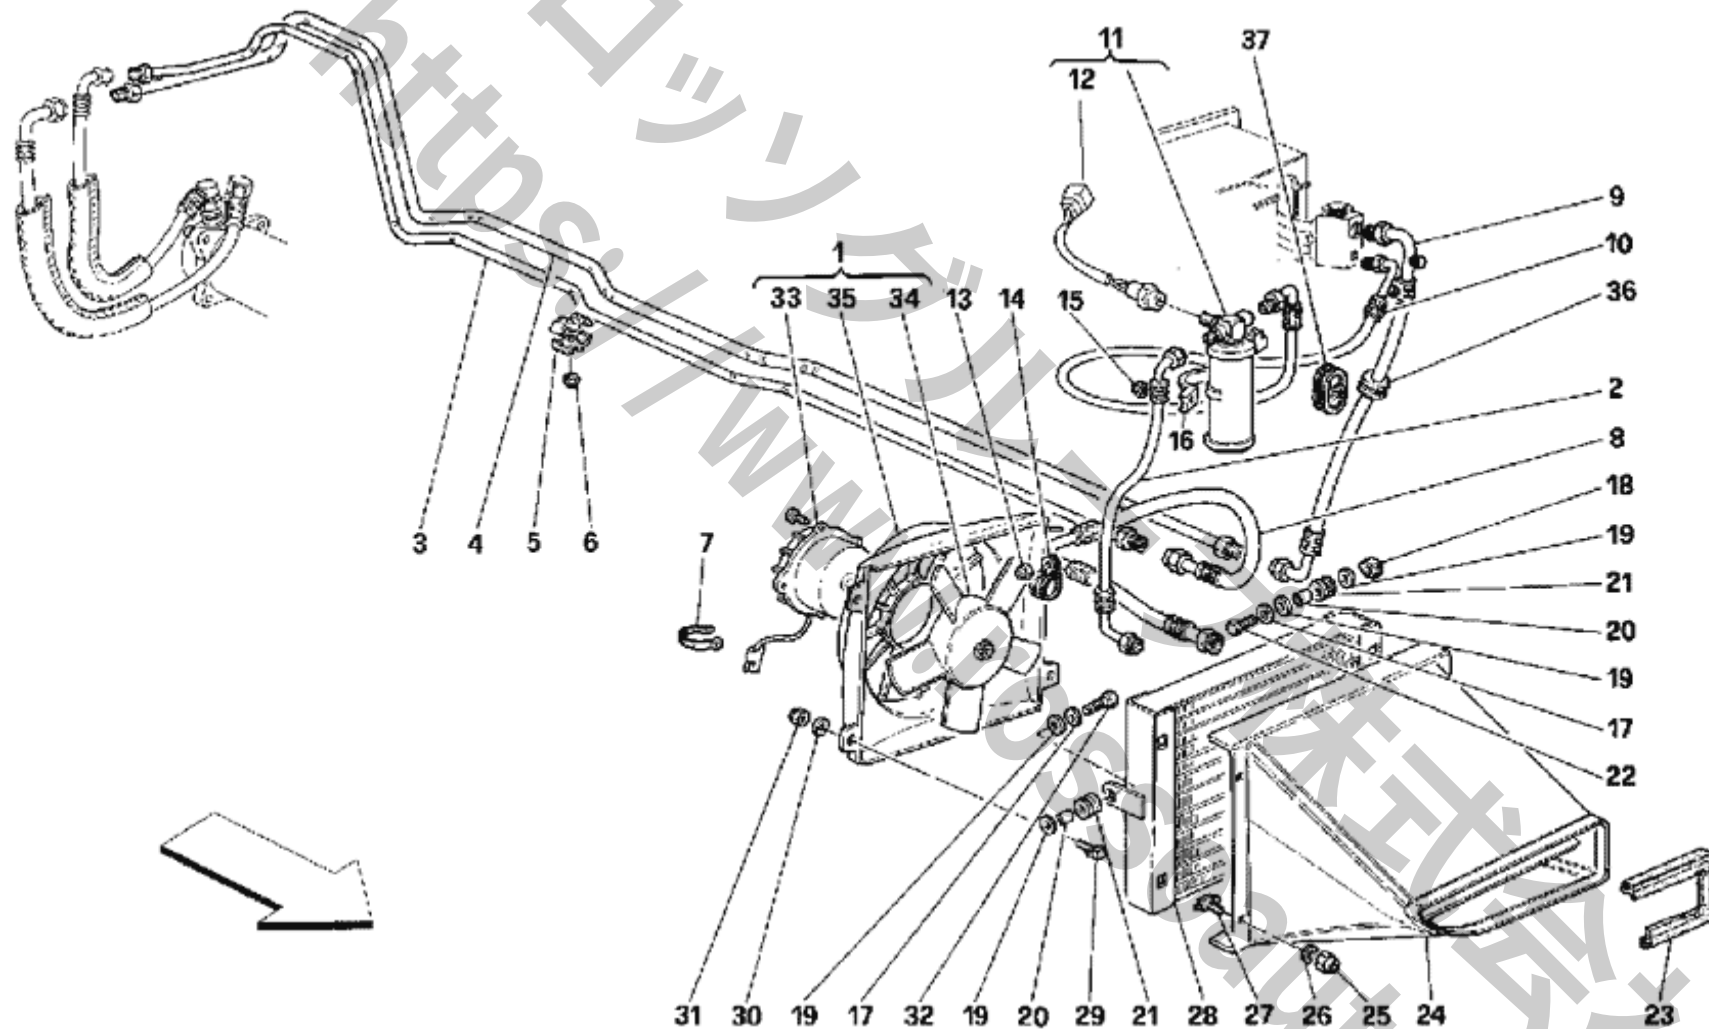

<147 Air Conditioning System>

No.	Part No.	Name	Qty
Ask	Ask	Ask	Ask

ロッシェングループ株式会社
<https://www.rossoauto.com>