

 
<001-Crankcase>
<002-Crankshaft,-Conrods-And>
<003-RH-cylinder-head>
<004-LH-Cylinder-Head>
<005-Timing---Tappets>
<006-Timing---Controls>
<007-Injection-Device---igni>
<008-Pneumatic-actuator-syst>
<009-Fuel-Pumps-and-Pipes>
<010-Fuel-Tanks>
<011-Air-Intake-Manifold>
<012-Air-Intake>
<013-Air-Intake-Manifold-Cov>
<014-Electronic-Accelerator->
<015-Racing-Exhaust-System>
<016-Lubrication-System---Ta>
<017-Water_Oil-Pump>
<018-nourice>
<019-Cooling-System>
<020-Cooling-System-Radiator>
<021-Clutch-And-Controls>
<022-pedals>
<023-Clutch-and-Gearbox-Hydr>
<024-power-unit-and-tank>
<025-Gearbox---Covers>

<026-Main-Shaft-Gears>
<027-Lay-Shaft-Gears>
<028-Inside-Gearbox-Controls>
<029-Differential-&-Axle-Sha>
<030-brakes-and-clutch-hydra>
<031-brake-booster-system>
<032-Brake-System>
<033-calipers-for-front-and->
<034-Hydraulic-Steering-Box->
<035-Steering-Column>
<036-Hydraulic-Steering-Pump>
<037-Front-Suspension---shoc>
<038-Front-Suspension---wish>
<039-Rear-Suspension---shock>
<040-Rear-Suspension---Wishb>
<041-Wheels>
<042-Battery>
<043-Battery-Cut-out>
<044-Current-Generator---Sta>

<100-Body---Outer-Trims>
<101-Frame---Front-Elements->
<102-Frame---Front-Elements->
<103-Frame---Central-Element>
<104-Frame---Rear-Elements-a>
<105 Frame - Central Elements Sub-Groups>
<106 Roof - Structure>
<107 Roll Bar>
<108 Flat Floor Pan and Wheelhouse>
<109 passengers compartment foot-board>
<110 Front Hood & Opening Device>
<111 Engine Bonnet>
<112 Doors - Framework and Coverings>
<113 doors - window and rearview mirror>
<114 Front Bumper>
<115 Rear Bumper>
<116 Glasses And Gaskets>
<117 Racing Seat>
<118 tunnel - framework and accessories>
<119 dashboard>
<120 instruments>
<121 Front And Rear Lights>
<122 Shields - finishing>
<123 windshield and glass washer>
<124 Electrical System>

<125 Front Passenger Compartment Control Stations>
<126 Front Compartment Control Stations>
<127 rear passengers compartment control stations>
<128 Ventilation>
<129 lifting system>
<130 Fire-Proof System>
<131 data acquirement>

<001-Crankcase>

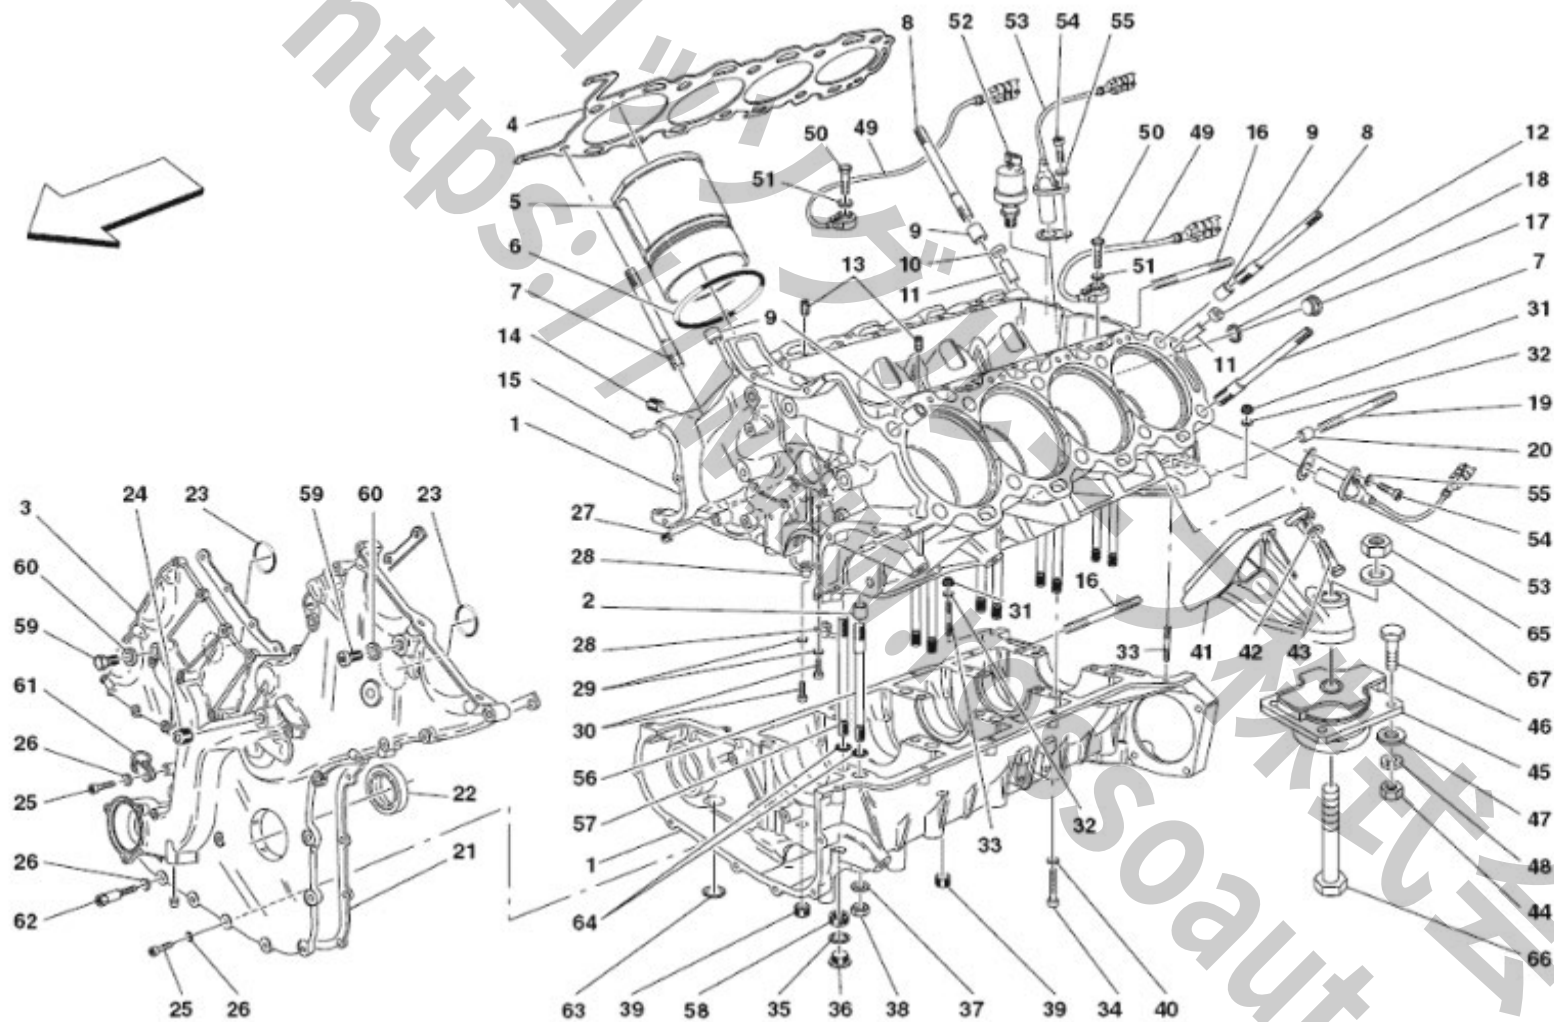

<001-Crankcase>


No.	Part No.	Name	Qty
0	229164	COMPLETE ENGINE	1
1	215926	COMPLETE CRANKCASE	1
2	176421	CENTERING DOWEL	10
3	221367	FRONT COVER	1
4	184967	L.H. HEAD GASKET	1
4	184966	R.H. HEAD GASKET	1
5	190770	CYLINDER LINER	8
6	186251	GASKET	24
7	217967	STUD	10
8	217968	STUD	10
9	185360	CENTERING DOWEL	4
10	201850	DOWEL	1
11	200458	NONRETURN VALVE	2
12	201849	DOWEL	1
13	177727	CENTERING DOWEL	2
14	164400	THREADED PLUG	1
15	175611	CENTERING DOWEL	2
16	13546734	STUD	4
17	193885	THREADED PLUG	1
18	10263460	GASKET	1
19	13546934	STUD	3
20	100052	DOWEL	2
21	245464	FRONT COVER GASKET	1
21	323979	FRONT COVER GASKET	1
22	188717	GASKET	1
23	183010	O.R. GASKET	2
24	14324940	THREADED PLUG	1
25	14303924	SCREW	3
25	14306024	SCREW	3
25	14305624	SCREW	1
25	14305924	SCREW	2
25	14305524	SCREW	3
25	14432224	SCREW	1
25	14433124	SCREW	15
26	11197774	WASHER	28
27	13525770	THREADED INSERT	5

28	175657 PISTONS COOLING NOZZLE	8
29	11181474 WASHER	8
30	14302921 SCREW	8
31	132877 NUT	2
32	12604274 WASHER	2
33	13541624 STUD	2
34	14305424 SCREW	10
34	14305324 SCREW	1
35	10261860 GASKET	1
36	104280 PLUG	1
37	178348 WASHER	20
38	133988 NUT	20
39	14325140 THREADED PLUG	4
40	11197774 WASHER	11
41	207221 LH ENGINE FIXING SUPPORT	1
41	207220 RH ENGINE FIXING SUPPORT	1
42	11190574 WASHER	8
43	11306934 SCREW	8
44	133988 NUT	8
45	190255 ENGINE PAD	2
46	15970734 SCREW	8
47	12646824 WASHER	8
48	127497 WASHER	8
49	219870 L.H. SENSOR FOR FIRING	1
49	219871 L.H. SENSOR FOR FIRING	1
49	219869 R.H. SENSOR FOR FIRING	1
49	219868 R.H. SENSOR FOR FIRING	1
50	16043834 SCREW	4
51	11198074 WASHER	4
52	201207 OIL PRESSURE TRANSMITTER	1
53	219873 L.H. SIDE ANGULAR SPEED SENSOR	1
53	219872 R.H. SIDE ANGULAR SPEED SENSOR	1
54	14305724 SCREW	2
55	11197774 WASHER	2
56	194756 STUD	10
57	215652 STUD	10
58	112254 THREADED INSERT	1
59	187718 BLEEDER PLUG	2
60	10284460 GASKET	2

61	10441590 BRACKET	1
62	206672 STUD	2
63	10158801 PLUG	1
64	134704 O.R. GASKET	20
65	176573 NUT	20
66	11369634 SCREW	2
67	12601774 WASHER	2

ロッシェングループ株式会社
<https://www.rossoauto.com>

 
<002-Crankshaft,-Conrods-And>

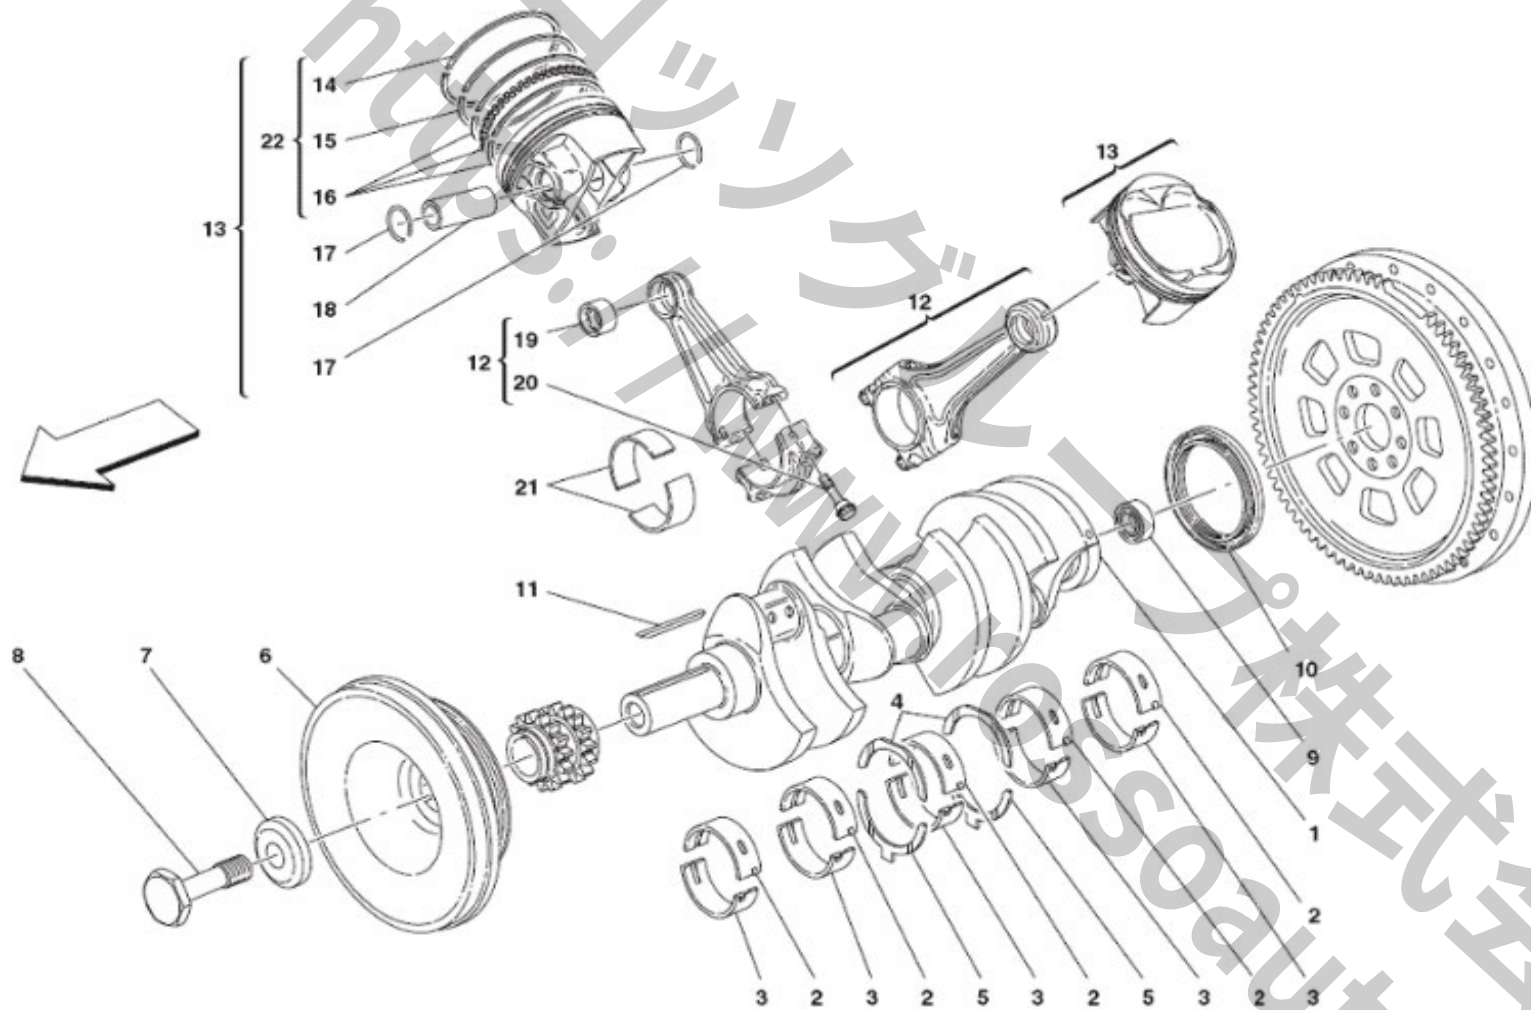

<002-Crankshaft,-Conrods-And>

No.	Part No.	Name	Qty
1	196460	CRANKSHAFT	1
2	195307	UPPER HALF	5
2	198910	UPPER HALF	5
2	195308	UPPER HALF	5
3	200194	LOWER HALF BEARING BLUE	5
3	200196	LOWER HALF BEARING GREEN - STANDARD	5
3	200195	LOWER HALF BEARING YELLOW	5
4	196648	UPPER SHIM STANDARD	2
5	196649	LOWER SHIM STANDARD	2
6	212322	TORSION DAMPER	1
7	192106	WASHER	1
8	196216	SCREW FOR DAMPER FIXING	1
9	103877	BEARING	1
10	200323	SEAL RING	1
11	186201	KEY	1
12	215529	COMPLETE CONNECTING ROD	8
13	210361	LH PISTON WITH RINGS	4
13	210360	RH PISTON WITH RINGS	4
14	175612	SEAL RING 1ST GROOVE	8
15	187201	SEAL RING	8
16	175614	OIL SCRAPING RING	8
17	178890	STOP RING	1
18	175367	PIN	8
19	208094	BUSHING	8
20	215530	CONNECTING ROD TIGHTENING SCREW	16
21	204290	CONNECTING ROD HALFBEARING RED - STANDARD	16
21	204291	CONNECTING ROD HALFBEARING BLUE	16
21	204292	CONNECTING ROD HALFBEARING BLACK	16
22	198025	PISTONS RINGS SET	12
 
<003-RH-cylinder-head>

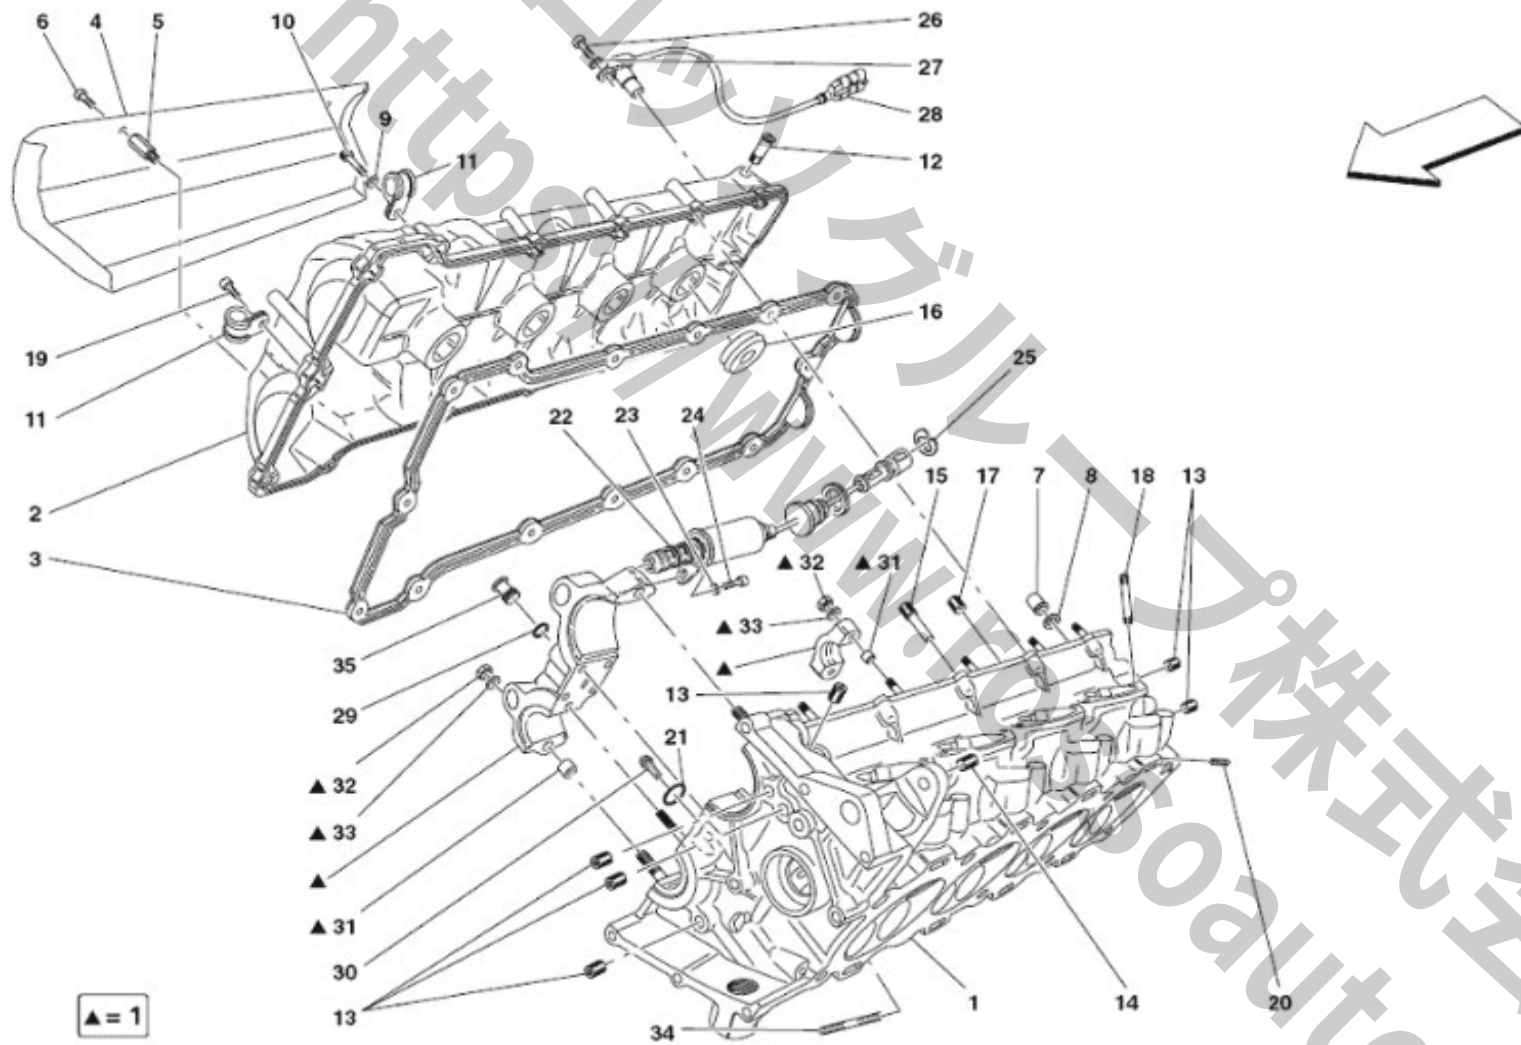

<003-RH-cylinder-head>


No.	Part No.	Name	Qty
1	221076	COMPLETE R.H. HEAD	1
2	197575	R.H. CYLINDERS HEAD COVER	1
3	198927	R.H. HEAD COVER GASKET	1
4	220405	ANTI-HEAT SHIELD	1
5	220417	STUD	2
6	14305324	SCREW	1
7	183524	NUT	10
8	151117	WASHER	10
9	11197774	WASHER	14
10	223838	HOLED SCREW	1
10	156834	SCREW	13
11	10441490	HOSE FASTENING BRACKET	2
12	124342	NIPPLE FOR POWER BRAKE DEPRESSION	1
13	14326001	THREADED PLUG	6
14	140135	THREADED INSERT	1
15	183447	THREADED PLUG	4
16	187706	GASKET	4
17	164400	THREADED PLUG	1
18	13541334	STUD	8
19	14305121	SCREW	1
20	199760	THREADED PLUG	4
21	134233	GASKET	1
22	212423	VARIATOR CONTROL SOLENOID VALVE	1
22	250646	VARIATOR CONTROL SOLENOID VALVE	1
23	11197774	WASHER	1
24	14433124	SCREW	1
25	11087374	FLEXIBLE RING	1
26	14305224	SCREW	1
27	11197774	WASHER	1
28	219865	R.H. EXHAUST SHAFT PHASE SENSOR	1
28	219864	R.H. INDUCTION SHAFT PHASE SENSOR	1
29	220245	GASKET	1
30	241406	OIL FILTER	1
31	102725	CENTERING DOWEL	22
32	14058411	NUT	22
33	11197774	WASHER	22

34 211641 STUD
35 220239 PLUG

8
1

ロッシングループ株式会社
<https://www.rossoauto.com>
 
<004-LH-Cylinder-Head>

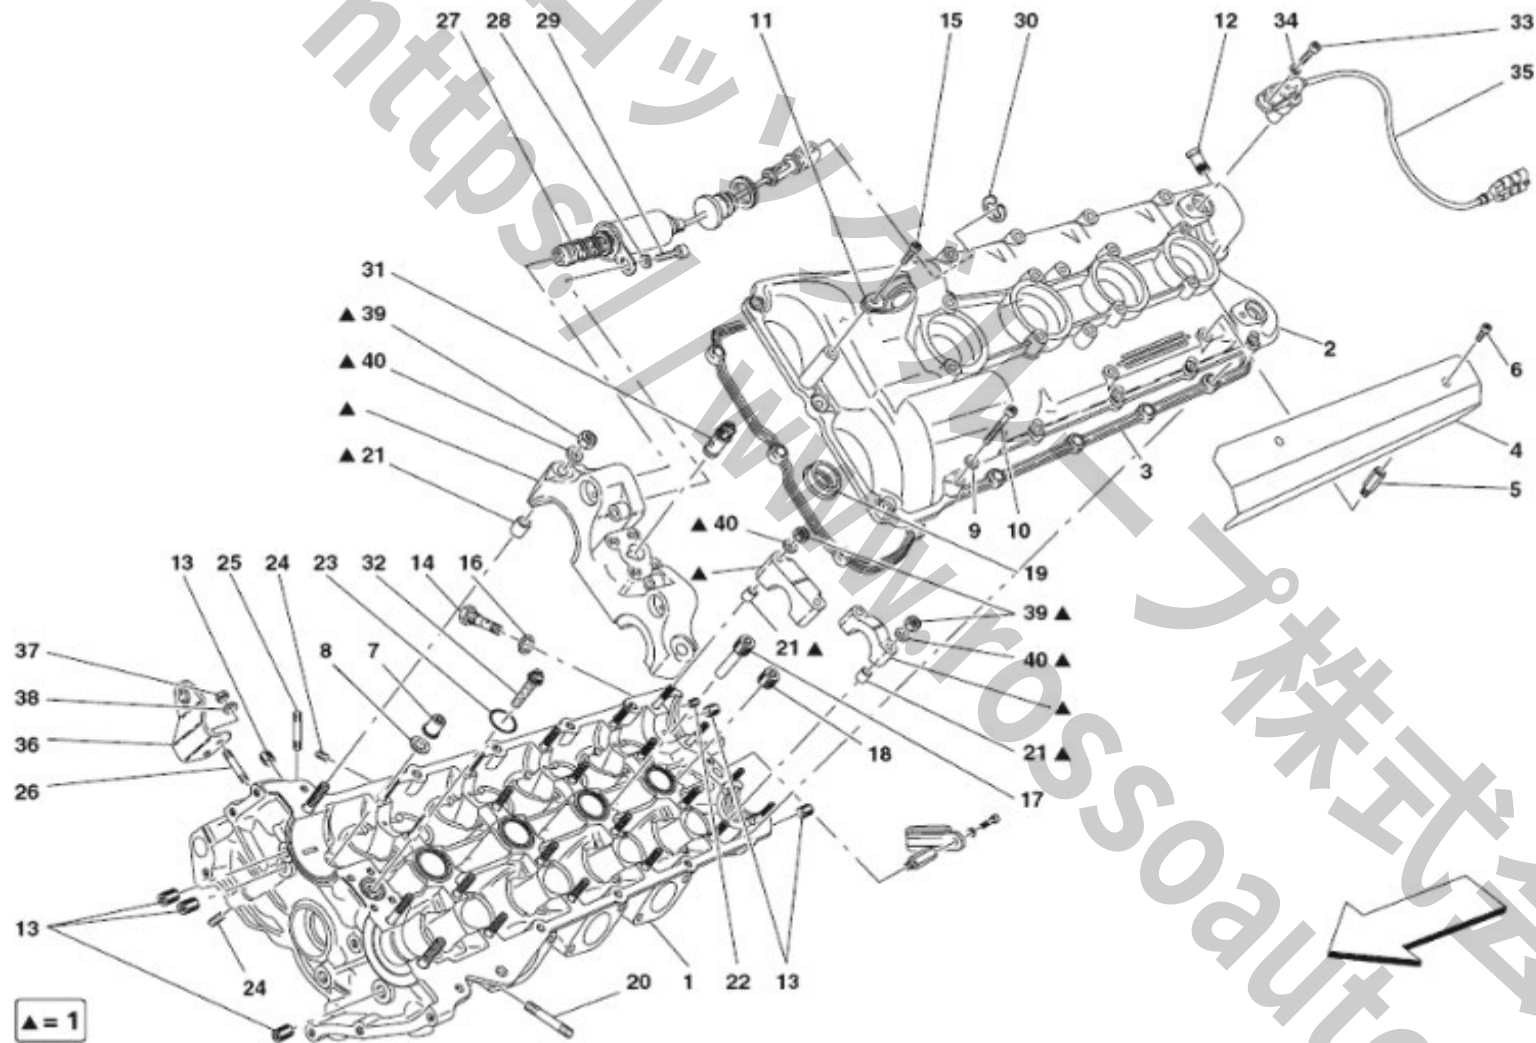


<004-LH-Cylinder-Head>

No.	Part No.	Name	Qty
1	221078	COMPLETE L.H. HEAD	1
2	197576	L.H. CYLINDERS HEAD COVER	1
3	189725	L.H. HEAD COVER GASKET	1
4	220404	ANTI-HEAT SHIELD	1
5	220417	STUD	2
6	14305324	SCREW	1
7	183524	NUT	10
8	151117	WASHER	10
9	11197774	WASHER	14
10	223838	HOLED SCREW	1
10	156834	SCREW	13
11	10441490	HOSE FASTENING BRACKET	2
12	124342	NIPPLE FOR POWER BRAKE DEPRESSION	1
13	14326001	THREADED PLUG	6
14	180267	OIL NONRETURN VALVE	1
15	14305121	SCREW	1
16	10261060	GASKET	1
17	183447	THREADED PLUG	4
18	164400	THREADED PLUG	1
19	187706	GASKET	4
20	211641	STUD	8
21	102725	CENTERING DOWEL	22
22	14326101	THREADED PLUG	1
23	134233	GASKET	1
24	199760	THREADED PLUG	4
25	13541334	STUD	8
26	13516624	STUD	2
27	250646	VARIATOR CONTROL SOLENOID VALVE	1
27	212423	VARIATOR CONTROL SOLENOID VALVE	1
28	11197774	WASHER	1
29	14433124	SCREW	1
30	11087374	FLEXIBLE RING	1
31	184681	OIL PRESSURE CHECK VALVE	1
32	241406	OIL FILTER	1
33	14305224	SCREW	1
34	11197774	WASHER	1

35	219867 L.H. EXHAUST SHAFT PHASE SENSOR	1
35	219866 L.H. INDUCTION SHAFT PHASE SENSOR	1
36	207422 BRACKET	1
37	16100811 NUT	2
38	11193874 WASHER	2
39	14058411 NUT	22
40	11197774 WASHER	22

ロッシェングループ株式会社
<https://www.rossoauto.com>
 
<005-Timing---Tappets>

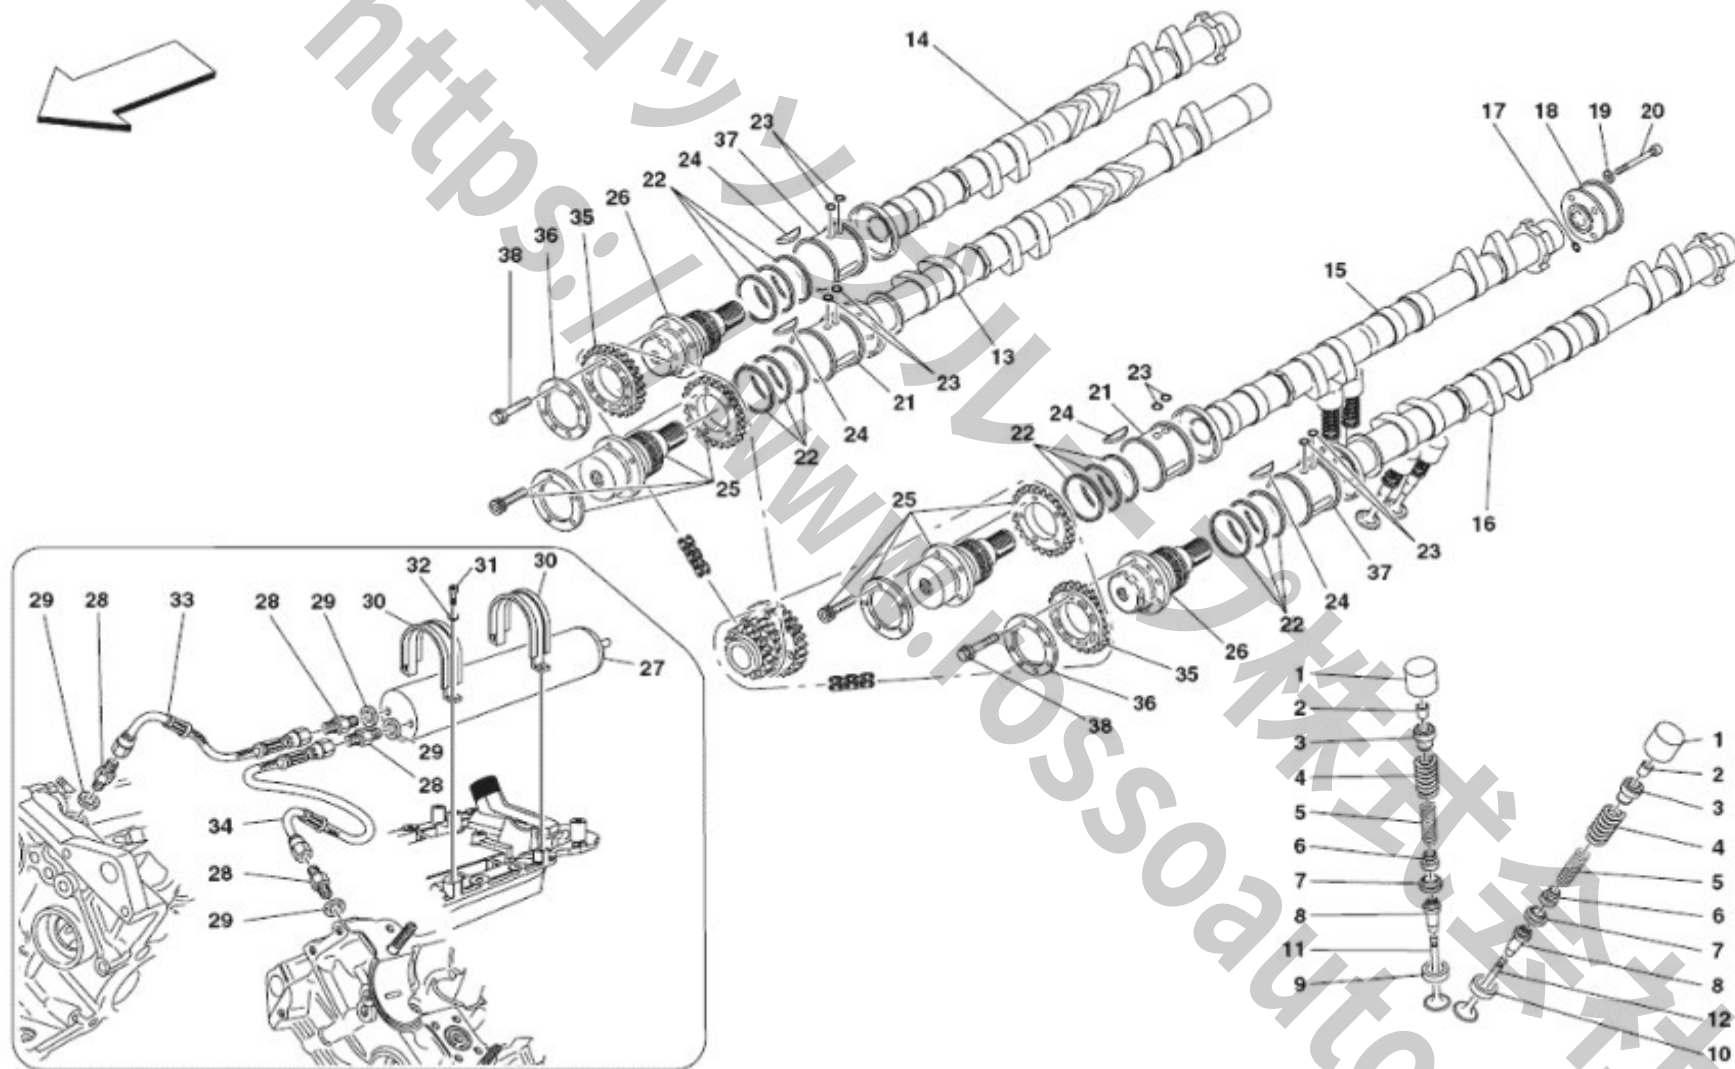


<005-Timing---Tappets>

No.	Part No.	Name	Qty
1	194700	TAPPET FOR VALVE CONTROL	32
2	179763	COTTER FOR VALVE SPRING	64
3	194713	UPPER CUP	32
4	197900	OUTER SPRING FOR VALVE RETURN	32
5	197901	INNER SPRING FOR VALVE	32
6	221473	OIL RING	32
7	194718	LOWER CUP	32
8	213498	INTAKE VALVE GUIDE	32
9	6213496	INTAKE VALVE SEAT	16
10	6213497	EXHAUST VALVE SEAT	16
11	198581	INTAKE VALVE	16
12	198582	EXHAUST VALVE	16
13	200144	R.H. INDUCTION DISTRIBUTION CAM SHAFT	1
14	200146	R.H. EXHAUST CAM SHAFT	1
15	200145	L.H. INDUCTION DISTRIBUTION CAM SHAFT	1
16	200147	L.H. EXHAUST CAM SHAFT	1
17	134701	O.R. GASKET	2
18	197558	OIL PUMP VARIATOR	1
19	184731	WASHER	4
20	14303623	SCREW	4
21	206804	INDUCTION PHASE VARIATOR SUPPORTNG BUSHING	2
22	179926	RING	12
23	134701	O.R. GASKET	4
24	10618110	KEY	4
25	193779	PHASE VARIATOR	2
26	199438	EXHAUST INDUCTION PHASE VARIATOR	2
27	197062	OIL ACCUMULATOR FOR VARIATOR	1
28	195056	THREADED UNION	4
29	102610604	GASKET	60
30	197151	BRACKET	2
31	14305121	SCREW	4
32	11197774	WASHER	4
33	198463	PIPE FROM ACCUMULATOR TO R.H. CYLINDER HEADS	1
34	198464	PIPE FROM ACCUMULATOR TO L.H. CYLINDER HEADS	1
35	194192	TOOTHED WHEEL	2
36	194370	RING	2

ロッシングループ株式会社
<https://www.rossoauto.com>
 
<006-Timing---Controls>

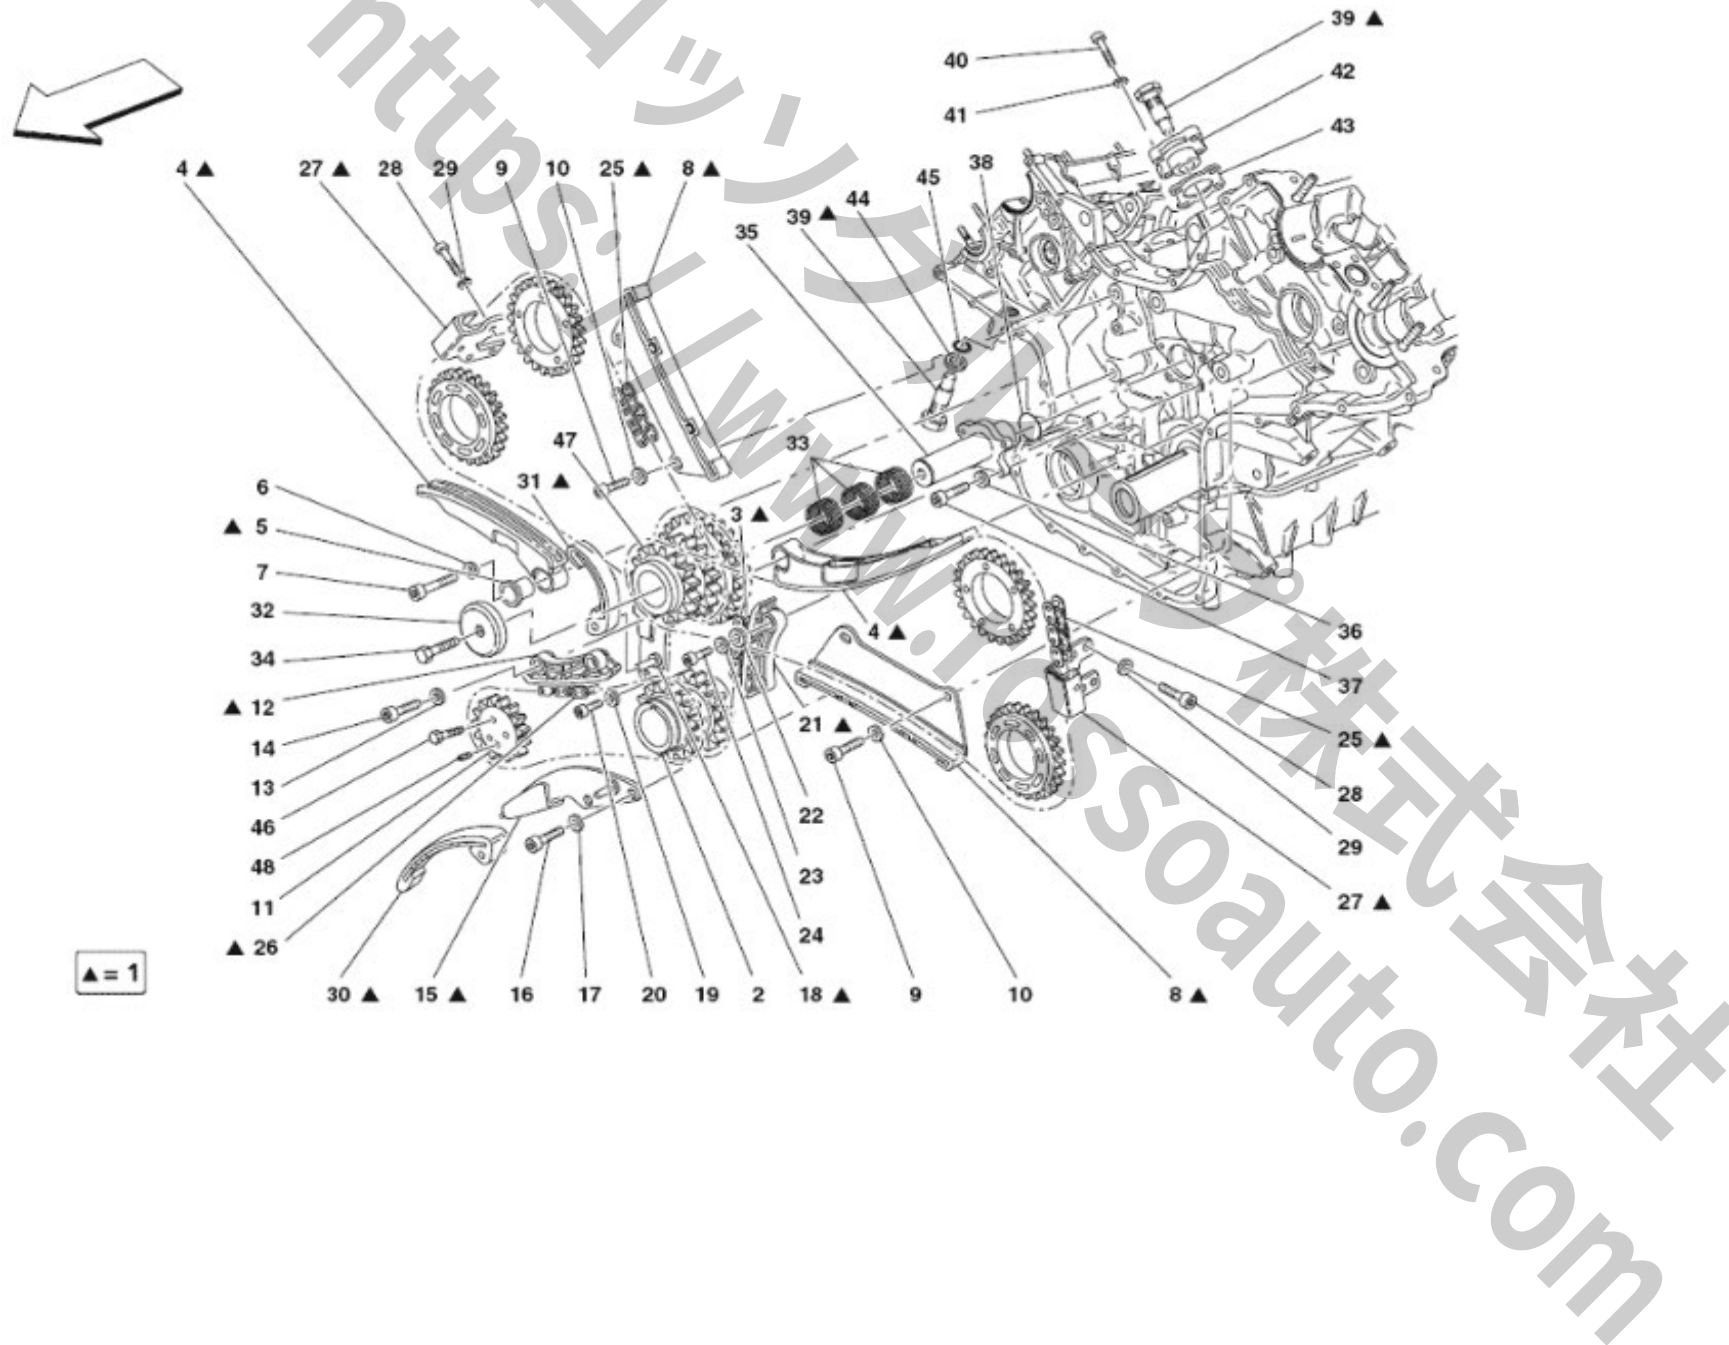


<006-Timing---Controls>

No.	Part No.	Name	Qty
1	197879	TIMING CONTROL ASSEMBLY	1
2	186854	ENGINE SHAFT TOOTHED WHEEL	1
3	175286	TRANSMISSION CHAIN	1
4	186184	MOBILE GUIDE SHOE	2
5	175303	BUSHING	2
6	10569373	WASHER	2
7	14306424	SCREW	2
8	186185	FIXED TENSION	2
9	14306224	SCREW	4
10	11193874	WASHER	4
11	189564	PUMP CONTROM TOOTHED WHEEL	1
12	186186	FIXED TENSION	1
13	11197774	WASHER	2
14	14305424	SCREW	2
15	185724	GUIDE SHOE SUPPORT	1
16	14305724	SCREW	2
17	11197774	WASHER	2
18	186159	GUIDE SHOE SUPPORT	1
19	11197774	WASHER	2
20	14305724	SCREW	2
21	186181	FIXED TENSION	1
22	12647624	WASHER	2
23	11197774	WASHER	2
24	14432224	SCREW	2
25	193616	TIMING CONTROL CHAIN	2
26	175314	PUMPS CONTROL CHAIN	1
27	189569	UPPER FIXED TENSION	2
28	14305934	SCREW	8
29	11197774	WASHER	8
30	185725	CHAIN TENSIONER	1
31	196683	CHAIN TENSIONER	1
32	194262	SHOULDER	1
33	175282	ROLLER CAGE	3
34	16043124	SCREW	1
35	194261	SUPPORT	1
36	11181574	WASHER	4

37	14304224	SCREW	4
38	104212	O.R. GASKET	1
39	197880	HYDRAULIC TIGHTENER	2
40	14432224	SCREW	4
41	11197774	WASHER	4
42	190060	BUSHING FOR TIGHTENER	1
43	247147	GASKET	1
44	190171	SPACER	1
45	192069	O.R. GASKET	1
46	189563	SCREW	3
47	193565	TRANSMISSION TOOTHED WHEEL	1
48	189779	DOWEL	1

<https://www.rossoauto.com> 株式会社

 
<007-Injection-Device---igni>

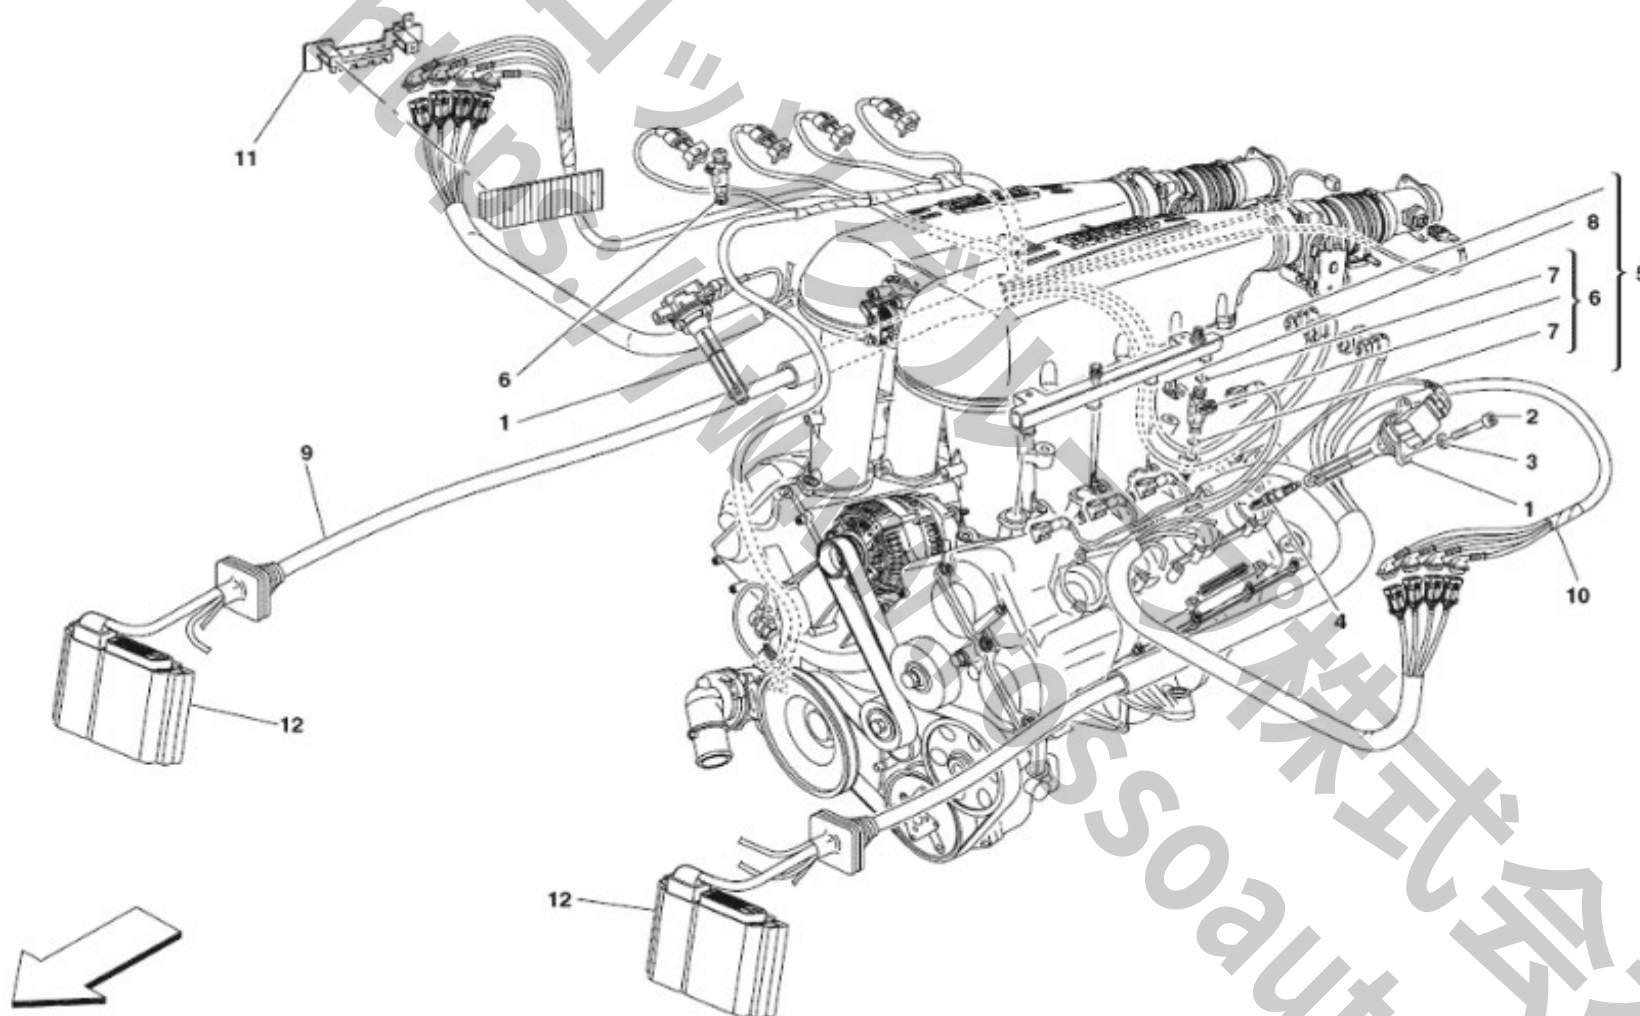

<007-Injection-Device---igni>

No.	Part No.	Name	Qty
1	188504	FRONT IGNITION COIL	4
1	186914	REAR IGNITION COIL	4
2	201599	SCREW	16
3	11197774	WASHER	16
4	192637	SPARK PLUG	8
5	216543	L.H. COMPLETE FUEL TUBE WITH ELECTRO-INJECTORS	1
5	216542	R.H. COMPLETE FUEL TUBE WITH ELECTRO-INJECTORS	1
6	213635	ELECTRO-INJECTOR	8
7	133902	GASKET	4
8	144730	INJECTORS RETAINING CLIP	8
9	202974	R.H. SIDE INJECTION CONNECTING CABLES	1
10	204427	L.H. SIDE INJECTION CONNECTING CABLES	1
11	222061	L.H. BRACKET	1
11	222060	R.H. BRACKET	1
12	221606	CONTROL UNIT IGNITION	2

 
<008-Pneumatic-actuator-syst>

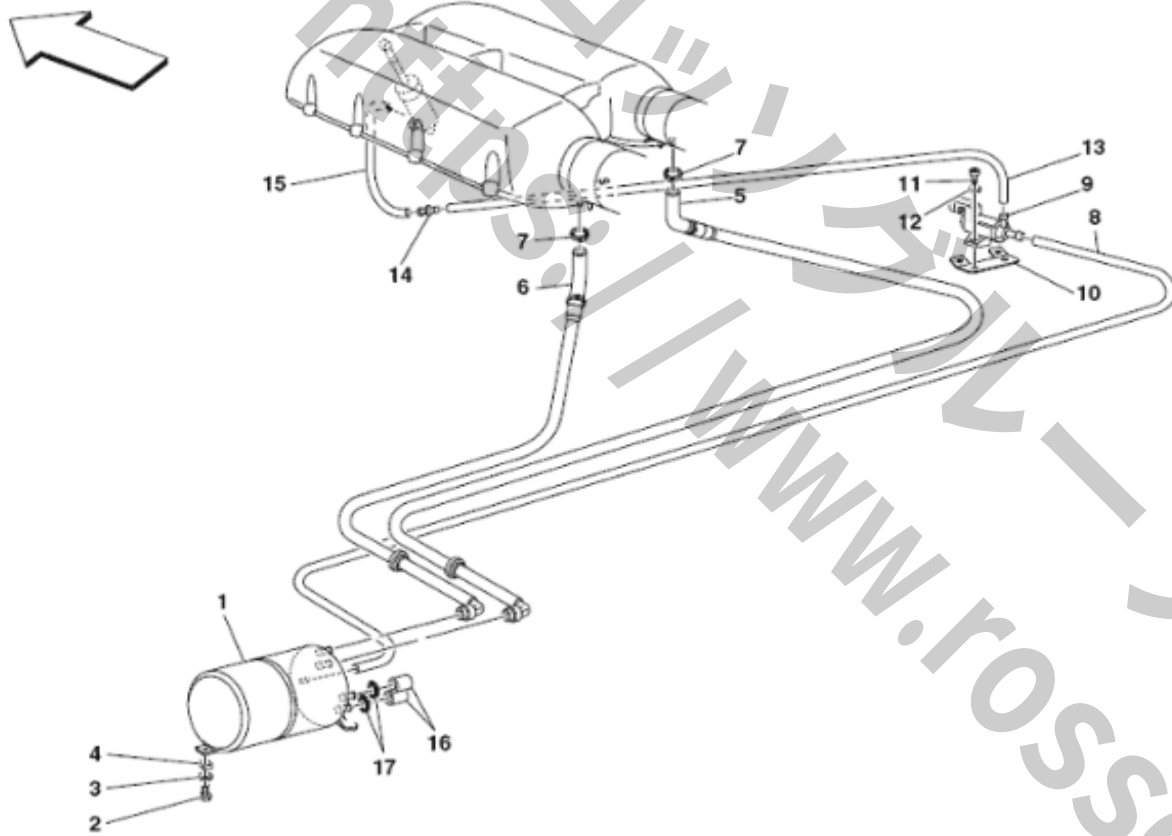

<008-Pneumatic-actuator-syst>

No.	Part No.	Name	Qty
1	207624	ACCUMULATION DEPRESSION TANK	1
2	10902224	SCREW	3
3	12601274	WASHER	3
4	12639724	WASHER	3
5	210200	COMPLETE R.H. DEPRESSION PIPE	1
6	222114	COMPLETE L.H. DEPRESSION PIPE	1
7	13431870	COLLAR FOR SLEEVE	2
8	124406	IGNITION MODULE DEPRESSION HOSE	1
9	184363	SOLENOID VALVE	1
10	200111	BRACKET	1
11	14304124	SCREW	2
12	12544179	WASHER	2
13	118502	PIPE FROM SOLENOID VALVE TO UNION	1
14	178491	UNION	1
15	168248	RUBBER HOSE	1
16	248008	PLUG	2
17	13431870	COLLAR FOR SLEEVE	2

 
<009-Fuel-Pumps-and-Pipes>

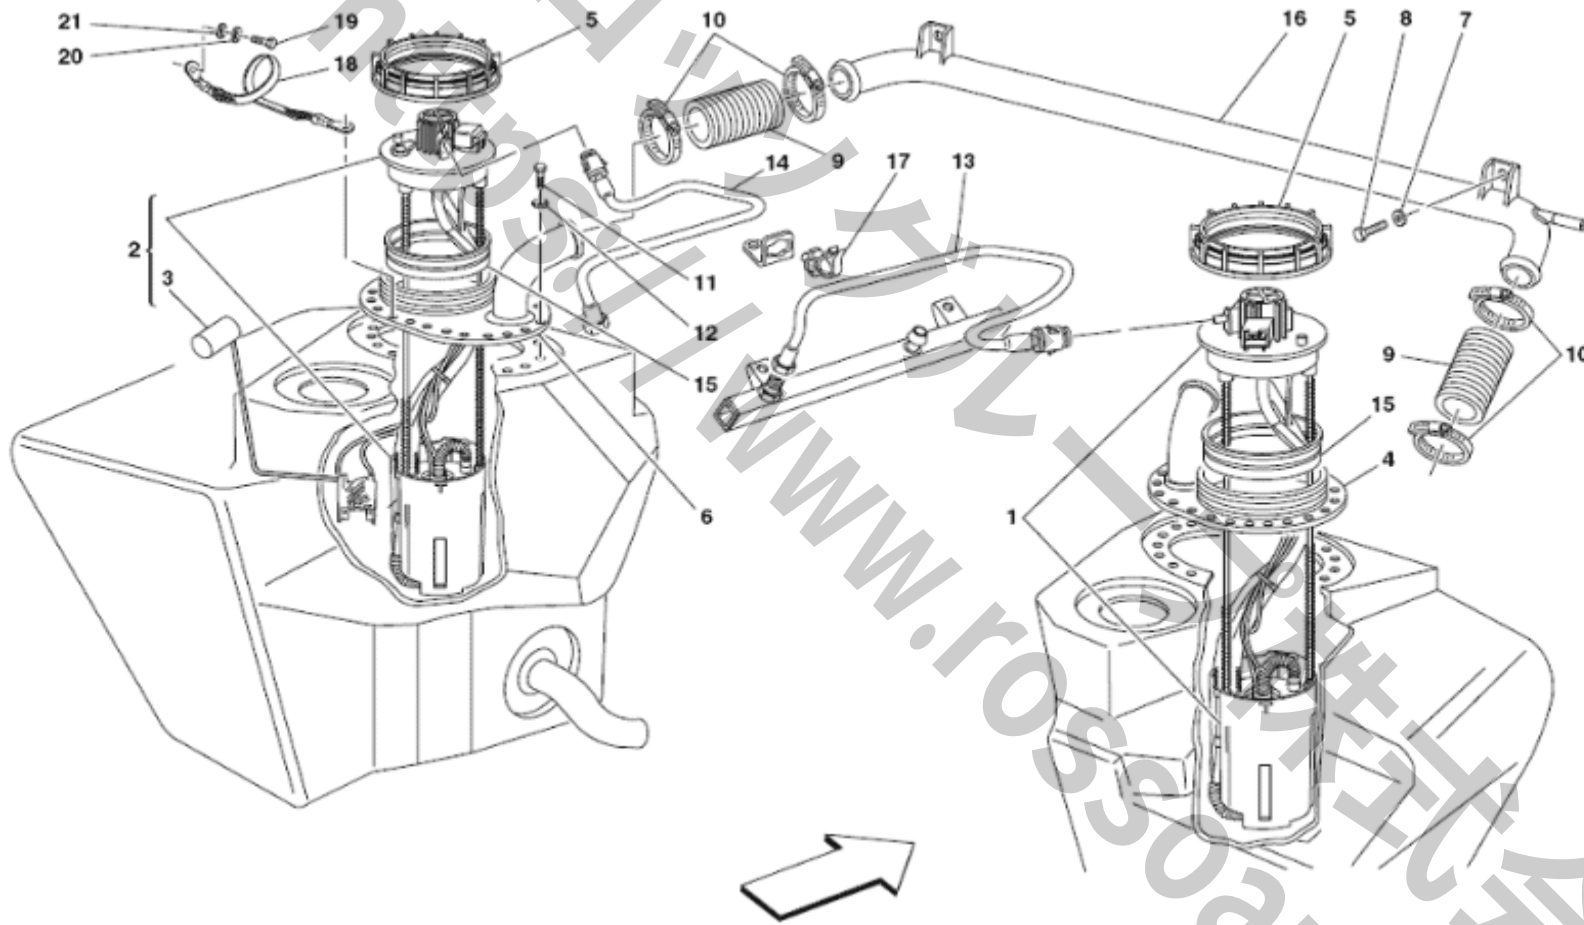

<009-Fuel-Pumps-and-Pipes>

No.	Part No.	Name	Qty
1	239814	R.H. COMPLETE FUEL PUMP	1
1	239814	R.H. COMPLETE FUEL PUMP	1
2	239815	L.H. COMPLETE FUEL PUMP AND FUEL LEVEL INDICATOR CONROL	1
3	194140	FUEL LEVEL INDICATOR	1
4	182501	R.H. PUMP SUPPORT COVER	1
5	170945	RING NUT	2
6	182502	L.H. PUMP SUPPORT COVER	1
7	12643778	WASHER	2
8	12605374	WASHER	2
9	183103	CONNECTION SLEEVE	2
10	13001690	SCREW COLLAR	4
11	10902224	SCREW	38
12	12601274	WASHER	38
13	221434	R.H. FUEL DELIVERY TUBE	1
14	221435	L.H. FUEL DELIVERY TUBE	1
15	170946	GASKET	2
16	182900	DISAREATOR	1
17	178430	CLIP	4
18	160855	GROUND CABLE	2
19	10902424	SCREW	2
20	12605374	WASHER	2
21	14499324	WASHER	2

 This is a detailed exploded view diagram of a motorcycle engine and chassis assembly. The diagram shows the engine block (1) at the center, with various components like the cylinder head (2), piston (3), and crankshaft (4) shown in their relative positions. The chassis components, including the frame (5), swingarm (6), and rear wheel (7), are also depicted. Numerous smaller parts like bolts, nuts, and washers are labeled with numbers. A large arrow in the top left corner points towards the engine assembly. A small inset in the bottom right corner shows a close-up of a component labeled 71 and 72.

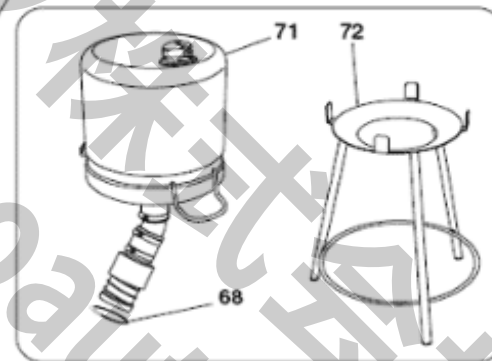

<010-Fuel-Tanks>


No.	Part No.	Name	Qty
1	184735	COMPLETE L.H. FUEL TANK CONTAINER	1
2	184736	COMPLETE R.H. FUEL TANK CONTAINER	1
3	221248	L.H. UNION	1
3	221247	R.H. UNION	1
4	14440724	SCREW	18
5	183487	OR-RING	2
6	182506	CHALLENGE FUEL PLUG	2
7	10902424	SCREW	2
8	127494	WASHER	2
9	182911	CONNECTION SLEEVE	2
10	13000890	SCREW COLLAR	4
11	182902	L.H. INLET TUBE	1
11	111829	R.H. INLET TUBE	1
12	10902224	SCREW	16
13	12601274	WASHER	16
14	222208	VENT PIPE	1
15	176393	BRACKET WITH SHEATH	1
16	175967	MULTIFUNCTIONAL VALVE CONTAINER	1
17	180030	MULTIFUNCTIONAL VALVE	1
18	195049	GASKET	2
19	13432070	SCREW COLLAR	1
20	10720124	NUT	2
21	12644424	WASHER	2
22	10902834	SCREW	1
23	221438	TANKS CONNECTION PIPE	1
24	10902424	SCREW	1
25	12644424	WASHER	1
26	177437	RUBBER THICKNESS	6
27	114277	SLEEVE	2
28	168220	SCREW COLLAR	4
29	65987000	LH FRONT BRACKET	1
29	65986900	RH FRONT BRACKET	1
30	12574221	NUT	8
31	12644477	WASHER	8
32	10902424	SCREW	4
33	12643724	WASHER	4

34	10441590 BRACKET	1
35	159147 RUBBER THICKNESS	8
36	182906 R.H. PIPE	1
37	182907 L.H. PIPE	1
38	102741 NUT	1
39	12639724 WASHER	1
40	183399 SUPPORTING BRACKET	1
41	12644424 WASHER	2
42	10902224 SCREW	2
43	180373 PIPE FROM MULTIFUNCTIONAL VALVE TO DISAREATOR	1
44	182363 STUD	1
45	182520 LH FRONT PANEL	1
45	182519 RH FRONT PANEL	1
46	169180 NUT	20
47	12638178 WASHER	20
48	65987200 L.H. REAR BRACKET	1
48	65987100 RH REAR BRACKET	1
49	183623 LOWER BRACKET FOR L.H. TANK FIXING	1
49	183622 LOWER BRACKET FOR R.H. TANK FIXING	1
50	12643724 WASHER	2
51	12605374 WASHER	2
52	10902424 SCREW	2
53	182521 LOWER R.H. ANTI-HEAT SHIELD	1
54	222654 LOWER L.H. ANTI-HEAT SHIELD	1
55	12601274 WASHER	16
56	10902024 SCREW	16
57	10902424 SCREW	4
58	12605374 WASHER	4
59	14499324 WASHER	4
60	198222 PROTECTION PLATE	1
61	12644424 WASHER	11
62	10902424 SCREW	7
63	178772 STUD	2
64	12643724 WASHER	2
65	12643724 WASHER	4
66	127494 WASHER	1
67	10902024 SCREW	2
68	189897 OR-RING	1
69	189878 RUBBER RING FOR UNION	2

70	186045 FRAME	1
71	183914 TANKS FILLING KIT	1
72	183915 TANK SUPPORT	1
73	221439 PUMP-DOWN PIPE	1
74	221916 COUPLING	1

ロッソ自動車株式会社
<https://www.rossoauto.com>

 
<011-Air-Intake-Manifold>

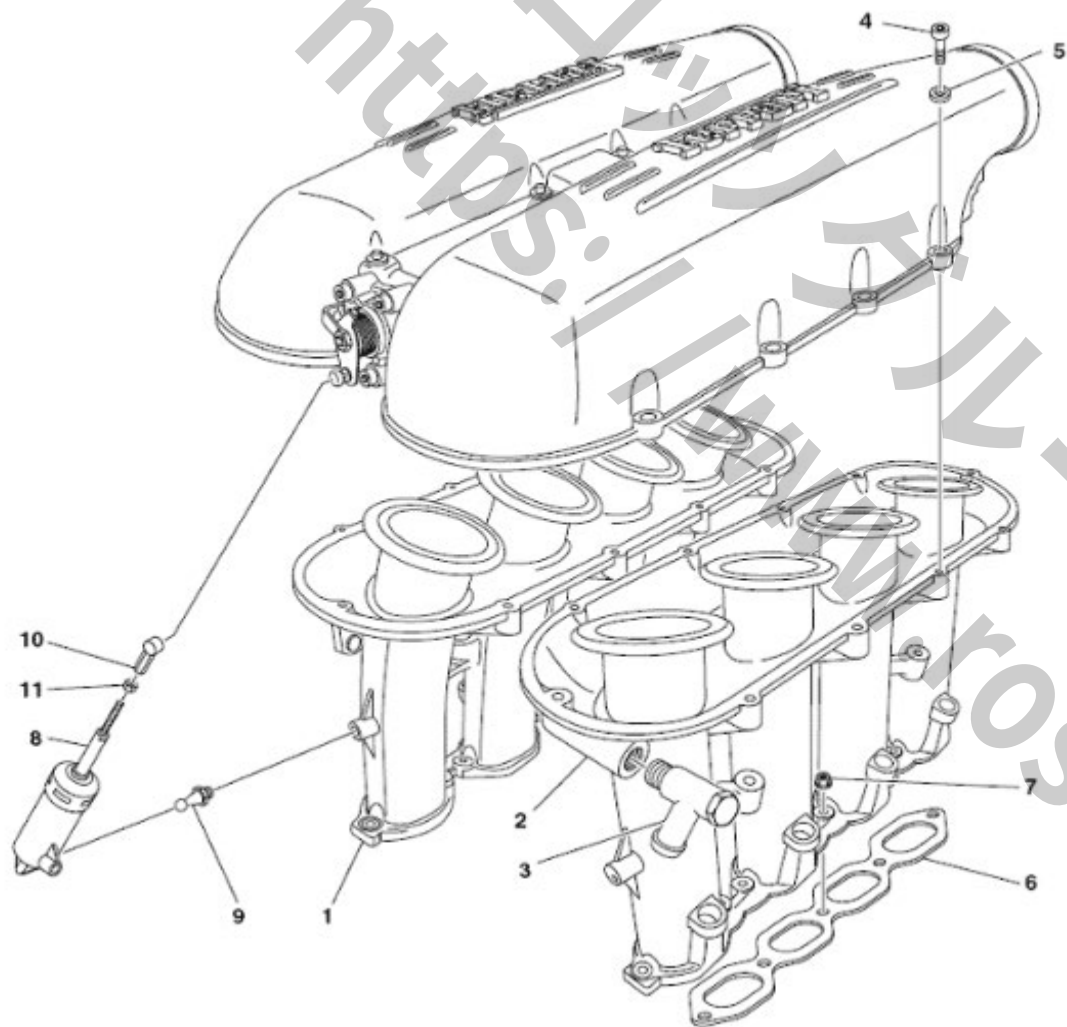

<011-Air-Intake-Manifold>

No.	Part No.	Name	Qty
1	217791	R.H. SUCTION MANIFOLD	1
2	217792	L.H. SUCTION MANIFOLD	1
3	124342	NIPPLE FOR POWER BRAKE DEPRESSION	1
4	222998	SCREW	8
4	14305824	SCREW	4
4	222996	SCREW	8
5	11197774	WASHER	20
6	233974	GASKET	2
6	322509	GASKET	2
7	159601	NUT	16
8	173594	ACTUATOR	1
9	191230	PIN	1
10	184532	TERMINALE END	1
11	14058411	NUT	1

 
<012-Air-Intake>

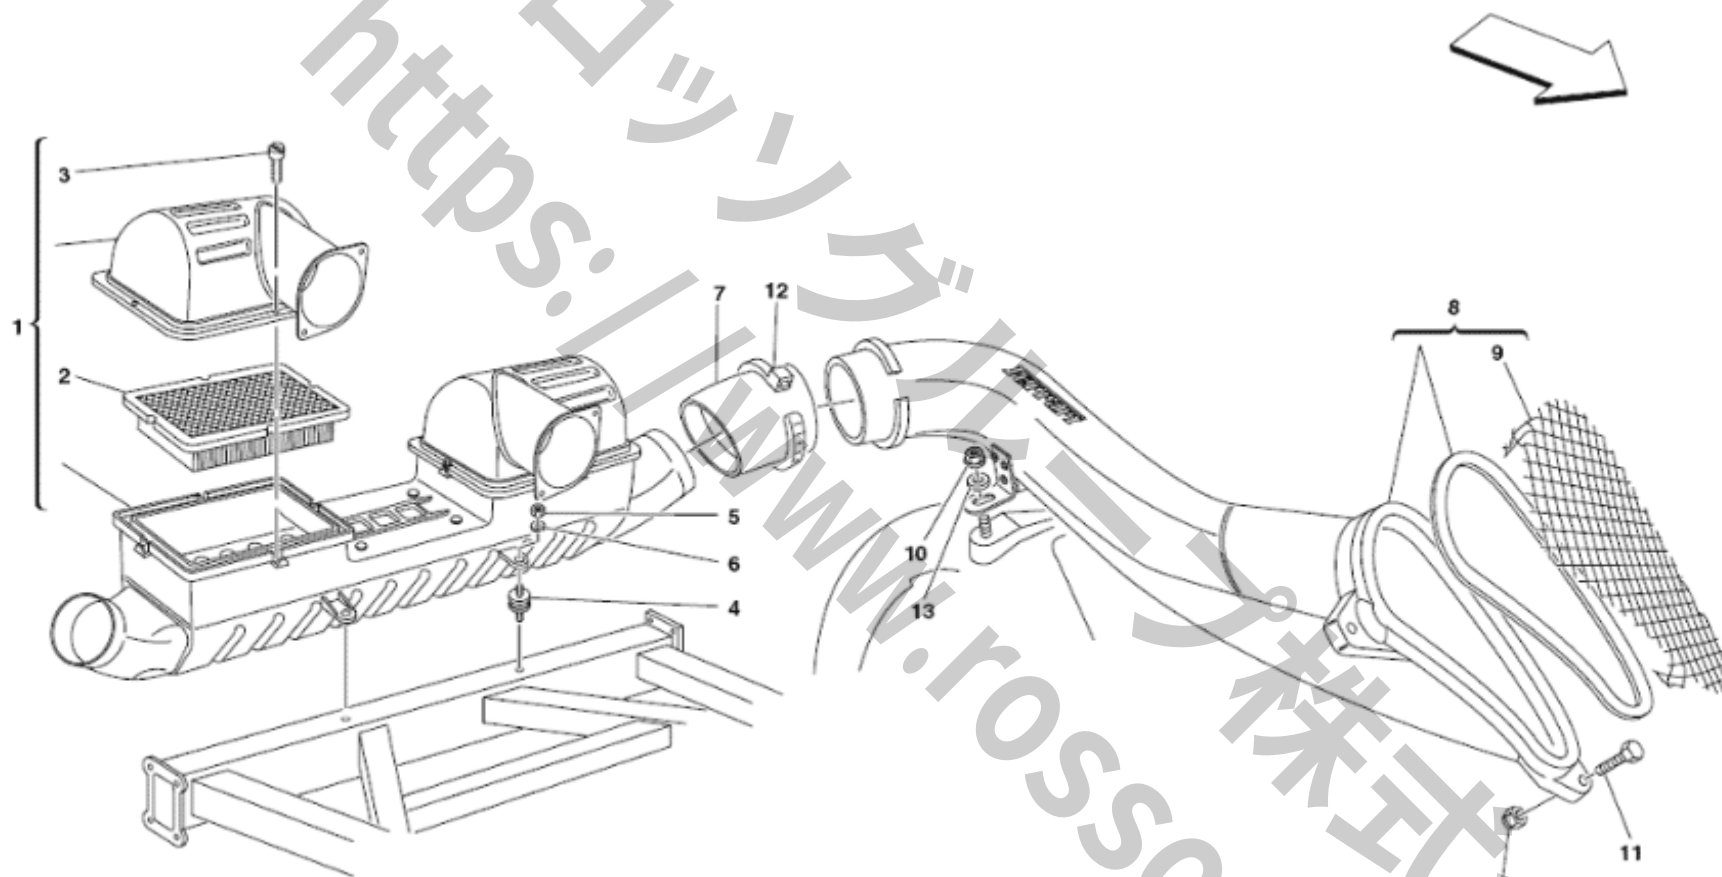

<012-Air-Intake>

No.	Part No.	Name	Qty
1	220469	COMPLETE FILTER BOX	1
2	191206	AIR FILTER	2
3	157757	SCREW	8
4	142202	PAD	4
5	15896214	NUT	4
6	1264372	WASHER	4
7	207497	SLEEVE	1
8		L.H. AIR INLET	1
8	220476	R.H. AIR INLET	1
9	207496	COMPLETE GRILL	2
10	13046011	NUT	6
11	10978121	SCREW	6
12	13001390	CLAMP	2
13	12624178	WASHER	6

 
<013-Air-Intake-Manifold-Cov>

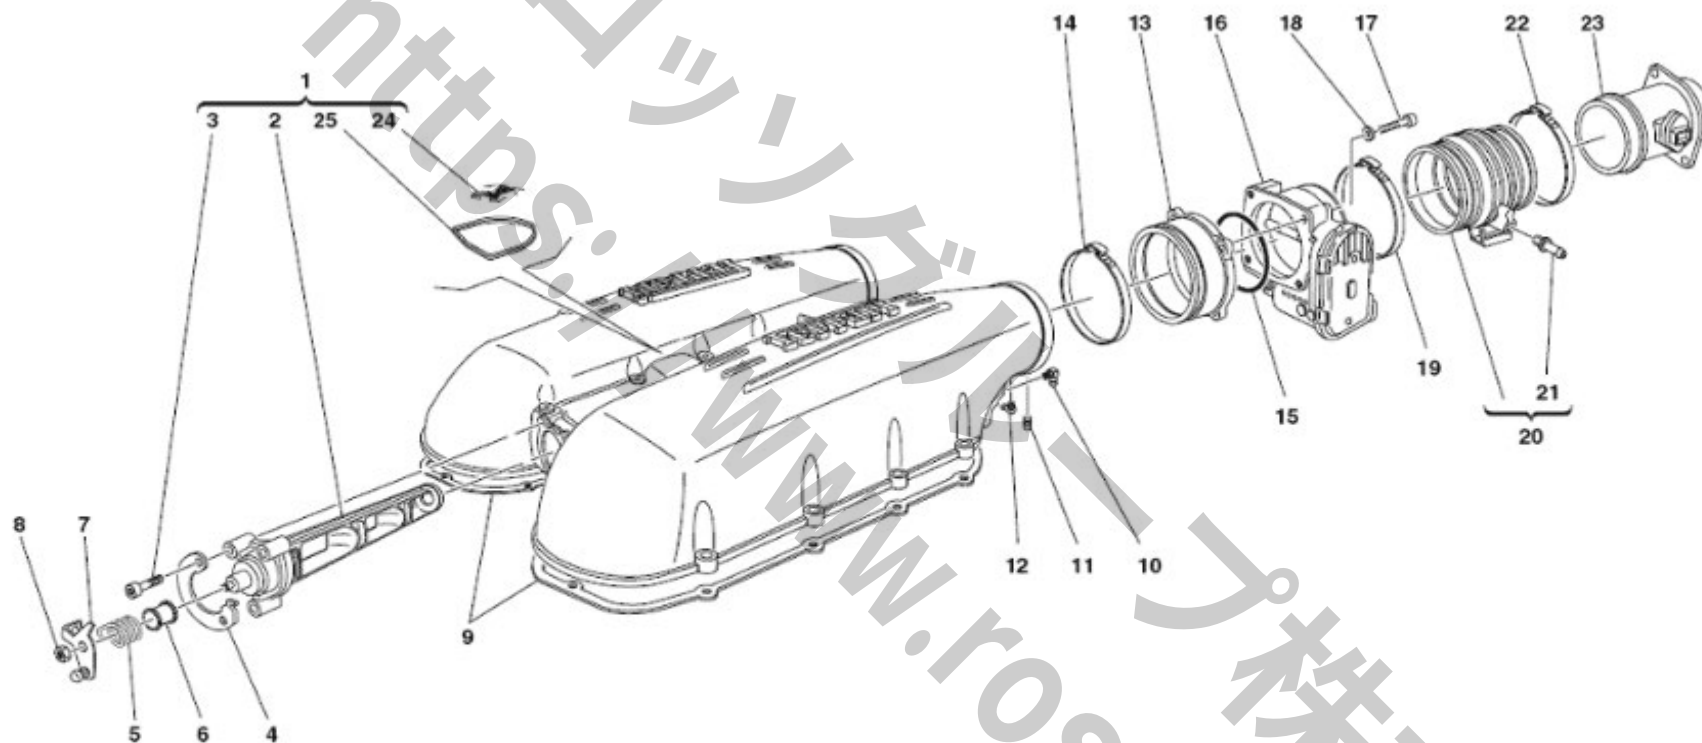

<013-Air-Intake-Manifold-Cov>

No.	Part No.	Name	Qty
1	224032	SUCTION MANIFOLD COVER	1
2	220668	ROLLING DRUM	1
3	222997	SCREW	3
4	204873	SAFETY PLATE	1
5	197761	SPRING	1
6	205123	BUSHING	1
7	203401	DRUM CONTROL LEVER	1
8	212945	NUT	1
9	217471	GASKET	2
10	174818	THREADED UNION	2
11	14326101	THREADED PLUG	2
12	128016	THREADED UNION	2
13	195206	SPACER	2
14	190151	CLAMP	2
15	150302	GASKET	2
16	179912	THROTTLE HOLDER	2
17	14305924	SCREW	8
18	12639724	WASHER	8
19	180046	CLAMP	2
20	205095	L.H. SLEEVE	1
20	205092	R.H. SLEEVE	1
21	209132	UNION	2
22	177981	SPECIAL CLAMP	2
23	181120	AIR FLOW METER	2
24	219431	CAVALLINO RAMPANTE	1
25	218327	AESTHETIC SMALL COVER FRAME	1

 
<014-Electronic-Accelerator->

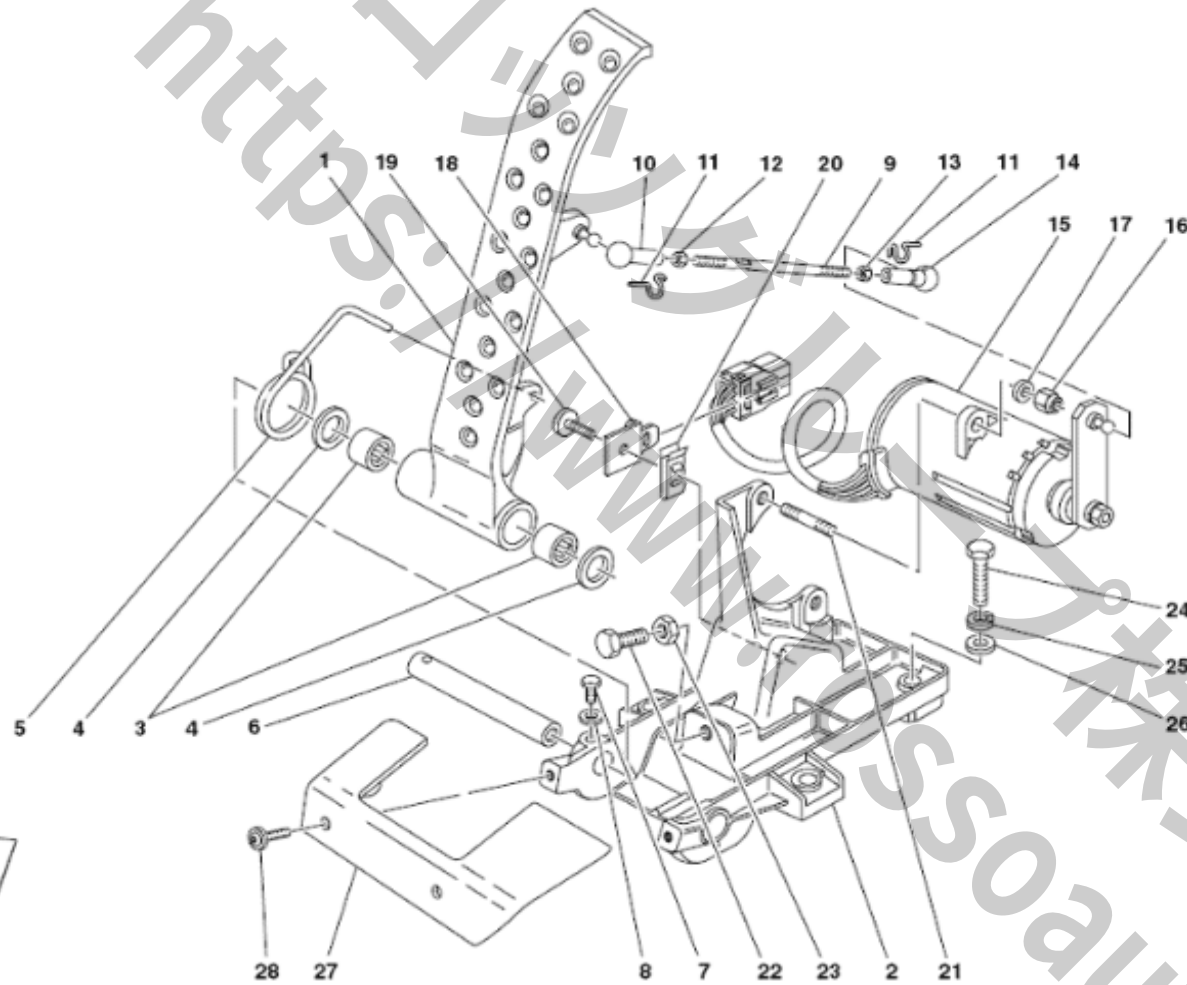

<014-Electronic-Accelerator->

No.	Part No.	Name	Qty
1	196180	ACCELERATOR PEDAL	1
2	185452	ACCELERATOR PEDAL SUPPORT	1
3	101677	ROLLER CAGE	2
4	157115	WASHER	2
5	175351	RETUTN SPRING FOR PEDAL	1
6	171468	ROLLER CAGE RACE	1
7	1097752	SCREW	4
8	1260117	WASHER	4
9	171466	PUSH ROD	1
10	173999	SPHERIC JOINT (R.H. THREAD)	1
11	174001	CLIP	2
12	15896470	NUT	1
13	105586	NUT	1
14	174000	BALL JOINT HEAD	1
15	170038	ACCELERATOR PEDAL POTENTIOMETER	1
16	102741	NUT	2
17	10519424	WASHER	2
18	170925	BRACKET FOR CONNECTOR FIXING	1
19	14071911	SCREW	1
20	14371274	BRACKET	1
21	11500624	STUD	2
22	16043621	SCREW	1
23	16102324	NUT	1
24	10902624	SCREW	3
25	127494	WASHER	3
26	14496424	WASHER	3
27	65709100	ACCELERATOR PEDAL COVER	1
27	69059100	ACCELERATOR PEDAL COVER	1
28	65752800	SCREW	2

 
<015-Racing-Exhaust-System>

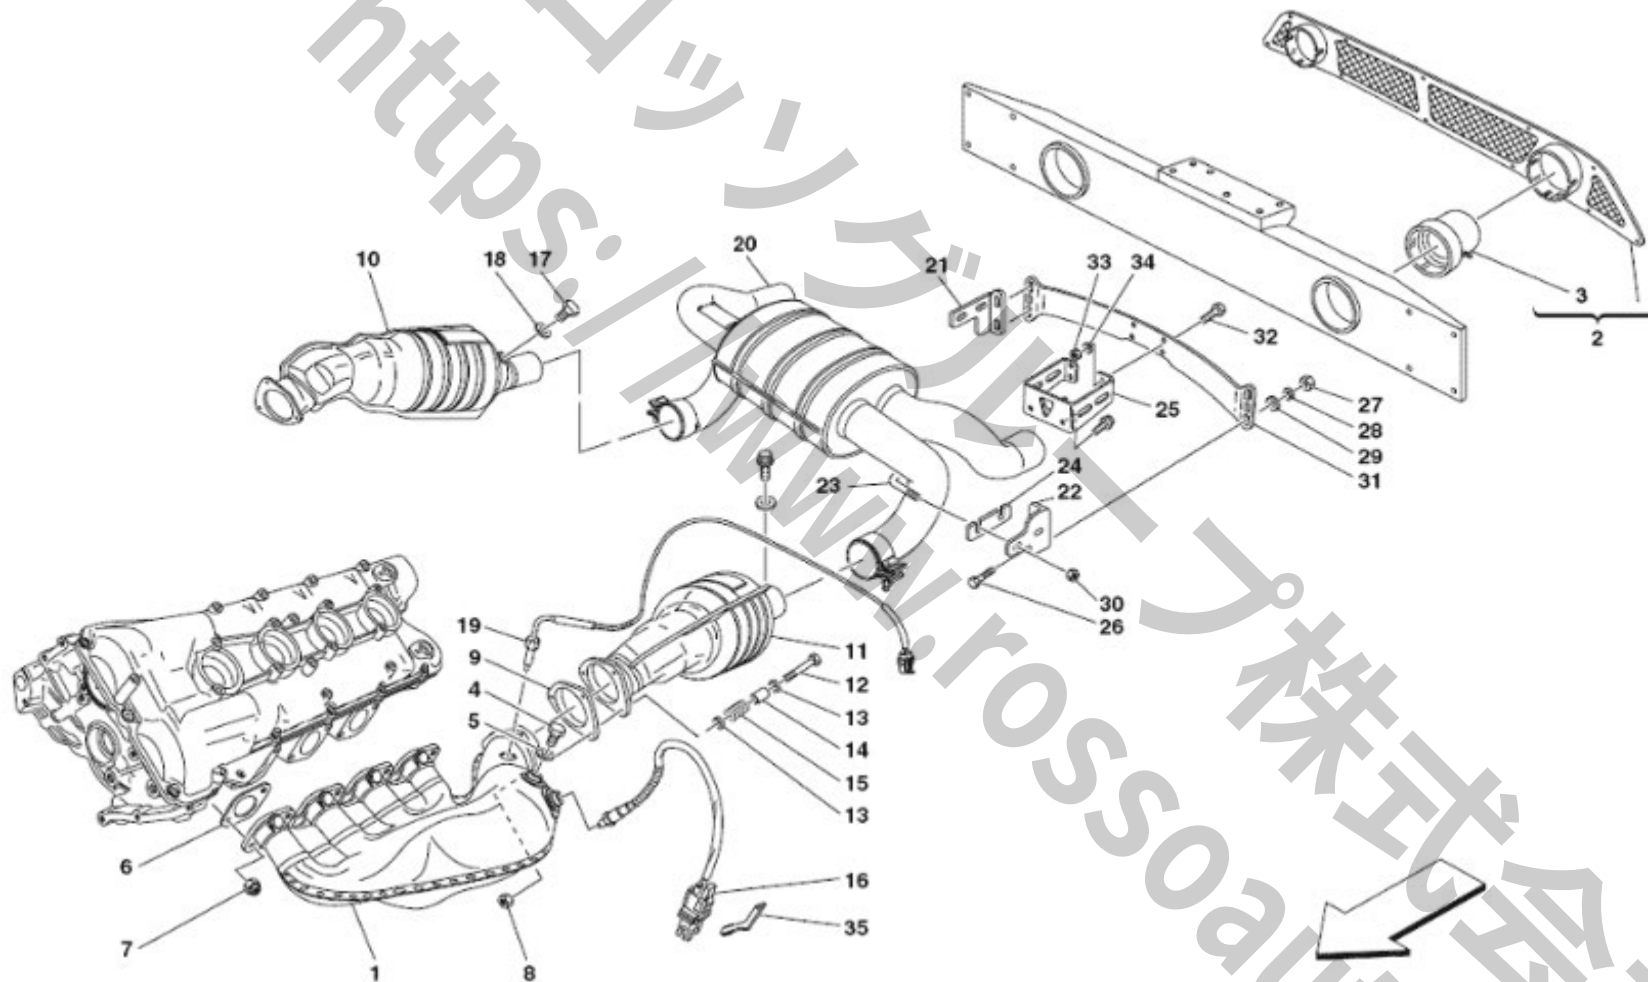

<015-Racing-Exhaust-System>

No.	Part No.	Name	Qty
1	219942	L.H. EXHAUST MANIFOLD	1
1	219941	R.H. EXHAUST MANIFOLD	1
2	224344	GRILL WITH END	1
3	224342	PIPE END	2
4	110860	THREADED PLUG	2
5	10298460	GASKET	2
6	211404	GASKET	2
7	210971	COPPER PLATED NUT	16
8	212191	NUT	6
9	154985	GASKET	2
10	220022	R.H. CATALYST	1
11	220023	L.H. CATALYST	1
12	16044524	SCREW	6
13	12646778	WASHER	12
14	114749	SPACER	6
15	111743	SPRING	6
16	182837	FRONT LAMBDA FEELER	2
17	182998	PLUG	2
18	183003	WASHER	2
19	200934	THERMOCOUPLE	2
20	232866	COMPLETE EXHAUST	1
21	222810	R.H. BRACKET	1
22	222811	L.H. BRACKET	1
23	216085	RETAINER	2
24	215058	BRACKET	2
25	224334	GEARBOX SIDE SILENCER SUPPORT	1
26	16043534	SCREW	4
27	16100824	NUT	4
28	12646778	WASHER	4
29	127496	WASHER	4
30	14058519	NUT	4
31	224333	EXHAUST SIDE SILENCER SUPPORT	1
32	16043324	SCREW	4
33	16100824	NUT	4
34	127496	WASHER	4
35	175856	CONNECTOR FIXING BRACKET	2

 
<016-Lubrication-System---Ta>

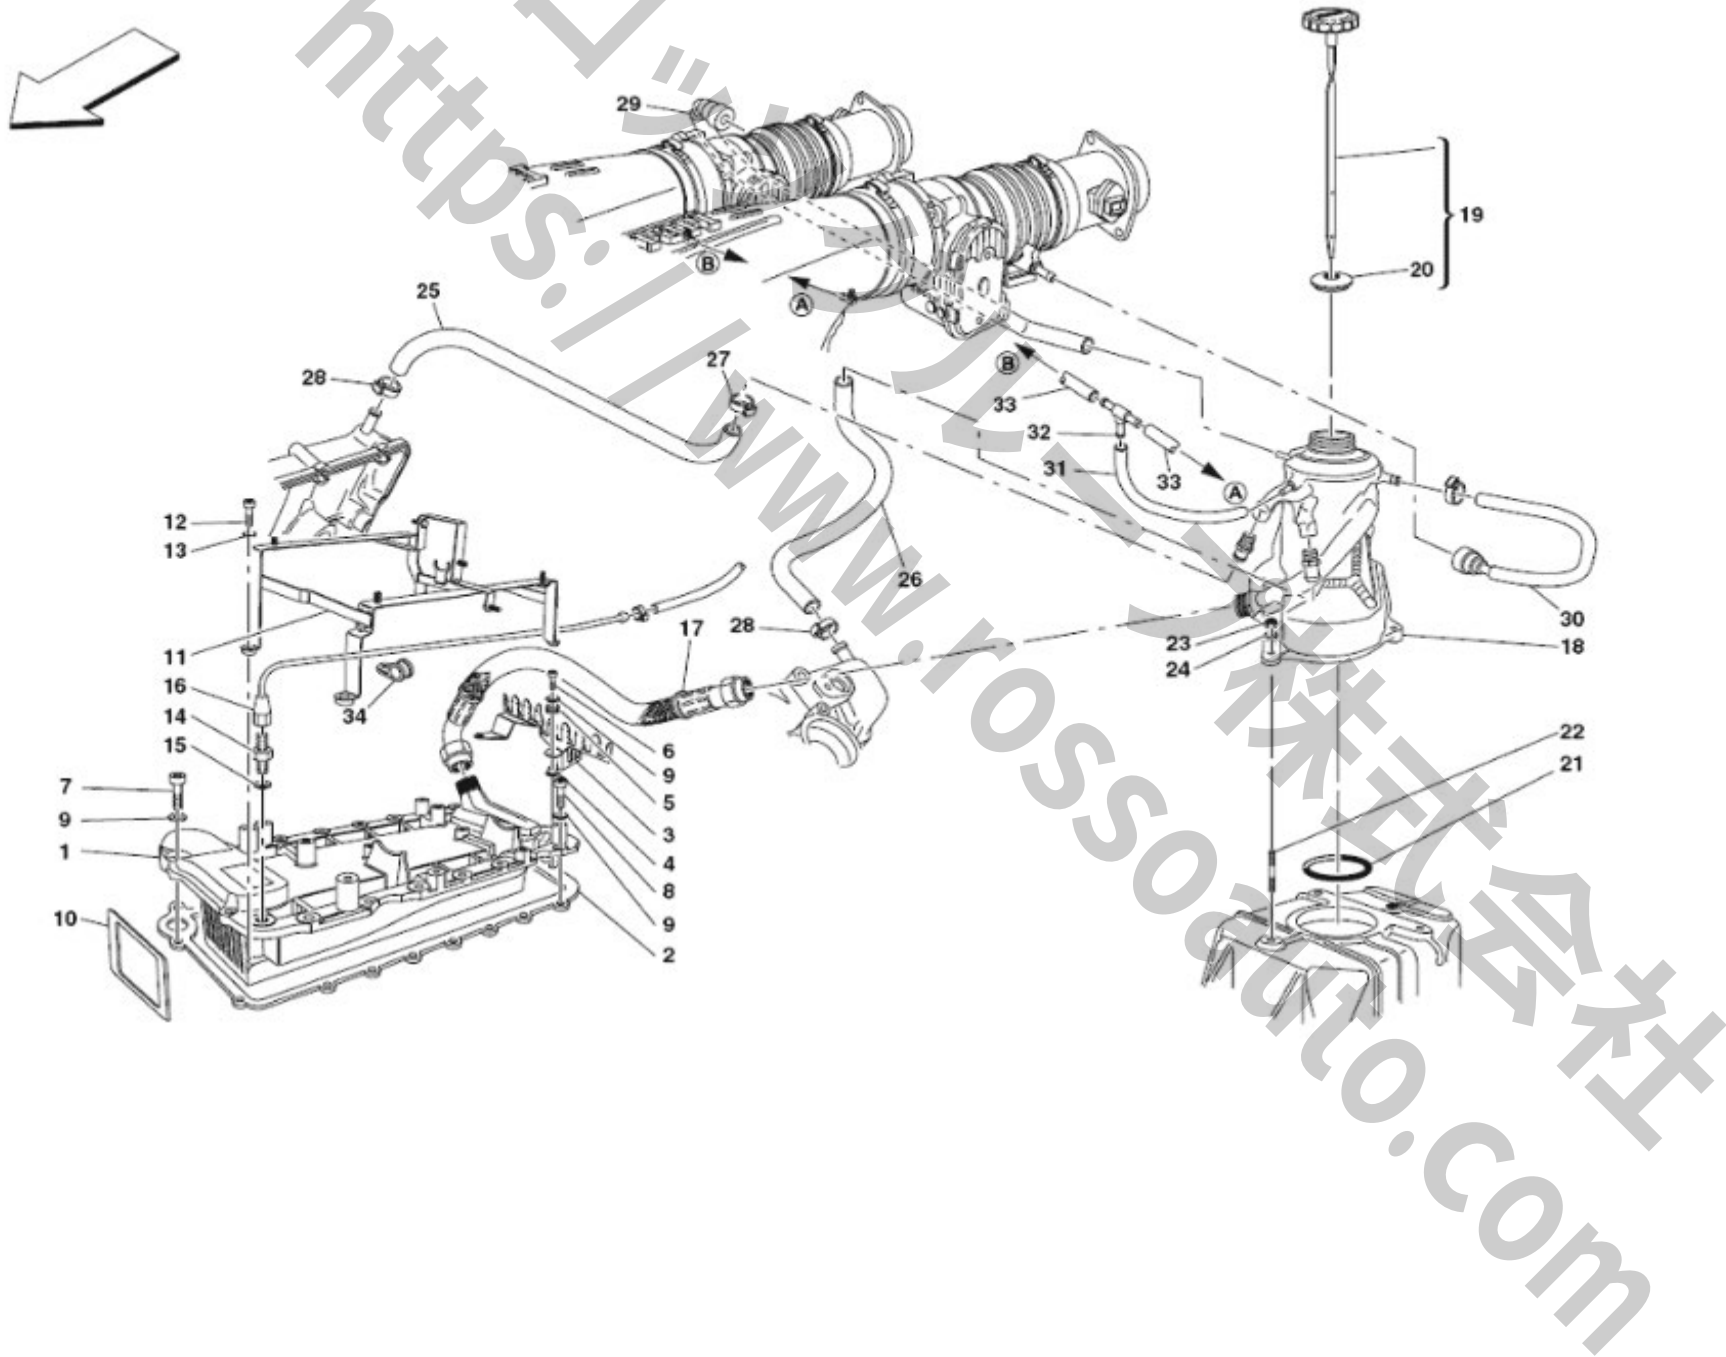

<016-Lubrication-System---Ta>

No.	Part No.	Name	Qty
1	197150	HEAT EXCHANGER	1
2	247146	GASKET	1
3	210388	CONNECTORS SUPPORTING BRACKET	1
4	149707	SPACER	2
5	177576	CABLE GROMMET	2
6	1430562	SCREW	4
7	1430552	SCREW	4
8	1430542	SCREW	4
9	1119777	WASHER	4
10	245462	GASKET	1
11	223408	BRACKET	1
12	14305224	SCREW	4
13	11197774	WASHER	4
14	192327	UNION	1
15	10284460	GASKET	1
16	211844	VENT PIPE	1
17	195351	HOSE FROM ENGINE TO DISAREATOR	1
18	216061	AIR OIL DISAREATOR	1
19	212362	TANK PLUG	1
20	211634	GASKET	1
21	176388	O.R. GASKET	1
22	13517124	STUD	3
23	101139	NUT	3
24	12601374	WASHER	3
25	211813	VENT R.H. PIPE	1
26	211814	VENT L.H. PIPE	1
27	177996	CLAMP	2
28	178051	CLAMP	2
29	216063	INTAKE STEAM R.H. HOPE	1
30	216064	INTAKE STEAM L.H. HOPE	1
31	195330	RUBBER HOSE	1
32	161816	WAY UNION	1
33	195331	RUBBER HOSE	2
34	10440990	BRACKET	1
 
<017-Water_Oil-Pump>

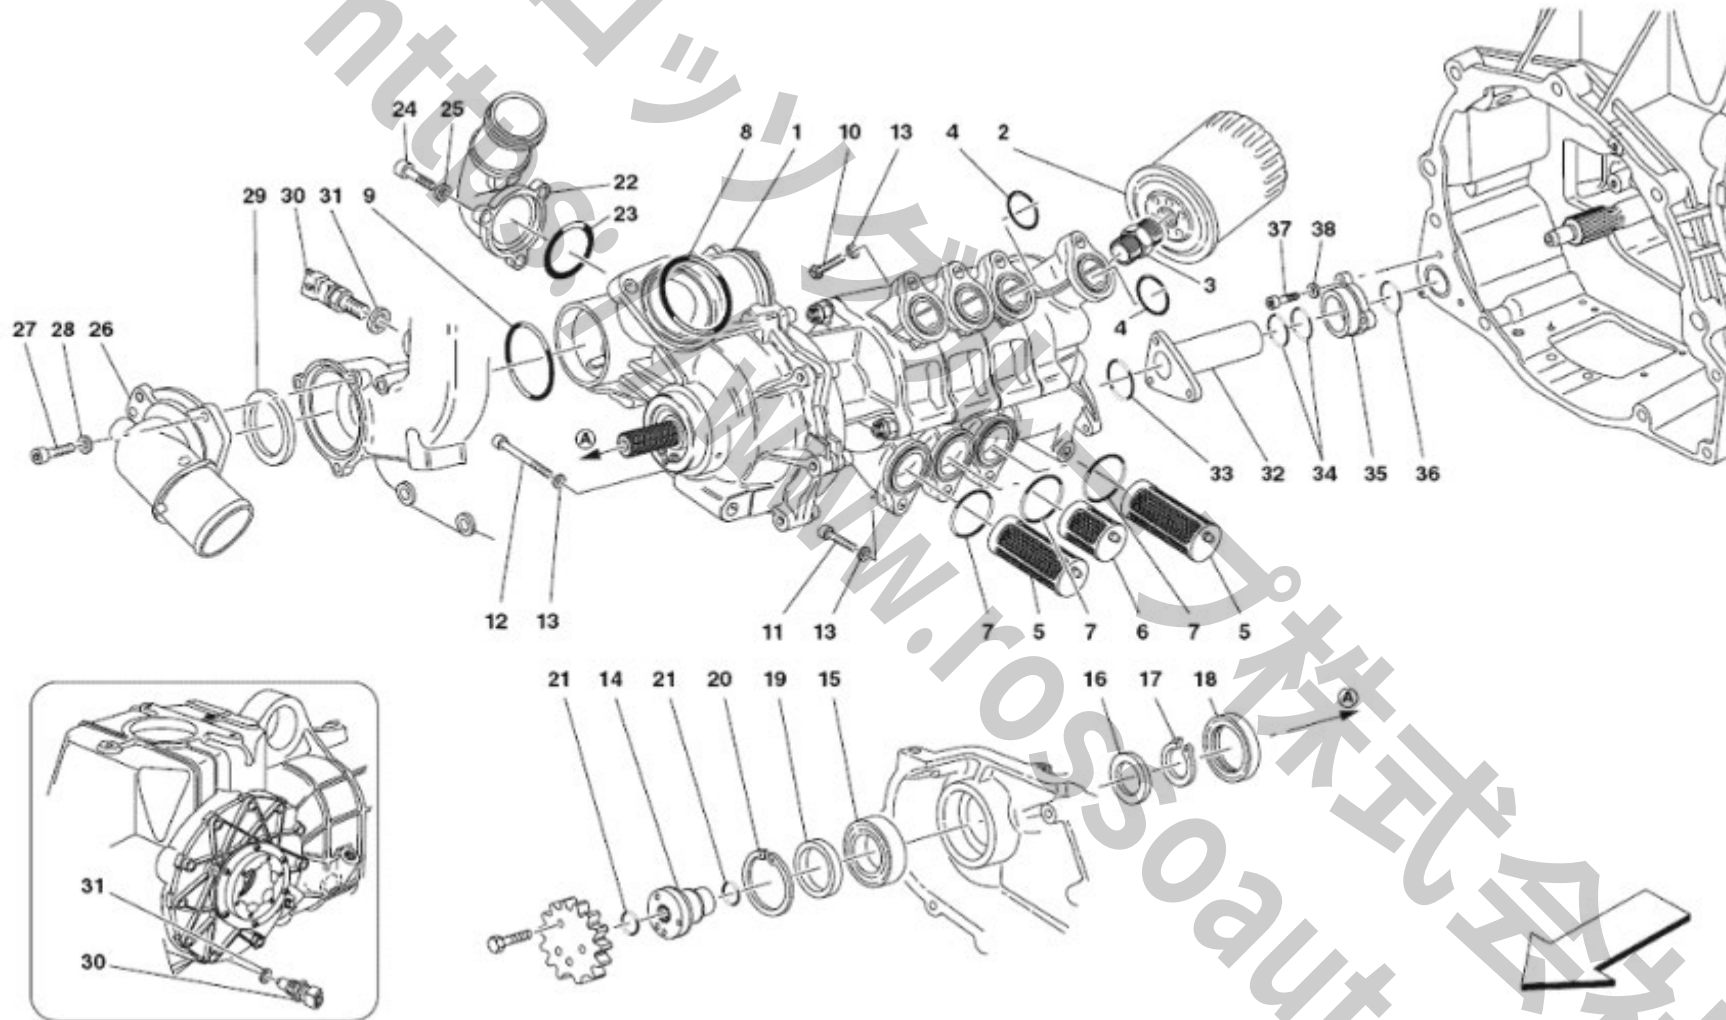

<017-Water_Oil-Pump>


No.	Part No.	Name	Qty
1	217628	COMPLETE WATER AND OIL PUMP	1
2	218429	OIL FILTER CARTRIDGE	1
3	177604	THREADED UNION	1
4	133938	O.R. GASKET	4
5	187051	LATERAL OIL RECOVERY	2
6	187162	CENTRAL OIL RECOVERY	1
7	148225	O.R. GASKET	3
8	132829	O.R. GASKET	1
9	141250	O.R. GASKET	1
10	185345	SCREW	4
11	14306524	SCREW	3
11	14306424	SCREW	3
12	14359324	SCREW	2
13	11198079	WASHER	10
14	189778	COUPLING	1
15	155996	BALL BEARING	1
16	177597	COMPENSATOR RING	1
17	11067276	SEEGER RING	1
18	121276	OIL SEAL	1
19	177596	COMPENSATOR RING	1
20	11381076	SEEGER RING	1
21	186272	O.R. GASKET	2
22	196104	WATER INLET COVER	1
23	154191	O.R. GASKET	1
24	14432224	SCREW	3
25	11197774	WASHER	3
26	230887	THERMOSTAT COVER	1
27	14305324	SCREW	3
28	11197774	WASHER	3
29	137873	GASKET	1
30	180137	WATER TEMPERATURE SENSOR	2
31	10298460	GASKET	2
32	234583	OIL SUCTION PIPE	1
33	151914	GASKET	1
34	149536	GASKET	2
35	234582	FLANGE	1

36	153628 GASKET	1
37	14432224 SCREW	6
38	11197774 WASHER	6
41	233063 CLAMP	1

ロッソグループ株式会社
<https://www.rossoauto.com>

<018-nourice>


The diagram illustrates the fuel system components and their connections. Key parts include the fuel pump (1), fuel filter (2), fuel lines (3, 4, 5, 6, 7, 8, 9, 10, 11, 12, 13, 14, 15, 16, 17, 18, 19, 20, 21, 22, 23, 24, 25, 26, 27, 28, 29, 30, 31, 32, 33), and fuel injectors (34, 35, 36, 37, 38, 39, 40, 41, 42, 43, 44, 45, 46, 47, 48, 49, 50, 51, 52, 53, 54, 55, 56, 57, 58, 59, 60, 61, 62, 63, 64, 65, 66, 67, 68, 69, 70, 71, 72, 73, 74, 75, 76, 77, 78, 79, 80, 81, 82, 83, 84, 85, 86, 87, 88, 89, 90, 91, 92, 93, 94, 95, 96, 97, 98, 99, 100). The diagram shows the flow of fuel from the pump through the filter and lines to the injectors. A large arrow indicates the direction of fuel flow from the pump towards the injectors.

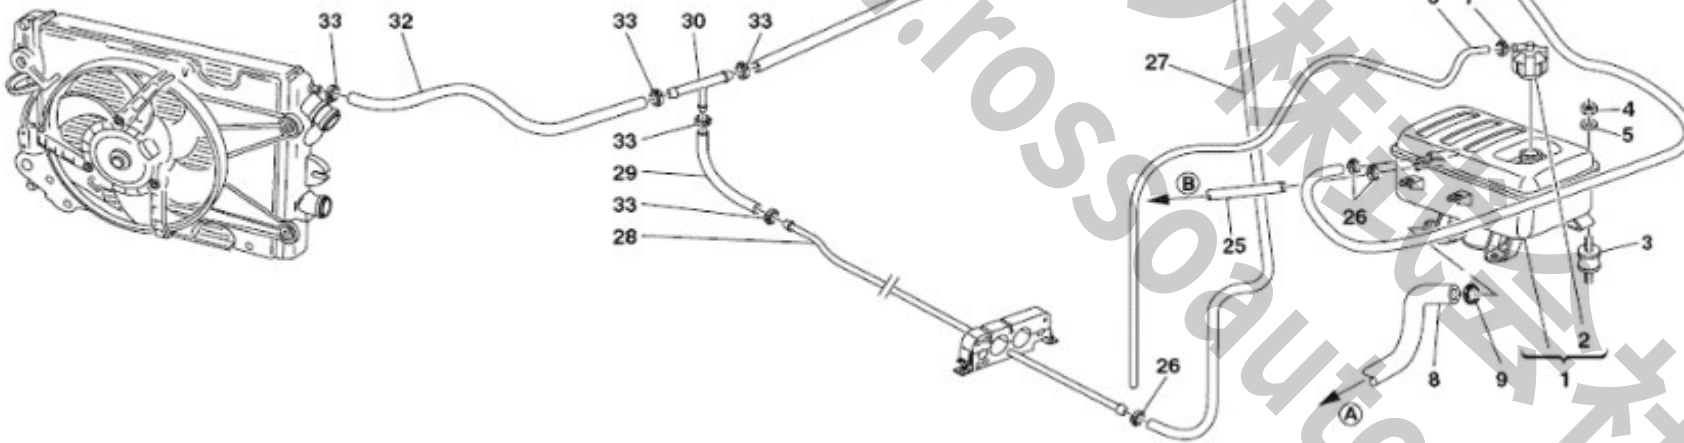 

<018-nourice>

No.	Part No.	Name	Qty
1	221952	COMPLETE FUEL CANISTER	1
2	145030	TANK PLUG	1
3	142202	PAD	4
4	15896214	NUT	4
5	12643724	WASHER	4
6	179280	VENT PIPE	1
7	183919	ELASTIC COLLAR	1
8	223409	COMPLETE TUBE	1
9	183126	CLAMP	2
10	10450790	CLAMP (Ø22 MM.)	1
11	221780	HEAT EXCHANGER	1
12	206477	R.H. PIPE	1
13	206482	L.H. PIPE	1
14	203787	UNION	2
15	10259960	GASKET	4
16	210726	SLEEVE	1
17	178053	CLAMP OLD SOLUTION	2
18	223410	RUBBER HOSE	1
19	178053	CLAMP OLD SOLUTION	2
20	220936	RUBBER HOSE	1
21	201440	MULTIPLE UNION	1
22	177995	CLAMP	2
23	207211	PIPE FROM HEAT EXCHANGER	1
24	177995	CLAMP	2
25	220936	RUBBER HOSE	1
26	177995	CLAMP	4
27	211667	RUBBER HOSE FROM NOURICE TO UNDERFLOOR	1
28	209401	UNDERFLOOR TUBE	1
29	205090	RUBBER HOSE	1
30	181272	WAY UNION	1
31	205089	R.H. RUBBER HOSE	1
32	205088	L.H. RUBBER HOSE	1
33	177995	CLAMP	6

 
<019-Cooling-System>

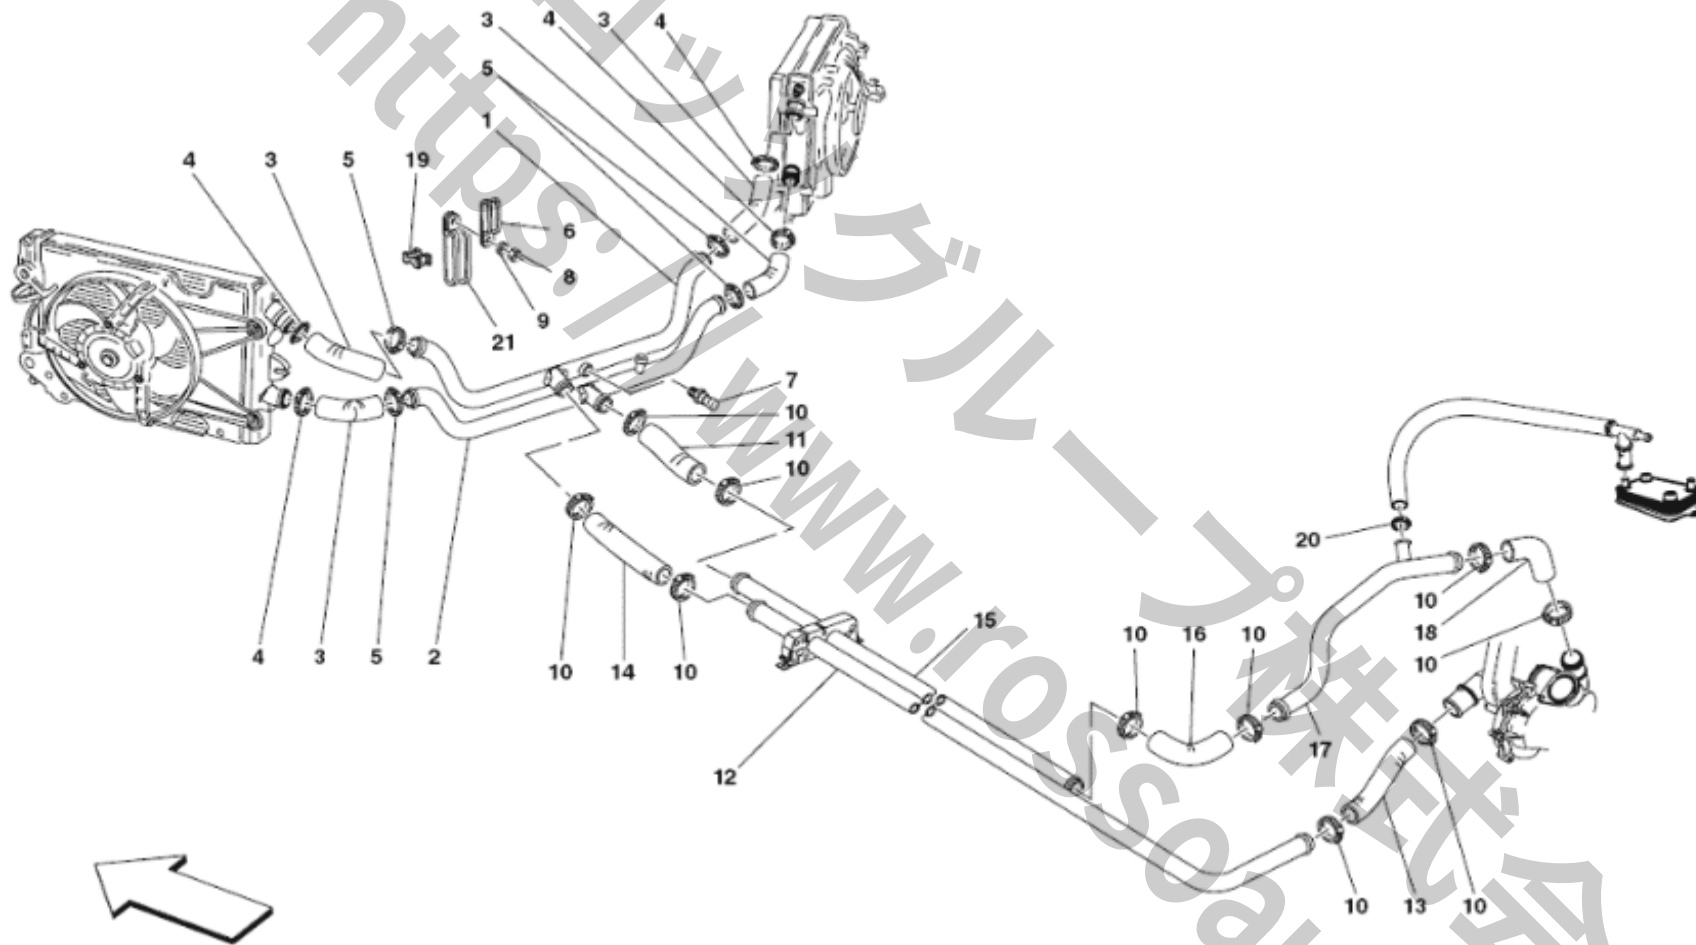

<019-Cooling-System>

No.	Part No.	Name	Qty
1	217917	DELIVERY WATER PIPE	1
2	223591	RETURN WATER PIPE	1
3	220948	RUBBER HOSE	4
4	13001690	SCREW COLLAR	4
5	168220	SCREW COLLAR	4
6	61712500	BRACKET	2
7	176322	TEMPERATURE SWITCH	1
8	102741	NUT	2
9	10730114	WASHER	2
10	13001690	SCREW COLLAR	10
11	202547	DELIVERY RUBBER HOSE	1
12	206621	UNDERFLOOR DELIVERY ALUMINIUM TUBE	1
13	208338	RUBBER HOSE	1
14	202548	RETURN RUBBER HOSE	1
15	206728	UNDERFLOOR RETURN ALUMINIUM TUBE	1
16	193463	RETURN RUBBER HOSE	1
17	209686	ALUMINIUM TUBE	1
18	206717	RUBBER HOSE	1
19	183641	SPACER	2
20	177995	CLAMP	1
21	183642	BRACKET WITH SHEATH	2

 
<020-Cooling-System-Radiator>

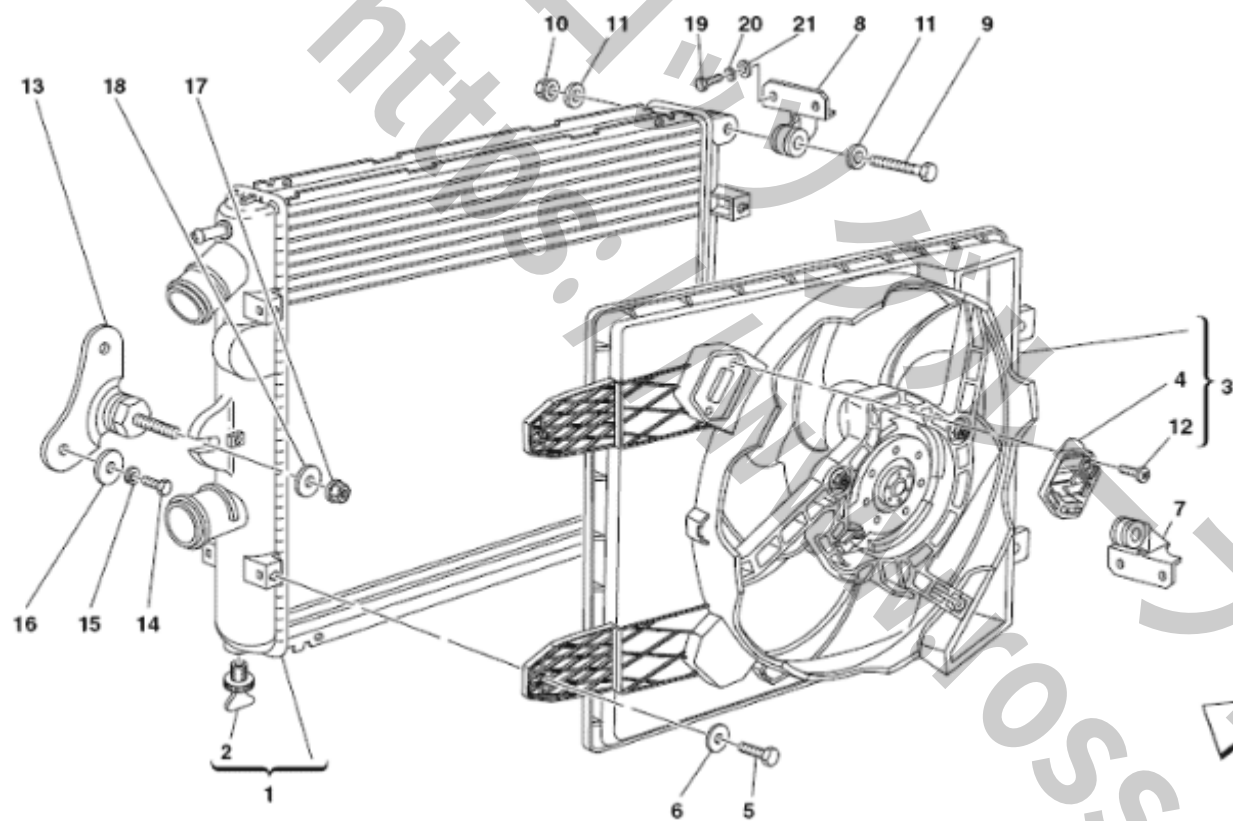

<020-Cooling-System-Radiator>

No.	Part No.	Name	Qty
1	194078	WATER RADIATOR	2
2	198965	WATER OUTLET PLUG	2
3	241068	COMPLETE L.H. ELECTROFAN	1
3	241069	COMPLETE R.H. ELECTROFAN	1
4	185543	RESISTOR	1
5	16286024	SCREW	3
6	12647624	WASHER	3
7	194519	LOWER RADIATOR SUPPORT	2
8	242995	UPPER RADIATOR SUPPORT	2
9	16044324	SCREW	2
10	14058511	NUT	2
11	12646724	WASHER	4
12	1595881	SCREW	2
13	205658	L.H. RADIATOR CENTRAL BRACKET	1
13	205354	R.H. RADIATOR CENTRAL BRACKET	1
14	10902424	SCREW	4
15	127494	WASHER	4
16	12640624	WASHER	4
17	14058511	NUT	2
18	124338	WASHER	2
19	14305324	SCREW	8
20	127494	WASHER	8
21	12644424	WASHER	8
 
<021-Clutch-And-Controls>

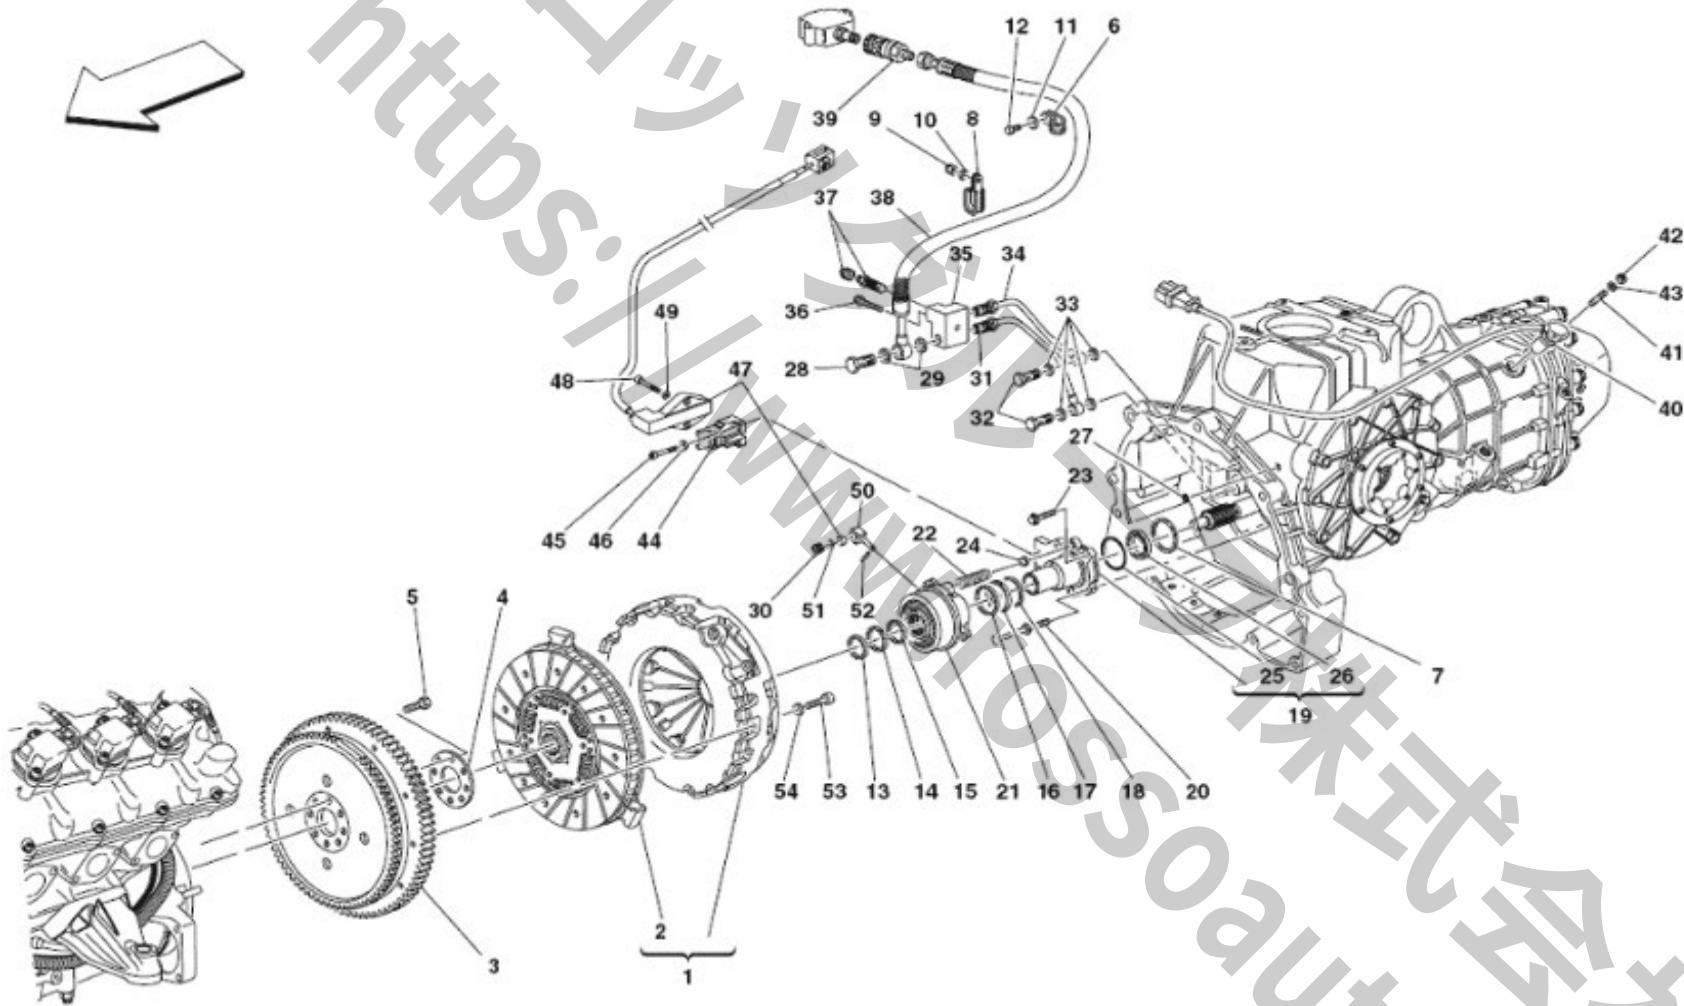


<021-Clutch-And-Controls>

No.	Part No.	Name	Qty
1	225306	COMPLETE CLUTCH	1
2		CLUTCH DISC	1
3	230425	COMPLETE ENGINE FLYWHEEL	1
4	103876	FLYWHEEL FIXING WASHER	1
5	201755	SCREW	8
6	121834	CLAMP	1
7	173360	SPACER	2
8	139512	CLAMP	1
9	102741	NUT	1
10	10519424	WASHER	1
11	10519424	WASHER	1
12	10979424	SCREW	1
13	181837	SCRAPER RING	1
14	208014	RING	1
15	181838	SEAL RING	1
16	181828	SEAL RING	1
17	154507	RING	1
18	181836	SCRAPER RING	1
19	207539	COMPLETE BEARING SUPPORT FLANGE	1
20	201171	STUD FOR END OF STROKE	2
21	CRB-430-F1S	COMPLETE THRUST BEARING (VALID FOR F1 ONLY)	1
21	234943	COMPLETE THRUST BEARING (VALID FOR F1 ONLY)	1
22	155207	PRELOAD SPRING	2
23	16052024	SCREW	2
24	155206	SPACER	2
25	136140	O.R. GASKET	1
26	172363	SEALING RING	1
27	166432	O.R. GASKET	2
28	171454	UNION	1
29	10261060	GASKET	2
30	167802	PLUG	1
31	242066	CLUTCH CONTROL TUBE	1
32	11903811	UNION	2
33	10284460	GASKET	4
34	242074	BLEEDER SYSTEM PIPE	1
35	235706	BLOCK	1

35	235706 BLOCK	1
36	16286324 SCREW	1
37	121699 BLEEDER SCREW	1
38	239429 COMPLETE CLUTCH HOSE	1
39	225148 FEMALE COUPLING	1
40	168729 ELECTRO-MAGNETIC SENSOR	1
41	11500124 STUD	1
42	10720124 NUT	1
43	12604274 WASHER	1
44	201160 SUPPORT	1
45	14358524 SCREW	2
46	10519378 WASHER	2
47	219340 COMPLETE SENSOR KIT	1
48	14303324 SCREW	2
49	10519224 WASHER	2
50	165567 PIN	1
51	165658 O.R. GASKET	1
52	14158570 PIN	1
53	204385 SCREW	9
54	11194379 WASHER	9

 
<022-pedals>

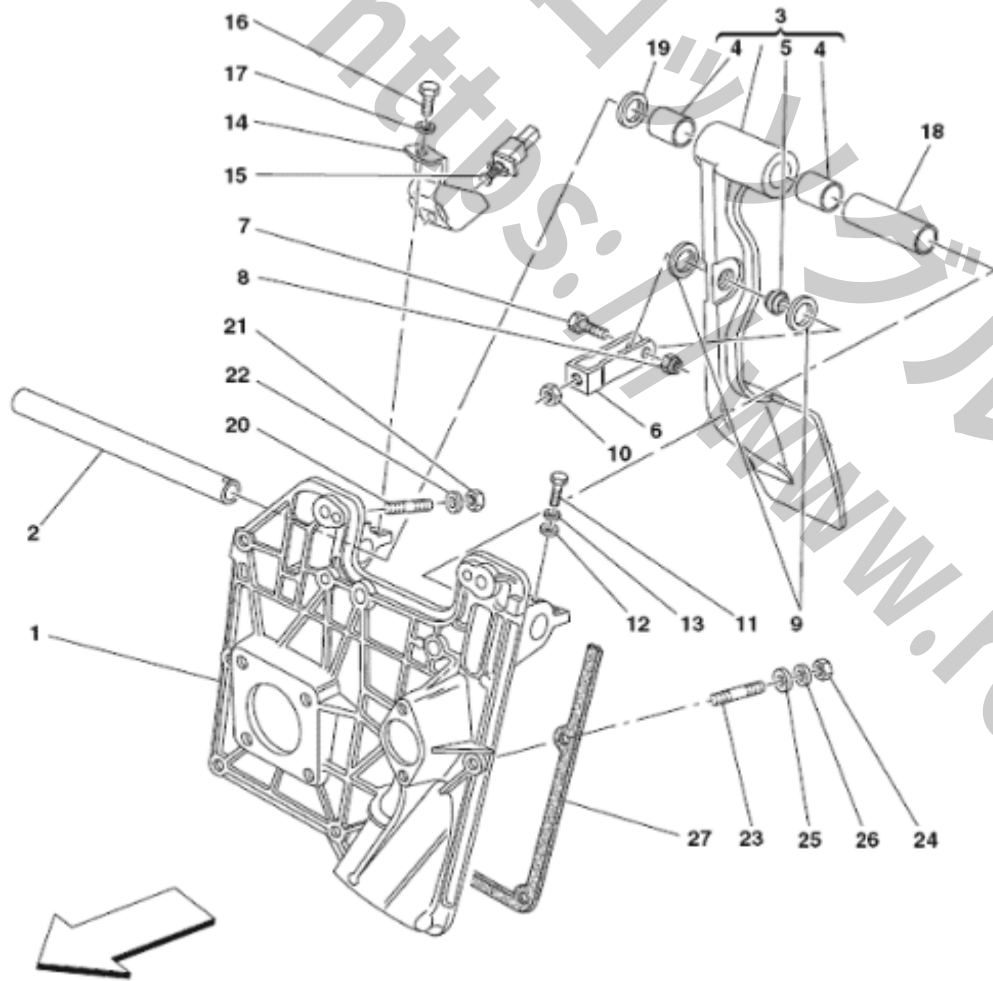

<022-pedals>

No.	Part No.	Name	Qty
1	176464	PEDALS SUPPORT	1
2	176466	PEDALS SUPPORT PIN	1
3	180560	COMPLETE BRAKE PEDAL	1
4	103163	BUSHING	2
5	176475	BALL JOINT	1
6	199754	FORK	1
7	16043724	SCREW	1
8	147985	NUT	1
9	176522	PLASTIC WASHER	2
10	16102324	NUT	1
11	10902424	SCREW	1
12	14488624	WASHER	1
13	127494	WASHER	1
14	219558	SWITCH SUPPORT	1
15	201957	PUSH-BUTTON SWITCH	1
16	16043224	SCREW	1
17	127496	WASHER	1
18	176918	SPACER	1
19	113834	SPACER WASHER	1
19	113836	SHIM, 1,4 MM.	1
19	113835	SPACER WASHER	1
19	178340	SPACER WASHER	1
20	13516924	STUD	1
21	16104125	NUT	6
22	12638524	WASHER	1
23	13517024	STUD	2
24	16102377	NUT	2
25	13550321	WASHER	2
26	12601374	WASHER	2
27	176524	PEDALS SUPPORT GASKET	1
 
<023-Clutch-and-Gearbox-Hydr>

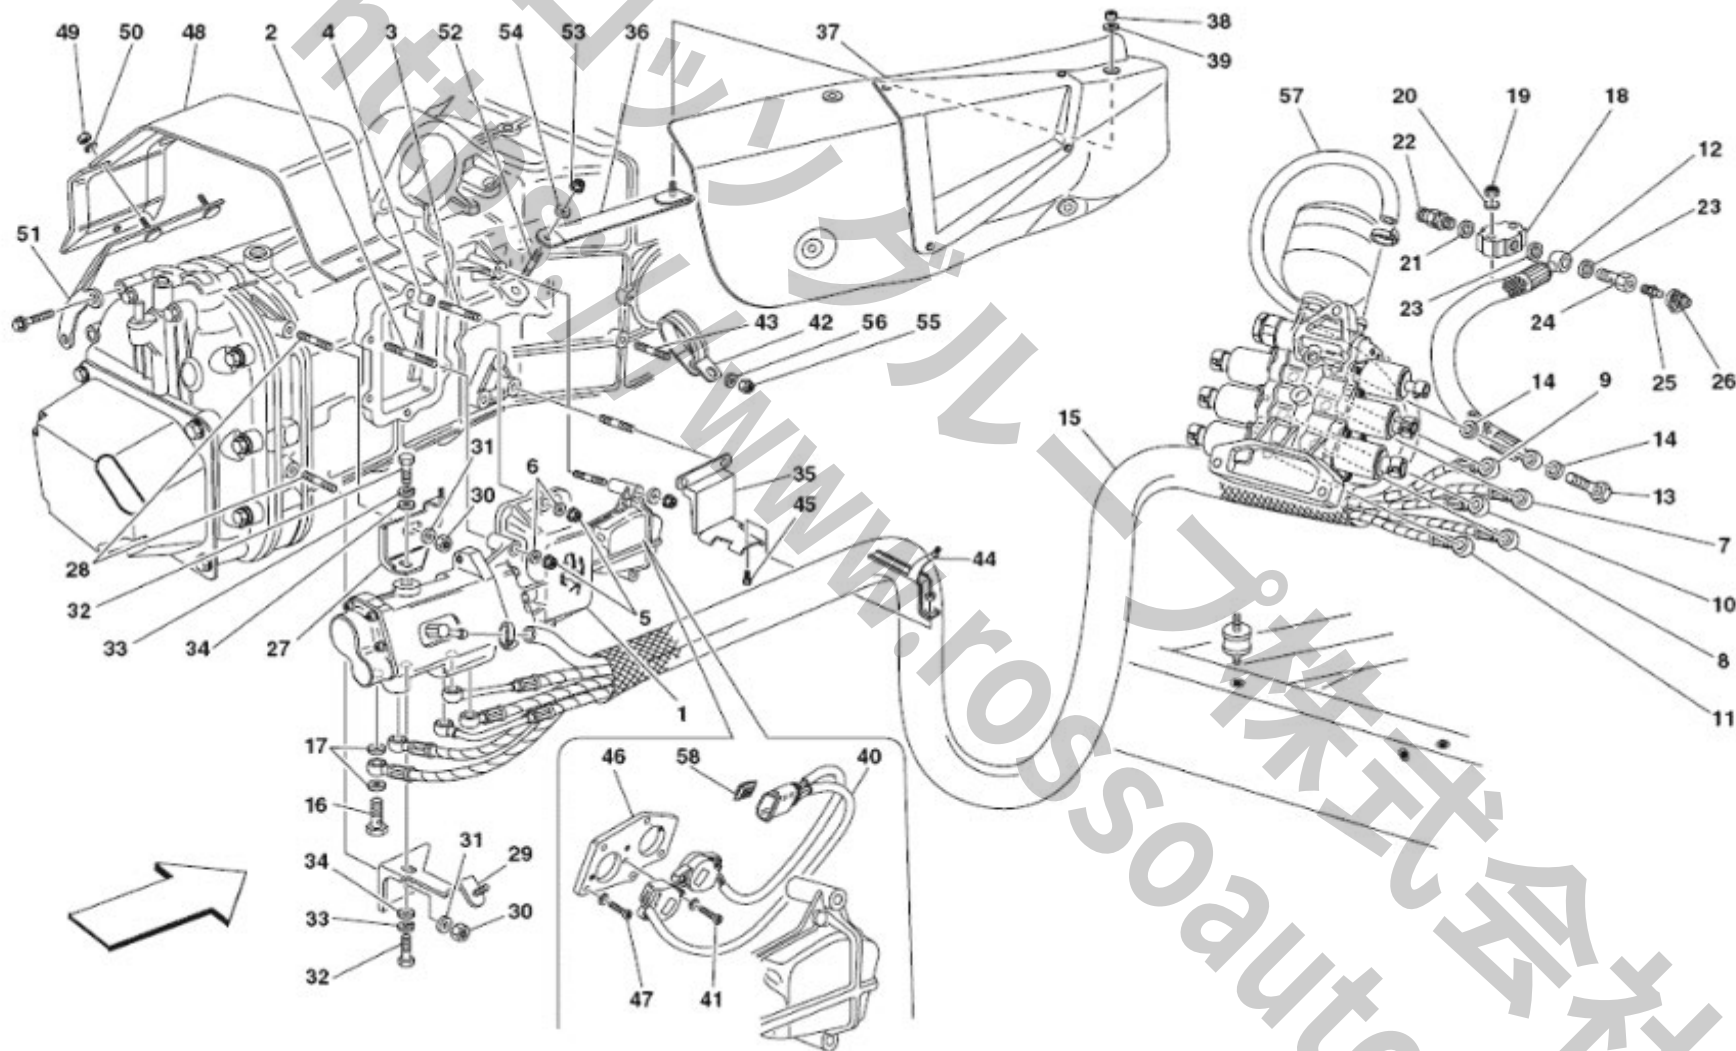


<023-Clutch-and-Gearbox-Hydr>

No.	Part No.	Name	Qty
0	232406	F1 GEARBOX SYSTEM COMPONENTS KIT	1
1	248084	COMPLETE HYDRAULIC ACTUATOR	1
2	11501024	STUD	4
3	11500724	STUD	2
4	103038	DOWEL	2
5	16100811	NUT	2
6	127496	WASHER	2
7	179340	PIPE (EV1)	1
8	179342	PIPE (EV2)	1
9	179343	PIPE (EV3)	1
10	179344	PIPE (EV4)	1
11	179345	PIPE (EV5)	1
12	217346	PIPE FROM PUMP TO BLOCK	1
13	204545	UNION	3
14	10261060	GASKET	12
15	179346	PROTECTION SHEATH	1
16	171454	UNION	2
16	204543	UNION	3
17	10261060	GASKET	10
18	175667	BLOCK	1
19	15896214	NUT	2
20	12601274	WASHER	2
21	171755	WASHER	1
22	210468	QUICK MALE COUPLING	1
23	10261060	GASKET	2
24	171630	UNION	1
25	152954	BLEEDER SCREW	1
26	152955	PROTECTION BOOT	1
27	174257	UPPER ACTUATOR SUPPORT	1
28	13516424	STUD	2
29	195549	ACTUATOR SUPPORT LOWER BRACKET	1
30	16100811	NUT	2
31	127496	WASHER	2
32	16043124	SCREW	2
33	127496	WASHER	2
34	10519624	WASHER	2

35	208101 PIPES SUPPORTING BRACKET	1
36	208242 SHIELD SUPPORTING BRACKET	1
37	220681 SHIELD FOR ACTUATOR	1
38	160472 NUT	4
39	12637824 WASHER	4
40	248095 SENSORS KIT	1
41	192865 SCREW	4
42	124034 BRACKET WITH SHEATH	1
43	13540724 STUD	1
44	208103 BRACKET	1
45	16043124 SCREW	1
46	222502 POTENTIOMETERS FLANGE	1
47	192866 SCREW	4
48	208622 SENSOR PROTECTION SHIELD	1
49	160472 NUT	2
50	12637824 WASHER	2
51	180745 SHIELD SUPPORTING BRACKET	1
52	13516424 STUD	1
53	177778 NUT	1
54	12638524 R.H. SIDE WASHER	2
55	102741 NUT	1
56	12643724 WASHER	1
57	180965 OIL RECYCLE PIPE	1
58	213472 CLIP	1
 
<024-power-unit-and-tank>

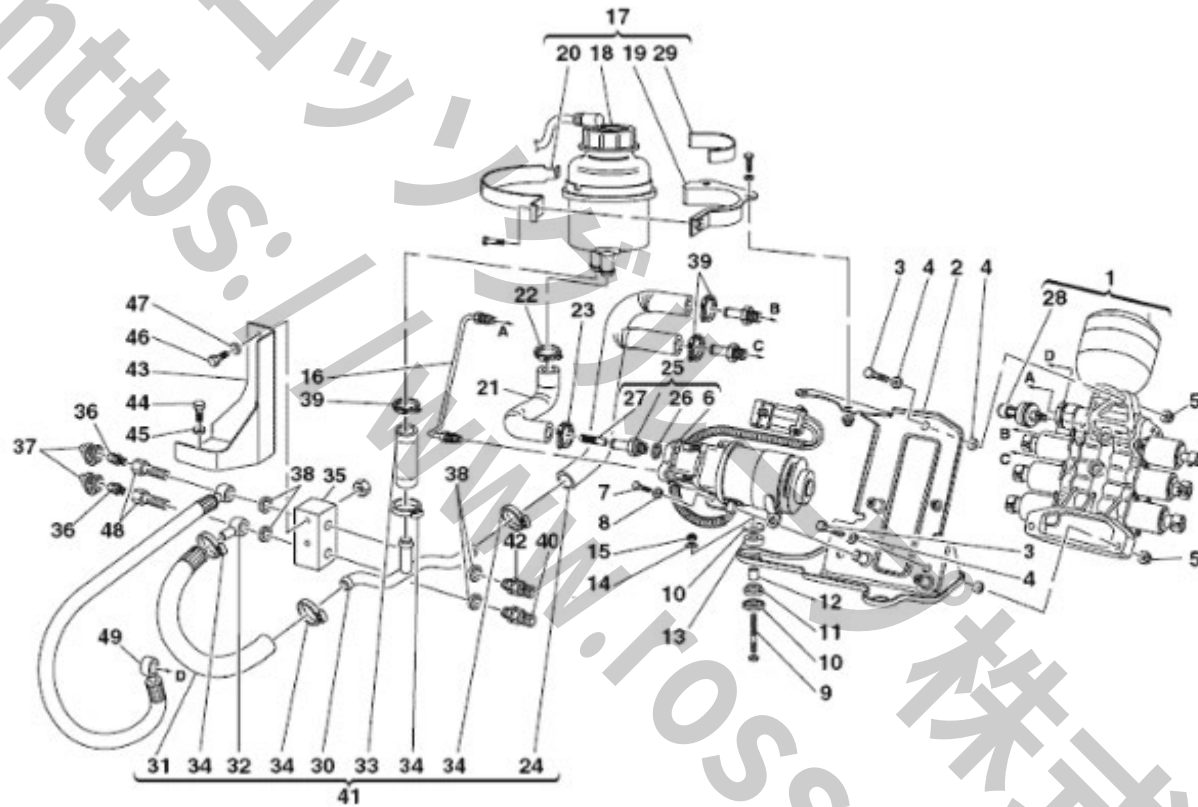


<024-power-unit-and-tank>

No.	Part No.	Name	Qty
0	218562	F1 GEARBOX SYSTEM COMPONENTS KIT	1
1	179533	POWER UNIT	1
2	248092	POWER UNIT SUPPORTING BRACKET	1
3	16043934	SCREW	3
4	14496524	WASHER	6
5	175283	NUT	3
6	248083	ELECTRIC PUMP	1
7	14305724	SCREW	3
8	14496424	WASHER	3
9	13541624	STUD	4
10	179636	CUP	8
11	179639	LOWER PAD	4
12	179637	SPACER	4
13	179638	UPPER PAD	4
14	12620474	WASHER	4
15	14058411	NUT	4
16	218564	PIPE FROM ELECTRICAL PUMP TO POWER UNIT	1
17	248086	OIL TANK	1
18	202522	PLUG	1
19	179593	RADIATOR SUPPORTING TANK SUPPORT	1
20	171746	SUPPORT CLAMP	1
21	218563	PIPE FROM TANK TO PUMP	1
22	13432670	SCREW COLLAR	1
23	13430770	SCREW COLLAR	1
24	221129	OIL RETURN TUBE	1
25	185858	COMPLETE UNION	1
26	281980	GASKET	1
27	193540	UNION FILTER	1
28	190662	PRESSURE SENSOR	1
29	183718	RUBBER GASKET	1
30	213202	CORE	1
31	199566	RETURN TUBE	1
32	204451	RING	1
33	213293	PIPE FROM TANK	1
34	13430770	SCREW COLLAR	4
35	220756	BLOCK	1

36	152954 UNION WITH EXHAUST VALVE	2
37	152955 PROTECTION BOOT	2
38	10261060 GASKET	4
39	221148 COLLAR	3
40	208072 COUPLING	1
41	213293 PIPE FROM TANK	1
42	210468 QUICK MALE COUPLING	1
43	220767 BRACKET	1
44	10902224 SCREW	2
45	127494 WASHER	2
46	10903024 SCREW	2
47	12644424 WASHER	2
48	171630 UNION	2
49	204435 FEED PIPE	1
 
<025-Gearbox---Covers>

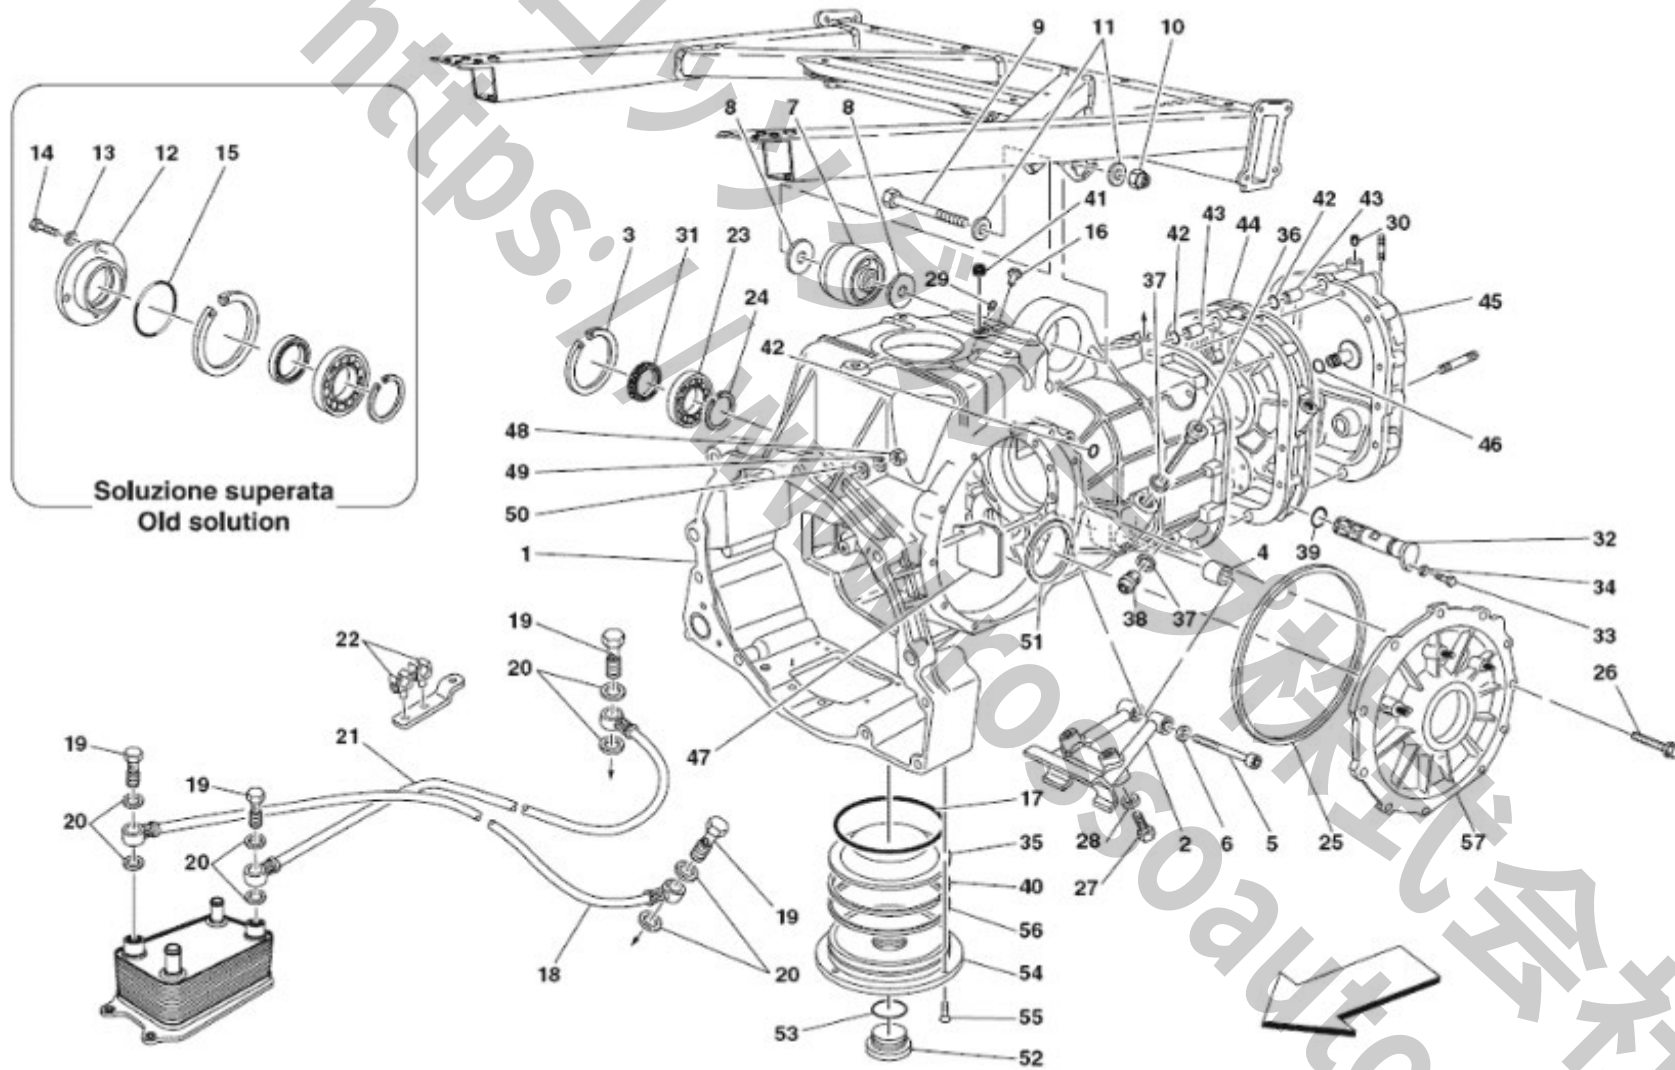


<025-Gearbox---Covers>

No.	Part No.	Name	Qty
0	219180	COMPLETE TRANSMISSION	1
1	227700	GEARBOX	1
2	215599	GUARD ABSORBER	1
3	185723	SEEGER RING	1
4	213174	BUSHING	1
5	14314774	SCREW	1
6	13507734	WASHER	1
7	237531	GEARBOX SUPPORT PAD	1
8	188141	RETAINING WASHER	2
9	11117134	SCREW	1
10	106004	NUT	1
11	14496824	WASHER	2
12	183981	R.H. FLANGE FOR SHAFT	2
13	11194377	WASHER	4
14	10902224	SCREW	4
15	14460981	O.R. GASKET	1
16	197797	BREATHER	1
17	190183	GASKET	1
18	198163	OIL DELIVERY TUBE	1
19	184727	UNION	4
20	145192	GASKET	8
21	198166	OIL RETURN TUBE	1
22	652500	CLIP	0
23	184995	BALL BEARING	1
24	184994	FLEXIBLE RING	1
25	205881	THICKNESS	1
25	206349	THICKNESS	1
25	206350	THICKNESS	1
25	206351	THICKNESS	1
26	16287321	SCREW	11
27	15231524	SCREW	2
28	12601479	RETAINING WASHER	2
29	143260	THREADED PLUG	1
30	143281	THREADED PLUG	1
30	14326050	THREADED PLUG	1
31	181618	OIL SEAL	1

31	184006 R.H. OIL RING	1
32	182100 GEAR BOX OIL FILTER	1
33	10977624 SCREW	1
34	11199277 WASHER	1
35	122429 FILTER	1
36	182117 OIL LEVEL ROD	1
37	10263460 GASKET	3
38	183962 PLUG	2
39	182119 O.R. GASKET	1
40	185723 SEEGER RING	1
41	14324911 PLUG	2
42	14456981 O.R. GASKET	4
43	150957 CENTERING DOWEL	4
44	173611 PLATE	1
45	212634 REAR COVER	1
46	137192 O.R. GASKET	2
47	183986 PLATE	1
48	133988 NUT	7
49	127497 WASHER	7
50	144966 WASHER	24
51	185034 REGISTER RING	1
51	185029 REGISTER RING	1
51	185033 REGISTER RING	1
52	102761 PLUG	40
53	102650 GASKET	60
54	198596 OIL FILTER COVER	1
55	14440620 SCREW	4
56	207541 GASKET	1
57	171117 DIFFERENTIAL COVER	1

 
<026-Main-Shaft-Gears>

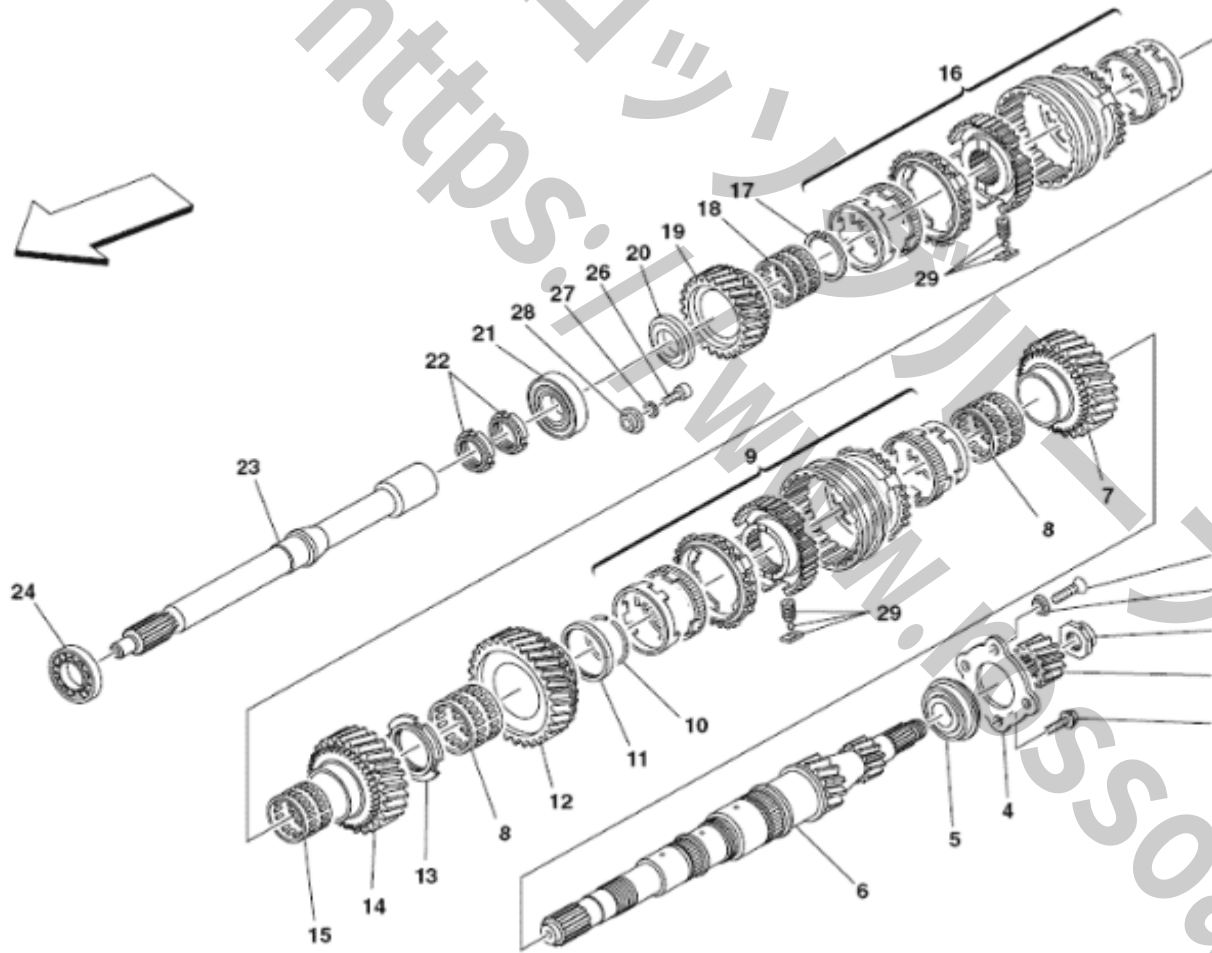

<026-Main-Shaft-Gears>

No.	Part No.	Name	Qty
1	183967	RING NUT	1
2	14442027	SCREW	2
3	209282	REVERSE DRIVING GEAR	1
4	183984	REAR PLATE	1
5	184019	BALL BEARING	1
6	210001	MAIN SHAFT	1
7	183949	PINION FOR 5TH GEAR	1
8	184015	ROLLER CAGE	2
9	185166	5TH AND 6TH GEAR COMPLETE SYNCHRONIZER	1
10	184011	FLEXIBLE RING	1
11	183970	SPACER FOR PINION FOR 6TH GEAR	1
12	183950	PINION FOR 6TH GEAR	1
13	184010	RING NUT	1
14	183947	PINION FOR 3RD GEAR	1
15	184014	ROLLER CAGE	1
16	185165	3RD AND 4TH GEAR	1
17	184042	FLEXIBLE RING	1
18	184005	ROLLER CAGE	1
19	183948	PINION FOR 4TH GEAR	1
20	183973	WASHER	1
21	184021	ROLLER BEARING	1
22	184012	RING NUT	2
23	209281	CLUTCH SHAFT	1
24	184013	BALL BEARING	1
25	16287124	SCREW	2
26	14305724	SCREW	1
27	10569274	WASHER	1
28	183985	BUSHING	1
29	188320	PAD FOR SYNCHRONIZER/BALL/SPRING REPLACEMENT KIT	2
30	12606979	WASHER	2
 
<027-Lay-Shaft-Gears>

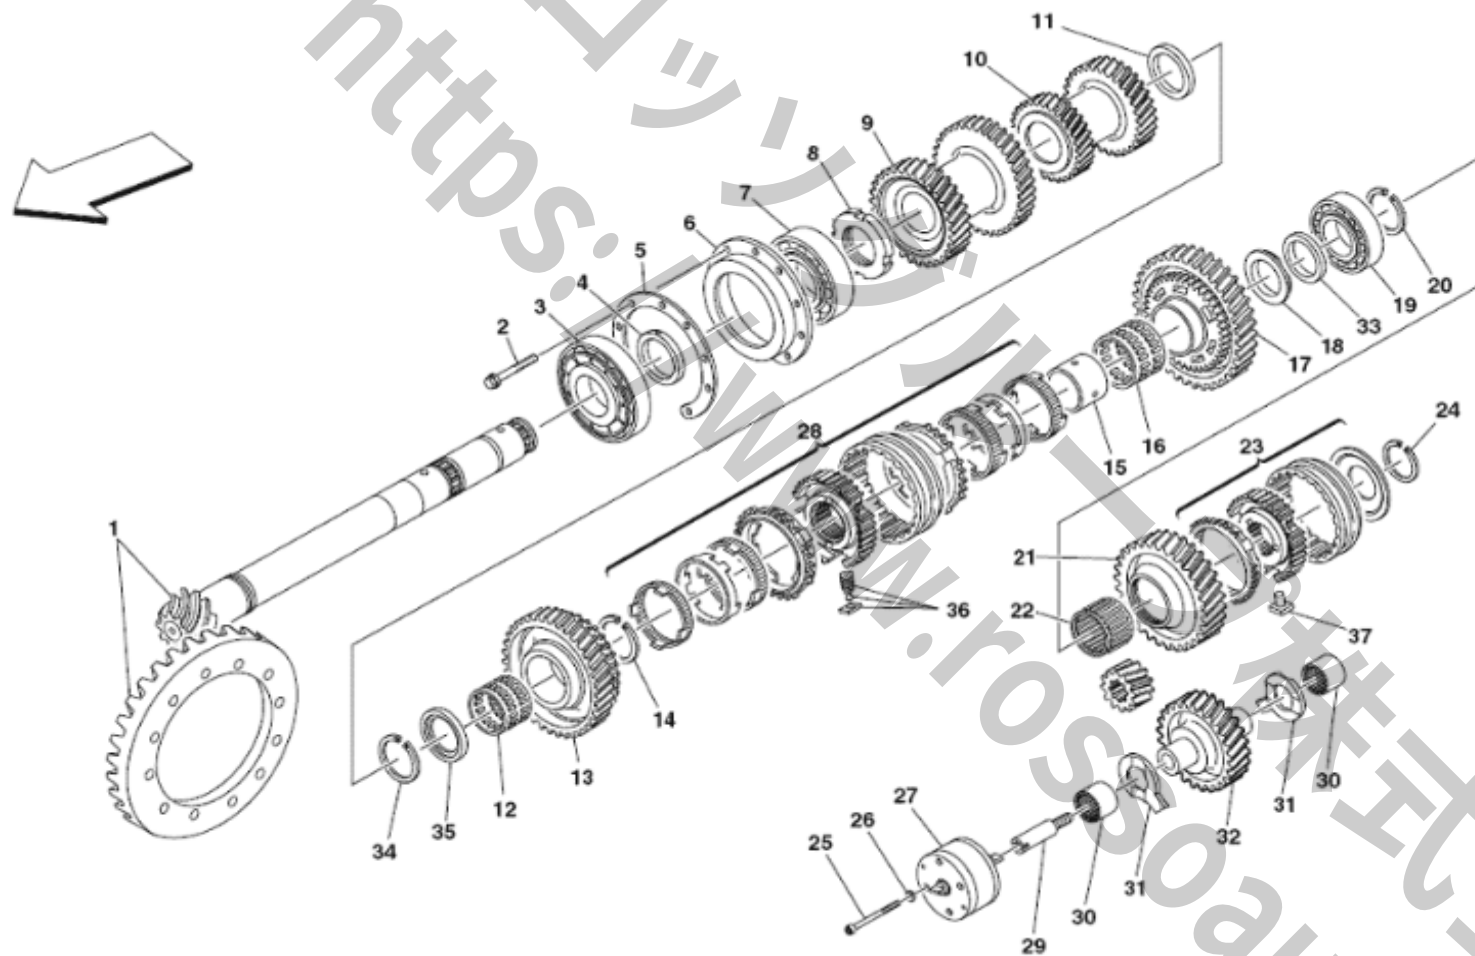


<027-Lay-Shaft-Gears>

No.	Part No.	Name	Qty
1	220949	COMPETE BEVEL SET	1
2	16287730	SCREW	7
3	185022	ROLLER BEARING	1
4	185027	REGISTER RING	1
4	185045	REGISTER RING	1
4	185028	REGISTER RING	1
5	185042	REGISTER RING	1
5	185044	REGISTER RING	1
5	185044	REGISTER RING	1
6	185020	BEARING SUPPORT	1
7	185021	ROLLER BEARING	1
8	196667	RING NUT	1
9	185018	3RD AND 4TH DRIVEN GEAR	1
10	188461	5TH AND 6TH DRIVEN GEAR	1
11	188497	SPACER	1
12	184014	ROLLER CAGE	1
13	183946	PINION FOR 2ND GEAR	1
14	185037	FLEXIBLE RING	1
14	185036	FLEXIBLE RING	1
14	183976	FLEXIBLE RING	1
15	183971	BUSHING	1
16	184016	ROLLER CAGE	1
17	183945	PINION FOR 1ST GEAR	1
18	183972	RING	1
19	184020	ROLLER BEARING	1
20	184042	FLEXIBLE RING	1
21	199752	COMPLETE PINION FOR REVERSE GEAR	1
22	184018	ROLLER CAGE	1
23	193439	REVERSE GEAR COMPLETE SYNCHRONIZER	1
24	184041	FLEXIBLE RING	1
25	14302424	SCREW	4
26	10571379	WASHER	4
27	185049	BEARBOX OIL PUMP	1
28	185164	1ST AND 2ND GEAR COMPLETE SYNCHRONIZER	1
29	185050	PIN	1
30	184017	ROLLER CASING	2

31	183975 RING	2
32	199737 IDLE GEAR FOR REVERSE	1
33	200924 SPACER	1
34	183976 FLEXIBLE RING	1
35	203800 RING	1
35	203801 RING	1
36	188320 PAD FOR SYNCHRONIZER/BALL/ SPRING REPLACEMENT KIT	1
37	193440 PADS/SYNCHRO REVERSE GEAR KIT	1

<https://www.rossoauto.com>

 
<028-Inside-Gearbox-Controls>

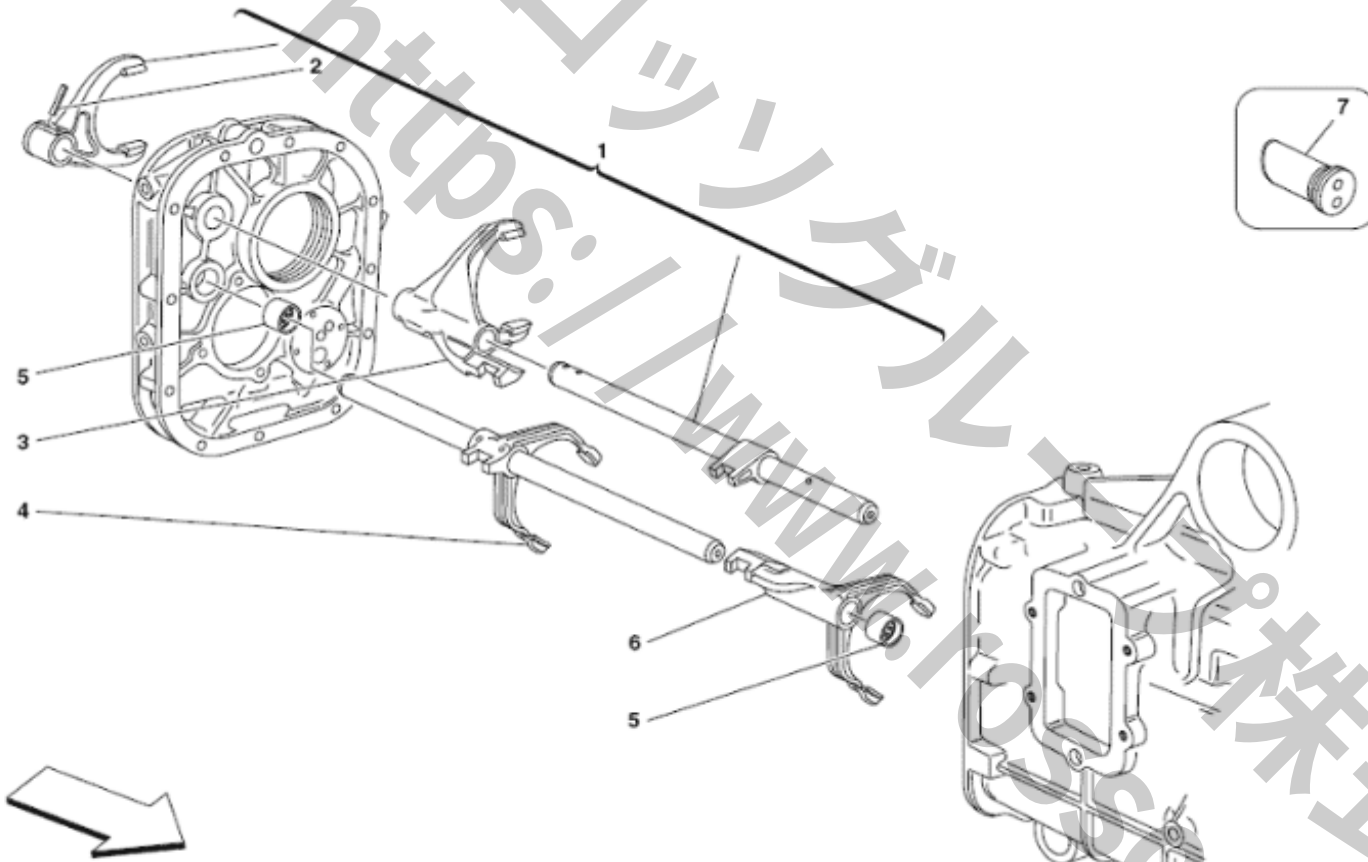

<028-Inside-Gearbox-Controls>

No.	Part No.	Name	Qty
1	185708	COMPLETE ROD FOR 1ST 2ND GEAR AND REVERSE	1
2	13910470	FLEXIBLE PIN	4
3	199742	CONTROL FORK FOR 1ST AND 2ND GEAR	1
4	183955	COMPLETE ROD FOR 5TH AND 6TH GEAR	1
5	183982	BEARING BUSH	2
6	211473	CONTROL FORK FOR 3RD AND 4TH GEAR	1
7	180127	PAD FOR HOLE	1

 
<029-Differential-&-Axle-Sha>

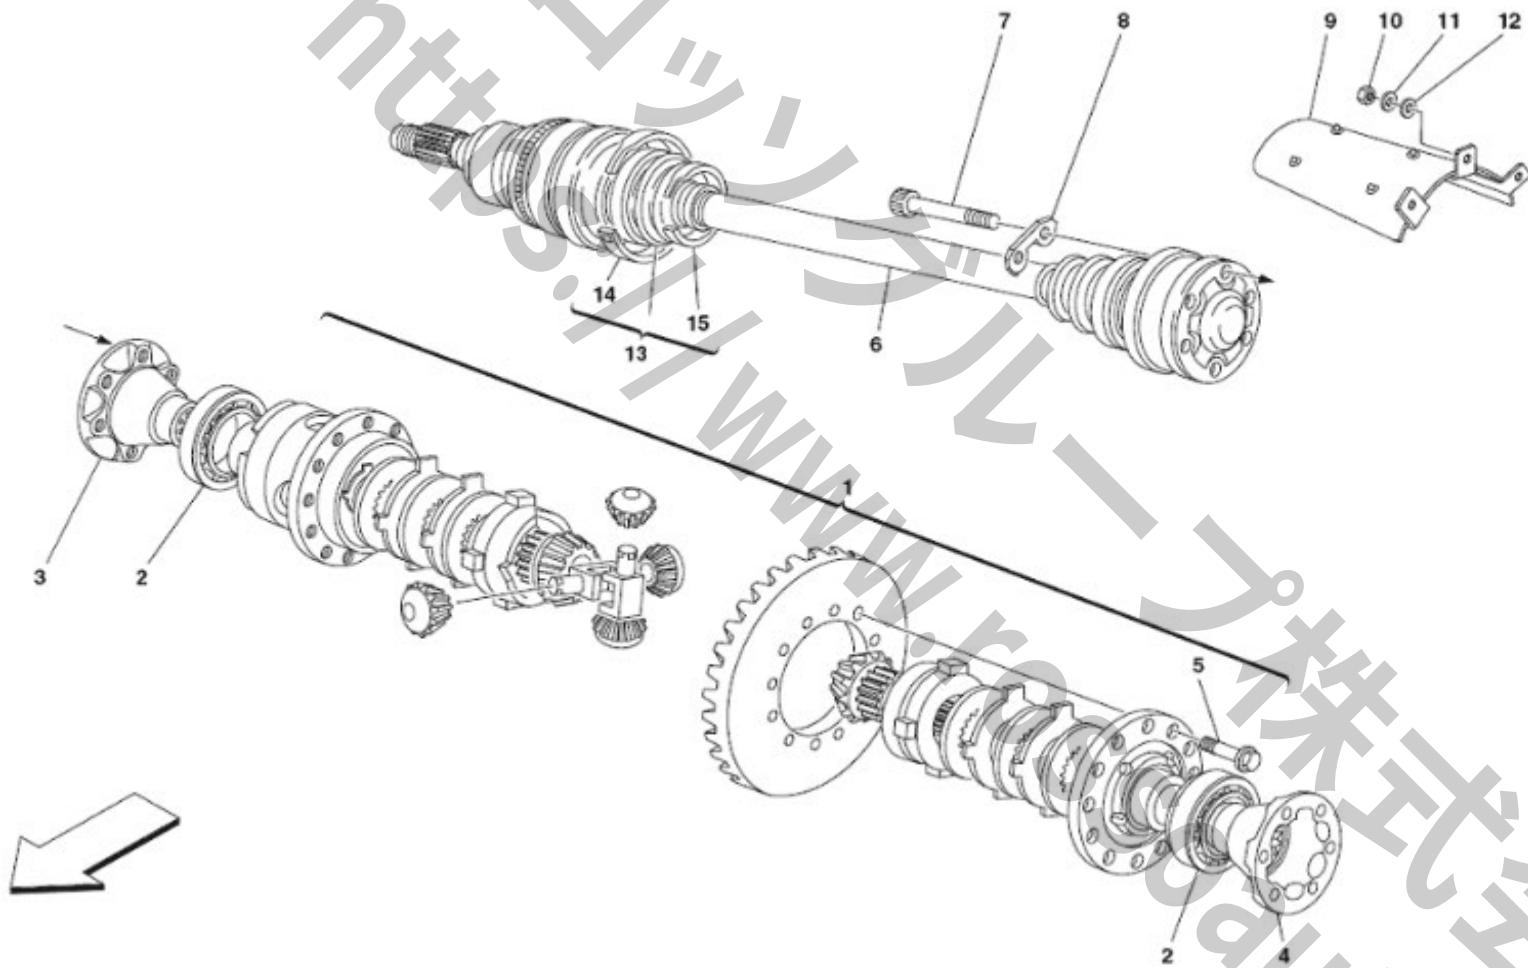

<029-Differential-&-Axle-Sha>

No.	Part No.	Name	Qty
1	221704	COMPLETE DIFFERENTIAL	1
2	184998	ROLLER BEARING	2
3	199743	R.H. SHAFT FOR DIFFERENTIAL EXIT	1
4	199744	L.H. SHAFT FOR DIFFERENTIAL EXIT	1
5	1839091	SCREW	2
6	201911	AXLE SHAFT	2
7	2239161	SCREW	2
8	149415	PLATE	6
9	208327	SHIELD FOR AXLE SHAFT PROTECTION	2
10	14048115	NUT	6
11	12647729	WASHER	6
12	10615674	WASHER	6
13	70000868	PROTECTION REPLACEMENT SET	2
14	172347	BIG CLAMP	4
15	154213	SMALL CLAMP	4

 
<030-brakes-and-clutch-hydra>

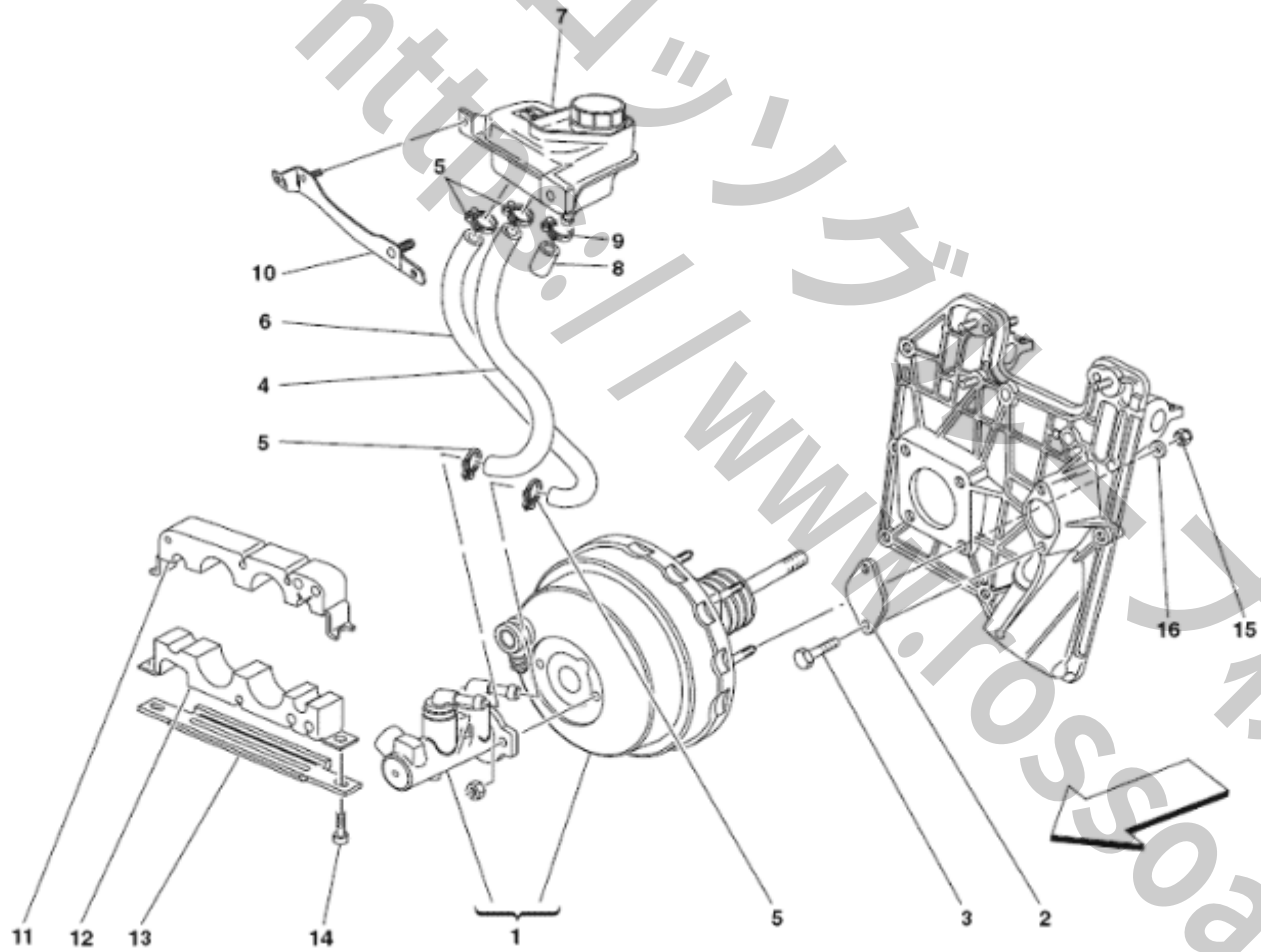

<030-brakes-and-clutch-hydra>

No.	Part No.	Name	Qty
1	198634	COMPLETE BRAKE BOOSTER	1
2	174177	FLANGE	1
3	1604302	SCREW	1
4	154011	RUBBER HOSE	1
5	13000190	SCREW COLLAR	4
6	194598	PIPE FROM REAR UNION TO TANK	1
7	203903	COMPLETE BRAKE OIL TANK	1
8	248008	PLUG	1
9	13000190	SCREW COLLAR	1
10	195352	BRACKET	1
11	201028	UPPER SUPPORT	3
12	201029	LOWER SUPPORT	3
13	211683	SMALL PLATE	3
14	6483060	SCREW	6
15	16104125	NUT	4
16	12601374	WASHER	4

 
<031-brake-booster-system>

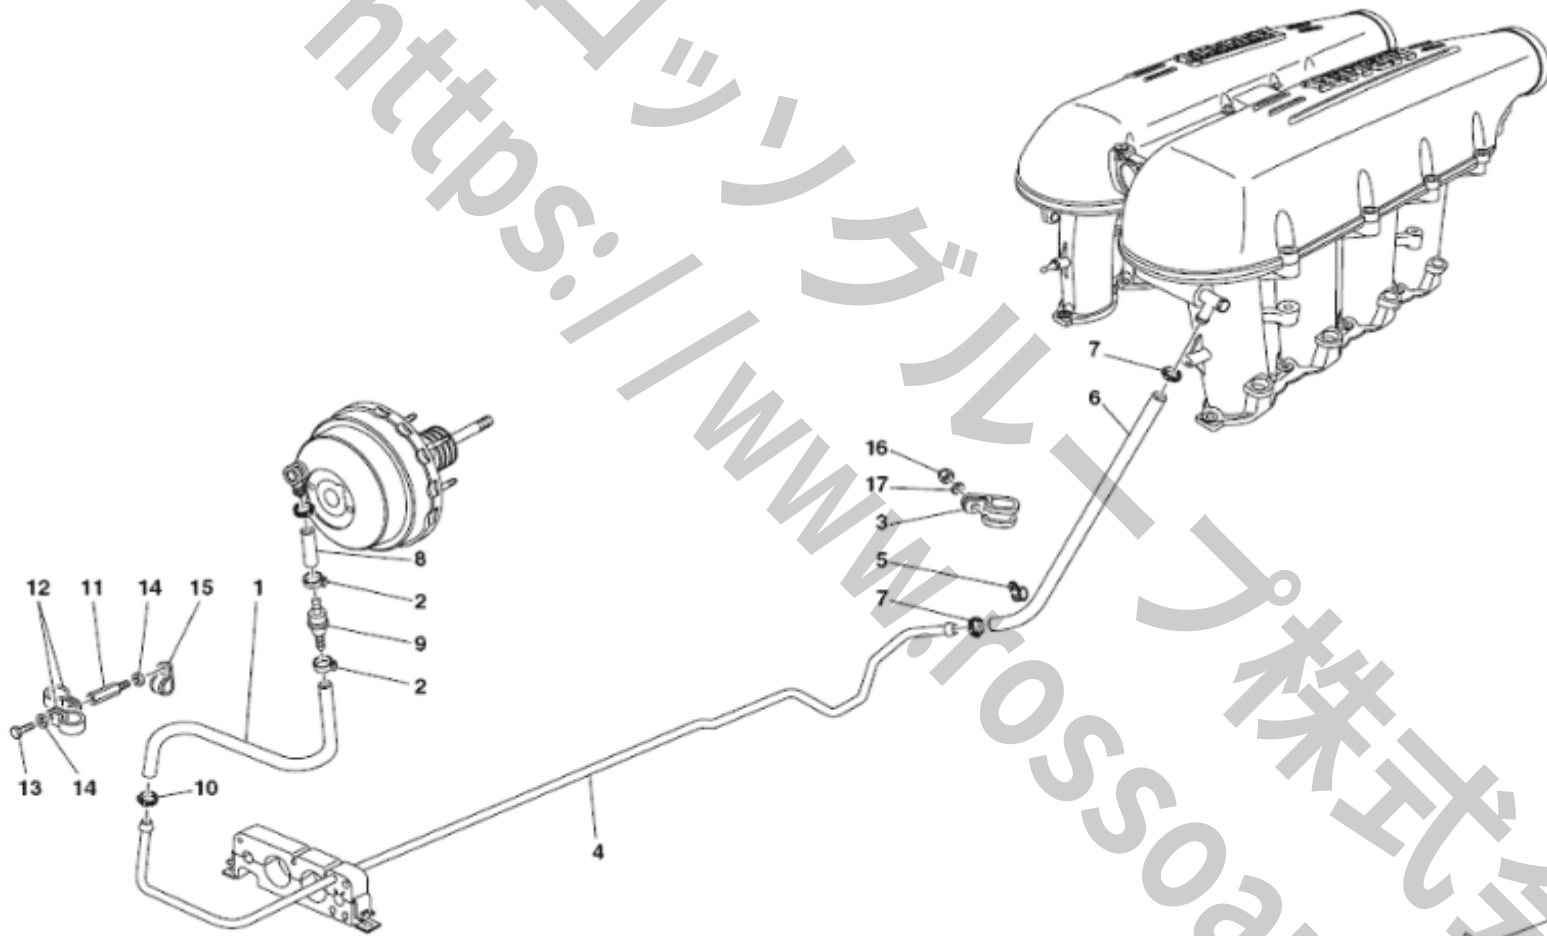

<031-brake-booster-system>

No.	Part No.	Name	Qty
1	217381	RUBBER HOSE FROM VALVE TO TUBO UNDERFLOOR TUBE	1
2	164015	COLLAR FOR SLEEVE	2
3	61712500	BRACKET	2
4	202553	BRAKE BOOSTER UNDERFLOOR TUBE	1
5	10450190	BRACKET WITH SHEATH	1
6	168386	RUBBER HOSE	1
7	161490	SCREW COLLAR	2
8	217380	RUBBER HOSE	1
9	193186	NON RETURN VALVE	1
10	161490	SCREW COLLAR	2
11	178772	STUD	1
12	10441390	BRACKET WITH SHEATH	2
13	10902224	SCREW	1
14	127494	WASHER	2
15	10441690	BRACKET WITH SHEATH	1
16	12574221	NUT	2
17	12639724	WASHER	2
 
<032-Brake-System>

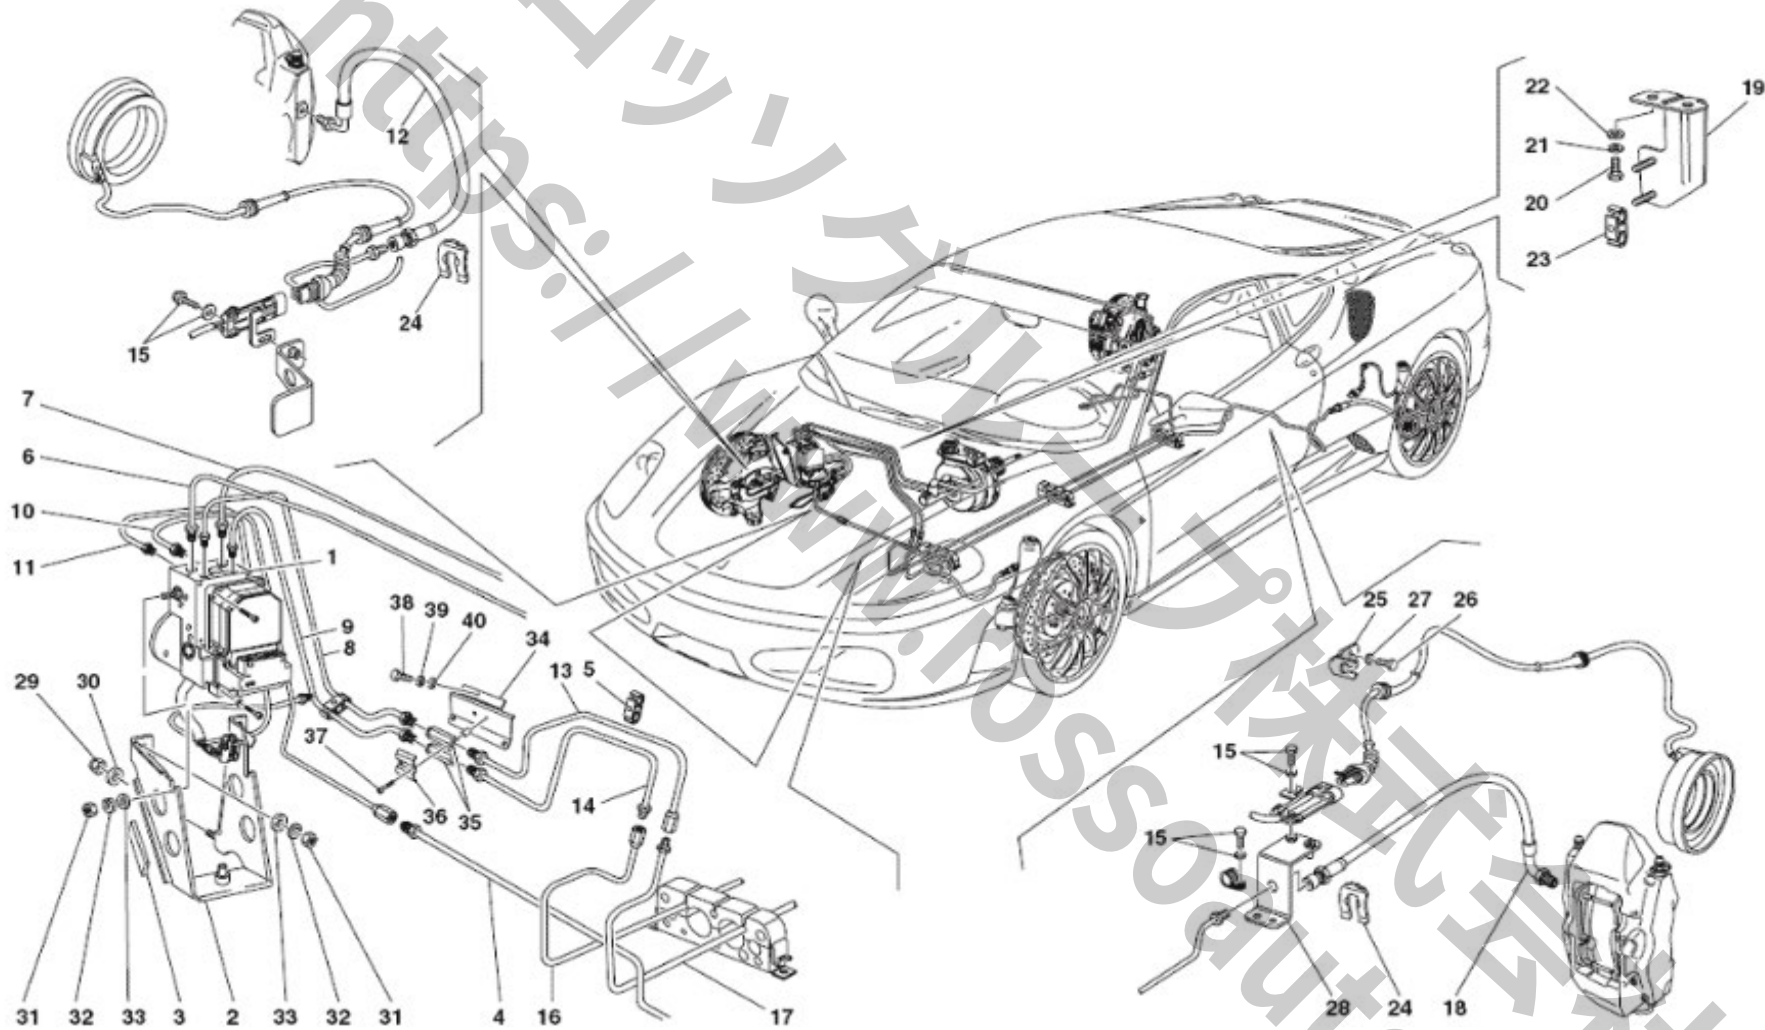

<032-Brake-System>


No.	Part No.	Name	Qty
1	224723	ABS/ASR HYDRAULIC/ELECTRONIC CONTROL STATION	1
2	174700	CONTROL STATION SUPPORTING BRACKET	1
3	197149	ANTI-VIBRATIONS	1
4	205295	PIPE FROM UNION TO L.H. FRONT BRAKE PIPE	1
5	169476	CLIP	2
6	224268	BRAKE PIPE FROM FRONT PUMP TO CONTROL STATION	1
7	224269	BRAKE PIPE FROM REAR PUMP TO CONTROL STATION	1
8	225353	PIPE FROM CONTROL STATION TO L.H. BRAKE REGULATOR	1
9	225351	PIPE FROM CONTROL STATION TO R.H. BRAKE REGULATOR	1
10	224726	PIPE FROM CONTROL STATION INTERMEDIATE PIPE	1
11	224727	PIPE FROM CONTROL STATION TO R.H. FRONT BRAKE PIPE	1
12	225857	FRONT HOSE	1
13	225355	BRAKE PIPE FROM REGULATOR TO L.H. UNION	1
14	225352	BRAKE PIPE FROM REGULATOR TO R.H. UNION	1
15	11625724	SCREW	6
16	205093	PIPE TO R.H. REAR HOSE	1
17	205094	FLEXIBLE PIPE TO L.H. REAR HOSE	1
18	225858	FLEXIBLE REAR HOSE	2
19	207278	BRAKE PIPES FIXING BRACKET	1
20	10902424	SCREW	2
21	127494	WASHER	2
22	12644424	WASHER	2
23	169476	CLIP	2
24	116374	CLAMP FOR HOSE	8
25	178938	SUPPORT FOR CABLE	2
26	10902024	SCREW	2
27	12605374	WASHER	2
28	185283	REAR SUPPORT	2
29	101139	NUT	1
30	12638524	WASHER	1
31	16100811	NUT	4
32	127496	WASHER	4
33	12638524	WASHER	4
34	182549	BRACKET FOR BRAKING REGULATOR SUPPORTING	1
35	225350	BRAKING REGULATOR	2
36	225175	BRACKET	1

37	14305624	SCREW	2
38	14305324	SCREW	3
39	127494	WASHER	3
40	12643724	WASHER	3


ロッシングループ株式会社
<https://www.rossoauto.com>

<033-calipers-for-front-and->

 ANT./FRONT

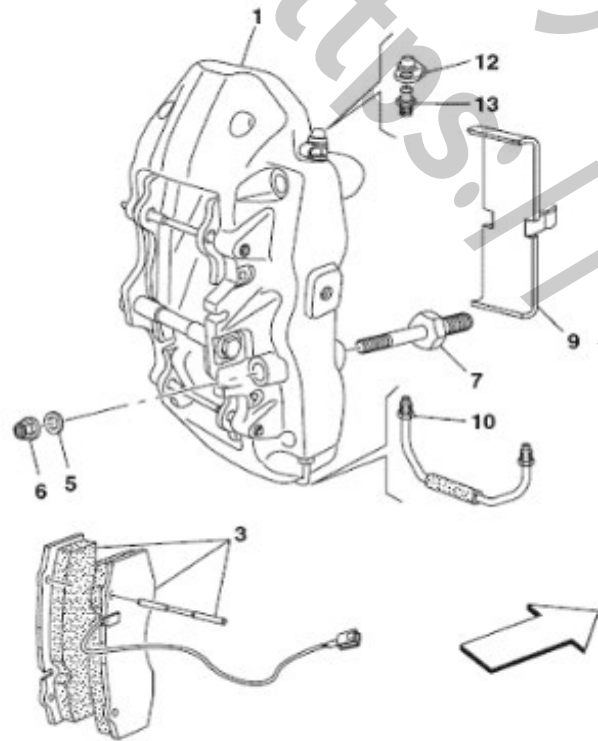


POST./REAR

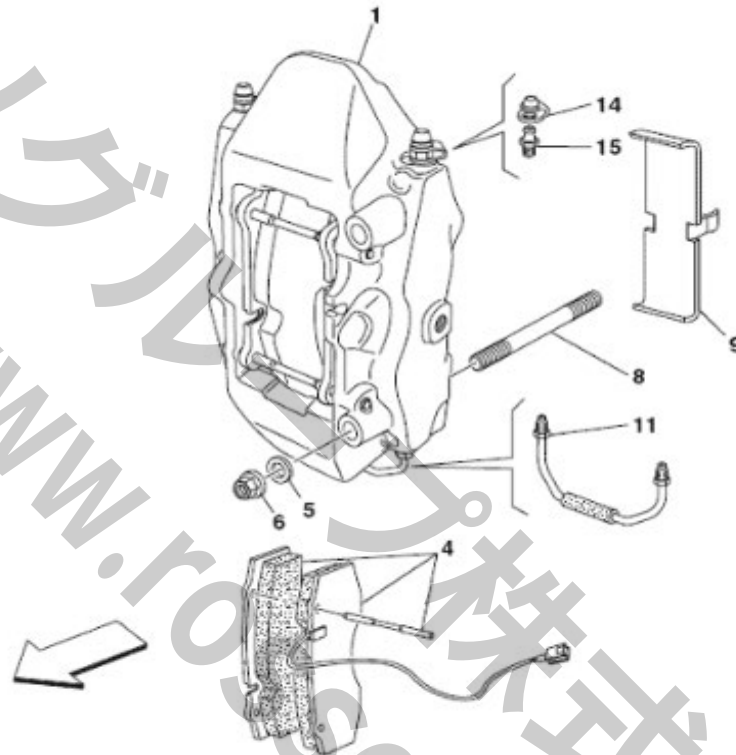 

<033-calipers-for-front-and->

No.	Part No.	Name	Qty
1	220577	L.H. FRONT CALIPER UNIT PASTIGLIE WITH PADS	1
1	220561	R.H. FRONT CALIPER UNIT PASTIGLIE WITH PADS	1
2		L.H. REAR CALIPER UNIT CON PASTIGLIE WITH PADS	1
2	220677	R.H. REAR CALIPER UNIT CON PASTIGLIE WITH PADS	1
3	70001122	ANTERIORI KIT OF FRONT PADS	1
3	70001484	FRONT BRAKE PADS SET	1
4	70001123	KIT OF REAR PADS SET	1
5	183244	WASHER	8
6	183243	NUT	8
7	226051	STUD	4
8	221483	STUD	4
9	226053	PLATE	4
10	215667	CONNECTION PIPE FOR L.H. FRONT PLIERS	1
10	215761	CONNECTION PIPE FOR R.H. FRONT PLIERS	1
11	198012	REAR CONNECTION PIPE	2
12	215666	FRONT PROTECTION BOOT	4
13	215665	FRONT UNION WITH EXHAUST VALVE	4
14	152955	PROTECTION BOOT	4
15	152954	REAR UNION WITH EXHAUST VALVE	4

 
<034-Hydraulic-Steering-Box->

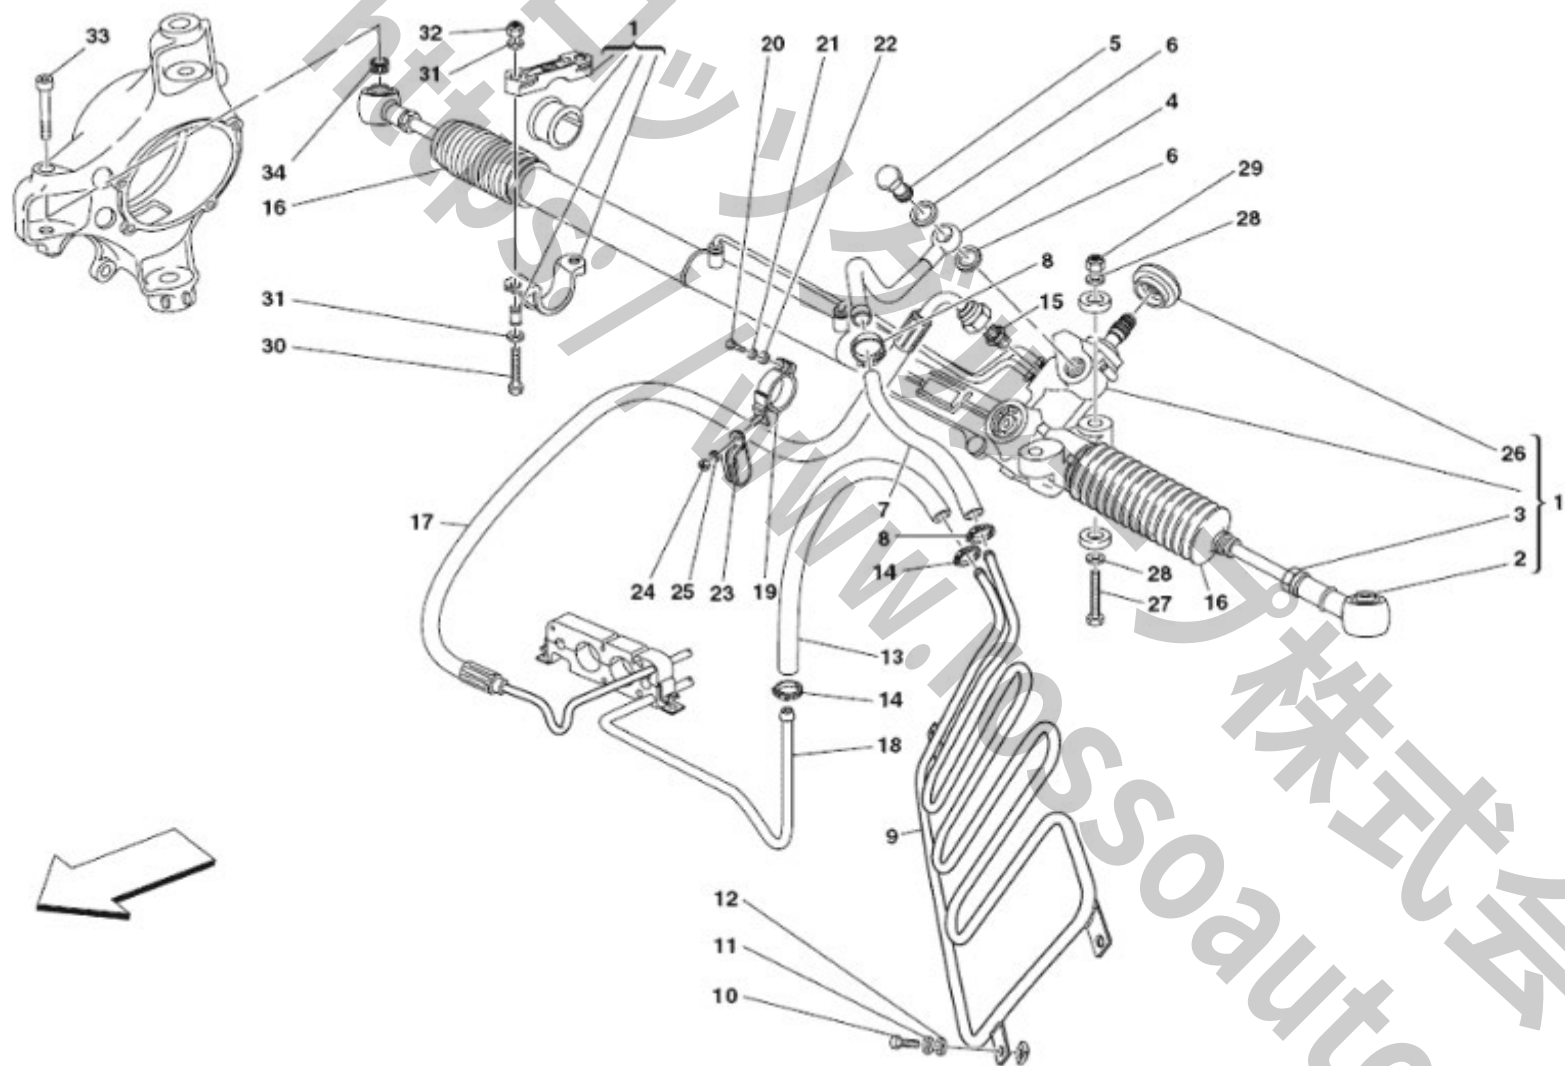

<034-Hydraulic-Steering-Box->

No.	Part No.	Name	Qty
1	181481	RACK STEERING BOX WITH POWER STEERING	1
2	181882	BALL TIE ROD	2
3	10791324	NUT	2
4	211764	SWINGING UNION	1
5	10185111	UNION	1
6	10280060	GASKET	2
7	212706	RUBBER HOSE	1
8	161490	SCREW COLLAR	2
9	223593	REFRIGERATING COIL	1
10	16286027	SCREW	4
11	12601277	WASHER	4
12	12644478	WASHER	4
13	209868	RUBBER HOSE	1
14	161490	SCREW COLLAR	2
15	201706	THREADED UNION	1
16	70000948	BELLOWS REPLACEMENT KIT	1
17	211536	L.H. DELIVERY PIPE FROM UNION TO STEERING BOX	1
18	202552	RETURN PIPE UNDER THE FLOOR	1
19	177631	PIPES FIXING BRACKET	2
20	10902424	SCREW	2
21	127494	WASHER	2
22	12639724	WASHER	2
23	10441690	BRACKET WITH SHEATH	2
24	12574221	NUT	2
25	12639724	WASHER	2
26	171519	COMPLETE RING	1
27	16237174	SCREW	2
28	14496624	WASHER	4
29	12575621	NUT	2
30	16237074	SCREW	2
31	14496624	WASHER	4
32	12575621	NUT	2
33	179556	SCREW	2
34	179555	COMPENSATOR RING	2
 
<035-Steering-Column>

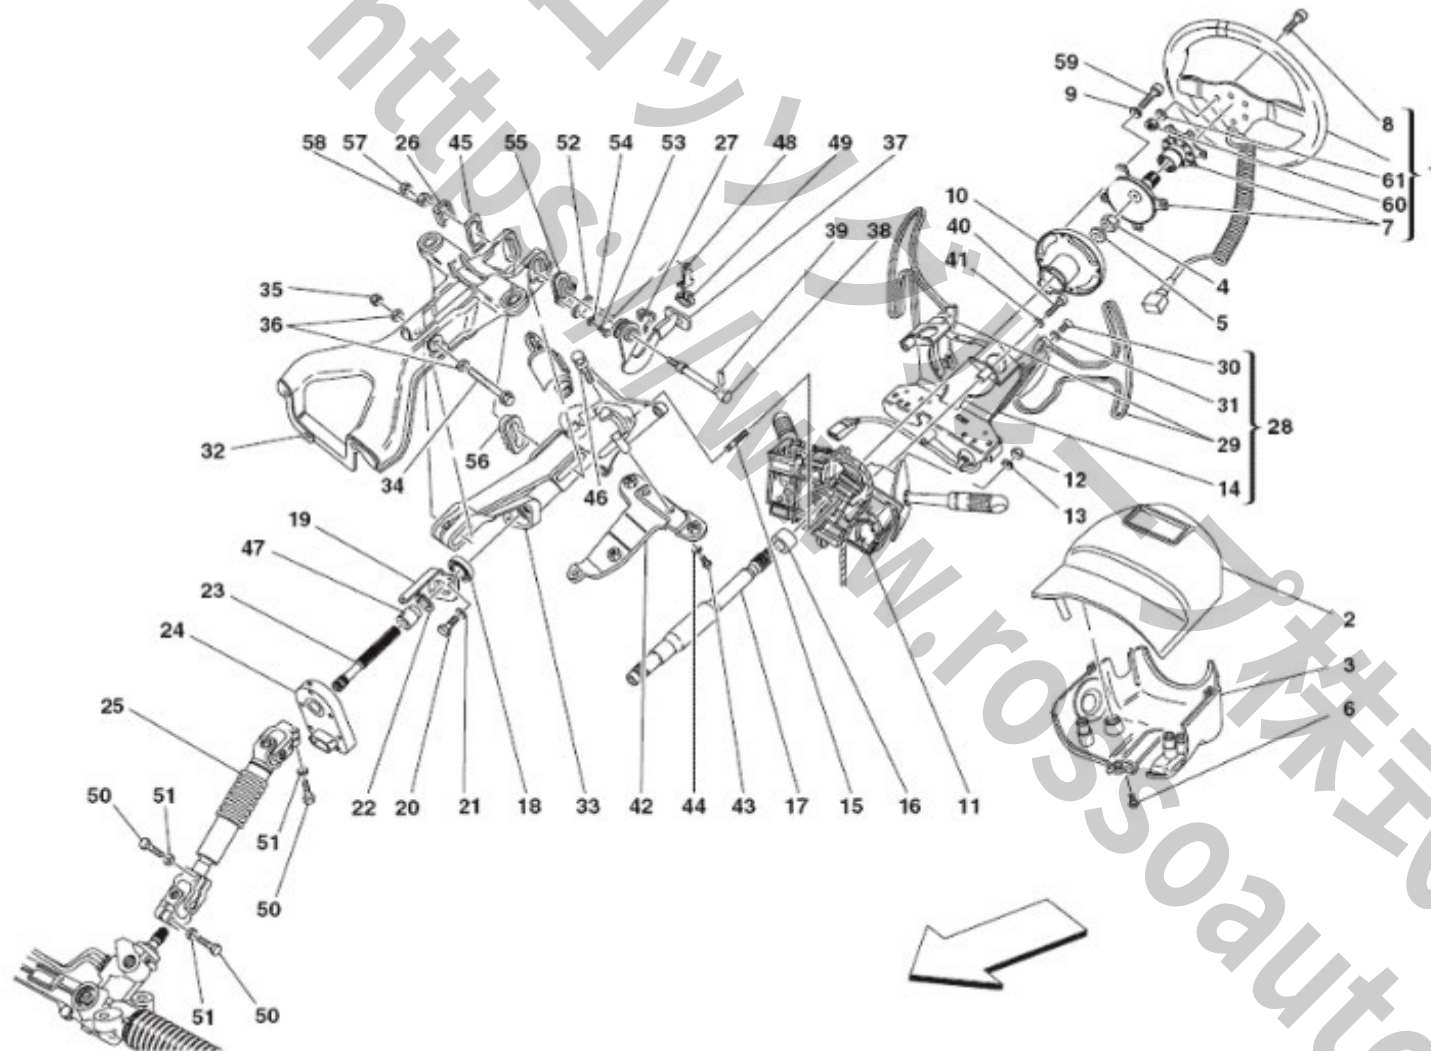


<035-Steering-Column>

No.	Part No.	Name	Qty
1	221748	COMPLETE STEERING WHEEL	1
2	68097900	UPPER COVER	1
3	68161600	LOWER COVER	1
4	199222	NUT	1
5	152034	WASHER	1
6	15960507	SCREW	5
7	222200	QUICK RELEASE STEERING WHEEL KIT	1
8	14440733	SCREW	6
9	10615479	WASHER	4
10	221117	STEERING WHEEL HUB	1
11	177585	UNHOOK DEVIATION ASSEMBLY	1
12	15896470	NUT	2
13	12601179	WASHER	2
14	203317	CONTROL BRACKET FOR GEAR BOX	1
15	11001424	STUD	2
16	199094	ROLLER BEARING	1
17	197701	COLUMN UPPER SHAFT	1
18	171540	BALL BEARING	1
19	201016	BRACKET SUPPORTING STEERING ANGLE SENSOR	1
20	10902224	SCREW	2
21	11181874	WASHER	2
22	11067376	SEEGER RING	1
23	183993	COLUMN LOWER SHAFT	1
24	190405	STEERING ANGLE SENSOR	1
25	171528	STEERING CARDANIC TRASMISSION	1
26	171529	MOBILE GUIDE SHOE	1
27	171531	PIN RETAINING SPRING	1
28	221724	COUPLE LEVERS	1
29	221724	COUPLE LEVERS	1
29	221724	COUPLE LEVERS	1
30	13308977	SCREW	4
31	12606673	WASHER	4
32	197702	STEERING COLUMN SUPPORT BRACKET	1
33	197700	COLUMN SUPPORT	1
34	180632	SCREW	1
35	16104125	NUT	1

36	12625224 WASHER	2
37	171535 COVERED LEVER	1
38	171503 PIN FOR LEVER	1
39	10336630 PIN	1
40	13274611 SCREW	3
41	12601179 WASHER	3
42	6516420 BRACKET	1
43	13274177 SCREW	3
44	12637878 WASHER	3
45	171502 SPRING FOR GUIDE SHOE	1
46	172563 ANTITHEFT FIXING SCREW	1
47	200970 RING NUT	1
48	177977 SMALL PLATE	1
49	178430 CLIP	1
50	192229 HEXAGONAL SCREW	3
51	192230 WASHER	3
52	171523 PLATE	1
53	10977711 SCREW	2
54	11181574 WASHER	2
55	171544 LEVER SIDE GUIDE SHOE	1
56	171501 FIXED TENSION SLIDE	1
57	147985 NUT	1
58	171542 NUT	1
59	14433126 SCREW	4
60	12577821 NUT	6
61	1357911 WASHER	6

 
<036-Hydraulic-Steering-Pump>

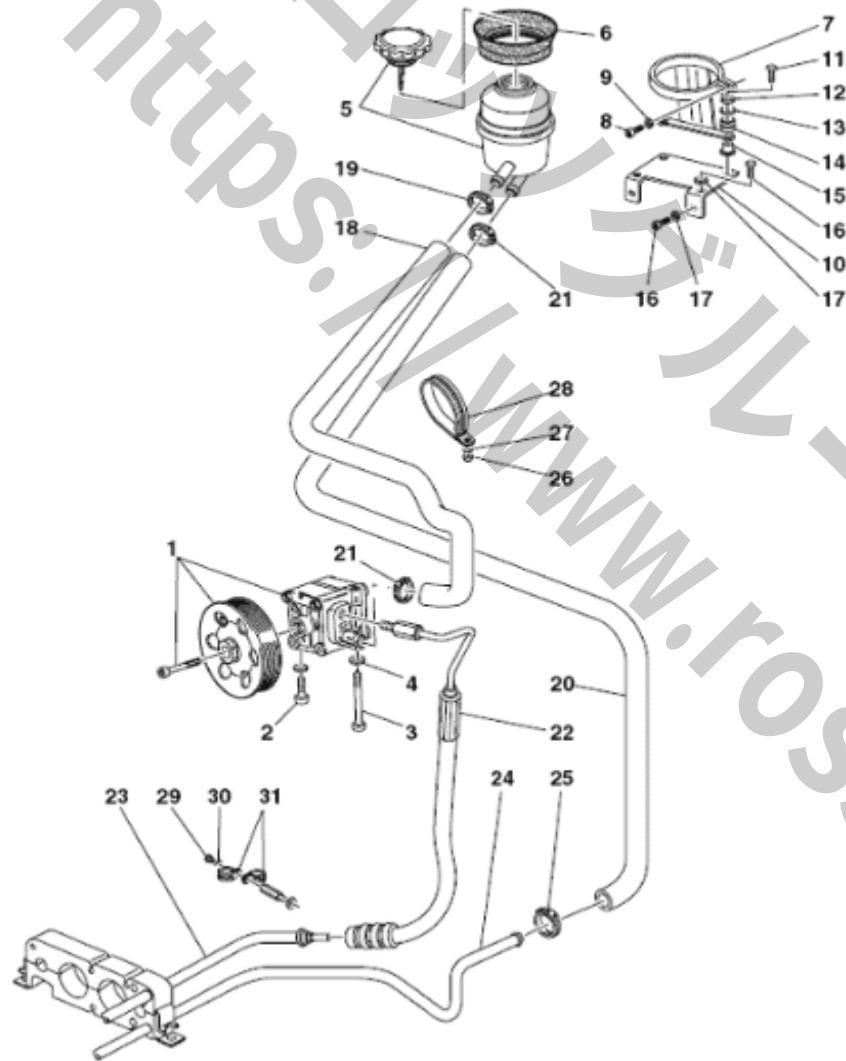

<036-Hydraulic-Steering-Pump>

No.	Part No.	Name	Qty
1	198680	COMPLETE HYDRAULIC PUMP	1
2	198519	SCREW	1
3	160531	SCREW	1
4	11193874	WASHER	2
5	170877	OIL TANK FOR SERVOSTEERING	1
6	179301	GASKET	1
7	184137	UPPER BRACKET	1
8	10902124	SCREW	1
9	12601274	WASHER	1
10	195428	LOWER BRACKET	1
11	10902524	SCREW	2
12	11197774	WASHER	2
13	12643724	WASHER	2
14	103549	CABLE GROMMET	2
15	149707	SPACER	2
16	63634600	ROOF FIXING REAR BRACKET	4
17	11197774	WASHER	4
18	196892	PIPE FROM TANK TO PUMP	1
19	177996	CLAMP	1
20	211916	DELIVERY PIPE FROM PUMP TO UNION	1
21	178051	CLAMP	2
22	214668	DELIVERY PIPE FROM PUMP TO UNDER FLOOR PIPE	1
23	211536	L.H. DELIVERY PIPE FROM UNION TO STEERING BOX	1
24	202552	RETURN PIPE UNDER THE FLOOR	1
25	178051	CLAMP	1
26	102741	NUT	1
27	14499324	WASHER	1
28	124034	BRACKET WITH SHEATH	1
29	10902124	SCREW	1
30	14488624	WASHER	1
31	10441390	BRACKET WITH SHEATH	2
 
<037-Front-Suspension---shoc>

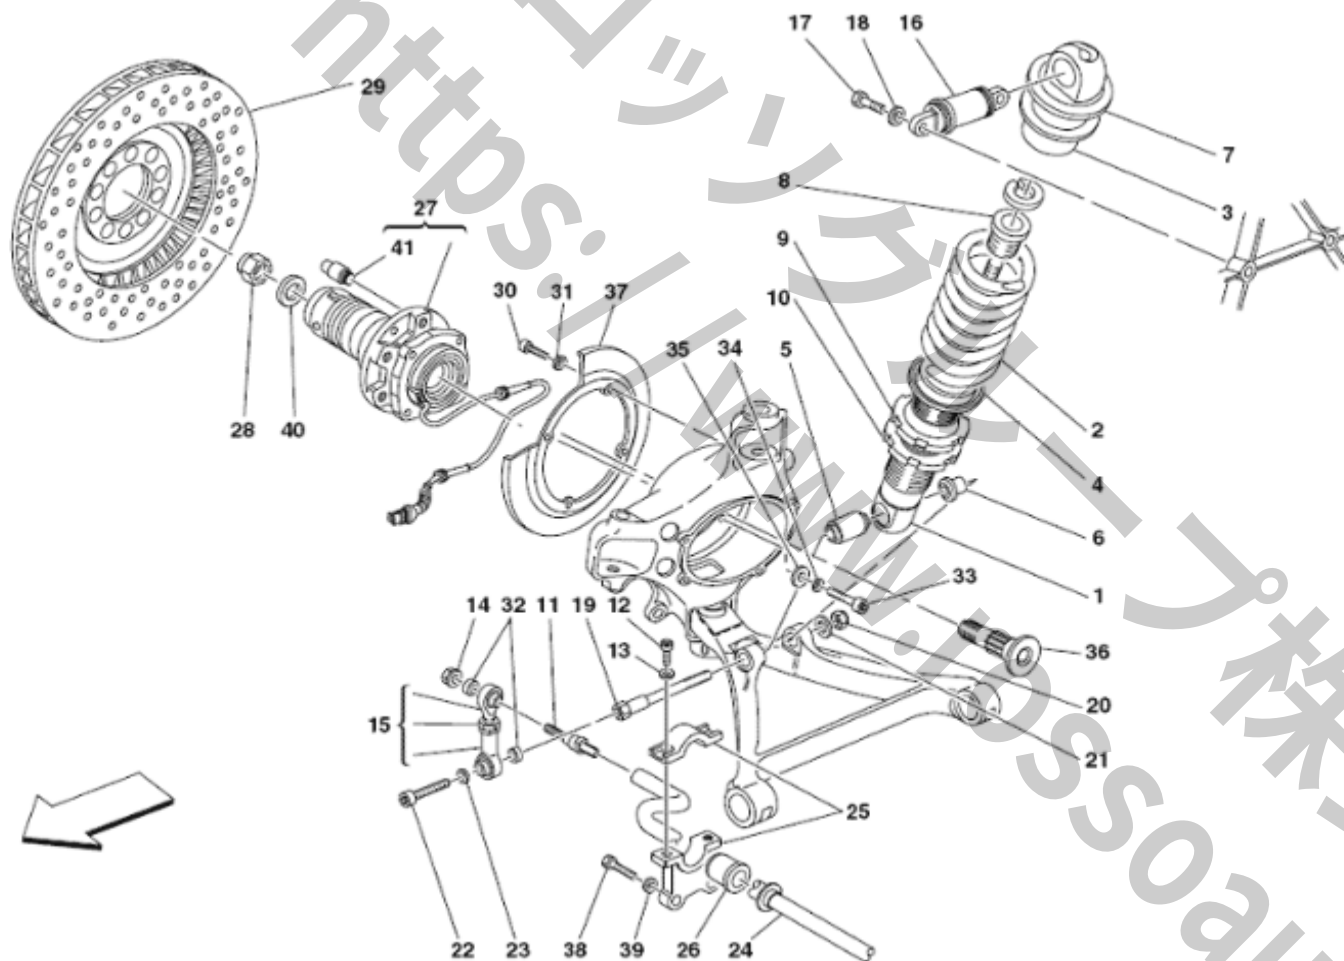


<037-Front-Suspension---shoc>

No.	Part No.	Name	Qty
1	224336	FRONT SHOCK ABSORBER	2
2	181420	SPRING	2
3	181409	UPPER SPACER	2
4	181408	LOWER SPACER	2
5	157630	SILENT BLOCK BUSH	2
6	193492	SPACER	2
7	174727	SPRING RETAINING UPPER SPACER	2
8	181404	SHOCK ABSORBER PAD	2
9	181410	SPACER	2
10	181412	RING NUT	2
11	182505	PIN	2
12	14302821	SCREW	4
13	107618	WASHER	4
14	133216	NUT	2
15	182526	COMPLETE SMALL LINK	2
16	181346	FLANBLOC	2
17	11306934	SCREW	4
18	160092	WASHER	4
19	204977	SCREW	2
20	14058721	NUT	2
21	155002	WASHER	2
22	14307821	SCREW	2
23	160092	WASHER	2
24	222480	FRONT ANTI-ROLL BAR	1
24	179776	FRONT ANTI-ROLL BAR	1
25	181467	ANTI-ROLL BAR SUPPORT	2
26	181468	BAR BUFFER	2
26	181469	BAR BUFFER	2
27	220562	L.H. HUB COMPLETE BEARING	1
27	220558	R.H. HUB COMPLETE BEARING	1
28	223160	NUT	2
29	224859	FRONT BRAKE DISC	2
30	14304024	SCREW	8
31	12601179	WASHER	8
32	169092	SPACER	4
33	180591	SCREW	8

34	160092 WASHER	8
35	10732414 WASHER	8
36	180542 BEARING FIXING PIN	2
37	220589 RING FOR L.H. DISC COOLING	1
37	220588 RING FOR R.H. DISC COOLING	1
38	16043421 SCREW	4
39	178341 WASHER	4
40	223161 WASHER	2
41	220692 STUD	10

<https://www.rossoauto.com> 株式会社
 
<038-Front-Suspension---wish>

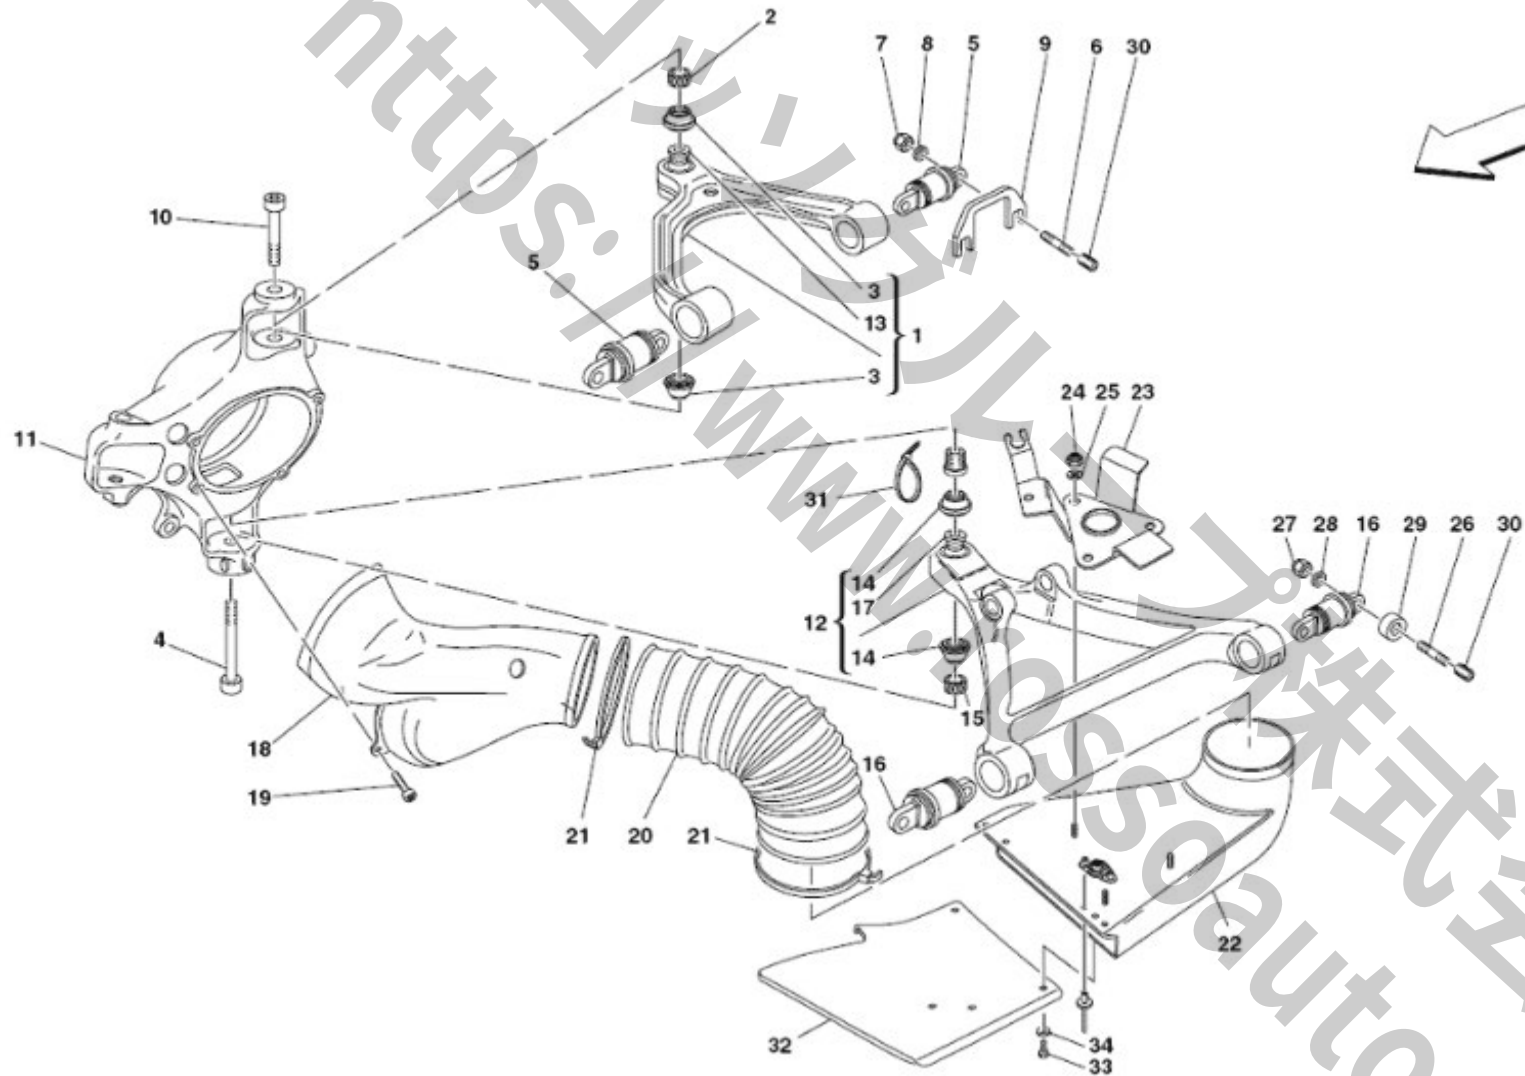


<038-Front-Suspension---wish>

No.	Part No.	Name	Qty
1	226968	COMPLETE UPPER LEVER	2
2	179555	COMPENSATOR RING	2
3	171848	BOOT	4
4	181598	SCREW	2
5	181345	FLAMBLOC	4
6	170155	THREADED BAR	8
7	16104125	NUT	8
8	14496524	WASHER	8
9	220608	THICKNESS	4
9	220609	THICKNESS	4
9	220607	THICKNESS	4
9	222483	THICKNESS	4
9	220606	THICKNESS	4
10	179556	SCREW	2
11	220564	R.H. REAR STEERING KNUCKLE	1
11	220563	L.H. REAR STEERING KNUCKLE	1
12	200940	LOWER LEVER	2
13	203633	UPPER BALL JOINT	2
14	171847	BOOT	4
15	179554	COMPENSATOR RING	2
16	181346	FLANBLOC	4
17	203632	LOWER BALL JOINT	2
18	184241	HYSOL EA9360 ADHESIVE BALL JOINT GLUE	1
18	181474	L.H. AIR INTAKE	1
18	181473	R.H. AIR INTAKE	1
19	11625724	SCREW	8
20	183479	AIR INTAKE CONNECTION PIPE	2
21	163323	CLAMP	4
22	220599	L.H. AIR INTAKE	1
22	220598	R.H. AIR INTAKE	1
23	226450	L.H. SUPPORT	1
23	220600	R.H. SUPPORT	1
24	169180	NUT	6
25	1263811	WASHER	6
26	181457	THREADED BAR	8
27	104114	NUT	8

28	14496624 WASHER	8
29	220605 SPACER	8
30	13582271 THREADED INSERT	8
31	145855 CLAMP	2
32	221123 L.H. AIR DEFLECTOR	1
32	221121 R.H. AIR DEFLECTOR	1
33	14303021 SCREW	4
34	13506624 WASHER	4

<https://www.rossoauto.com>
 
<039-Rear-Suspension---shock>

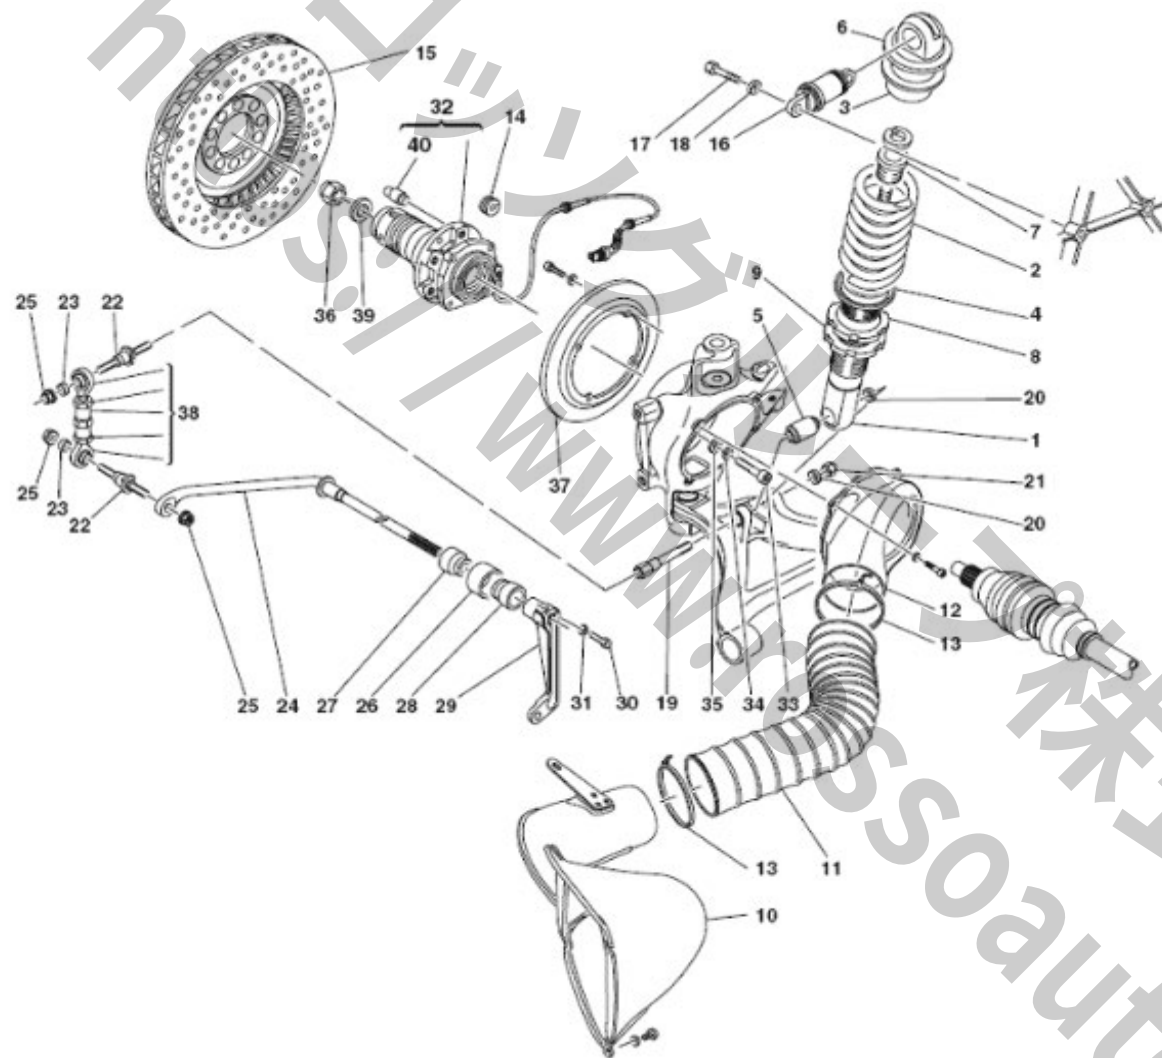


<039-Rear-Suspension---shock>

No.	Part No.	Name	Qty
1	224339	REAR SHOCK ABSORBER	2
2	181421	SPRING	2
3	181409	UPPER SPACER	2
4	181408	LOWER SPACER	2
5	157630	SILENT BLOCK BUSH	2
6	174727	SPRING RETAINING UPPER SPACER	2
7	181404	SHOCK ABSORBER PAD	2
8	181410	SPACER	2
9	181412	RING NUT	2
10	6942420	L.H. AIR INTAKE	1
10	69424100	R.H. AIR INTAKE	1
11	182533	AIR INTAKE CONNECTION PIPE	2
12	181479	L.H. AIR INTAKE	1
12	181478	R.H. AIR INTAKE	1
13	163323	CLAMP	4
14	10460287	RUBBER RING	2
15	220676	REAR BRAKE DISC	2
16	181346	FLANBLOC	2
17	113069334	SCREW	4
18	160092	WASHER	4
19	204974	SCREW	2
20	129225	WASHER	4
21	16105125	NUT	2
22	182508	PIN	2
23	160092	WASHER	4
24	179778	REAR ANTI-ROLL BAR	1
24	210234	REAR ANTI-ROLL BAR	1
25	133216	NUT	6
26	181465	BUSHING	2
26	182510	BUSHING	2
26	184354	BUSHING	2
27	182511	BAR BUFFER	1
28	182512	PAD	1
29	175861	L.H. ARM	1
30	170950	SCREW	1
31	12601479	RETAINING WASHER	1

32	220562 L.H. HUB COMPLETE BEARING	1
32	220558 R.H. HUB COMPLETE BEARING	1
33	180591 SCREW	8
34	160092 WASHER	8
35	10732414 WASHER	8
36	223160 NUT	2
37	220588 RING FOR COOLING	2
38	169088 COMPLETE BAR CONNECTING ROD	2
39	223161 WASHER	2
40	220692 STUD	10

<https://www.rossoauto.com> 株式会社
 
<040-Rear-Suspension---Wishb>

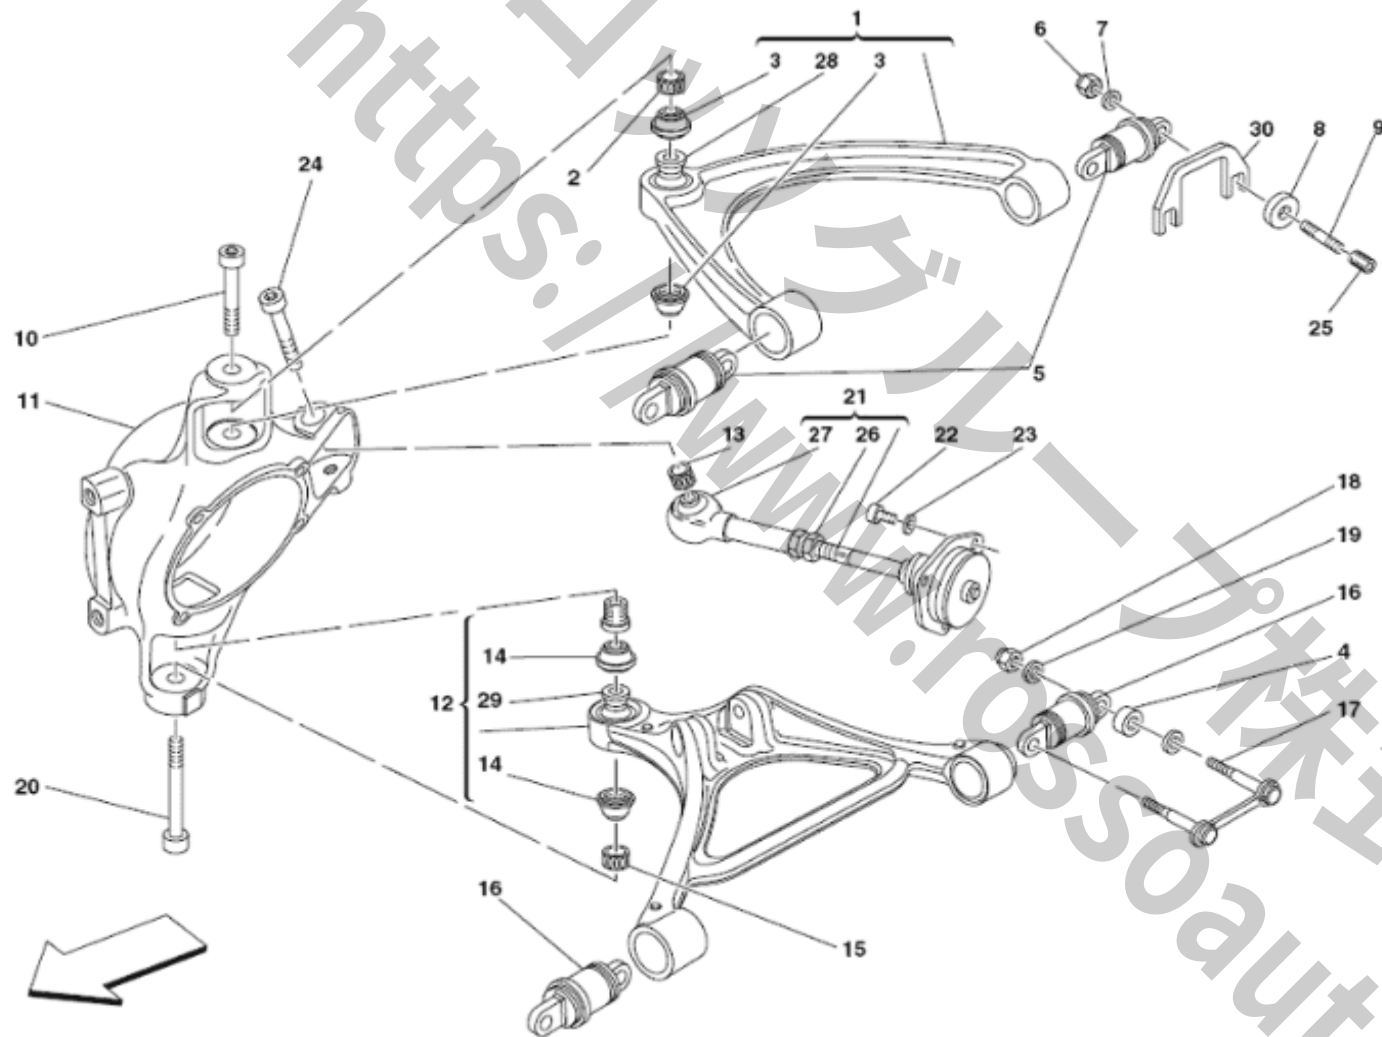


<040-Rear-Suspension---Wishb>

No.	Part No.	Name	Qty
1	200946	UPPER LEVER	2
2	179555	COMPENSATOR RING	2
3	171848	BOOT	4
4	220693	SPACER	8
5	181345	FLAMBLOC	4
6	16104125	NUT	8
7	14496524	WASHER	8
8	182518	THICKNESS	8
9	220691	THREADED BAR	8
10	179556	SCREW	2
11	220563	L.H. REAR STEERING KNUCKLE	1
11	220564	R.H. REAR STEERING KNUCKLE	1
12	200942	L.H. LOWER LEVER	1
12	200941	R.H. LOWER LEVER	1
13	179555	COMPENSATOR RING	2
14	171847	BOOT	4
15	179554	COMPENSATOR RING	2
16	181346	FLANBLOC	4
17	181499	PLATE	4
18	104114	NUT	8
19	14496624	WASHER	8
20	181598	SCREW	2
21	194791	COMPLETE TIE ROD	2
22	14306224	SCREW	6
23	1119474	WASHER	6
24	179556	SCREW	2
25	13582271	THREADED INSERT	8
26	204248	NUT	2
27	194794	BALL TIE ROD	2
28	203633	UPPER BALL JOINT	2
29	203632	LOWER BALL JOINT	2
30	184241	HYSOL EA9360 ADHESIVE BALL JOINT GLUE	1
30	220607	THICKNESS	4
30	220608	THICKNESS	4
30	220609	THICKNESS	4
30	220606	THICKNESS	4

ロッシングループ株式会社
<https://www.rossoauto.com>

 
<041-Wheels>

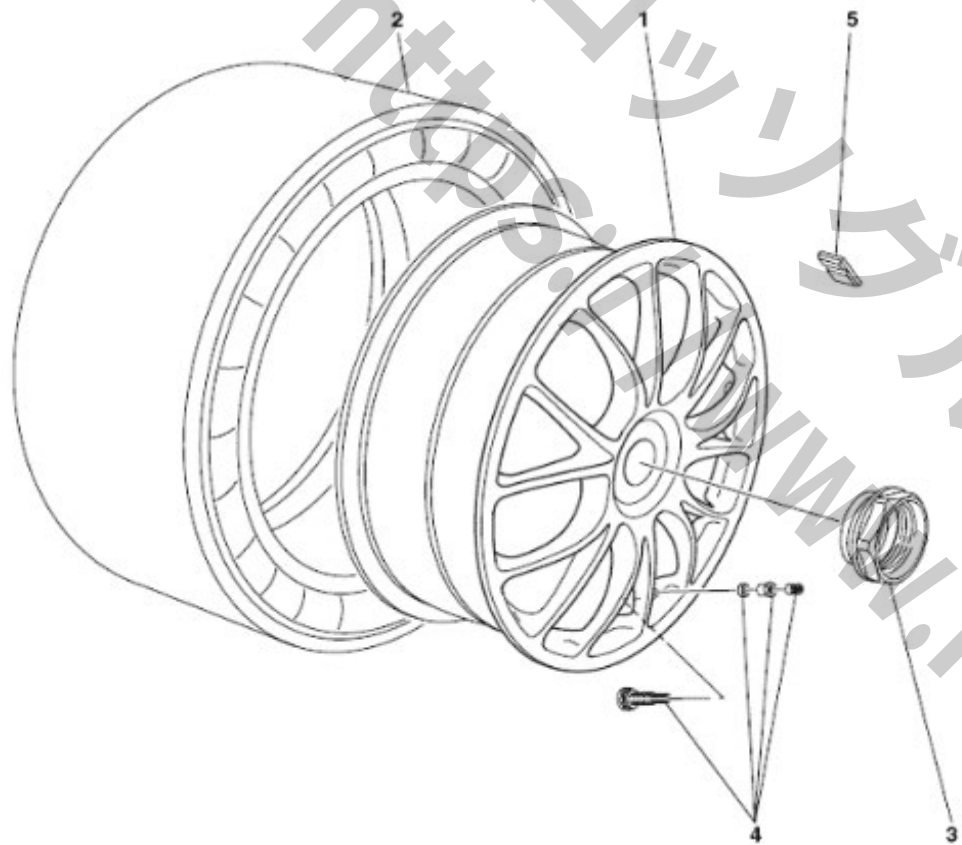

<041-Wheels>

No.	Part No.	Name	Qty
1	220731	FRONT WHEEL RIM	2
1	220734	REAR WHEEL RIM	2
2		FRONT TYRE	2
2		REAR TYRE	2
3	223112	L.H. NUT FOR WHEEL	2
3	223113	R.H. NUT FOR WHEEL	2
4	182128	VALVE	4
5	192934	COUNTER-WEIGHT	1

 
<042-Battery>

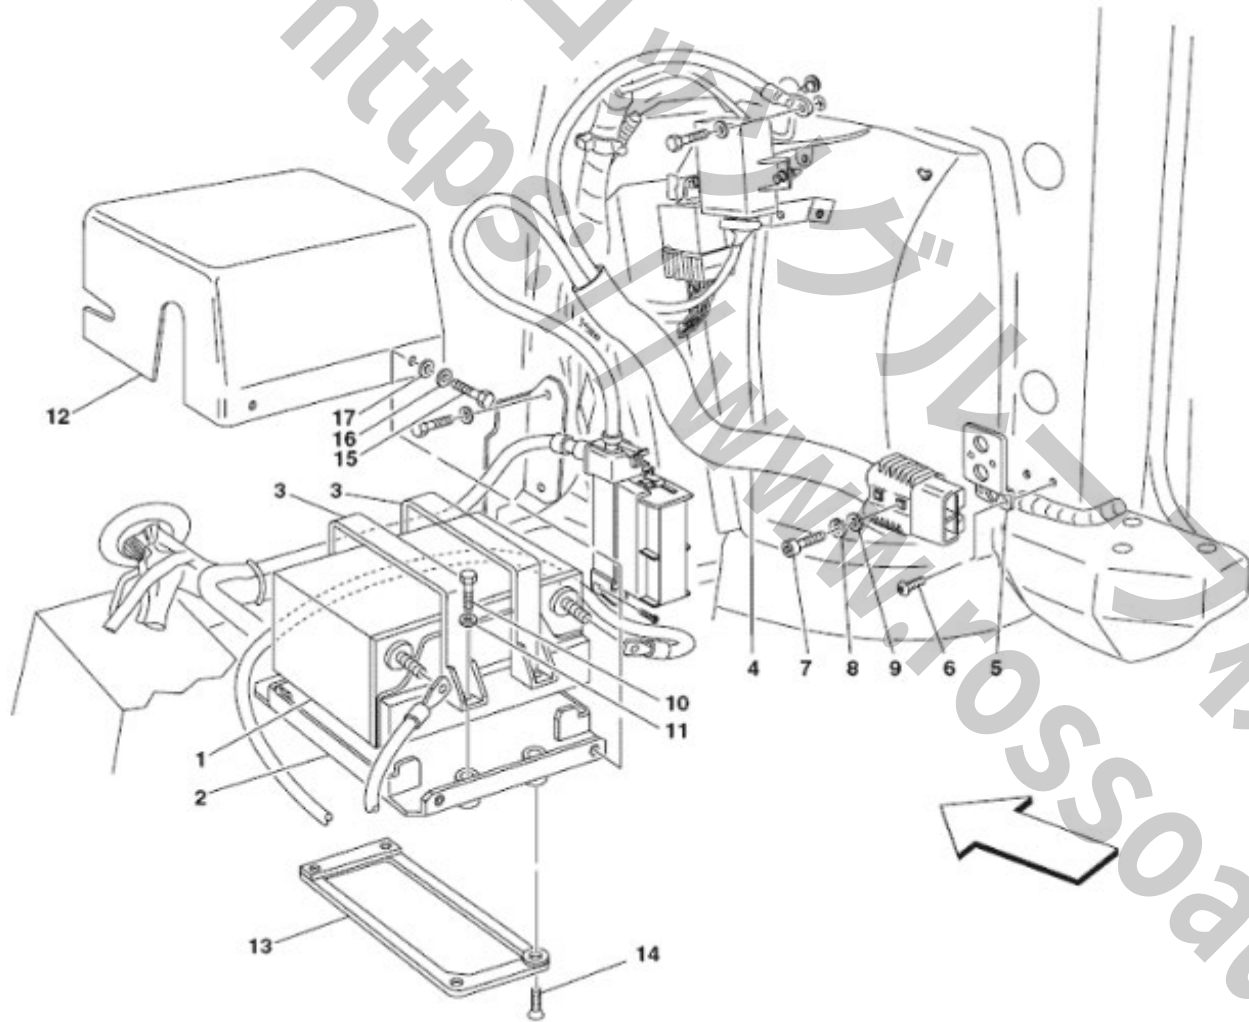

<042-Battery>

No.	Part No.	Name	Qty
1	164713	BATTERY	1
2	69338600	BATTERY BIN	1
3	69338900	UPPER FIXING BRACKET	2
4	220660	AUXILIARY STARTING CABLE	1
5	226150	BRACKET	1
6	169815	SCREW	2
7	14305521	SCREW	2
8	10569279	WASHER	2
9	14496424	WASHER	2
10	15970324	SCREW	4
11	12604574	WASHER	4
12	6940620	BATTERY COVER	1
13	6933880	PLATE	1
14	14442524	SCREW	4
15	10977624	SCREW	2
16	12601179	WASHER	2
17	12638124	WASHER	2

 
<043-Battery-Cut-out>

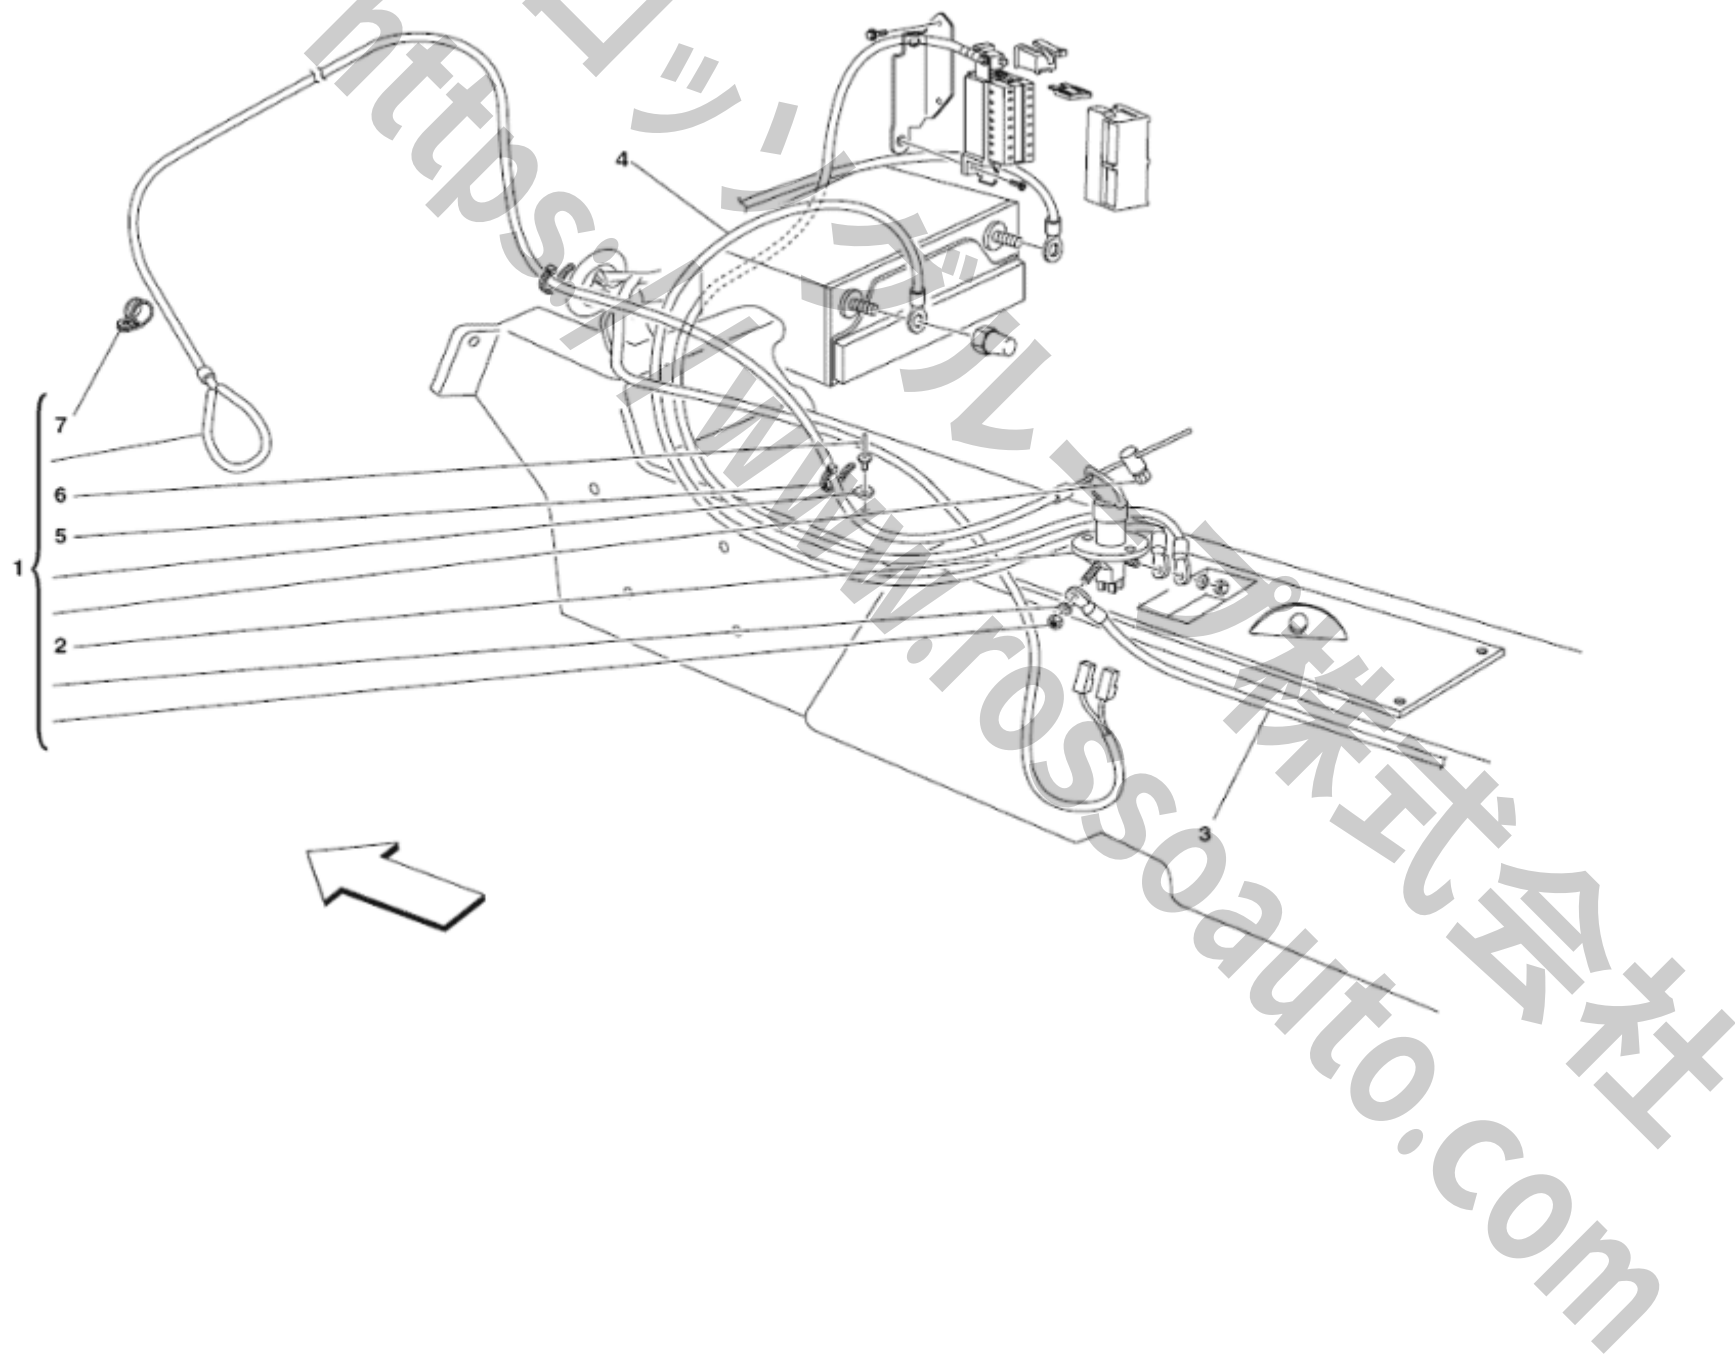

<043-Battery-Cut-out>

No.	Part No.	Name	Qty
1	234916	BATTERY CUT-OUT KIT	1
2	232867	BATTERY CUT-OUT	1
3	220819	CABLE FROM TERMINAL BOX TO CUT-OUT BATTERY	1
4	220820	CABLE FROM BATTERY TO BATTERY CUT-OUT	1
5	163323	CLAMP	2
6	14643293	RIVET	2
7	10440890	BRACKET WITH SHEATH	2

 
<044-Current-Generator---Sta>

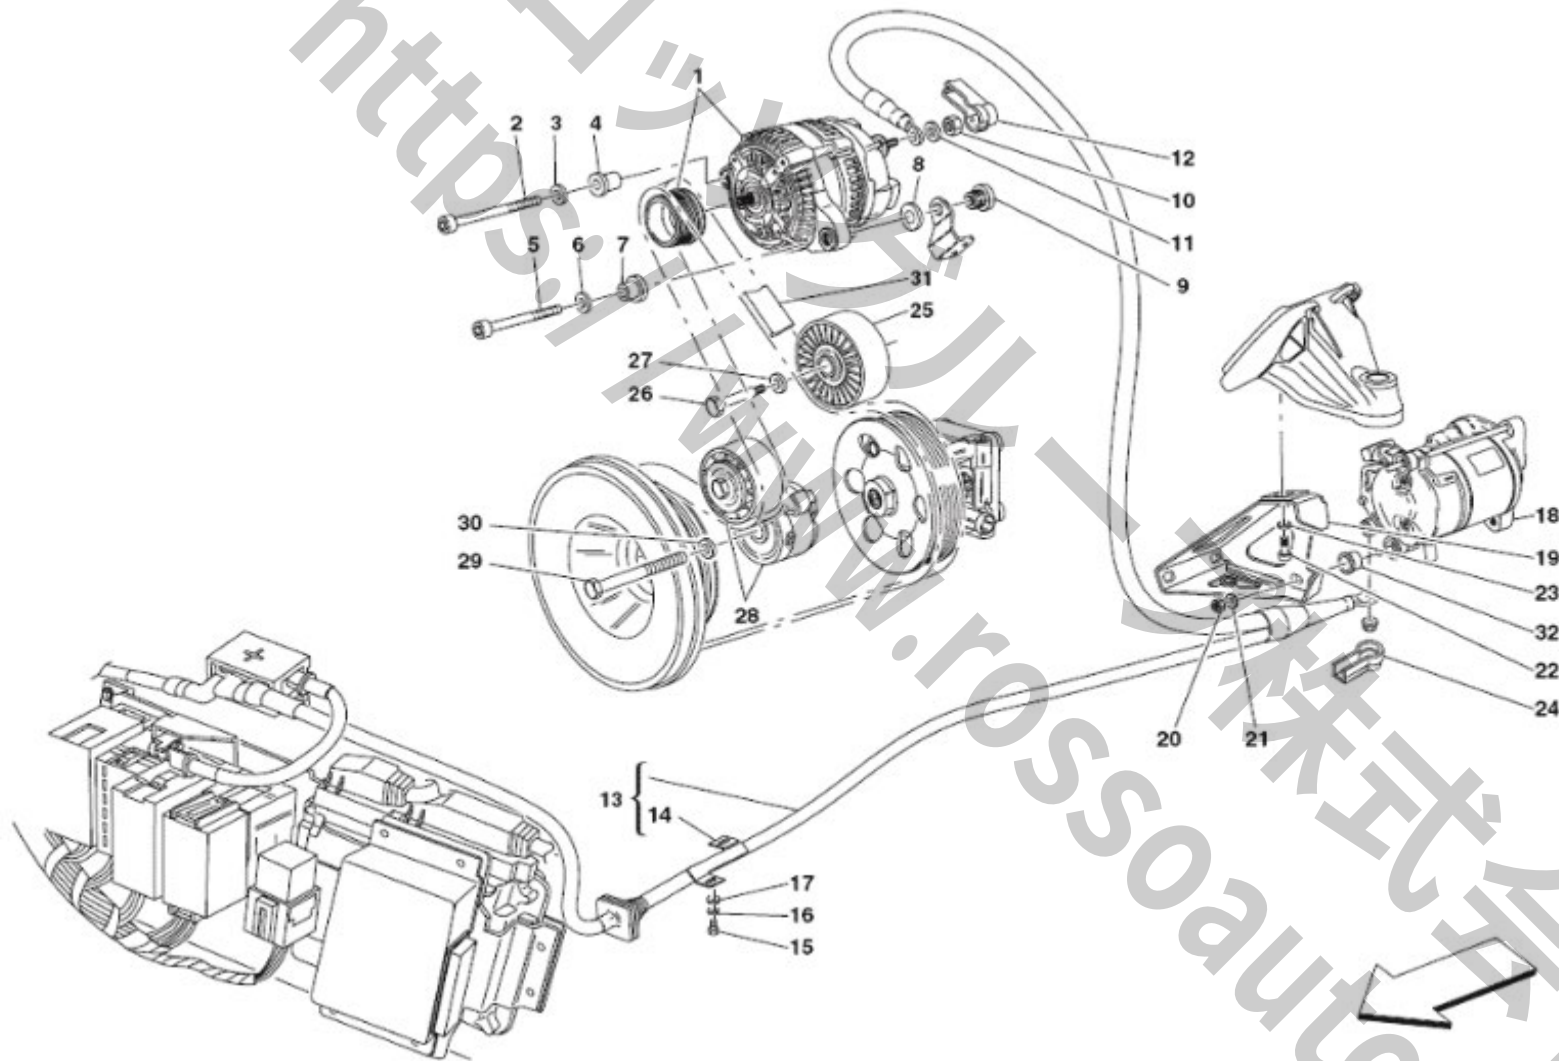

<044-Current-Generator---Sta>

No.	Part No.	Name	Qty
1	250367	150 A. ALTERNATOR	1
2	14308724	SCREW	1
3	10569474	WASHER	1
4	209278	BUSHING	1
5	14308224	SCREW	1
6	10569474	WASHER	1
7	164467	BUSHING	1
8	207423	WASHER	1
9	187143	THREADED BUSHING	1
10	16102324	NUT	1
11	12601374	WASHER	1
12	154803	PROTECTION BOOT	1
13	192534	COMPLETE CONNECTION CABLES FOR MOTOR UTILITIES	1
14	178356	BRACKET	1
15	63634600	ROOF FIXING REAR BRACKET	2
16	127494	WASHER	2
17	12644424	WASHER	2
18	180169	STARTER MOTOR	1
19	222003	STARTER MOTOR SUPPORTING BRACKET	1
20	15896470	NUT	2
21	127493	WASHER	2
22	14302824	SCREW	3
23	11193874	WASHER	3
24	124683	PLUG	1
25	172537	BELT TIGHTENING PULLEY	1
26	11234721	SCREW	1
27	11190574	WASHER	1
28	228281	BELT TIGHTENER	1
28	231942	BELT TIGHTENER	1
28	225785	BELT TIGHTENER	1
29	16044431	SCREW	1
30	11193874	WASHER	1
31	219847	BELT	1
32	215645	SPACER BUSHING	2

 
<100-Body---Outer-Trims>

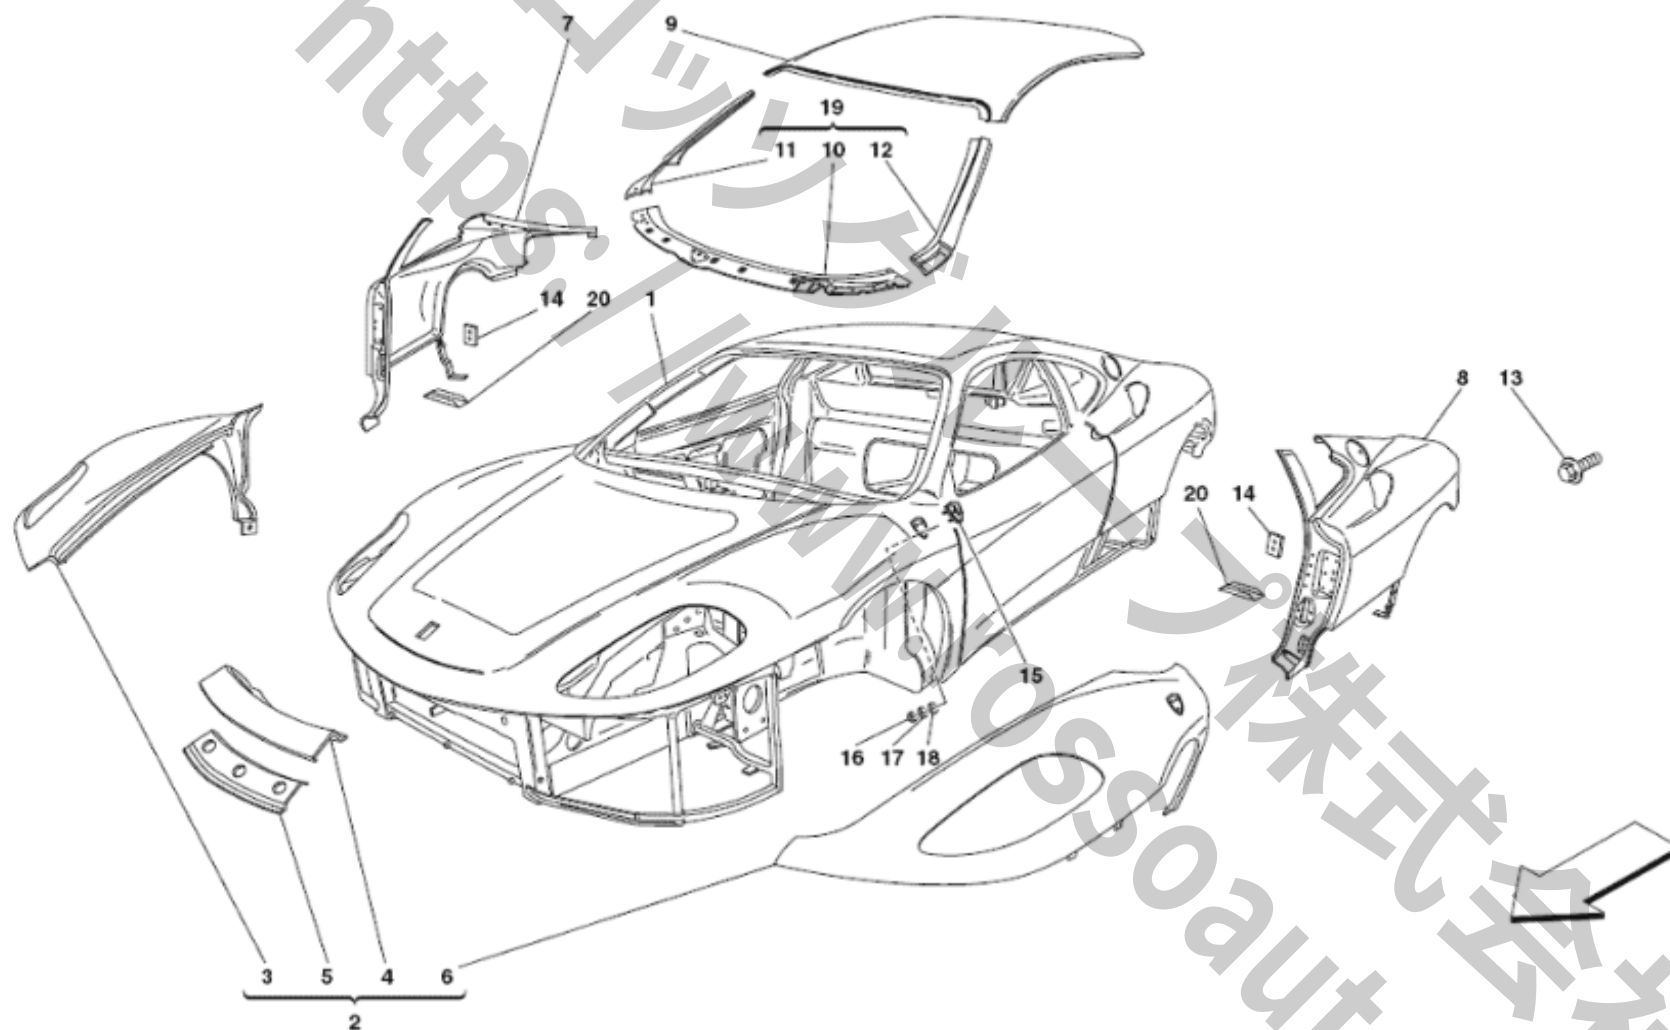

<100-Body---Outer-Trims>

No.	Part No.	Name	Qty
1	-	COMPLETE BODYWORK	1
2	67762111	COMPLETE FRONT FENDER ASSEMBLY	1
3	67762211	COMPLETE R.H. FRONT FENDER	1
4	65314111	FRONT CENTRAL LINING	1
5	66233911	FRONT CENTRAL MOULDING	1
6	67762511	COMPLETE L.H. FRONT FENDER	1
7	69401511	COMPLETE R.H. REAR FENDER	1
8	69401611	COMPLETE L.H. REAR FENDER	1
9	63246711	ROOF UPHOLSTERY	1
10	65703111	TAIL WINDSHIELD TRIM	1
11	65315011	R.H. WINDSHIELD PILLAR SHIELD	1
12	65315111	L.H. WINDSHIELD PILLAR SHIELD	1
13	13836771	SCREW	1
14	68624600	PLATE	2
15	65921900	SQUADRA CORSE SMALL SHIELD	2
16	16101711	NUT	6
17	14498521	WASHER	6
18	12624178	WASHER	6
19	63268400	COMPLETE TAIL WINDSHIELD TRIM	1
20	65155300	FIXED REAR BRACKET FOR REAR FENDER	2

 
<101-Frame---Front-Elements->

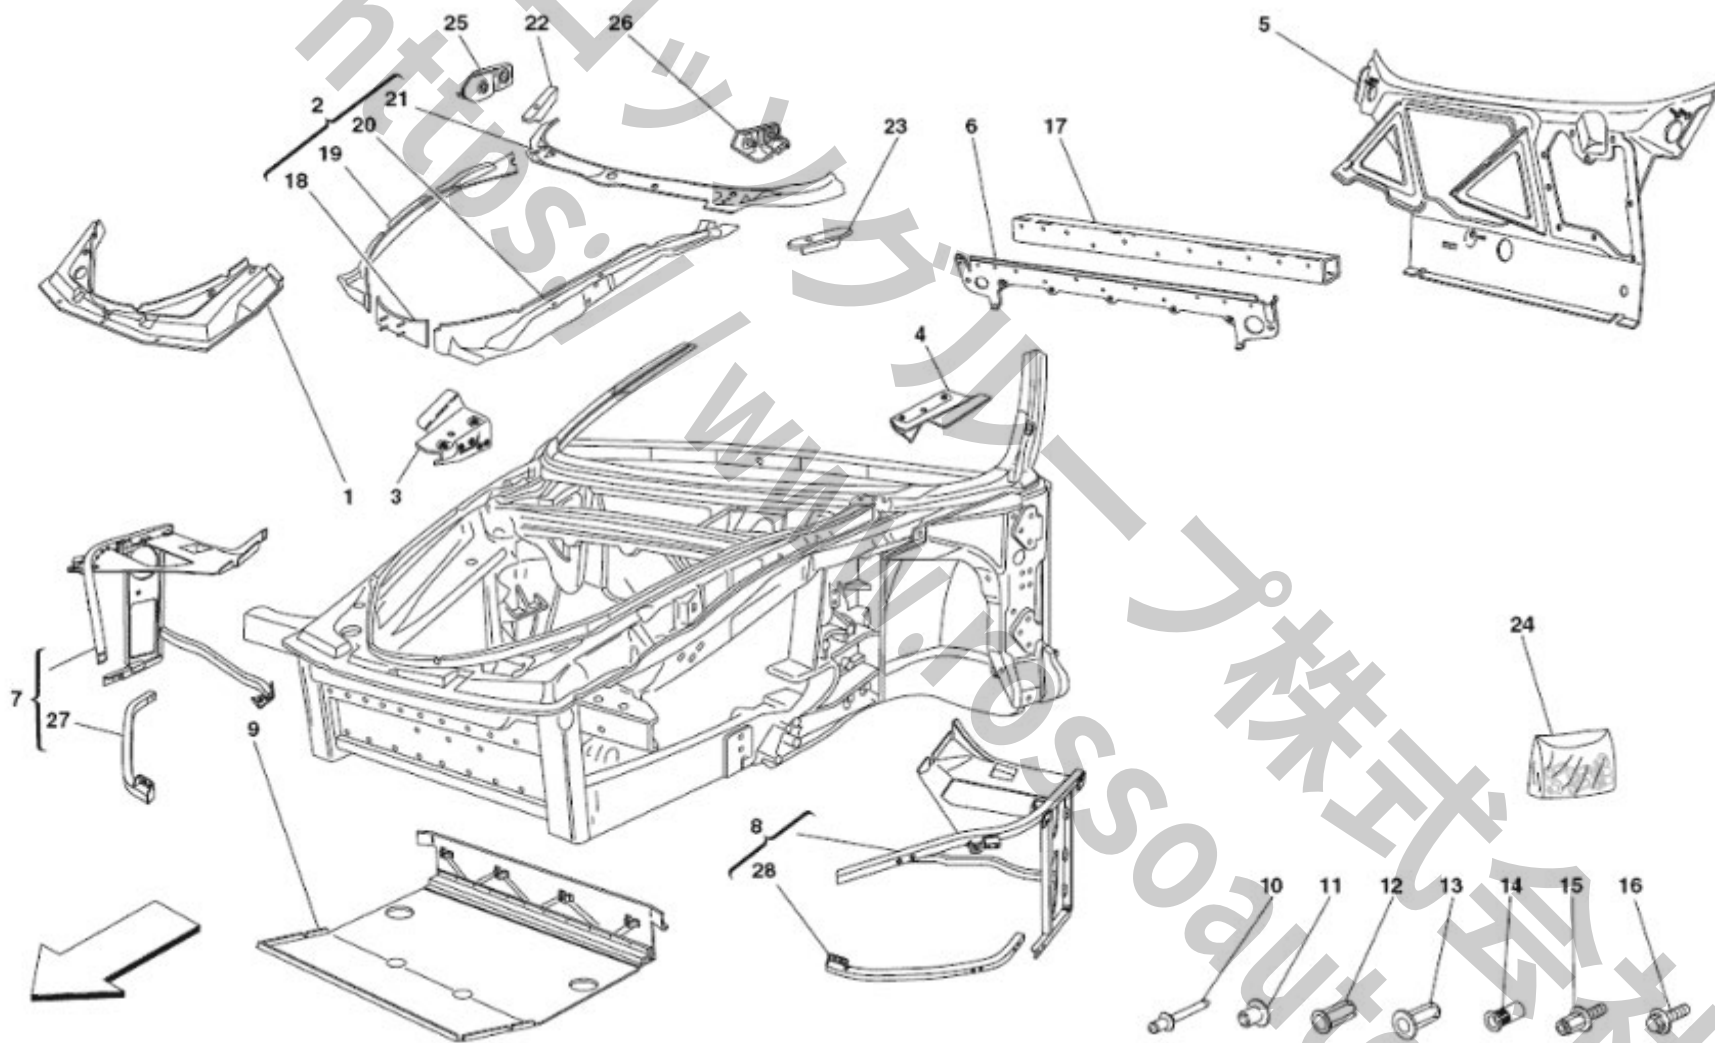

<101-Frame---Front-Elements->

No.	Part No.	Name	Qty
1	65393611	COMPLETE FRONT CROSS MEMBER	1
2	68037611	COMPLETE FRONT MOULDING	1
3	65393800	R.H. PLATE FOR FRONT HOOD BONNET HINGE	1
4	65393900	L.H. PLATE FOR FRONT HOOD BONNET HINGE	1
5	985202382	FRONT SHIELD	1
6	67962700	TRUNK COMPARTMENT UPPER REAR PANEL	1
7	69735911	R.H. FRONT SIDE FRAME	1
7	69735911	R.H. FRONT SIDE FRAME	1
7	69735211	R.H. FRONT SIDE FRAME	1
8	69736011	L.H. FRONT SIDE FRAME	1
8	69736011	L.H. FRONT SIDE FRAME	1
8	69736011	L.H. FRONT SIDE FRAME	1
9	69590300	COMPLETE COMPARTMENT BOTTOM PLATE	1
10	14642891	POP RIVET L. 14 MM	1
11	65133800	RIVET L. 6,4 MM	1
12	15180411	BLIND ESAGONAL RIVET	1
12	15624211	ESAGONAL RIVET M4	1
12	15624311	ESAGONAL RIVET M5	1
12	15624411	ESAGONAL RIVET M6	1
12	15624511	ESAGONAL RIVET M8	1
13	65151200	RIVET M6	1
14	166101	RIVET M4	1
14	60853400	RIVET M10	1
14	65930400	RIVET M6	1
14	65135000	RIVET M8	1
14	65319800	RIVET M8 BLIND	1
15	65065400	STUD HEXAGONAL HEAD M6	1
16	13836771	SCREW	1
17	202381	COMPLETE FRONT SUSPENSION UPPER CONNECTION CROSS MEMBER	1
18	66219811	TRUNK COMPARTMENT UPPER MOULDING INSERT	1
19	67963111	R.H. FENDER SUPPORT WALL	1
20	68031911	L.H. FENDER SUPPORT WALL	1
21	68037611	COMPLETE FRONT MOULDING	1
22	65317400	R.H. BRACKET	1
23	65317500	L.H. BRACKET	1
24	70000950	INSERTS KIT FOR REPAIR	1
25	65709800	R.H. BRACKET FOR FIXED HINGE	1
26	65709900	L.H. BRACKET FOR FIXED HINGE	1
27	68079800	R.H. MOBILE PIPE	1
28	68086300	L.H. MOBILE PIPE	1
 
<102-Frame---Front-Elements->

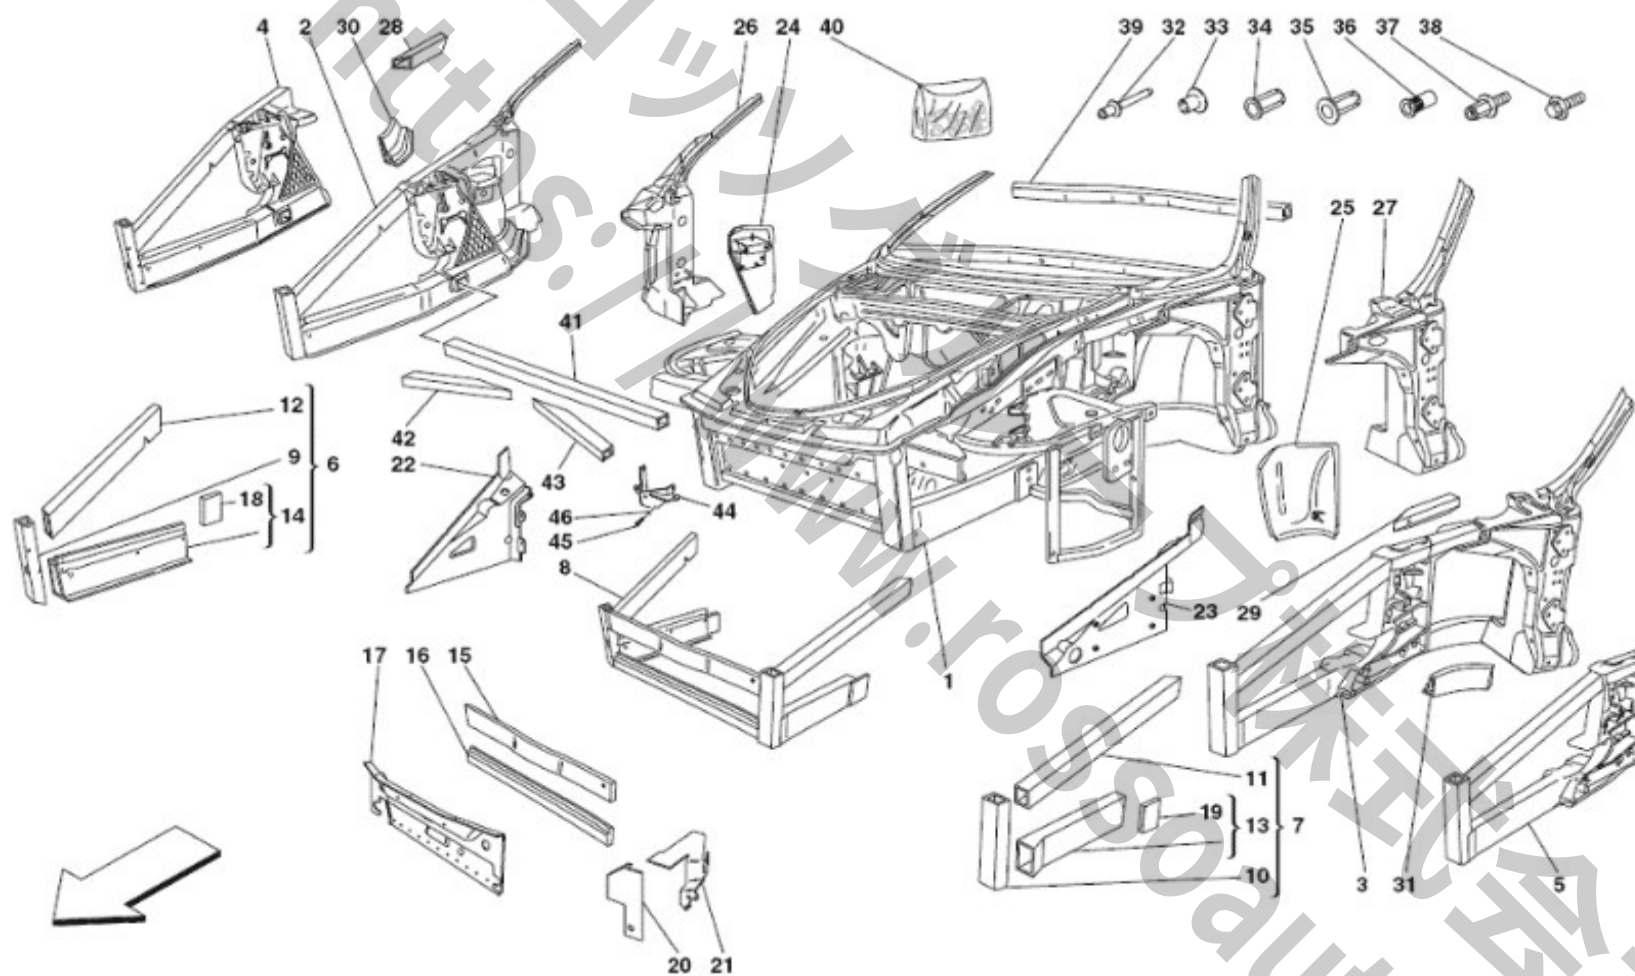


<102-Frame---Front-Elements->

No.	Part No.	Name	Qty
1	68885211	COMPLETE FRONT FRAME	1
2	68885311	COMPLETE R.H. FRONT SIDE FRAME	1
3	68885411	COMPLETE L.H. FRONT SIDE FRAME	1
4	68885500	R.H. FRONT LATERAL SPRAG	1
5	68885611	L.H. FRONT LATERAL SPRAG	1
6	68885711	COMPLETE R.H. FRONT LATERAL FRAME	1
7	68885811	COMPLETE L.H. FRONT LATERAL FRAME	1
8	68885911	COMPLETE FRONT FRAME	1
9	985206243	R.H. FRONT BUMPER PILLAR	1
10	985206242	L.H. FRONT BUMPER PILLAR	1
11	207735	L.M. FRAME	1
12	207736	R.H. FRAME	1
13	194945	L.H. FRONT CRUSH BOX	1
14	194946	R.H. FRONT CRUSH-BOX	1
15	166301	FRONT UPPER CROSS MEMBER	1
16	183816	FRONT LOWER CROSS MEMBER	1
17	68037711	TRUNK COMPARTMENT FRONT WALL	1
18	166291	R.H. FRONT REINFORCEMENT	1
19	166191	L.H. FRONT REINFORCEMENT	1
20	66395400	L.H. BRACKET	1
20	66395511	R.H. BRACKET	1
21	207175	L.H. BRAKET FOR FRONT BUMPER FIXING	1
21	985207176	R.H. BRAKET FOR FRONT BUMPER FIXING	1
21	207176	R.H. BRAKET FOR FRONT BUMPER FIXING	1
21	207176	R.H. BRAKET FOR FRONT BUMPER FIXING	1
22	67357711	R.H. FRONT SIDE WALL	1
23	67357811	L.H. FRONT SIDE WALL	1
23	67357811	L.H. FRONT SIDE WALL	1
24	198739	R.H. PLATE	1
25	223971	L.H. PLATE	1
26	68886011	COMPLETE R.H. DOOR PILLAR	1
27	68886100	COMPLETE L.H. DOOR PILLAR	1
28	196005	R.H. UPPER FRAME	1
29	196004	L.H. UPPER FRAME	1
30	166215	R.H. LOWER FRAME	1
31	166115	L.H. LOWER FRAME	1

32	14642891 POP RIVET L. 14 MM	1
33	65133800 RIVET L. 6,4 MM	1
34	15180411 BLIND ESAGONAL RIVET	1
34	15624211 ESAGONAL RIVET M4	1
34	15624311 ESAGONAL RIVET M5	1
34	15624411 ESAGONAL RIVET M6	1
34	15624511 ESAGONAL RIVET M8	1
35	65151200 RIVET M6	1
36	60853400 RIVET M10	1
36	166101 RIVET M4	1
36	65930400 RIVET M6	1
36	65135000 RIVET M8	1
36	65319800 RIVET M8 BLIND	1
37	65065400 STUD ESAGONAL HEAD M6	1
38	13836771 SCREW	1
39	193754 UNDER WINDSCREEN CROSS MEMBER	1
40	70000950 INSERTS KIT FOR REPAIR	1
41	985207357 COMPLETE CROSS MEMBER	1
42	196003 R.H. FRONT REINFORCEMENT	1
43	209306 L.H. FRONT REINFORCEMENT	1
44	223967 BRACKET FOR HOOK	1
45	16043421 SCREW	5
46	14496521 WASHER	5
 
<103-Frame---Central-Element>

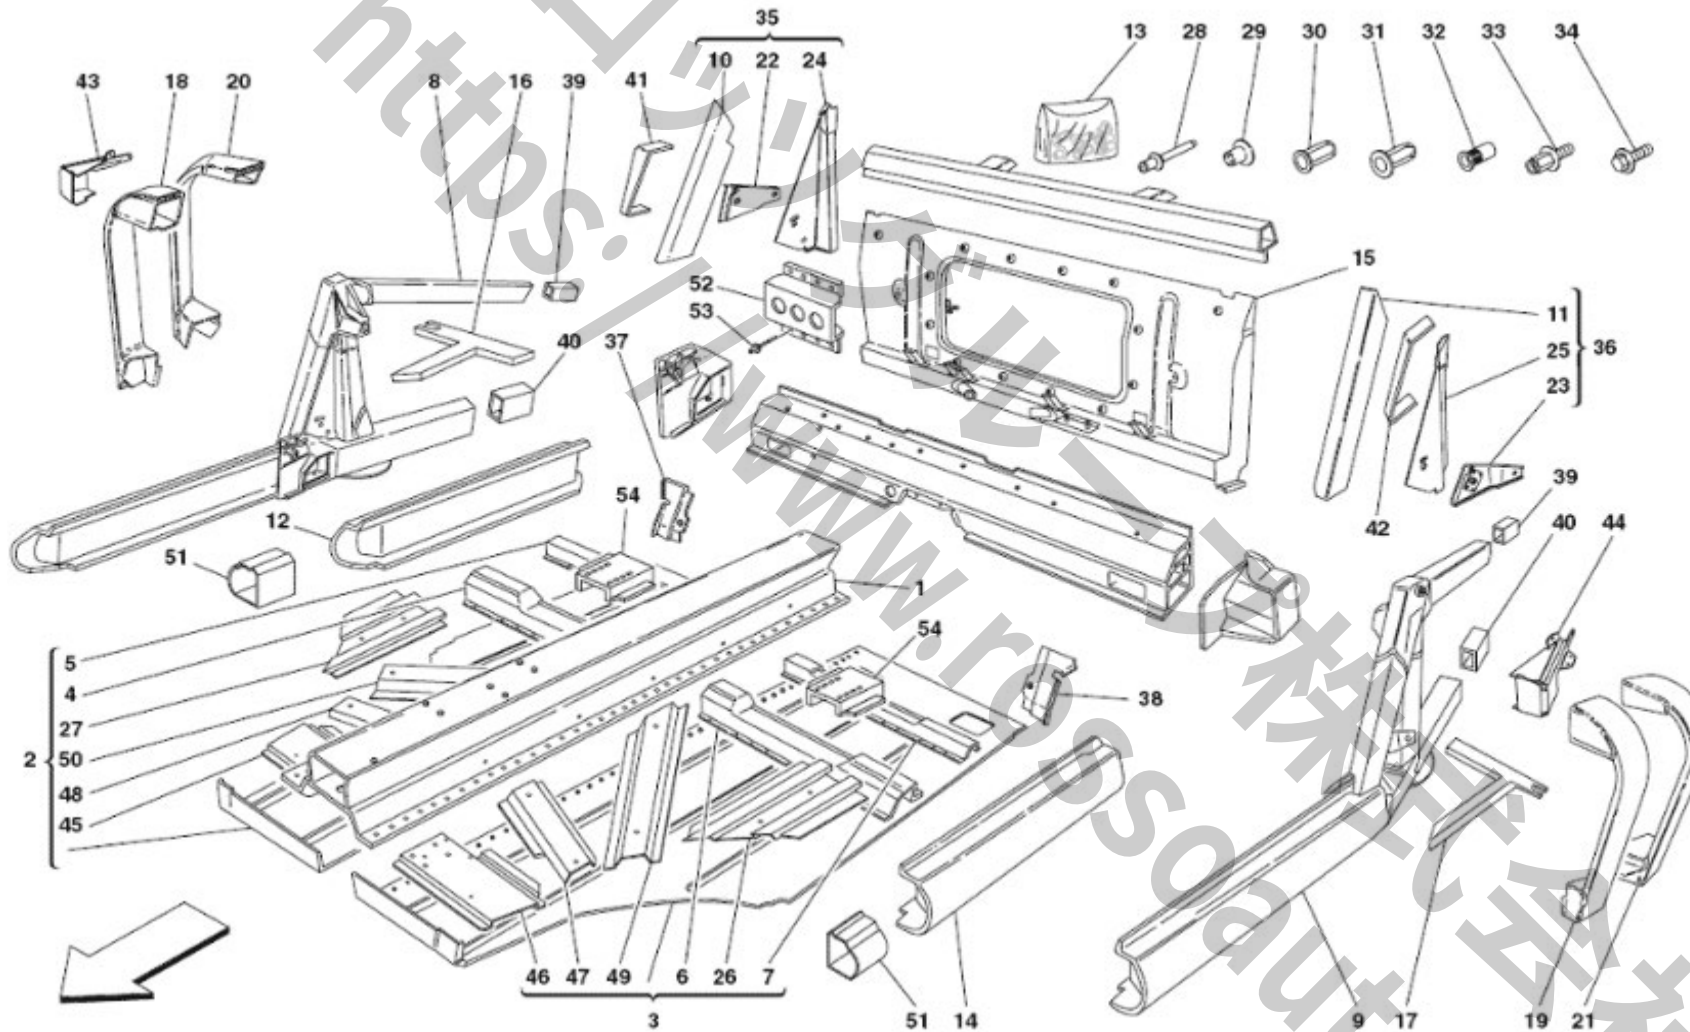


<103-Frame---Central-Element>

No.	Part No.	Name	Qty
1	194938	COMPLETE TUNNEL	1
2	68886311	COMPLETE R.H. LATERAL HALF FLOOR	1
3	68886400	COMPLETE L.H. LATERAL HALF FLOOR	1
4	207193	R.H. FRONT CROSS MEMBER	1
5	205203	R.H. REAR CROSS MEMBER	1
6	207192	L.H. FRONT CROSS MEMBER	1
7	205202	L.H. REAR CROSS MEMBER	1
8	68886500	R.H. LATERAL REAR CROSSMEMBER	1
9	68886600	L.H. LATERAL REAR CROSSMSMBER	1
10	166232	R.H. REINFORCEMENT FRAME	1
11	166132	L.H. REINFORCEMENT FRAME	1
12	201435	R.H. CROSSMEMBER	1
13	70000950	INSERTS KIT FOR REPAIR	1
14	201434	L.H. CROSSMEMBER	1
15	202560	REAR SHIELD	1
16	64811011	R.H. REAR FIXING FRAME	1
16	64811011	R.H. REAR FIXING FRAME	1
17	64811111	L.H. REAR FIXING FRAME	1
18	65153400	R.H. FRONT SIDE MOLDING	1
19	65153500	L.H. FRONT SIDE MOLDING	1
20	65998100	R.H. REAR SIDE MOLDING	1
21	65998200	L.H. REAR SIDE MOULDING	1
22	64804300	R.H. REWINDER FIXING REINFORCEMENT	1
23	64804400	L.H. REWINDER FIXING REINFORCEMENT	1
24	64803500	R.H. LATERAL MOLDING	1
25	64803600	L.H. LATERAL MOLDING	1
26	196081	L.H. REINFORCEMENT	1
27	196082	R.H. REINFORCEMENT	1
28	14642891	POP RIVET L. 14 MM	1
29	65133800	RIVET L. 6,4 MM	1
30	15624211	ESAGONAL RIVET M4	1
30	15180411	BLIND ESAGONAL RIVET	1
30	15624311	ESAGONAL RIVET M5	1
30	15624411	ESAGONAL RIVET M6	1
30	15624511	ESAGONAL RIVET M8	1
31	65151200	RIVET M6	1
32	60853400	RIVET M10	1
32	166101	RIVET M4	1

32	65930400 RIVET M6	1
32	65135000 RIVET M8	1
32	65319800 RIVET M8 BLIND	1
33	65065400 STUD ESAGONAL HEAD M6	1
34	13836771 SCREW	1
35	66464800 R.H. PANEL UPPER FRAME	1
36	66464900 L.H. PANEL UPPER FRAME	1
37	69413400 R.H. SUPPORT CENTRAL OVERLAP	1
38	69413500 L.H. SUPPORT CENTRAL OVERLAP	1
39	181980 CORE FOR REPAIR	1
40	181979 CORE FOR REPAIR	1
41	65903600 R.H. STRIKER	1
42	65903700 L.H. STRIKER	1
43	202682 R.H. REAR REINFORCEMENT	1
44	202681 L.H. REAR REINFORCEMENT	1
45	207194 FRONT CROSS MEMBER FOR BATTERY BIN	1
46	207195 FRONT CROSS MEMBER FOR ACCELERATOR PEDAL CASTING FIXING	1
47	194132 L.H. FRONT REINFORCEMENT	1
48	194987 R.H. FRONT REINFORCEMENT	1
49	194986 L.H. REAR REINFORCEMENT	1
50	207199 R.H. REAR REINFORCEMENT	1
51	181981 CORE FOR RIPAIR	1
52	69494300 ACQUIREMENT CONTROL UNIT BRACKET	1
53	14641993 RIVET	6
54	69238800 BRACKET	2
 
<104-Frame---Rear-Elements-a>

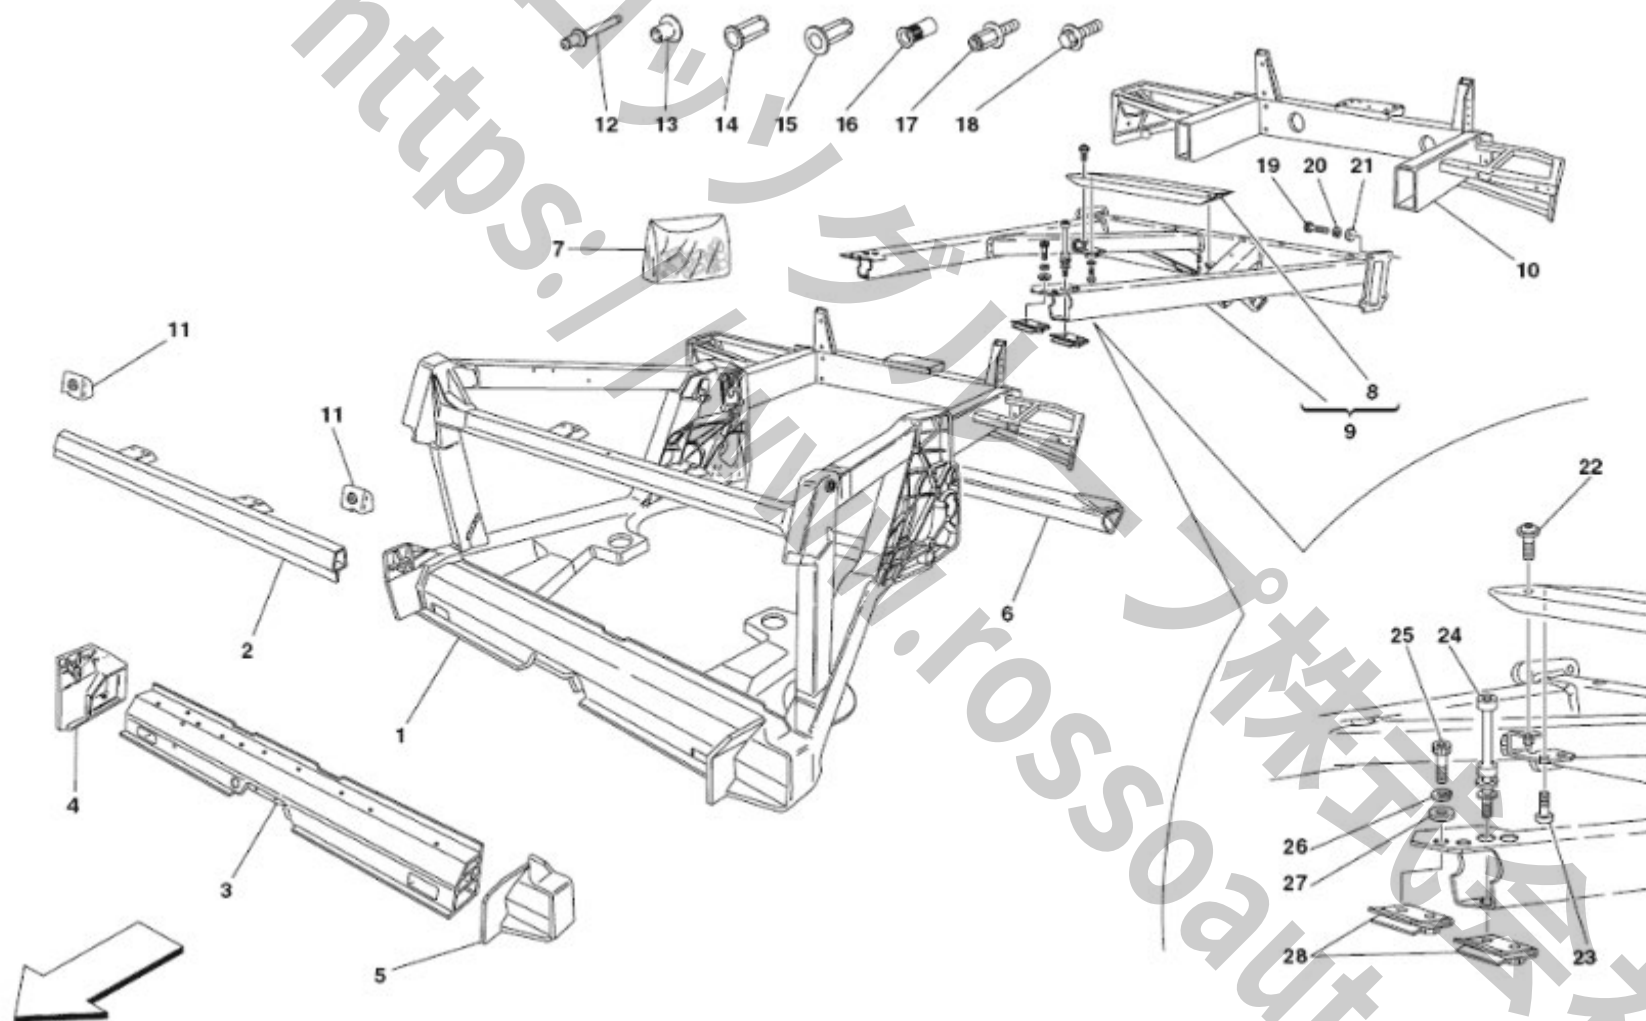


<104-Frame---Rear-Elements-a>

No.	Part No.	Name	Qty
1	68886911	COMPLETE REAR FRAME	1
2	211682	COMPLETE TAIL REAR WINDOW CROSSPIECE	1
3	68887000	REAR CROSS MEMBER	1
4	199984	R.H. LOWER REAR CASTING	1
5	199983	L.H. LOWER REAR CASTING	1
6	207991	COMPLETE LOWER CROSS MEMBER	1
7	70000950	INSERTS KIT FOR REPAIR	1
8	208610	CROSS MEMBER	1
9	68887111	COMPLETE REAR REMOVIBLE FRAME	1
10	68887211	COMPLETE REAR FRAME	1
11	67608200	BRACKET FOR REAR SPRAG FIXING ROLL-BAR	2
12	14642891	POP RIVET L. 14 MM	1
13	65133800	RIVET L. 6,4 MM	1
14	15180411	BLIND ESAGONAL RIVET	1
14	15624211	ESAGONAL RIVET M4	1
14	15624311	ESAGONAL RIVET M5	1
14	15624411	ESAGONAL RIVET M6	1
14	15624511	ESAGONAL RIVET M8	1
15	65151200	RIVET M6	1
16	60853400	RIVET M10	1
16	166101	RIVET M4	1
16	65930400	RIVET M6	1
16	65135000	RIVET M8	1
16	65319800	RIVET M8 BLIND	1
17	65065400	STUD ESAGONAL HEAD M6	1
18	13836771	SCREW	1
19	14306374	SCREW	8
20	127496	WASHER	8
21	10519624	WASHER	8
22	62940900	SCREW	2
23	62940900	SCREW	4
24	183554	COMPLETE SCREW	4
25	13028734	SCREW	4
26	127496	WASHER	4
27	10519624	WASHER	4
28	179268	L.H. BRACKET	2

ロッシングループ株式会社
<https://www.rossoauto.com>
 
<105 Frame - Central Elements Sub-Groups>

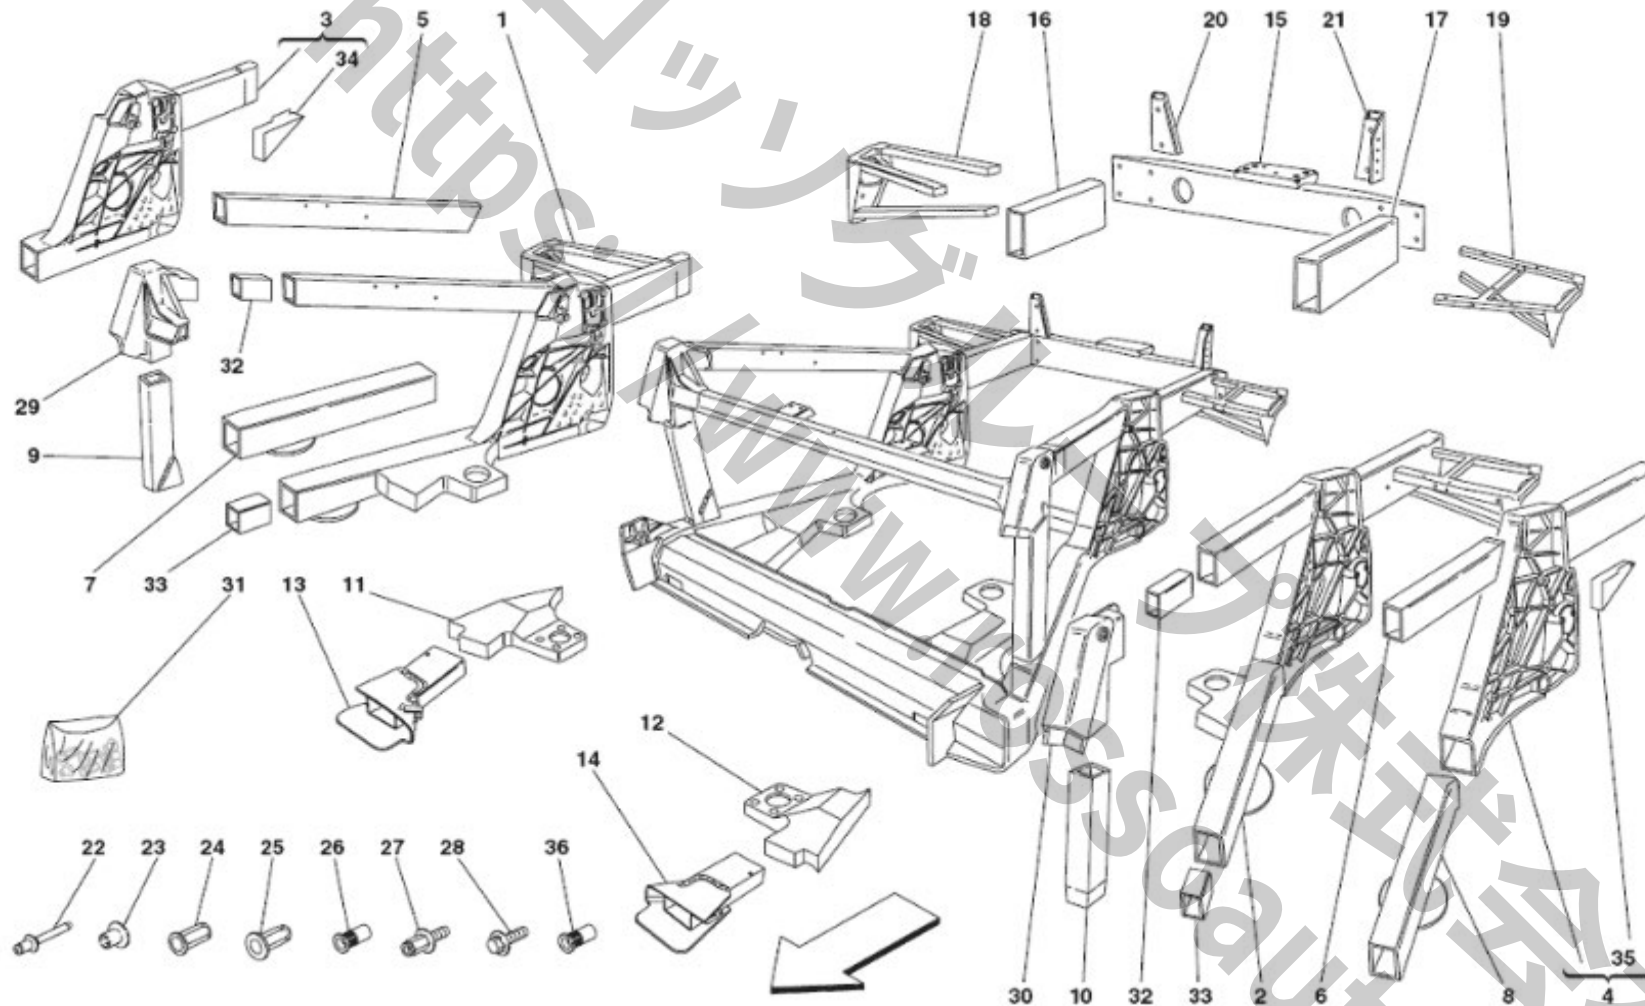

<105 Frame - Central Elements Sub-Groups>


No.	Part No.	Name	Qty
1	68887311	COMPLETE R.H. SIDE FRAME	1
2	68887411	COMPLETE L.H. SIDE FRAME	1
3	68887511	R.H. REAR LATERAL CASTING	1
4	68887611	L.H. REAR LATERAL CASTING	1
5	202584	R.H. UPPER FRAME	1
6	202583	L.H. UPPER FRAME	1
7	212303	R.H. LOWER FRAME	1
8	212302	L.H. LOWER FRAME	1
9	66051211	COMPLETE R.H. REAR PANEL	1
10	66051100	COMPLETE L.H. REAR PANEL	1
11	6234102	R.H. BRACKET ENGINE SUPPORT	1
12	6234101	L.H. BRACKET ENGINE SUPPORT	1
13	65942200	R.H. SUPPORT FOR BRACKET	1
14	65942311	L.H. SUPPORT FOR BRACKET	1
15	231530	REAR BUMPER CROSS MEMBER	1
16	207272	R.H. REAR FRAME	1
17	207271	L.H. REAR FRAME	1
18	67679211	R.H. REAR FENDER FRAME	1
19	67780211	L.H. REAR FENDER FRAME	1
19	67780211	L.H. REAR FENDER FRAME	1
20	68027011	R.H. SIDE BRACKET	1
21	68027111	L.H. SIDE BRACKET	1
22	14642891	POP RIVET L. 14 MM	1
23	65133800	RIVET L. 6,4 MM	1
24	15180411	BLIND ESAGONAL RIVET	1
24	15624211	ESAGONAL RIVET M4	1
24	15624311	ESAGONAL RIVET M5	1
24	15624411	ESAGONAL RIVET M6	1
24	15624511	ESAGONAL RIVET M8	1
25	65151200	RIVET M6	1
26	166101	RIVET M4	1
26	60853400	RIVET M10	1
26	65930400	RIVET M6	1
26	65135000	RIVET M8	1
26	65319800	RIVET M8 BLIND	1
27	65065400	STUD ESAGONAL HEAD M6	1

28	13836771 SCREW	1
29	6166261 R.H. UPPER FUSION REAR PILLAR	1
30	6166161 L.H. UPPER FUSION REAR PILLAR	1
31	70000950 INSERTS KIT FOR REPAIR	1
32	181980 CORE FOR REPAIR	1
33	181979 CORE FOR REPAIR	1
34	196575 R.H. REINFORCEMENT	1
35	196574 L.H. REINFORCEMENT	1
36	15629711 RIVET	2

<https://www.rossoauto.com>

 株式会社

 
<106 Roof - Structure>

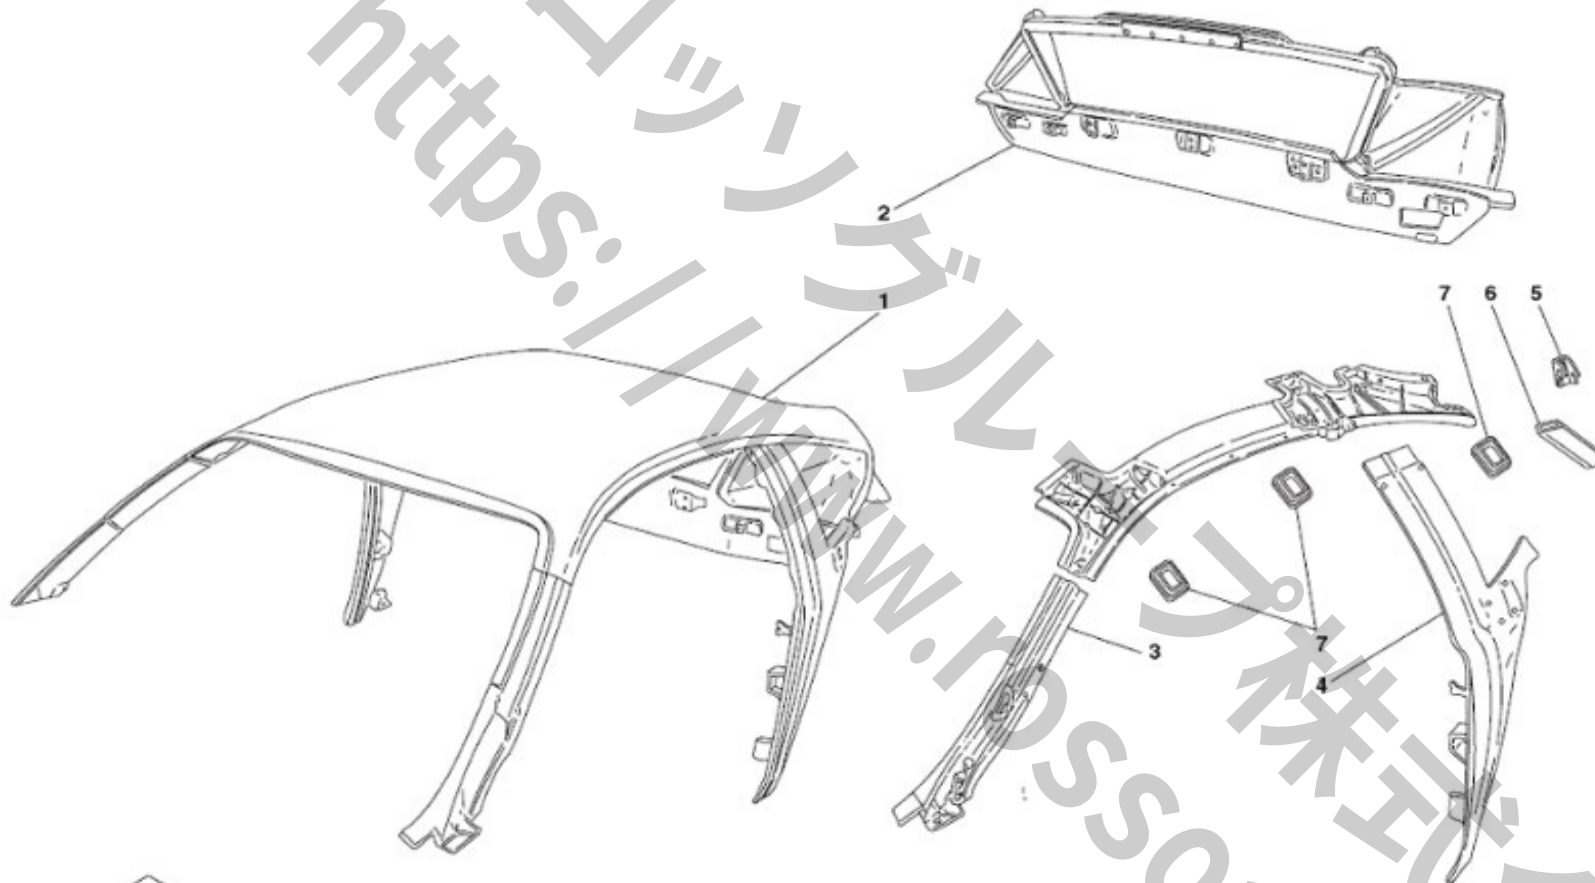

<106 Roof - Structure>

No.	Part No.	Name	Qty
1	69397211	COMPLETE ROOF	1
2	69397911	REAR WINDOW MOULDING	1
3	65134700	L.H. SIDE MOLDING	1
3	69407100	R.H. SIDE MOLDING	1
4	69400311	L.H. CENTRAL PILLAR	1
4	69400211	R.H. CENTRAL PILLAR	1
5	64854300	BRACKET FOR L.H. PROP FIXING	1
5	64807900	BRACKET FOR R.H. PROP FIXING	1
6	65804011	COMPLETE R.H. REAR PANEL	1
6	65804111	COMPLETE L.H. REAR PANEL	1
7	65715200	PLUG	6

 
<107 Roll Bar>

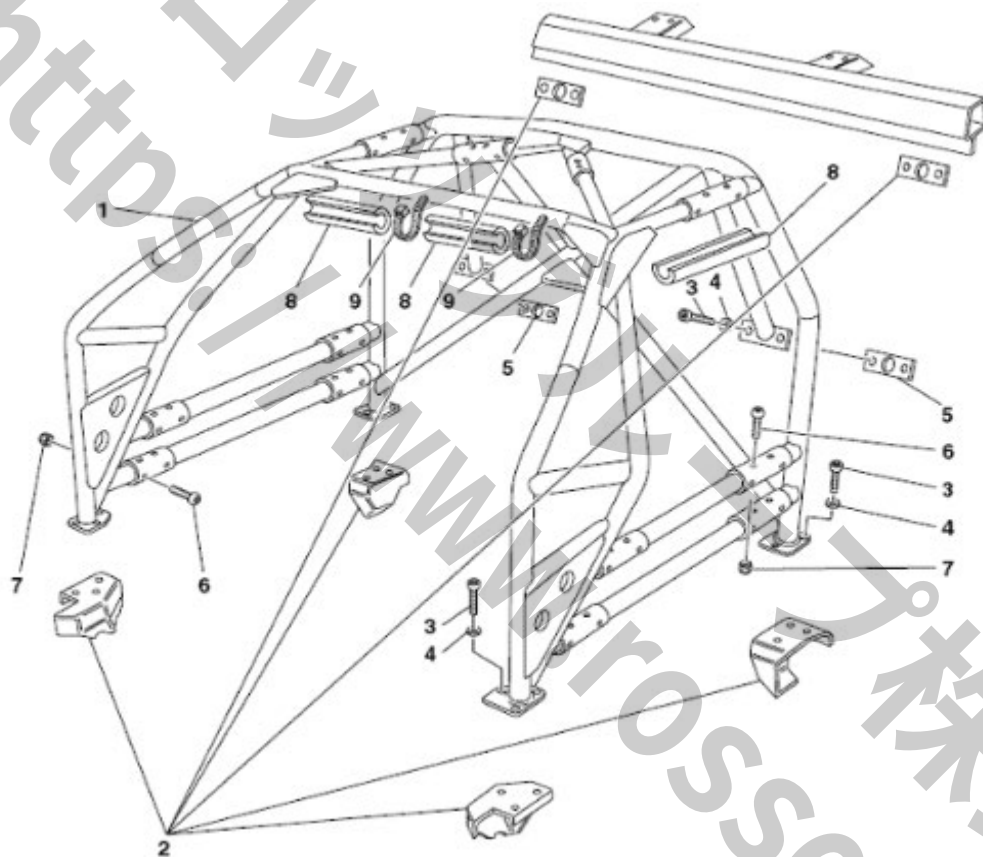

<107 Roll Bar>

No.	Part No.	Name	Qty
1	69339500	COMPLETE ROLL-BAR	1
1	69697700	COMPLETE ROLL-BAR	1
2	70000947	ROLL-BAR ROLL-BAR FIXING PLATE KIT	1
3	14420126	SCREW	16
4	11190573	WASHER	16
5	65986300	THICKNESS	2
5	65986400	THICKNESS	2
5	65986500	THICKNESS	2
6	66154000	SCREW	44
7	101139	NUT	44
8	69744700	LINING	2
8	69744800	LINING	2
8	69744900	LINING	1
8	69745000	LINING	1
8	69775000	LINING	2
8	69774900	LINING	2
9	196655	CLAMP	12

 
<108 Flat Floor Pan and Wheelhouse>

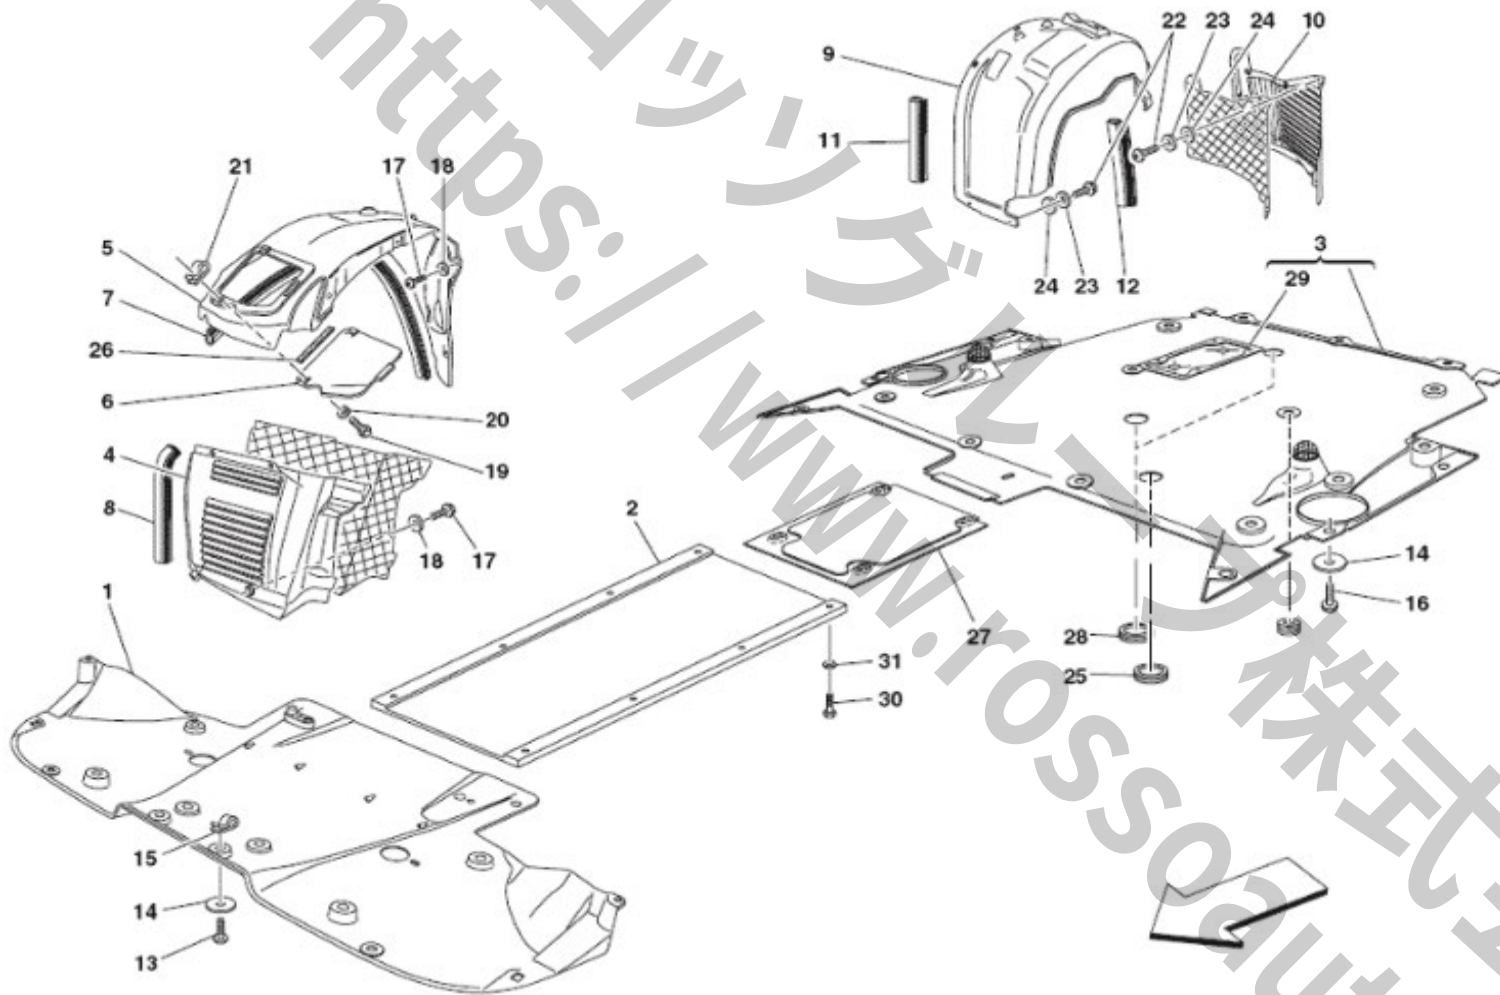

<108 Flat Floor Pan and Wheelhouse>

No.	Part No.	Name	Qty
1	80499400	FRONT UNDER THE BODY SHELL SHIELD	1
2	69401200	TUNNEL REINFORCEMENT	1
3	80069800	REAR UNDER THE BODY	1
4	80103400	FRONT GRAVEL GUARD FOR L.H. FRONT WHEEL	1
4	80103300	FRONT GRAVEL GUARD FOR R.H. FRONT WHEEL	1
5	67964900	L.H. FRONT WHEELHOUSE OUTER CARPET SHIELD	1
5	67957400	R.H. FRONT WHEELHOUSE OUTER CARPET SHIELD	1
6	65522400	L.H. WHEELHOUSE DOOR	1
6	65522300	R.H. WHEELHOUSE DOOR	1
7	68036400	GASKET	2
8	64994500	GASKET	2
9	69333300	L.H. REAR WHEELHOUSE	1
9	69333200	R.H. REAR WHEELHOUSE	1
10	67964500	L.H. GRAVEL GUARD FOR REAR WHEEL	1
10	67964400	R.H. GRAVEL GUARD FOR REAR WHEEL	1
11	64865000	GASKET	2
12	68034900	GASKET	2
13	10902424	SCREW	1
14	66121400	WASHER	3
15	14189071	BRACKET	6
16	10902424	SCREW	2
17	13276477	SCREW	1
18	11197777	WASHER	1
19	10977887	SCREW	4
20	12638178	WASHER	4
21	66927700	FIXING BRACKET	4
22	13276477	SCREW	1
23	11197777	WASHER	1
24	12643724	WASHER	1
25	64783600	PROTECTION PLUG	1
26	66092500	ANTI-VIBRATION GASKET	2
27	68023300	CENTRAL UNDER THE BODY SHELL SHIELD	1
28	63965800	PLUG	2
29	68372600	OIL FILTER INSPECTION DOOR	1
30	210246	SCREW	8
31	12646727	WASHER	8
 
<109 passengers compartment foot-board>

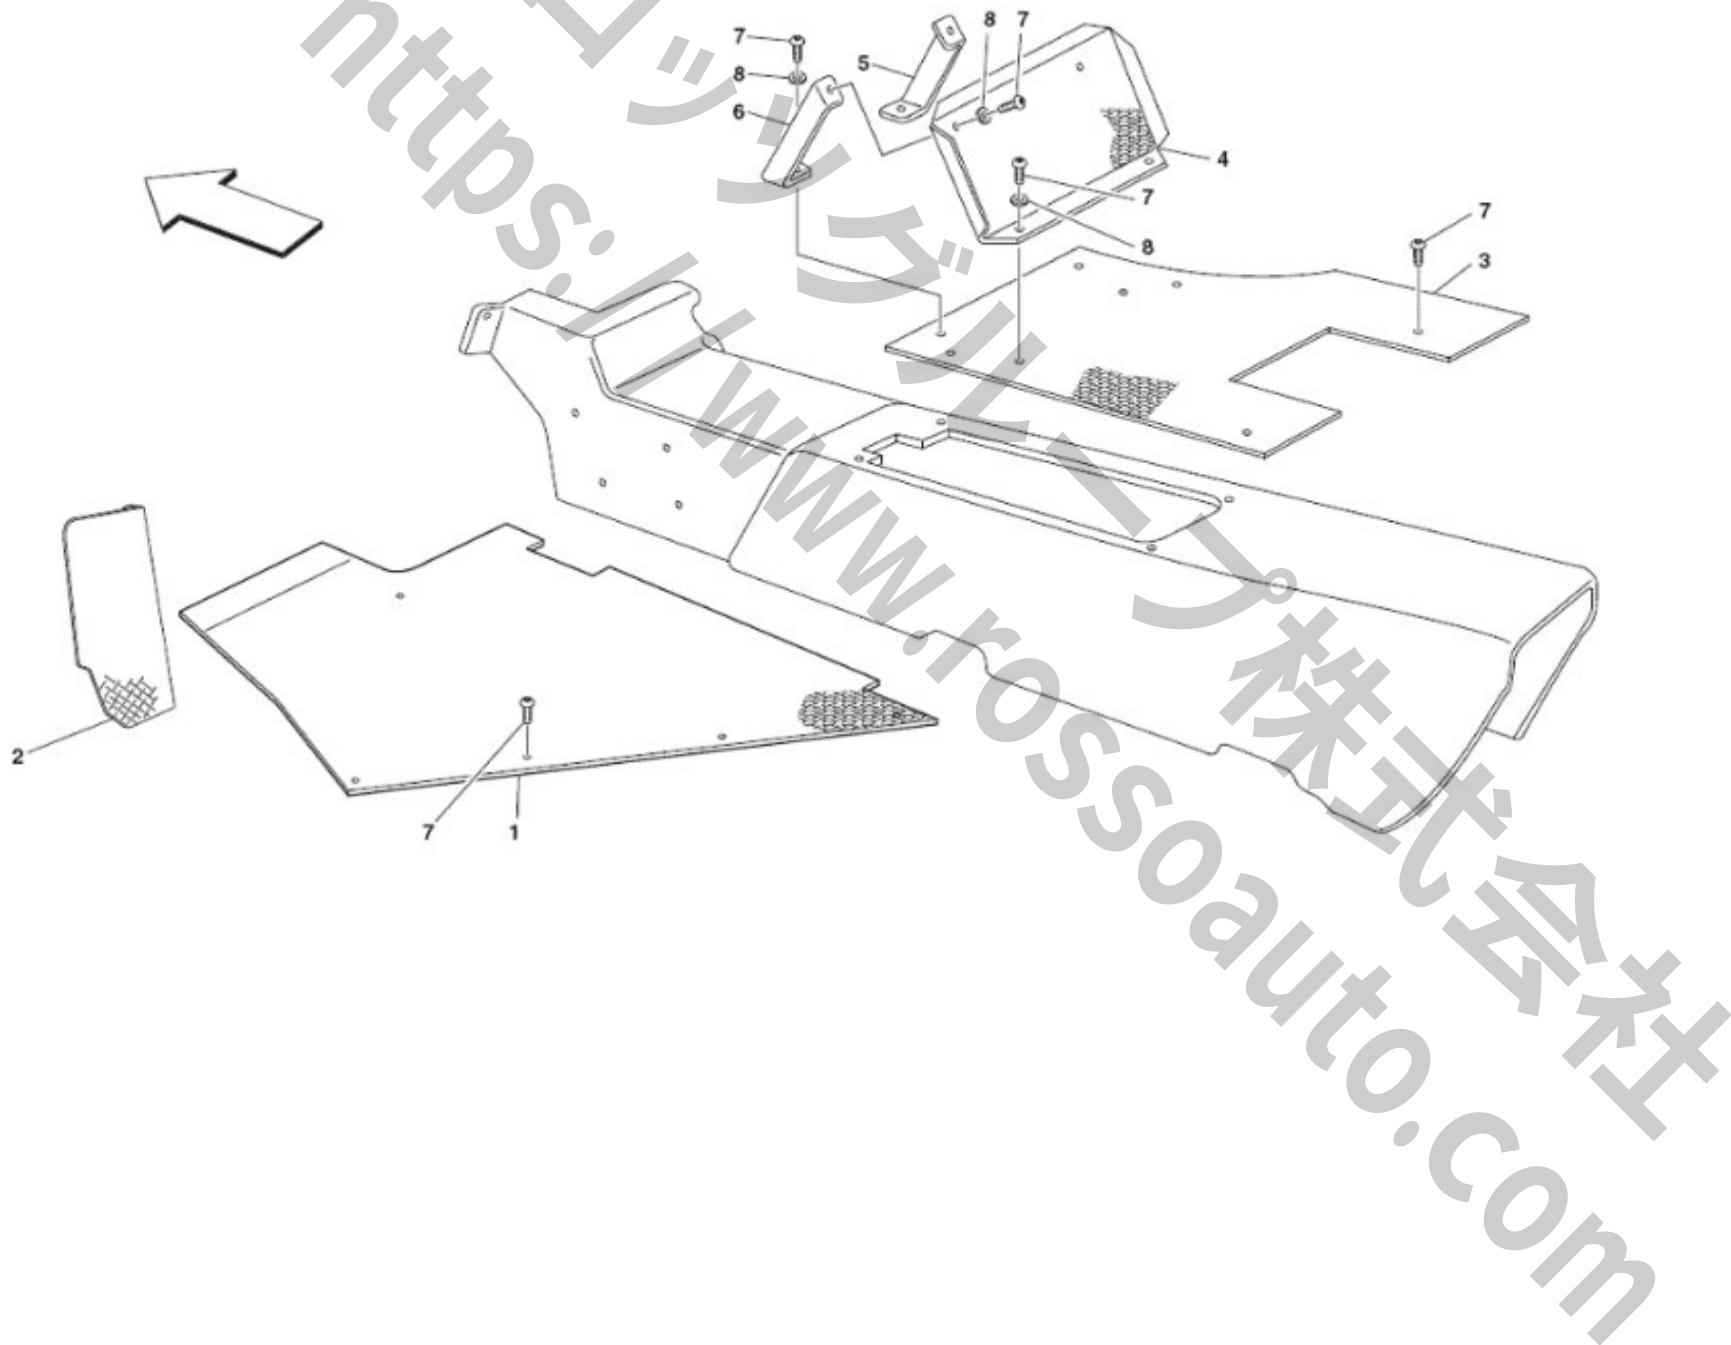


<109 passengers compartment foot-board>

No.	Part No.	Name	Qty
1	69395300	PILOT FOOT-BOARD	1
2	69617500	FOOT-REST FOR DRIVER	1
3	69739300	PASSENGER FOOT-BOARD	1
4	69739000	FOOT-REST FOR PASSENGER	1
5	69739100	R.H. BRACKET	1
6	69739200	L.H. BRACKET	1
7	64727900	SCREW	11
8	10519478	WASHER	11

<110 Front Hood & Opening Device>

This technical diagram illustrates the assembly of a front hood and its opening mechanism. The hood is shown in an open position, revealing the internal structure and the linkage system. The diagram includes the following numbered components:

 
- 1: Hood panel
- 2: Hood latch
- 3: Hood latch pin
- 4: Hood latch pin
- 5: Hood latch pin
- 6: Hood latch pin
- 7: Hood latch pin
- 8: Hood latch pin
- 9: Hood latch pin
- 10: Hood latch pin
- 11: Hood latch pin
- 12: Hood latch pin
- 13: Hood latch pin
- 14: Hood latch pin
- 15: Hood latch pin
- 16: Hood latch pin
- 17: Hood latch pin
- 18: Hood latch pin
- 19: Hood latch pin
- 20: Hood latch pin
- 21: Hood latch pin
- 22: Hood latch pin
- 23: Hood latch pin
- 24: Hood latch pin

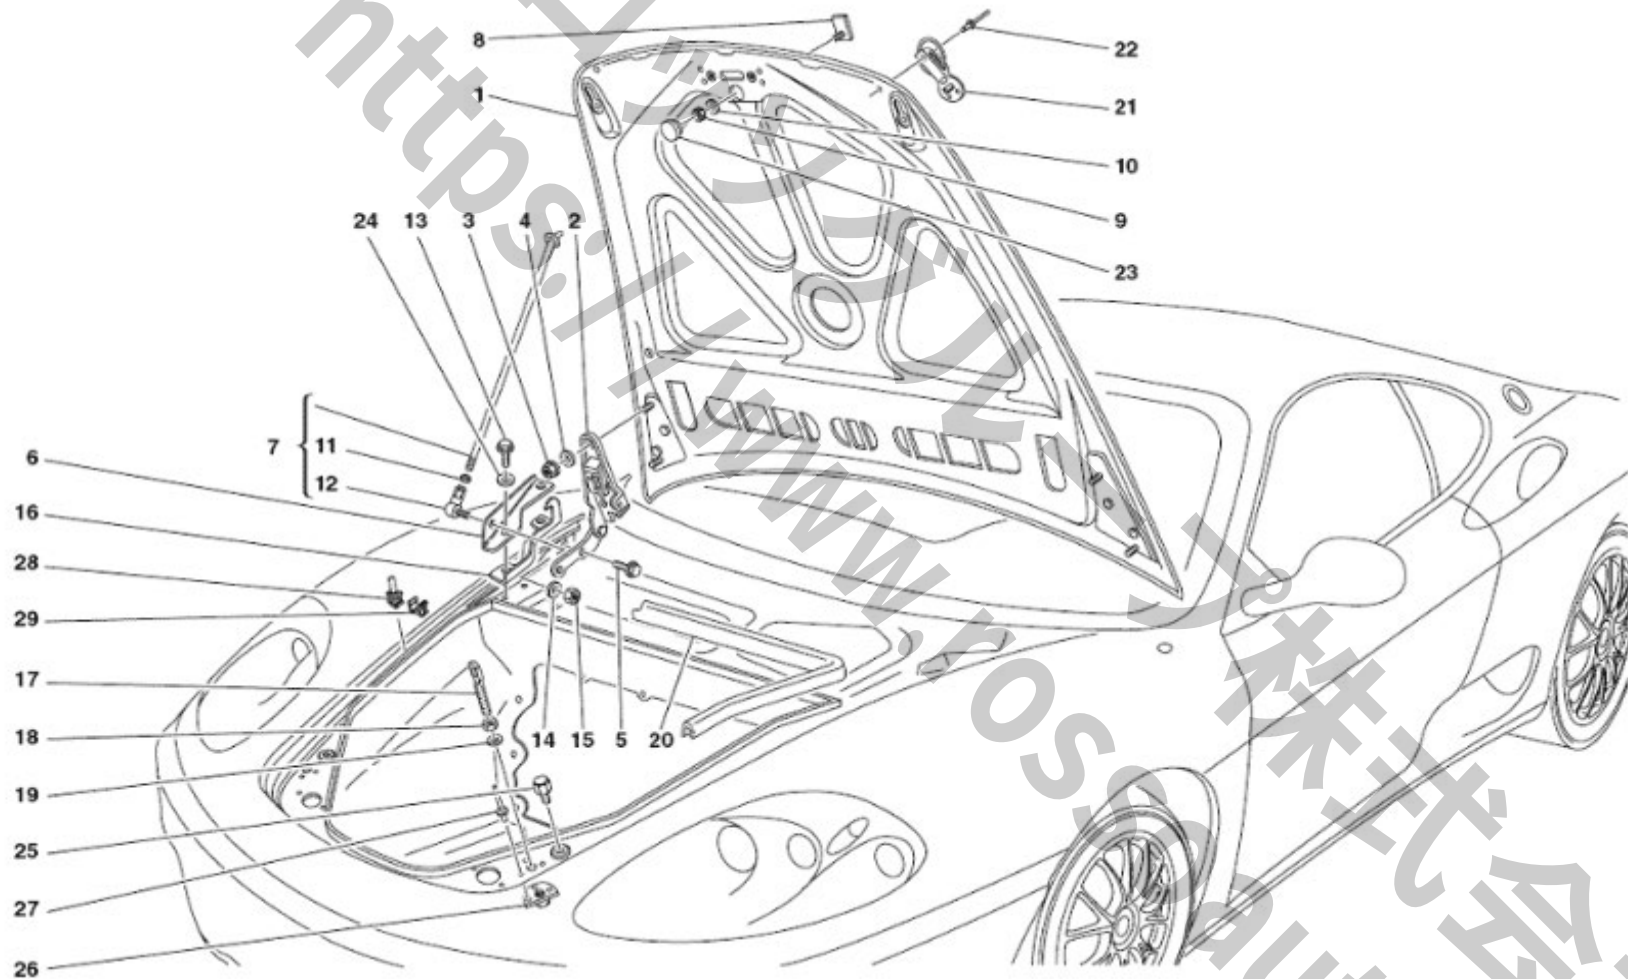

<110 Front Hood & Opening Device>

No.	Part No.	Name	Qty
1	66144811	SHEETED COMPLETE FRONT HOOD BONNET	1
2	65712300	COMPLETE L.H. HINGE	1
2	65712200	COMPLETE R.H. HINGE	1
3	13832211	NUT	4
4	14447125	WASHER	4
5	16287124	SCREW	4
6	69742200	ROD SUPPORT	1
7	66151200	HOOD SUPPORT ROD	1
8	65394800	FRONT ORNAMENT	1
9	169180	NUT	1
10	10519378	WASHER	1
11	10725914	NUT	1
12	179115	BALL HEAD	1
13	16287127	SCREW	4
14	14496429	WASHER	1
15	12574221	NUT	1
16	66465900	L.H. BRACKET	1
16	66465800	R.H. BRACKET	1
17	66128500	FAST FIXING PIN	2
18	66149900	NUT	2
19	66150000	WASHER	2
20	66216200	GASKET FOR TRUNK HOOD	1
21	66128400	HOOK	2
22	14641294	RIVET	6
23	14506787	PLUG	1
24	12601374	WASHER	2
25	65546600	SMALL BLOCK	2
26	65984600	SMALL PLATE	2
27	14641294	RIVET	6
28	140162	ANCHORAGE FOR CLIP	1
29	140130	CLIP	1

 
<111 Engine Bonnet>

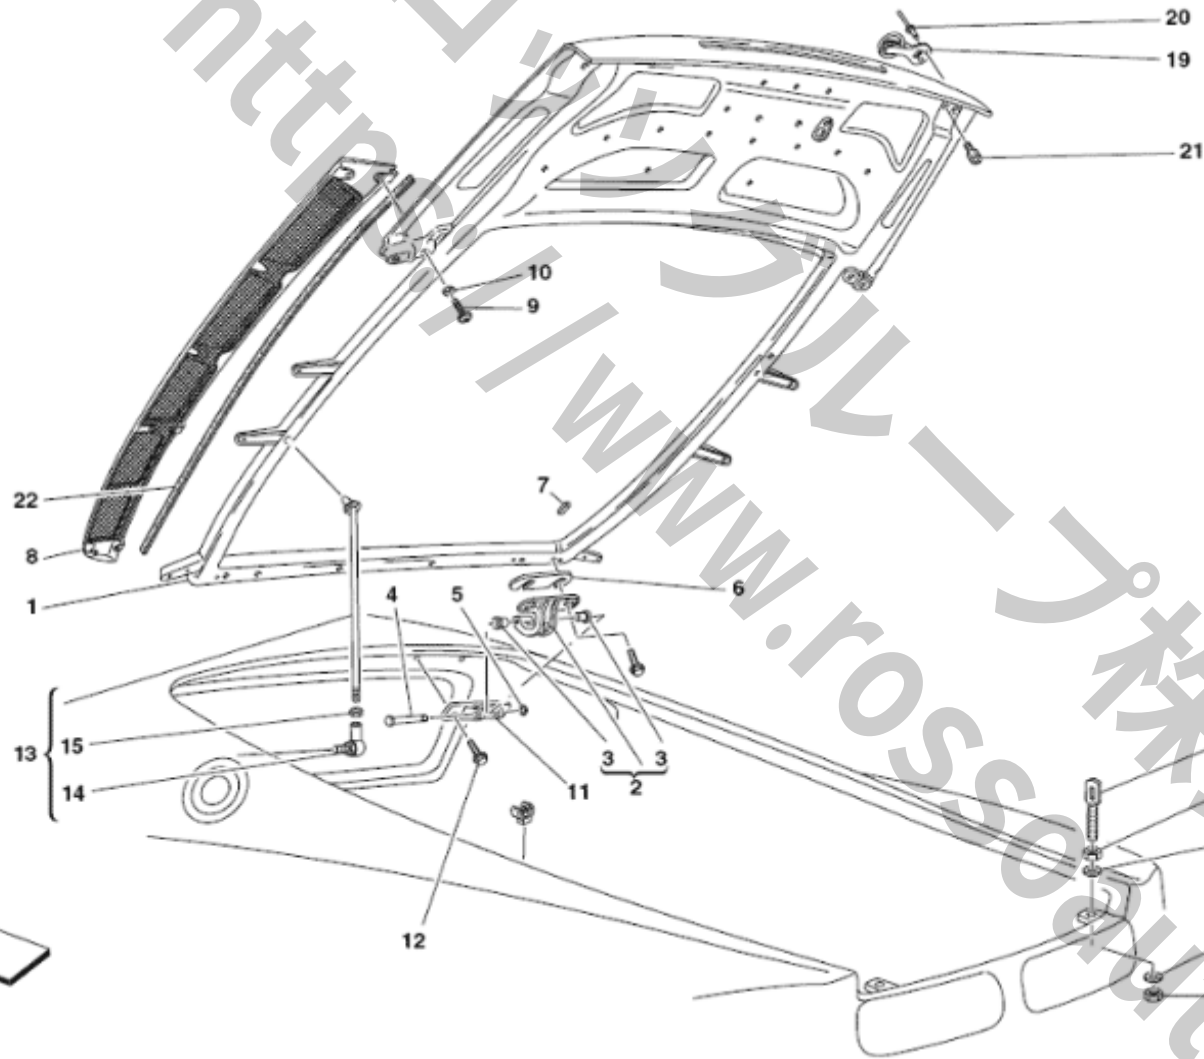

<111 Engine Bonnet>

No.	Part No.	Name	Qty
1	69340911	SHEETED REAR HOOD BONNET	1
2	64877600	L.H. MOBILE HINGE	1
2	64877500	R.H. MOBILE HINGE	1
3	62825300	BUSHING	4
4	64807100	PIN	2
5	11087974	FLEXIBLE RING	2
6	66073100	THICKNESS	2
7	63023300	SPACER	2
8	68075100	L.H. GRILL	1
8	68997900	L.H. GRILL	1
8	68075000	R.H. GRILL	1
8	68997800	R.H. GRILL	1
9	65864100	SCREW	16
10	12644478	WASHER	1
11	64806500	L.H. FIXED HINGE	1
11	64806400	R.H. FIXED HINGE	1
12	16287124	SCREW	4
13	66142300	HOOD SUPPORT ROD	1
14	62481000	BALL JOINT	1
15	16102324	NUT	1
16	66128500	FAST FIXING PIN	2
17	66149900	NUT	4
18	66150000	WASHER	4
19	66128400	BONNET HOOK	2
20	14641592	RIVET	6
21	69058800	PAD	2
22	69416500	SIDE GASKET	2
22	69416600	UPPER GASKET	1
 
<112 Doors - Framework and Coverings>

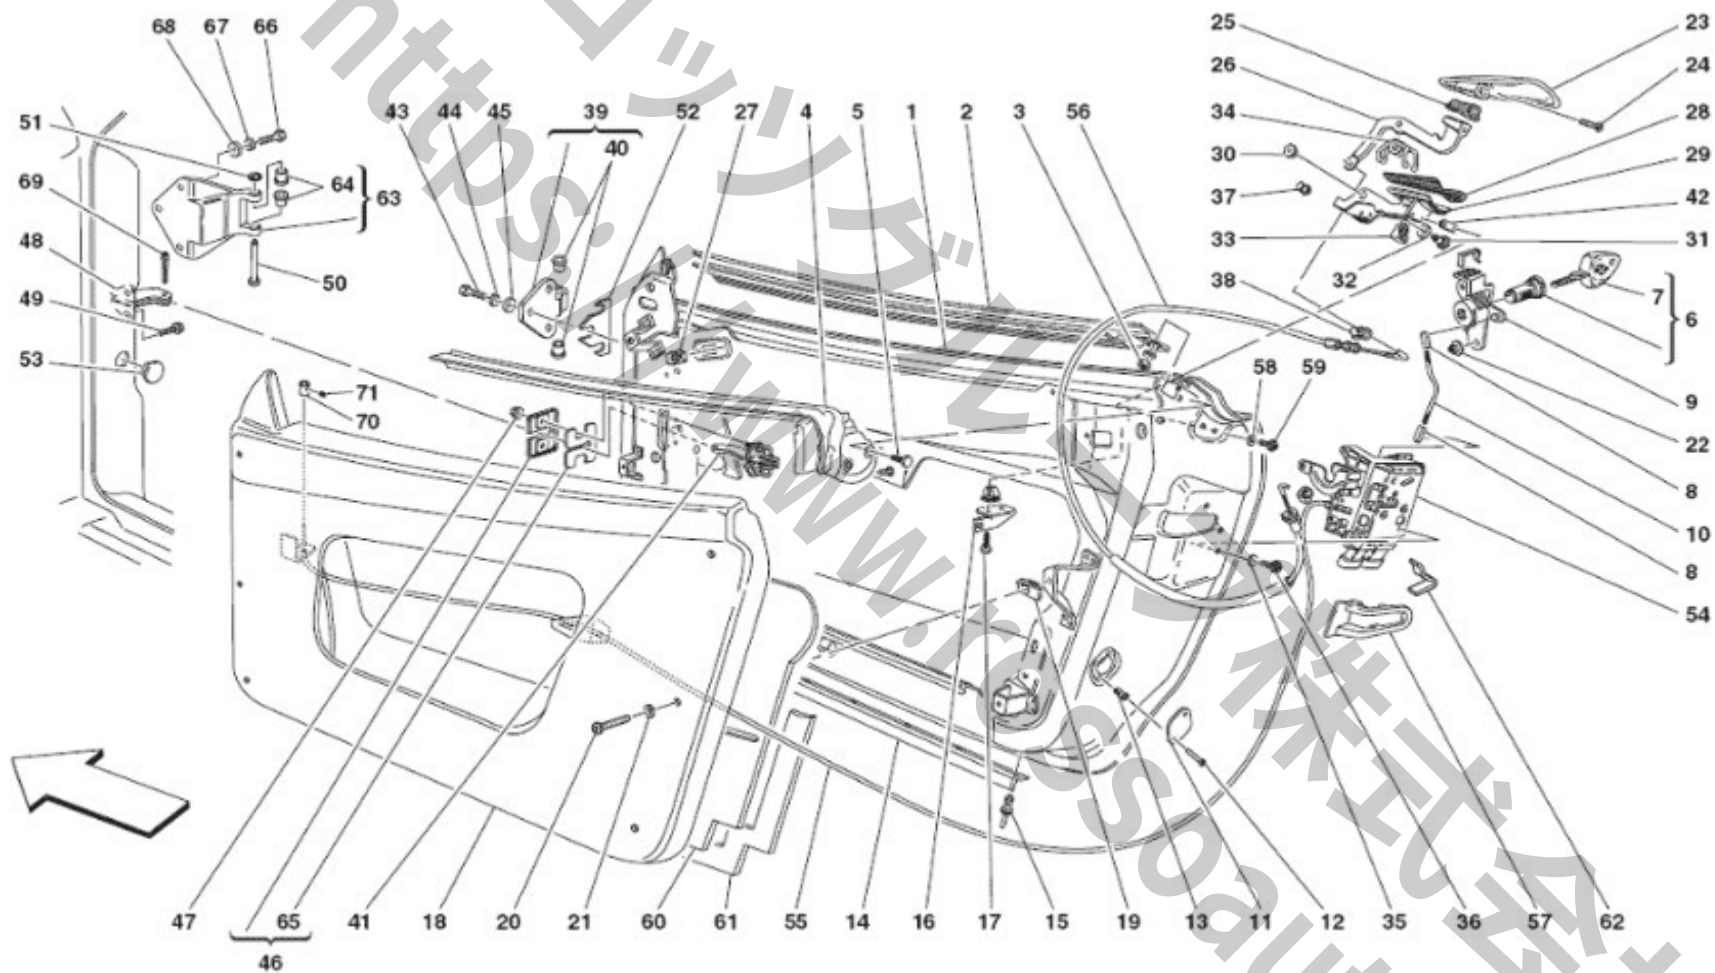

<112 Doors - Framework and Coverings>


No.	Part No.	Name	Qty
1	69409811	L.H. DOOR FRAME	1
1	69409711	R.H. DOOR FRAME	1
2	65164500	L.H. GASKET OUTER GLASS SCRAPER	1
2	65164400	R.H. GASKET OUTER GLASS SCRAPER	1
3	14042077	NUT	2
4	65544700	L.H. GASKET INNER GLASS SCRAPER	1
4	65544600	R.H. GASKET INNER GLASS SCRAPER	1
5	14591687	FIXING BUTTON	4
6	222628	LOCKS SET COMPLETED WITH KEY	1
7	194393	BLANK KEY	1
8	62794000	FLEXIBLE JOINT	4
9	65839500	L.H. DOOR LOCK BLOCK	1
9	65839400	R.H. DOOR LOCK BLOCK	1
10	65836500	SAFETY TIE ROD	2
11	182531	PLUG	2
12	15901570	SCREW	4
13	14115380	FIXING CLIP	4
14	64855600	GASKET	2
15	62764000	RIVET	2
16	65547800	L.H. BRACKET	1
16	65546400	R.H. BRACKET	1
17	15644075	SCREW	4
18	65981000	L.H. COVERED DOOR PANEL	1
18	65980900	R.H. COVERED DOOR PANEL	1
19	14190290	NUT	1
20	64727900	SCREW	1
21	65545900	WASHER	1
22	13046011	NUT	4
23	63576110	L.H. OUTER DOOR HANDLE	1
23	63576010	R.H. OUTER DOOR HANDLE	1
24	13309277	SCREW	2
25	64861200	L.H. INNER GASKET	1
25	64861100	R.H. INNER GASKET	1
26	64860600	LEVER	2
27	14190190	NUT WITH CAGE	4
28	64861000	L.H. HANDLE GASKET	1

28	64860900 R.H. HANDLE GASKET	1
29	64860510 L.H. HANDLE SEAT	1
29	64860410 R.H. HANDLE SEAT	1
30	65398700 BUSHING	2
31	64860800 PIN	2
32	65520700 WASHER	4
33	65398600 GUIDE	2
34	64860700 SPRING FOR HANDLE	2
35	65545900 WASHER	6
36	62940900 SCREW	6
37	63853400 RUBBER PAD	2
38	14578180 CLIP	2
39	64803300 MOBILE HINGE	4
40	62825300 BUSHING	8
41	65195200 TIE ROD	2
42	65547500 SPACER	6
43	16043934 SCREW	1
44	10571779 WASHER	1
45	14496578 WASHER	1
46	63895300 L.H. PLATE	1
46	63895200 R.H. PLATE	1
47	14059214 NUT	4
48	67111800 BRACKET	2
49	13836971 SCREW	4
50	64803400 PIN	4
51	11087974 FLEXIBLE RING	4
52	65998600 THICKNESS	4
53	66154100 RUBBER PLUG	2
54	69998100 L.H. DOOR LOCK	1
54	68993200 L.H. DOOR LOCK	1
54	68993100 R.H. DOOR LOCK	1
54	69998000 R.H. DOOR LOCK	1
55	66126000 DOOR OPENING INNER CABLE	2
56	68602600 DOOR OPENING OUTER CABLE	2
57	68864500 L.H. PLATE	1
57	68864400 R.H. PLATE	1
58	166467 WASHER	2
59	169814 SCREW	2
60	66212800 L.H. WATER PROTECTION CLOTH	1

60	66212700 R.H. WATER PROTECTION CLOTH	1
61	66623000 L.H. BI-ADHESIVE	1
61	66587800 R.H. BI-ADHESIVE	1
62	65705300 CLIP	2
63	64803200 FIXED HINGE	4
64	62825300 BUSHING	8
65	63892300 GASKET	2
66	16043534 SCREW	1
67	10571779 WASHER	1
68	13550405 WASHER	1
69	66842800 PIN	2
70	60276607 CONNECTION	2
71	60276805 DOWEL	2

<https://www.rossoauto.com> 株式会社

 
<113 doors - window and rearview mirror>

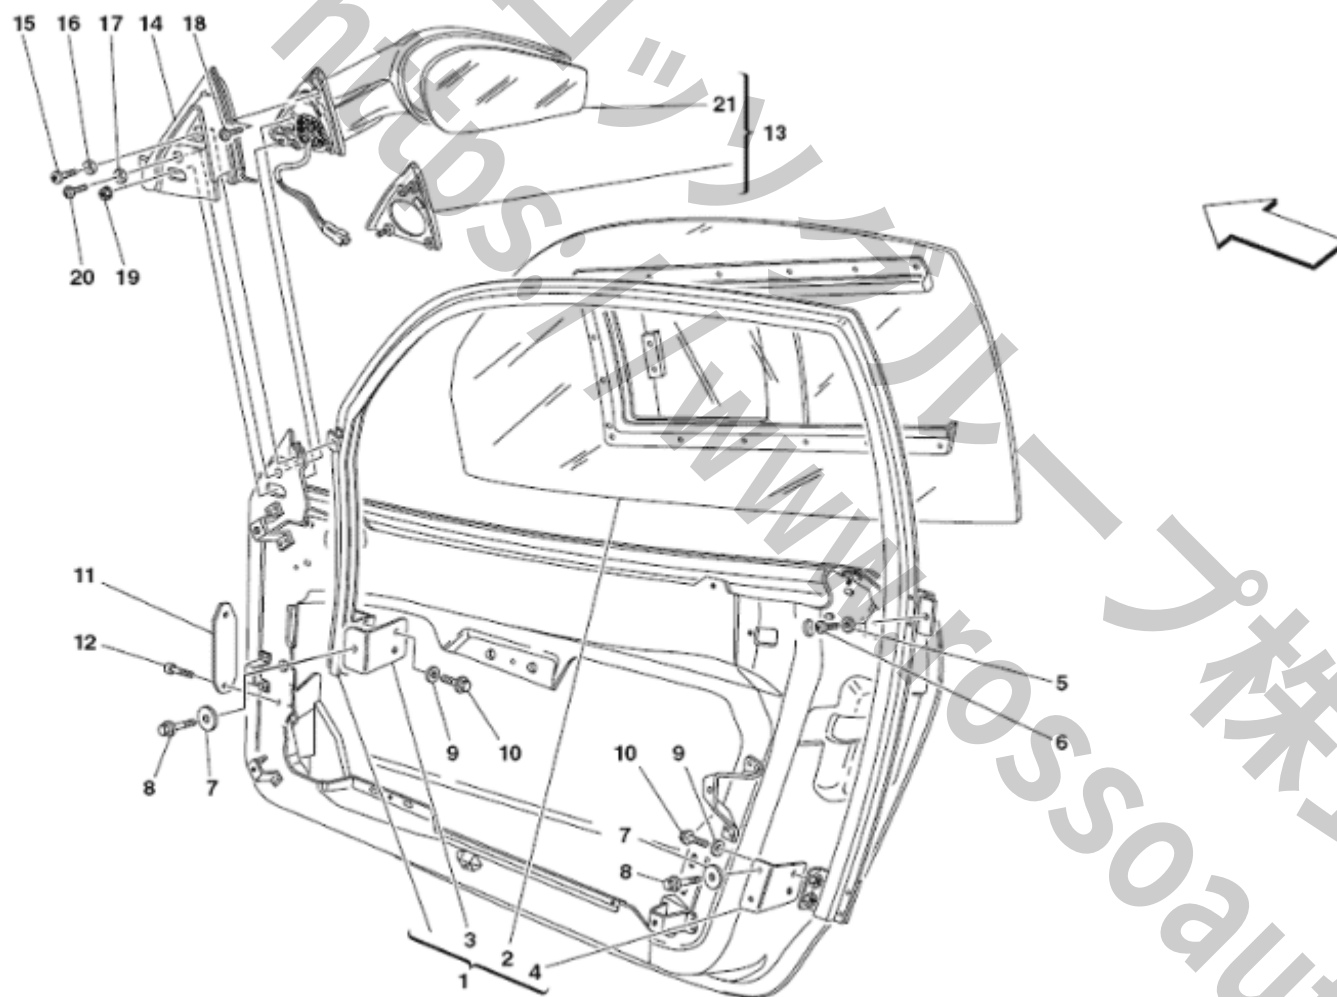

<113 doors - window and rearview mirror>

No.	Part No.	Name	Qty
1	69660000	L.H. DOOR FRAME WITH WINDOW	1
1	69659900	R.H. DOOR FRAME WITH WINDOW	1
2		L.H. SIDE WINDOW	1
2		R.H. SIDE WINDOW	1
3	69605800	FRONT BRACKET	2
4	69606000	L.H. REAR BRACKET	1
4	69605900	R.H. REAR BRACKET	1
5	12638124	WASHER	2
6	13274014	SCREW	2
7	12640624	WASHER	6
8	13836721	SCREW	6
9	12643724	WASHER	8
10	13836324	SCREW	8
11	65987300	PLATE	2
12	13272011	SCREW	4
13	69338010	L.H. OUTER REAR VIEW MIRROR	1
13	69338110	R.H. OUTER REAR VIEW MIRROR	1
14	65226100	L.H. OUTER MIRROR GASKET	1
14	65226000	R.H. OUTER MIRROR GASKET	1
15	65366700	SCREW	2
16	12601177	WASHER	2
17	12637824	WASHER	2
18	65713200	SCREW	2
19	13831801	NUT	4
20	65366700	SCREW	2
21	68981700	L.H. OUTER REAR VIEW MIRROR GLASS	1
21	68981600	R.H. OUTER REAR VIEW MIRROR GLASS	1

 
<114 Front Bumper>

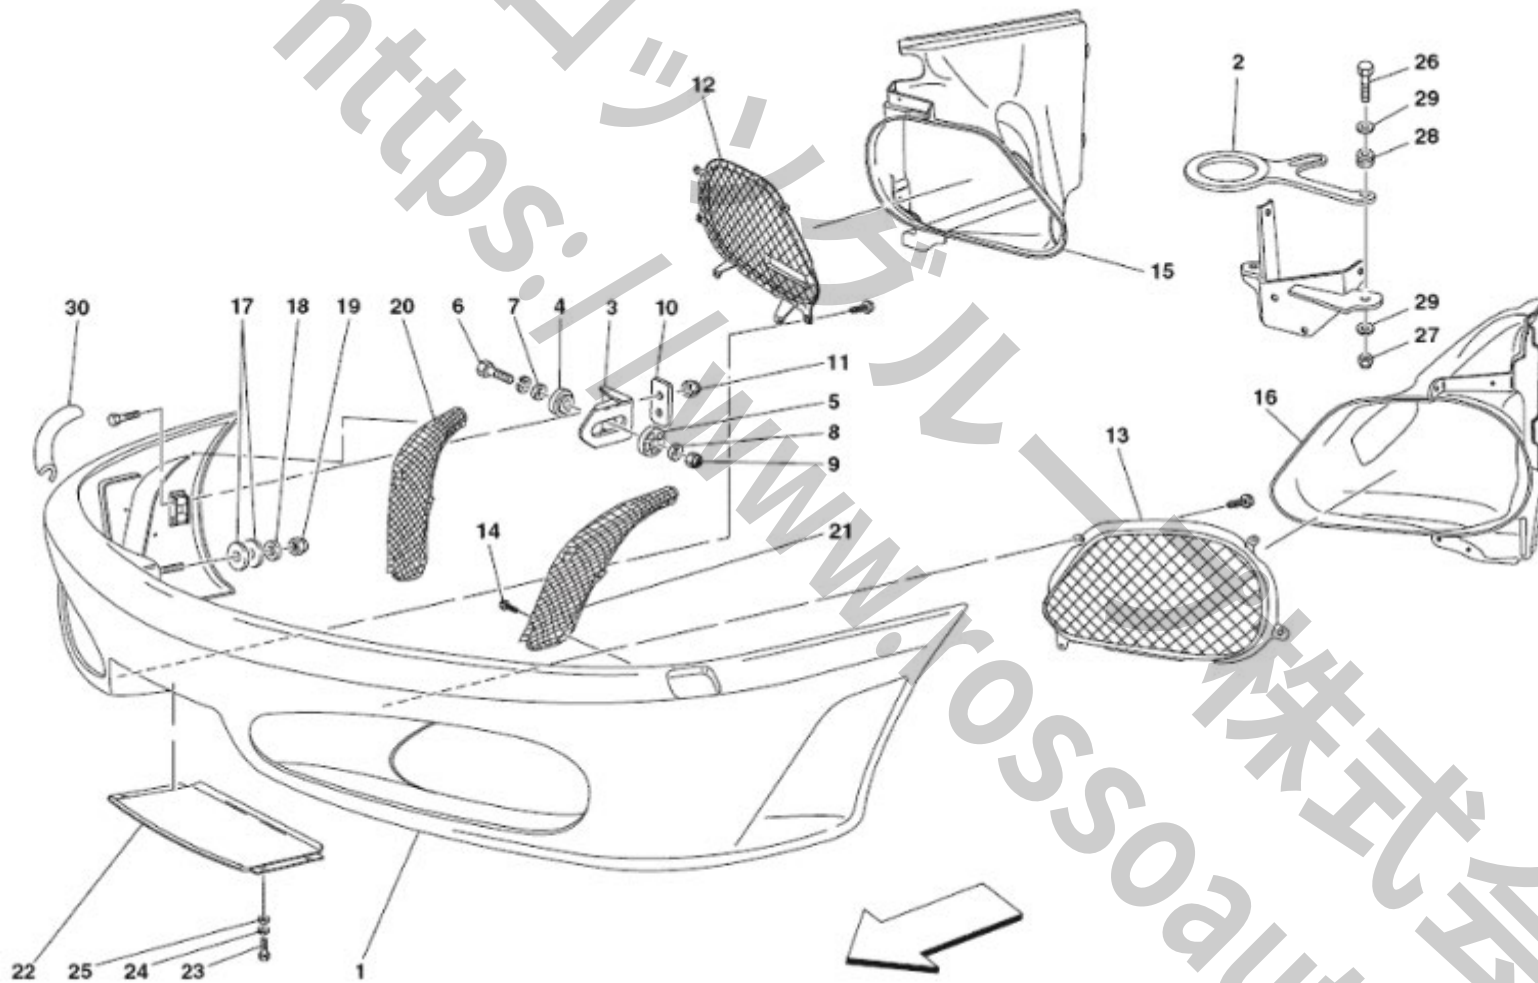

<114 Front Bumper>

No.	Part No.	Name	Qty
1	69334910	FRONT BUMPER	1
2	221277	FRONT TOW HOOK	1
3	68148300	BUMPER LATERAL FIXING BRACKET	2
4	62128200	EXTERNAL SMALL BLOCK	2
5	62128300	INTERNAL SMALL BLOCK	2
6	11307021	SCREW	2
7	12646801	WASHER	4
8	12601479	RETAINING WASHER	2
9	12574521	NUT	2
10	62126600	PLATE	2
11	16104125	NUT	4
12	80167000	R.H. FRONT BUMPER GRILL	1
13	80167100	L.H. FRONT BUMPER GRILL	1
14	15783104	SCREW	1
15	69332300	R.H. AIR INLET	1
16	69332400	L.H. AIR INLET	1
17	65921200	SPACER	4
18	12646801	WASHER	4
19	12574521	NUT	4
20	69642000	R.H. SIDE GRILL	1
21	69642100	L.H. SIDE GRILL	1
22	80866310	FRONT SPOILER	1
22	68084110	FRONT SPOILER	1
23	10902424	SCREW	4
24	12644404	WASHER	4
25	12601274	WASHER	4
26	16043834	SCREW	2
27	16104125	NUT	2
28	221278	BUSHING	2
29	12626224	WASHER	4
30	60547700	GASKET	3

 
<115 Rear Bumper>

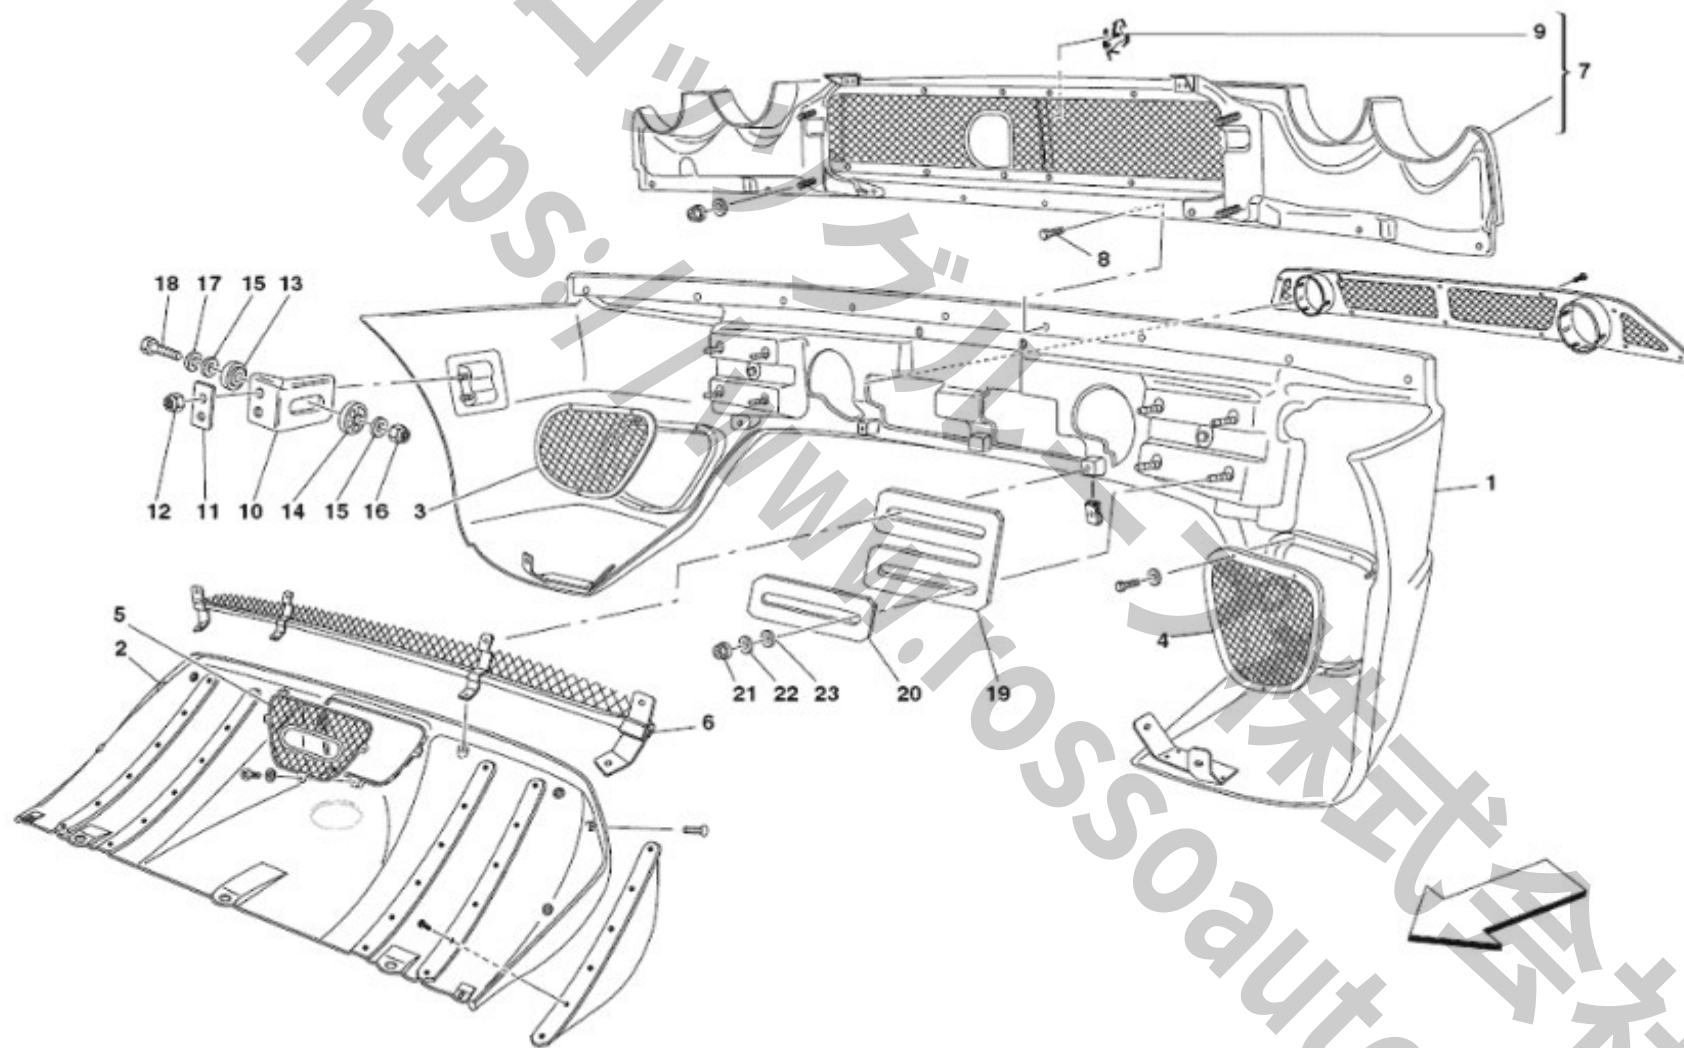

<115 Rear Bumper>

No.	Part No.	Name	Qty
1	69335310	REAR BUMPER	1
2	69401800	LOWER UPHOLSTERY FOR REAR BUMPER	1
3	80072600	R.H. GRILL	1
4	80072700	L.H. GRILL	1
5	69393600	CENTER GRILLE	1
6	69741500	LOWER GRILL	1
7	69569010	REAR MOULDING	1
8	16084201	SCREW	9
9	69572200	CAVALLINO RAMPANTE	1
10	62973000	BUMPER LATERAL FIXING BRACKET	2
11	62126600	PLATE	2
12	16104125	NUT	4
13	62128200	EXTERNAL SMALL BLOCK	2
14	62128300	INTERNAL SMALL BLOCK	2
15	12646801	WASHER	4
16	12574521	NUT	2
17	12601479	RETAINING WASHER	2
18	11307021	SCREW	2
19	69742100	SPACER	2
20	69047700	SPACER	1
21	12164710	NUT	8
22	12601479	RETAINING WASHER	8
23	12646801	WASHER	8

 
<116 Glasses And Gaskets>

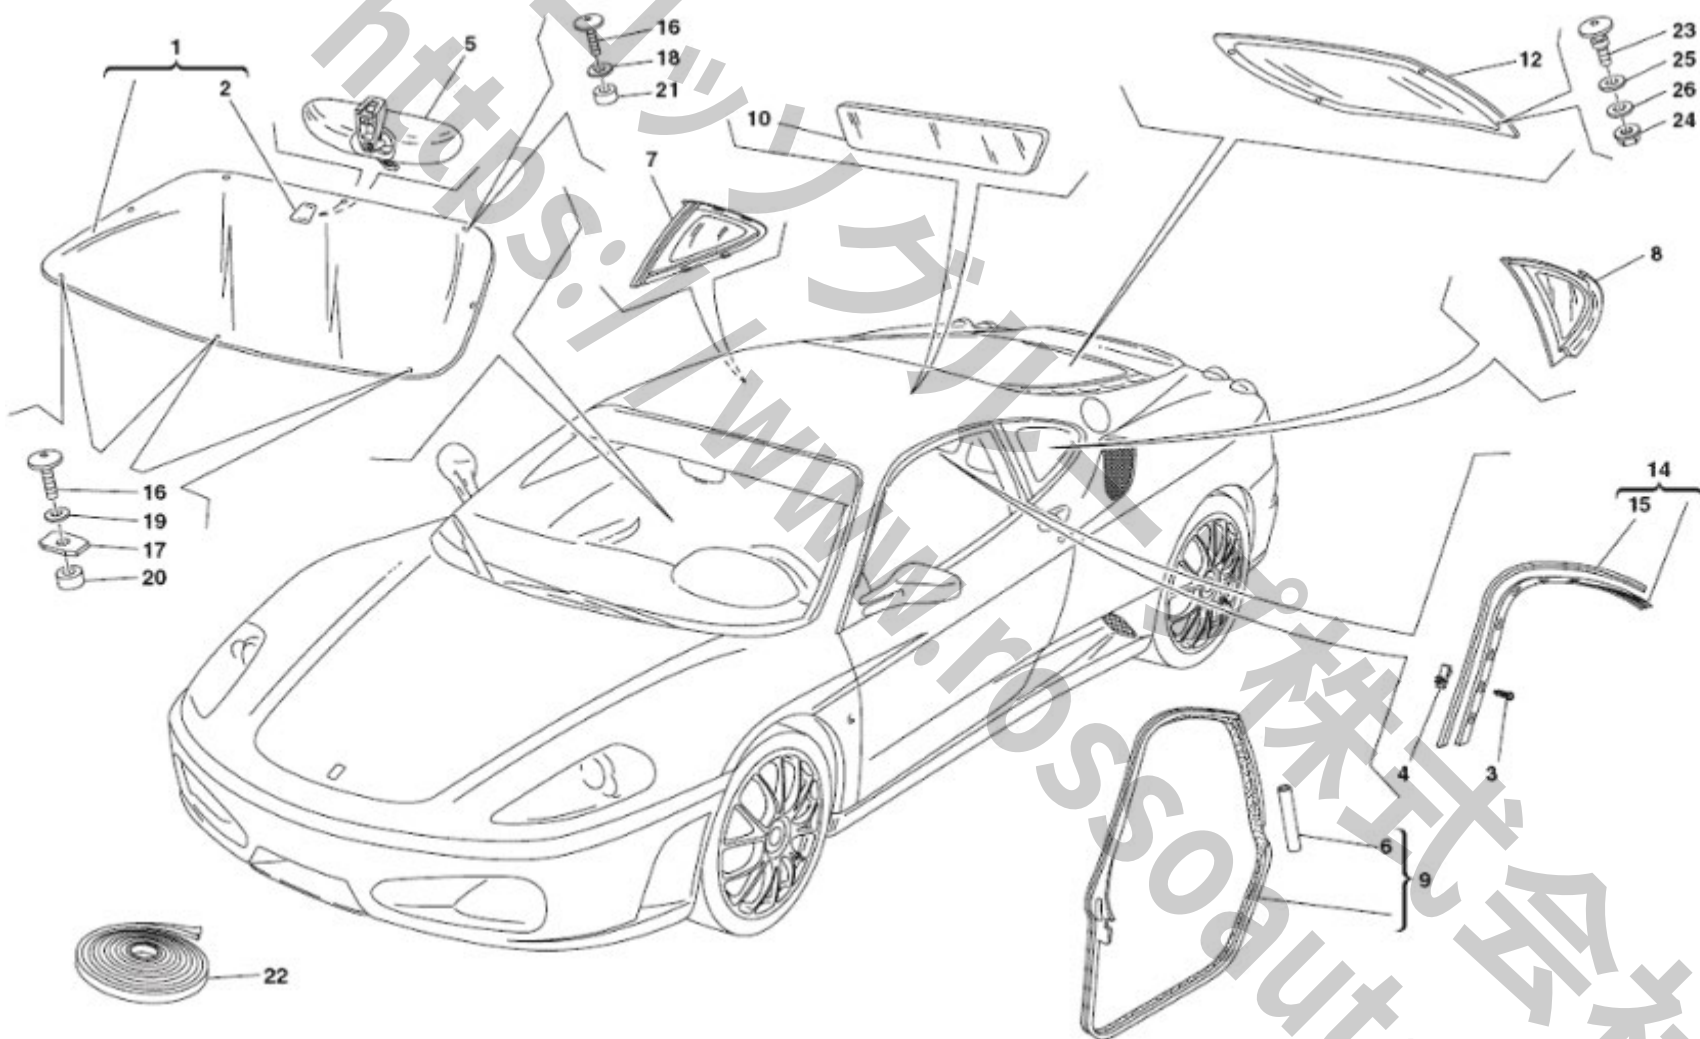

<116 Glasses And Gaskets>

No.	Part No.	Name	Qty
1	69694200	COMPLETE WINDSCREEN GLASS	1
2	65695500	BAR	1
3	16083501	SCREW	26
4	64569500	FIXING CLIP	26
5	65547300	INNER REAR VIEW MIRROR	1
6	66390200	STUFFER FOR DOOR GASKET	2
7	64018900	R.H. REAR SIDE GLASS	1
8	64019000	L.H. REAR SIDE GLASS	1
9	66396400	COMPLETE L.H. GASKET	1
9	66396300	COMPLETE R.H. GASKET	1
10	67404200	REAR-WINDOW GLASS	1
11	63597000	WINDSHIELD ADHESIVE	1
12	69317000	GLASS FOR REAR HOOD	1
13	66091400	SEALING	1
14	65525300	COMPLETE L.H. MOULDING	1
14	65525200	COMPLETE R.H. MOULDING	1
15	65164600	GASKET	2
16	69573600	SCREW	1
17	69573500	SMALL PLATE	5
18	69733800	SEAL RING	5
19	14498824	WASHER	5
20	69573400	SPACER	5
21	69645600	SPACER	5
22	69694000	BUTYL TAPE	1
23	67509600	SCREW	4
24	15896211	NUT	4
25	14498804	WASHER	4
26	12604274	WASHER	4

 
<117 Racing Seat>

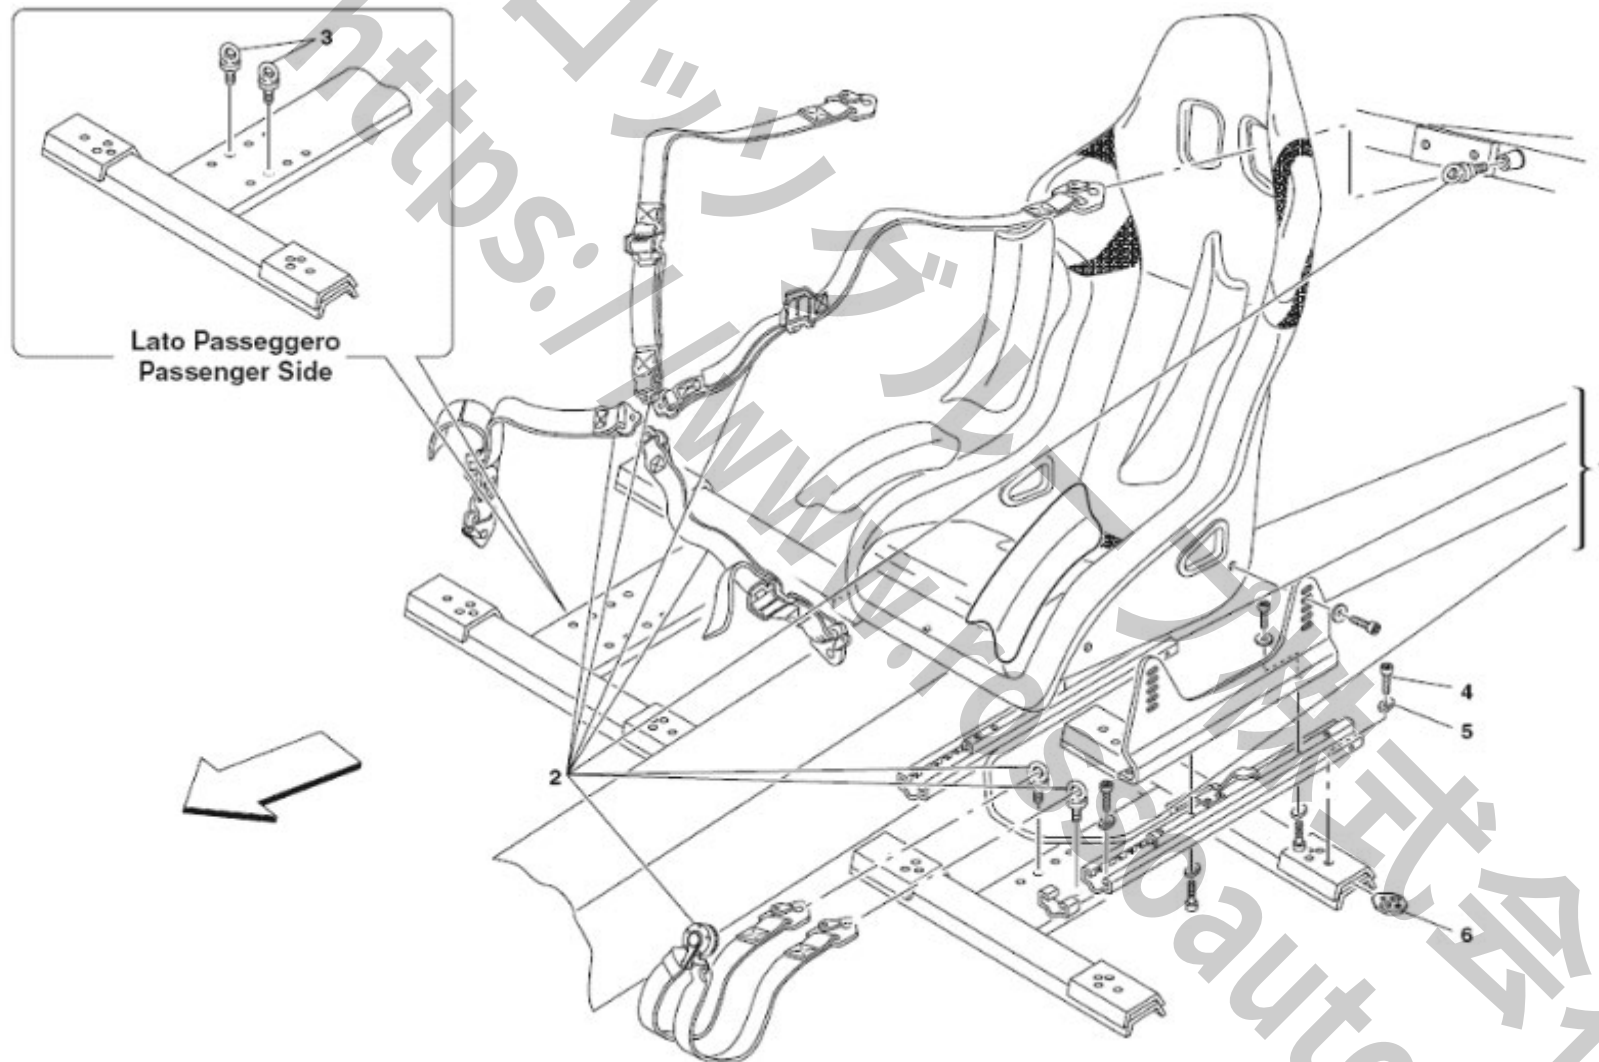

<117 Racing Seat>

No.	Part No.	Name	Qty
1	69699700	COMPLETE DRIVER SEAT	1
1	69415600	COMPLETE DRIVER SEAT	1
1	69737600	COMPLETE PASSENGER SEAT	1
1	69737500	COMPLETE PASSENGER SEAT	1
2		SAFETY BELTS	1
3	66152100	SEAT BELTS BUSHING	2
4	65917800	SCREW	4
5	65806500	ELASTIC PLATE	4
6	69335500	SMALL PLATE	2

 
<118 tunnel - framework and accessories>

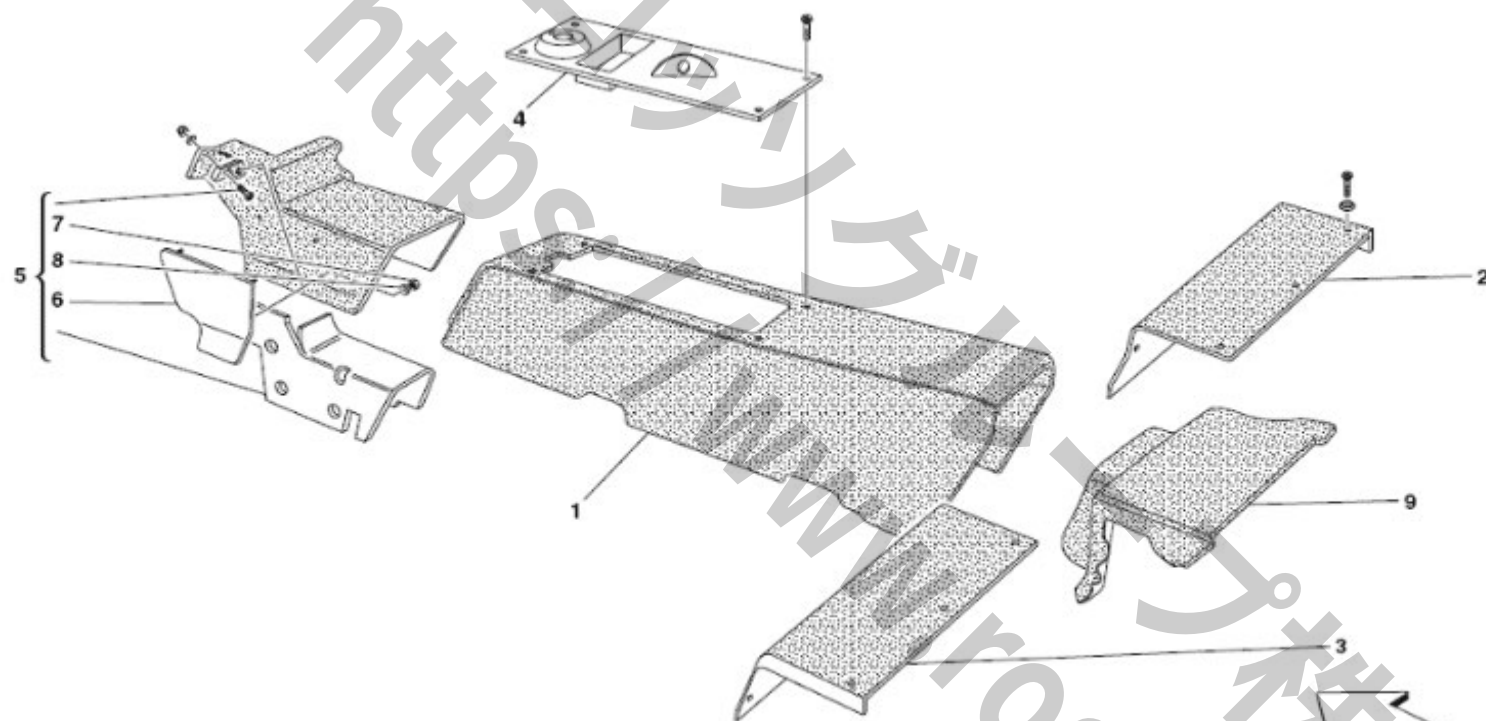

<118 tunnel - framework and accessories>

No.	Part No.	Name	Qty
1	69411900	LOWER CENTRAL TUNNEL COVER CONSOLE	1
2	69327300	R.H. COVER FOR CONTROL UNIT	1
3	69327400	L.H. COVER FOR CONTROL UNIT	1
4	69330800	TUNNEL CONSOLE	1
5	69323900	TUNNEL FRONT PART COVER	1
6	65305300	ACCELERATOR PEDAL PROTECTION	1
7	14051811	NUT	4
8	12642801	WASHER	4
9	69324000	REAR PART TUNNEL COVER	1

 
<119 dashboard>

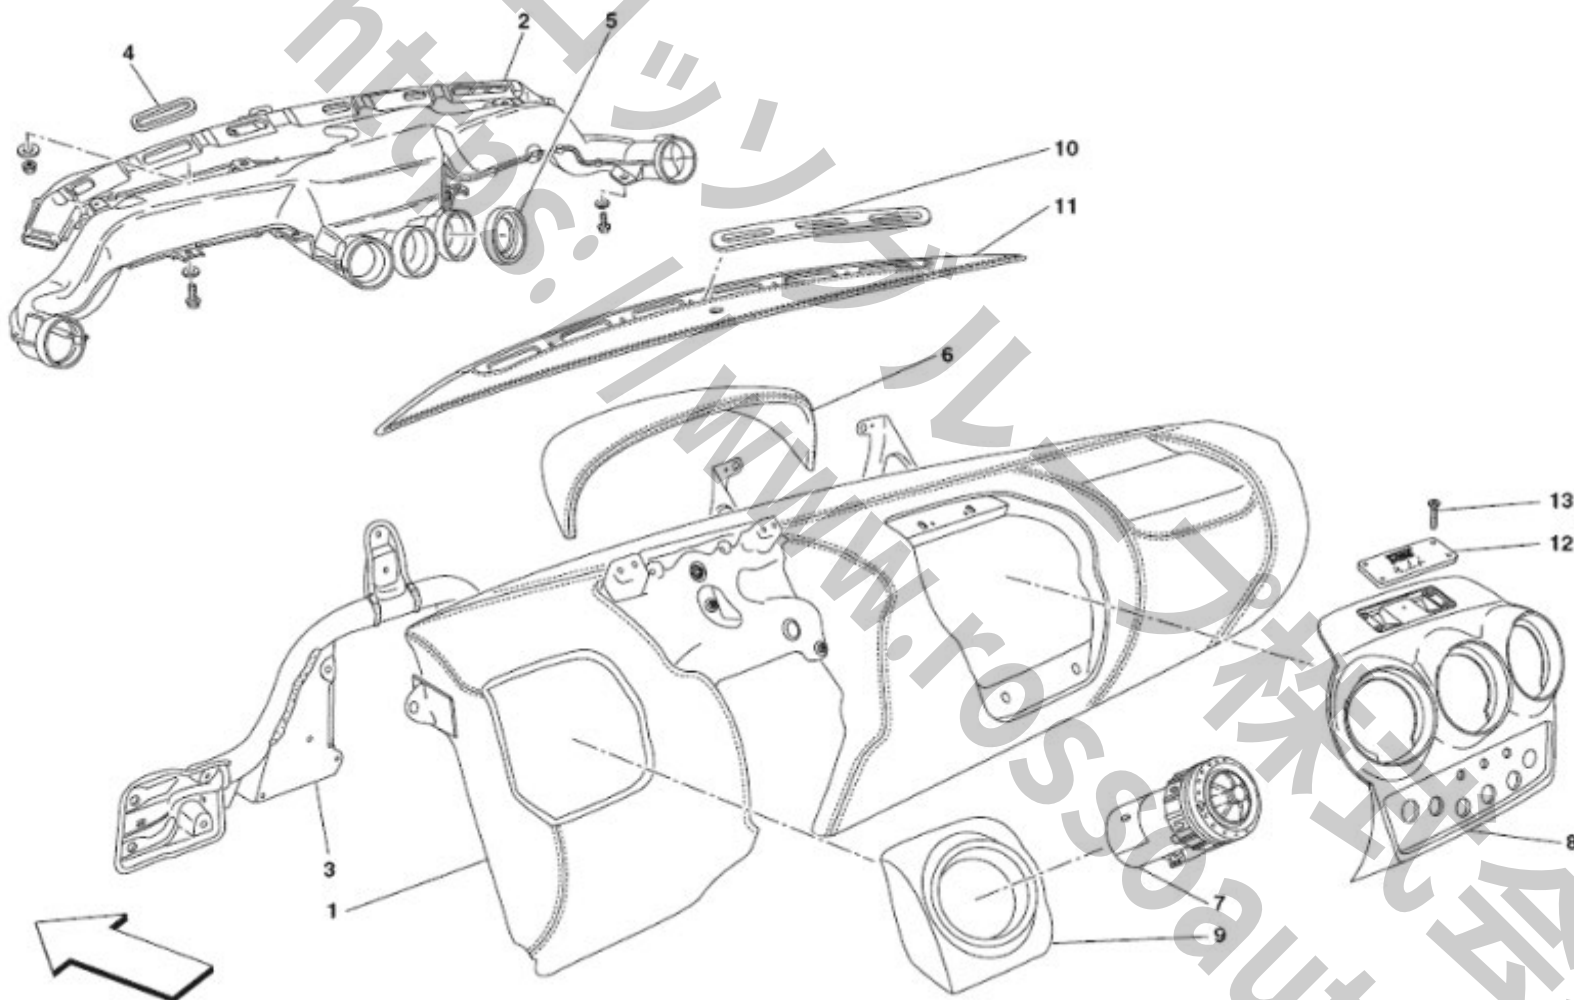

<119 dashboard>

No.	Part No.	Name	Qty
1	69336900	DASHBOARD WITH INSTRUMENTS	1
2	63352900	AIR DUCTING	1
3	69484000	DASHBOARD FRAME ASSEMBLY	1
4	66050600	GASKET	6
5	63353300	AIR OPENING GASKET	3
5	68135000	L.H. AIR OPENING GASKET	1
6	69336500	DASH BOARD	1
7	68811300	AIR DIFFUSOR OPENING	4
8	69336400	CONSOLE PLATE	1
9	69339100	L.H. AIR OUTLET PLATE	1
10	65018300	L.H. AIR OUTLET PLATE	1
10	65018200	R.H. AIR OUTLET PLATE	1
11	69337000	MOULDING FOR WINDSCREEN AIR PLATE	1
12	69698700	CAR MODEL PLATE	1
13	68927600	SCREW	4

 
<120 instruments>

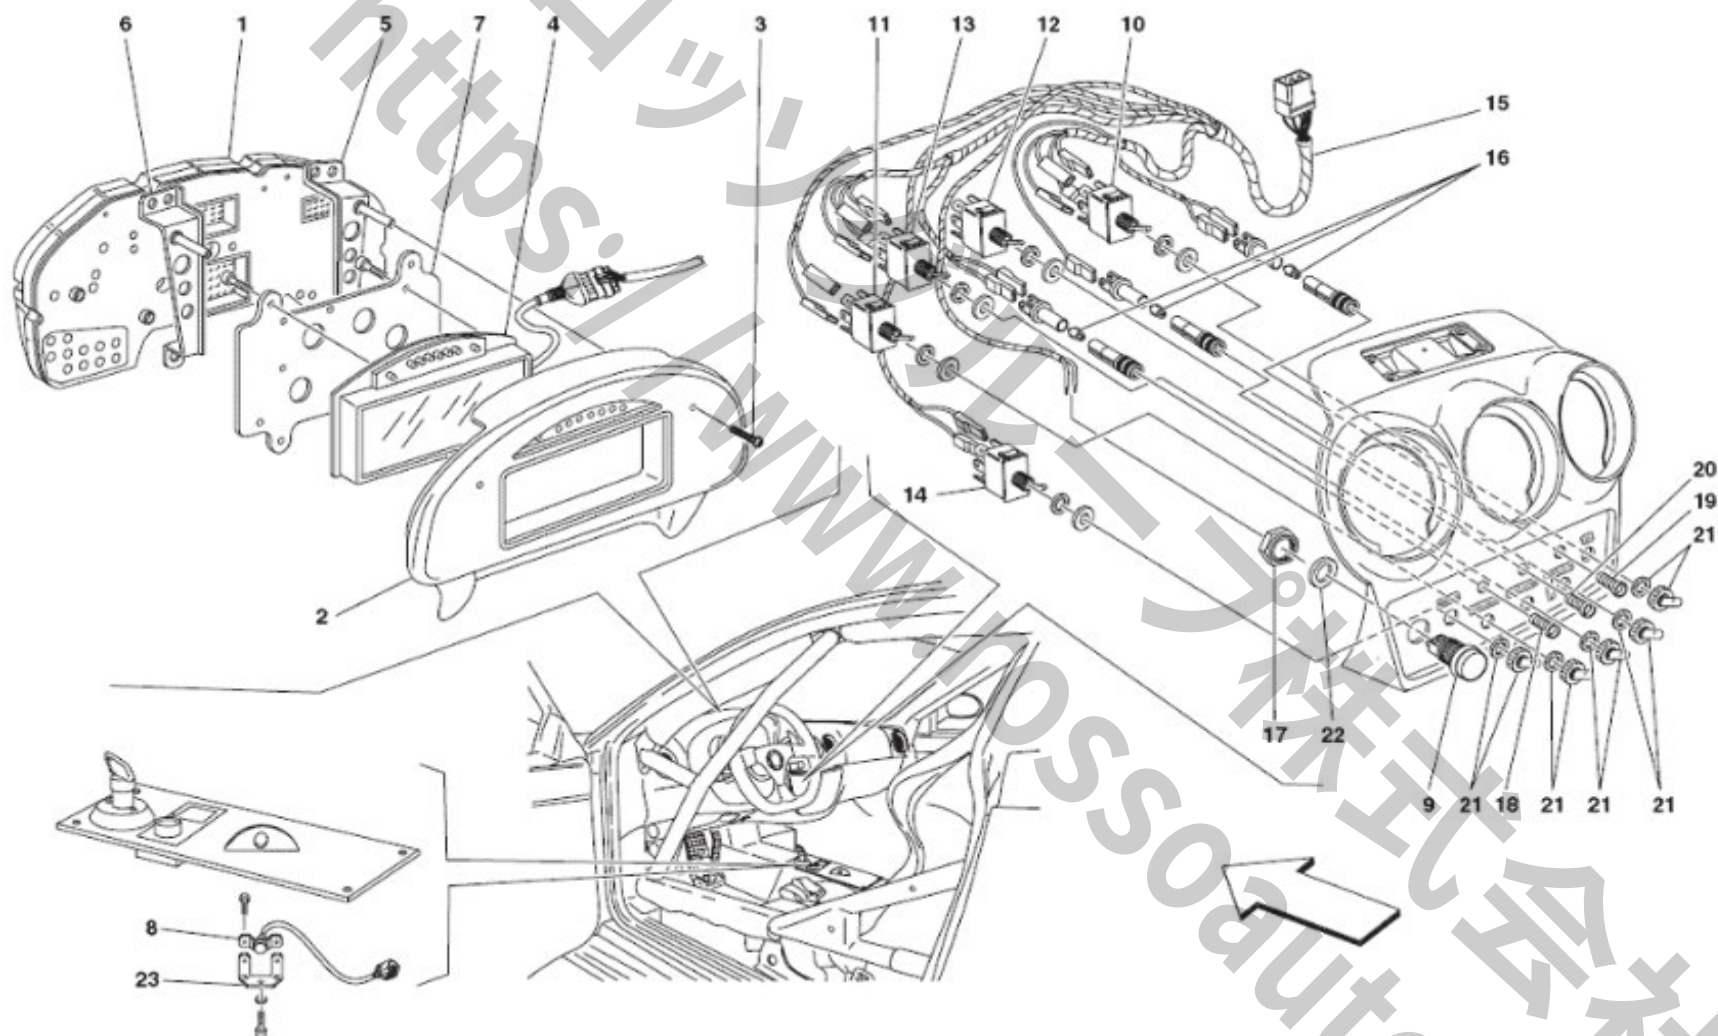

<120 instruments>

No.	Part No.	Name	Qty
1	220923	INSTRUMENT BOARD PLATE	1
1	220923	INSTRUMENT BOARD PLATE	1
2	220922	CARBON INSTRUMENTSPANEL	1
3	60860600	SCREW	4
4	220920	INSTRUMENTS DISPLAY	1
5	6961710	R.H. BRACKET	1
6	6961720	L.H. BRACKET	1
7	224317	BRACKET	1
8	197012	REAR GEAR LIGHT CONTROL SWITCH	1
9	190352	PUSH BUTTON	1
10	183293	ASR SWITCH	1
11	183294	RAIN LIGHT SWITCH	1
12	183292	VENTILATION SWITCH	1
13	183291	RADIATOR FANS SWITCH	1
14	183290	IGNITION SWITCH	1
15	224277	DASHBOARD CONNECTION CABLES	1
16	183296	BULB	3
17	194353	RING NUT	1
18	183299	GREEN WARNING LIGHT	1
19	183298	BLUE WARNING LIGHT	1
20	183297	BLUE WARNING LIGHT	1
21	183295	CAP FOR SWITCH	5
22	69586700	SPACER	1
23	221143	BRACKET	1

 
<121 Front And Rear Lights>

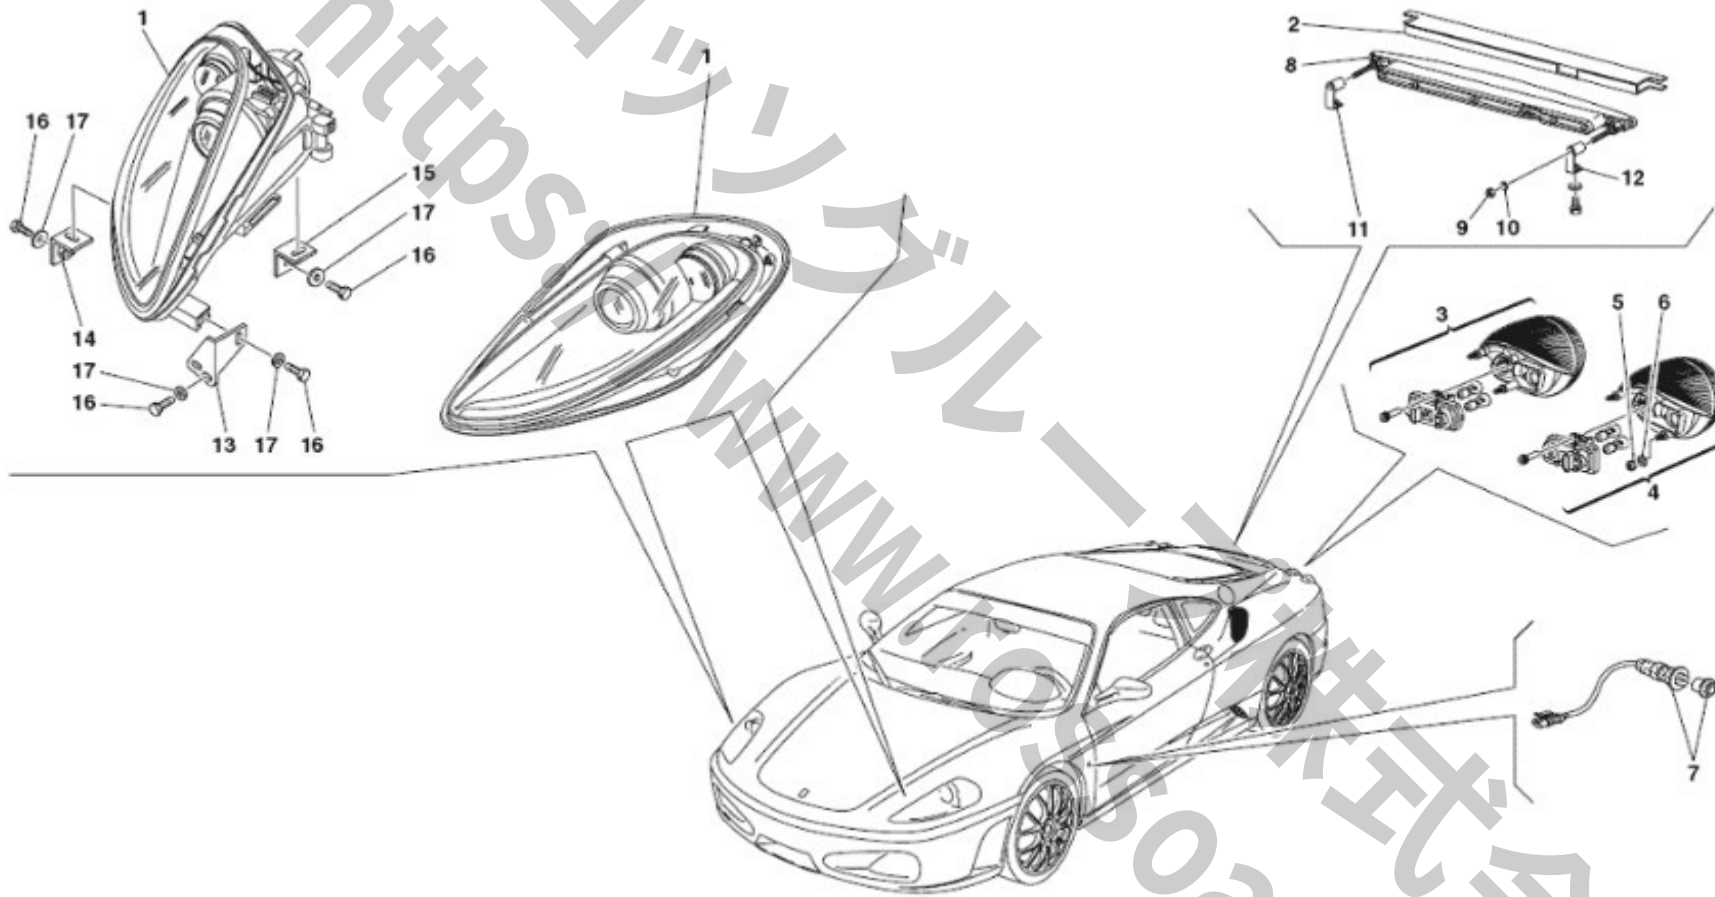

<121 Front And Rear Lights>

No.	Part No.	Name	Qty
1	220942	L.H. HEADLIGHT LOW/HIGH BEAM	1
1	220941	R.H. HEADLIGHT LOW/HIGH BEAM	1
2	81055800	INSULATION	1
3	185669	L.H. INNER REAR LIGHT	1
3	185668	R.H. INNER REAR LIGHT	1
4	185671	L.H. OUTER REAR LIGHT	1
4	185670	R.H. OUTER REAR LIGHT	1
5	13046114	NUT	1
6	10519401	WASHER	1
7	165558	FRONT SIDE DIRECTION LIGHT	2
8	241531	ADDITIONAL STOP LIGHT	1
9	10794014	NUT	2
10	10615274	WASHER	4
11	68074700	R.H. BRACKET	1
12	68832500	L.H. BRACKET	1
13	68285200	L.H. FRONT BRACKET	1
13	68285100	R.H. FRONT BRACKET	1
14	65520000	FIXING BRACKET	2
15	68285300	REAR BRACKET	2
16	10902424	SCREW	4
17	12601274	WASHER	4
 
<122 Shields - finishing>

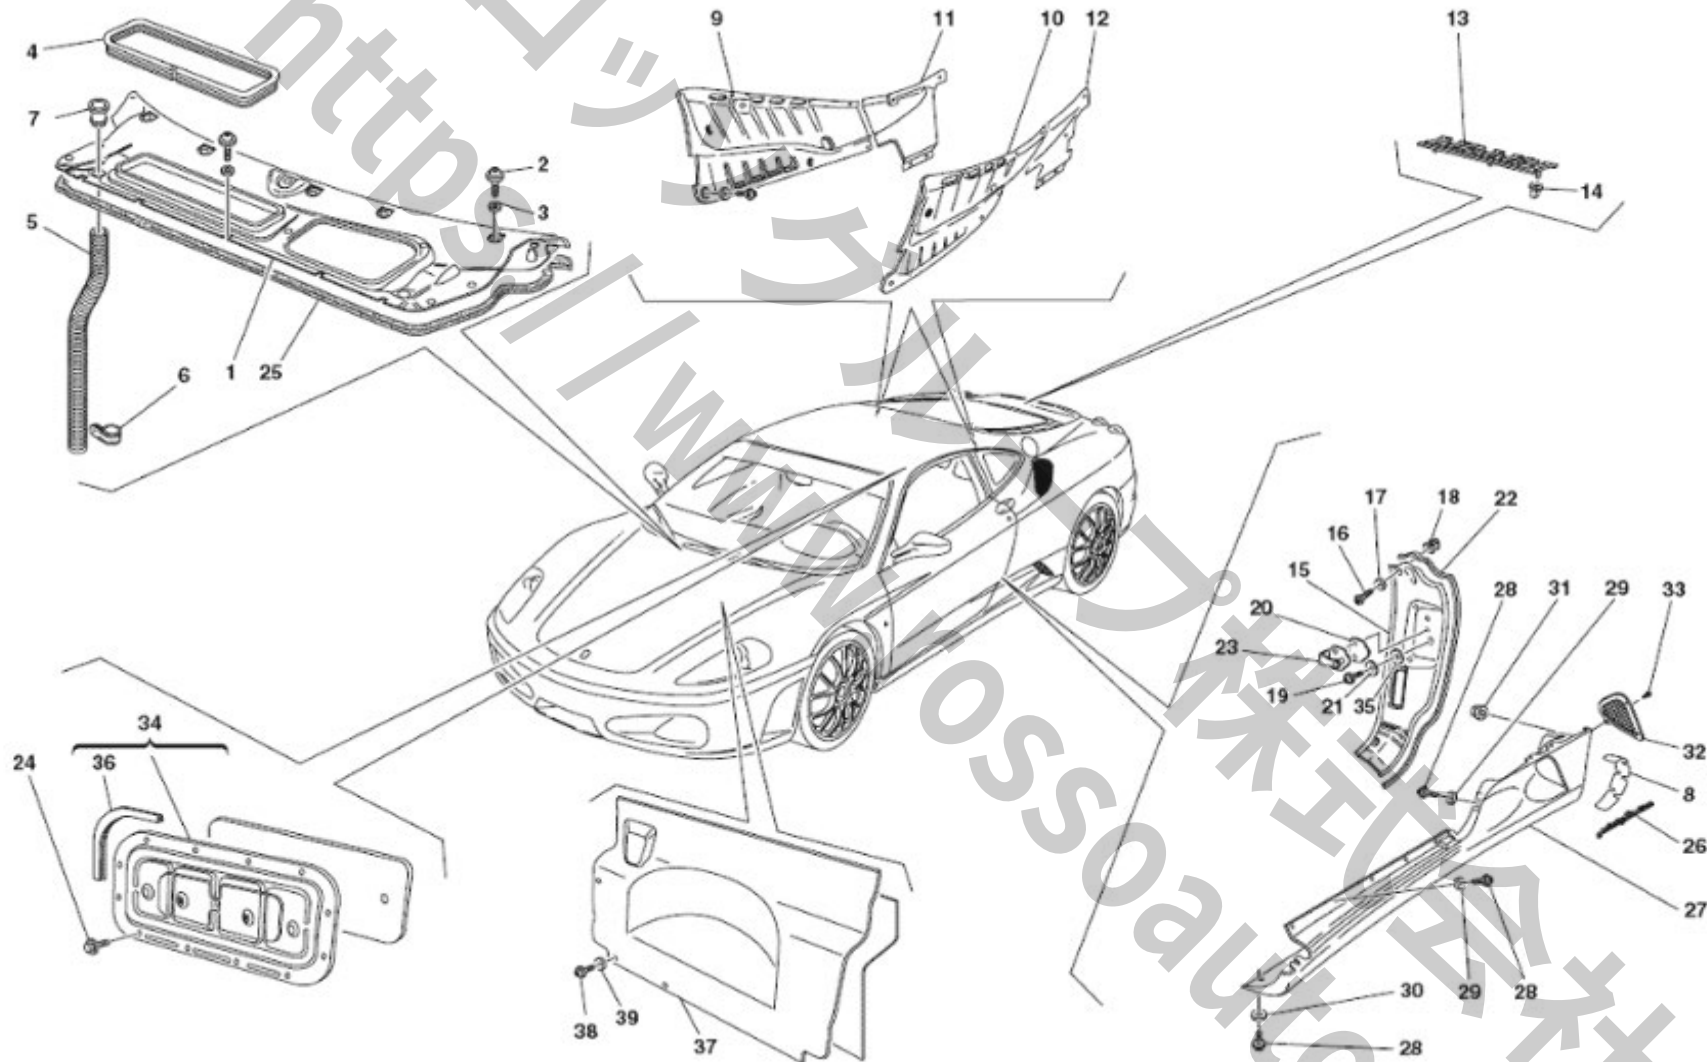


<122 Shields - finishing>

No.	Part No.	Name	Qty
1	65544100	WINDSHIELD PLATE	1
2	65864100	SCREW	11
3	12644477	WASHER	11
4	69339200	GASKET	1
5	65992600	WATER EXHAUST TUBE	2
6	10442190	BRACKET WITH SHEATH	2
7	65004900	WATER EXHAUST TUBE	2
8	68647000	L.H. AIR INTAKE ADHESIVE TRACK CLEARER	1
8	82022100	R.H. AIR INTAKE ADHESIVE TRACK CLEARER	1
9	69332500	R.H. FRONT PANEL	1
10	69332600	L.H. FRONT PANEL	1
11	69699200	R.H. REAR PANEL	1
12	69334600	L.H. REAR PANEL	1
13	61025000	FERRARI NAME PLATE	1
14	60324506	SPRING	2
15	68647811	L.H. STRIP COVER	1
15	68647711	R.H. STRIP COVER	1
16	15689675	SCREW	4
17	12637878	WASHER	4
18	14201980	BLOCK	4
19	62940900	SCREW	2
20	67853600	SPACER	2
21	12648978	WASHER	2
22	64859000	RUBBER PROFILE	2
23	68308800	STRIKER	2
24	16297024	SCREW	12
25	65841800	GASKET	1
26	64780500	PININFARINA ORNAMENT	2
27	69333910	L.H. UNDERDOOR COVERING	1
27	69333810	R.H. UNDERDOOR COVERING	1
28	12605374	WASHER	30
29	12643778	WASHER	12
30	12640678	WASHER	18
31	13046114	NUT	10
32	69477300	L.H. LOWER AIR INTAKE	1
32	69477200	R.H. LOWER AIR INTAKE GRILLE	1

33	15783177 SCREW	4
34	69327700 COMPLETE ENGINE INSPECTION PANNEL	1
35	63314400 WASHER	2
36	65387300 GASKET	1
37	69341500 TRUNK COMPARTMENT REAR WALL	1
38	66091000 SCREW	11
39	65841100 WASHER	11

ロッシェングループ株式会社
<https://www.rossoauto.com>

 
<123 windshield and glass washer>

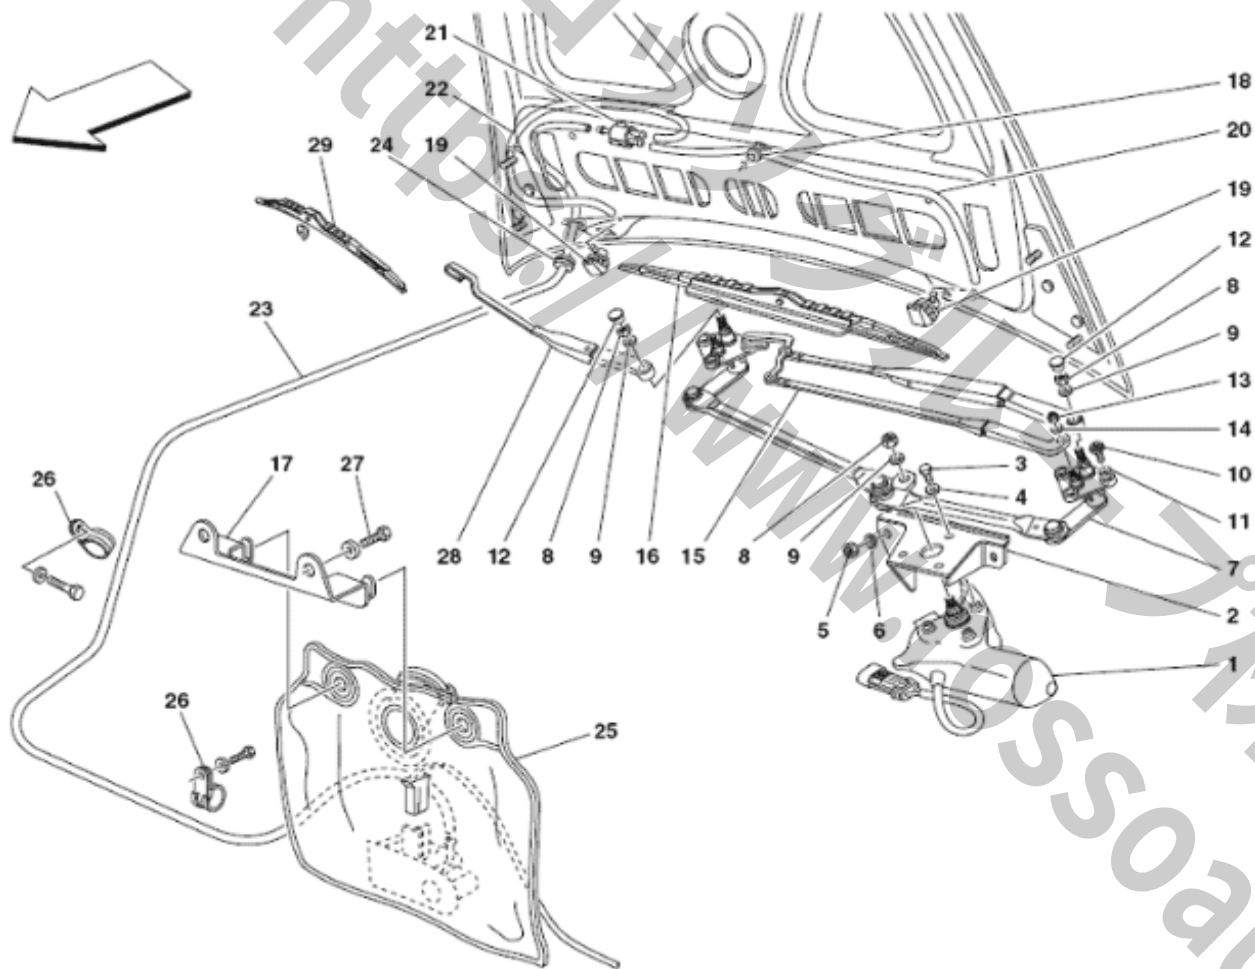

<123 windshield and glass washer>

No.	Part No.	Name	Qty
1	63780200	LHD WINDSHIELD WIPER MOTOR	1
2	173416	WINDSHIELD WIPER MOTOR FASTENING BRACKET	1
3	10902224	SCREW	3
4	127494	WASHER	3
5	16104125	NUT	3
6	14496524	WASHER	3
7	65409100	COMPLETE WINDSHIELD WIPER LEVERAGE	1
8	16100811	NUT	3
9	12601374	WASHER	3
10	12605374	WASHER	6
11	12644477	WASHER	6
12	65190900	SMALL COVER	2
13	15896472	NUT	1
14	12601179	WASHER	1
15	65409200	DRIVER SIDE WINDSHIELD WIPER ARM	1
16	63776100	DRIVER SIDE WIPER BRUSH	1
17	65984700	SUPPORT	1
18	65714300	FIXING CLIP	2
19	65191000	JET FOR WINDOW WASHING	2
20	65362600	RUBBER HOSE	1
21	61648100	NONRETURN VALVE	1
22	65362500	RUBBER HOSE	1
23	65362400	RUBBER HOSE FROM PUMP TO VALVE	1
24	10396280	GASKET	1
25	66151600	WINDSCREEN WASHER TANK	1
26	145855	CLAMP	6
27	62940900	SCREW	2
28	65409300	PASSENGER SIDE WINDSHIELD WIPER ARM	1
29	65409400	PASSENGER SIDE WIPER BRUSH	1



 
<124 Electrical System>

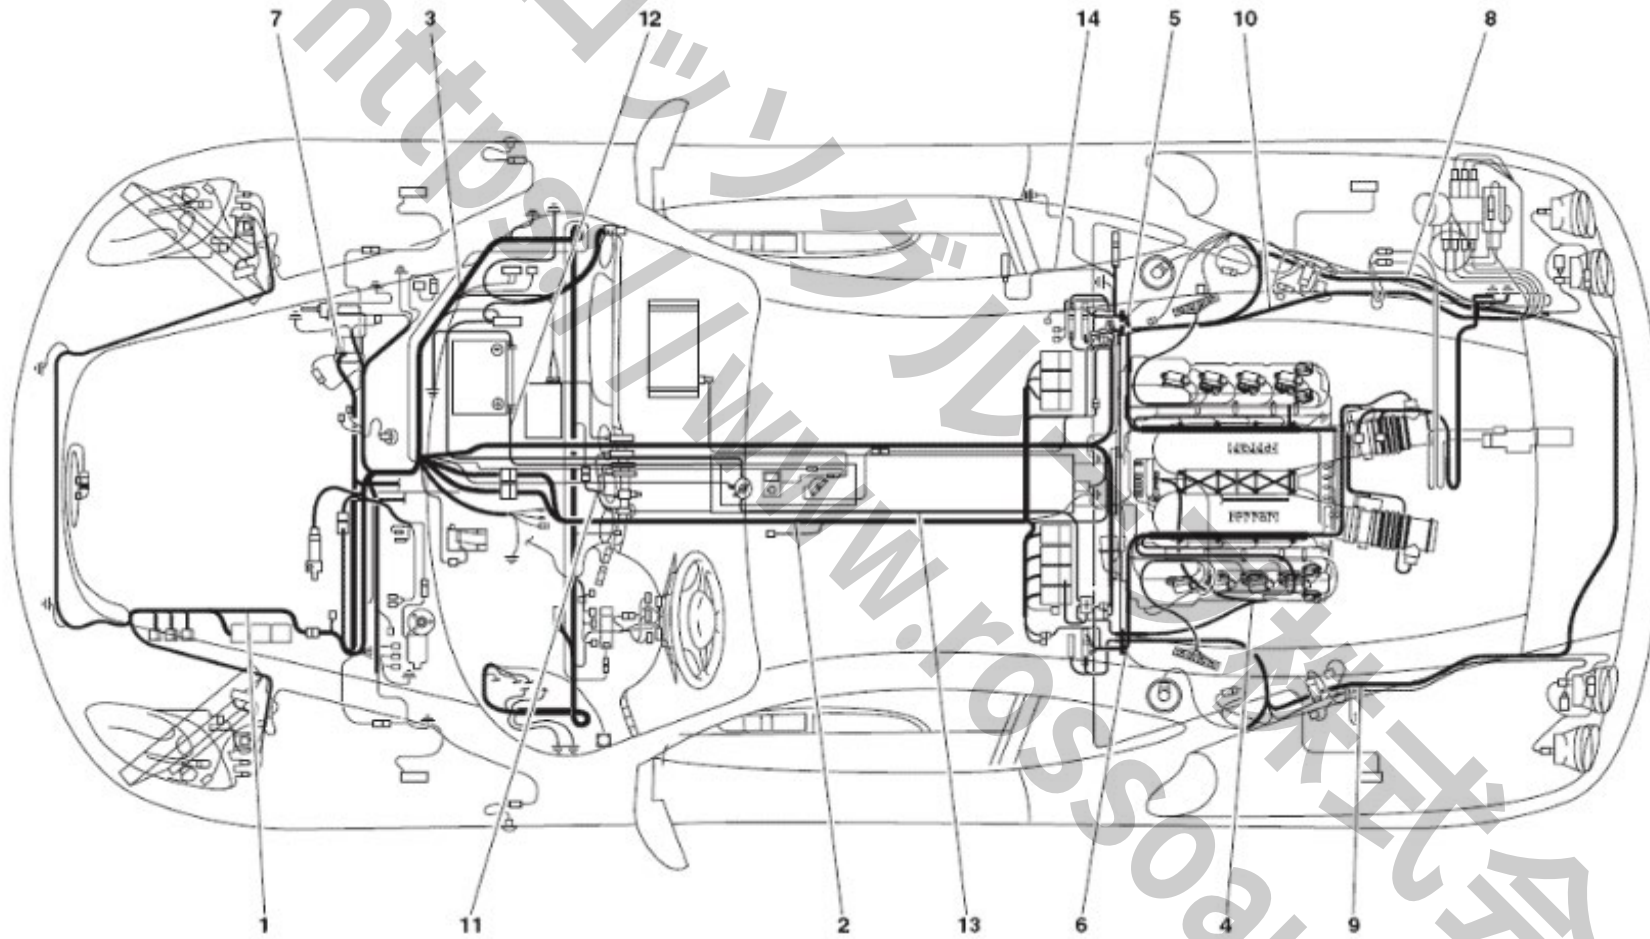

<124 Electrical System>

No.	Part No.	Name	Qty
1	223914	FRONT CABLES	1
2	218508	REAR PART CONNECTING CABLES	1
3	224275	DASHBOARD CABLES	1
4	192534	COMPLETE CONNECTION CABLES FOR MOTOR UTILITIES	1
5	202974	R.H. SIDE INJECTION CONNECTING CABLES	1
6	204427	L.H. SIDE INJECTION CONNECTING CABLES	1
7	224276	ABS/ASR INSTALLATION CONNECTION CABLES	1
8	220655	CONNECTION CABLES FOR R.H. ENGINE COMPARTMENT	1
9	103228	PIN FOR GEAR OF R.H. FIXED SPROCKET	1
10	220657	COMPLETE GEARBOX CONTROL CABLES	1
11	224277	DASHBOARD CONNECTION CABLES	1
12	220820	CABLE FROM BATTERY TO BATTERY CUT-OUT	1
13	220819	CABLE FROM TERMINAL BOX TO CUT-OUT BATTERY	1
14	224278	DATA ACQUIREMENT CABLE	1

  
 
<125 Front Passenger Compartment Control Stations>

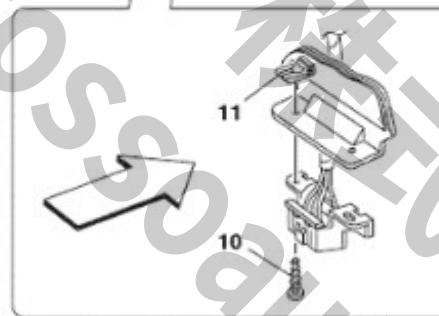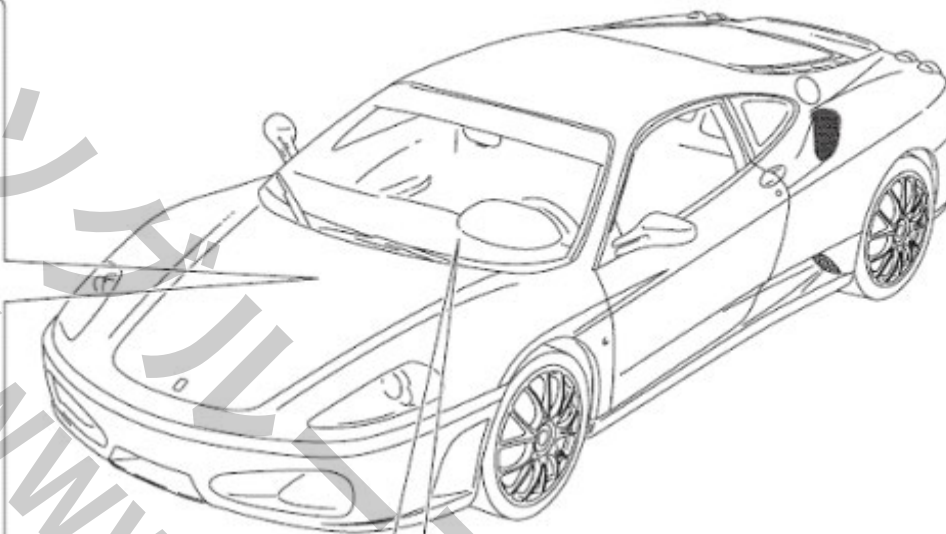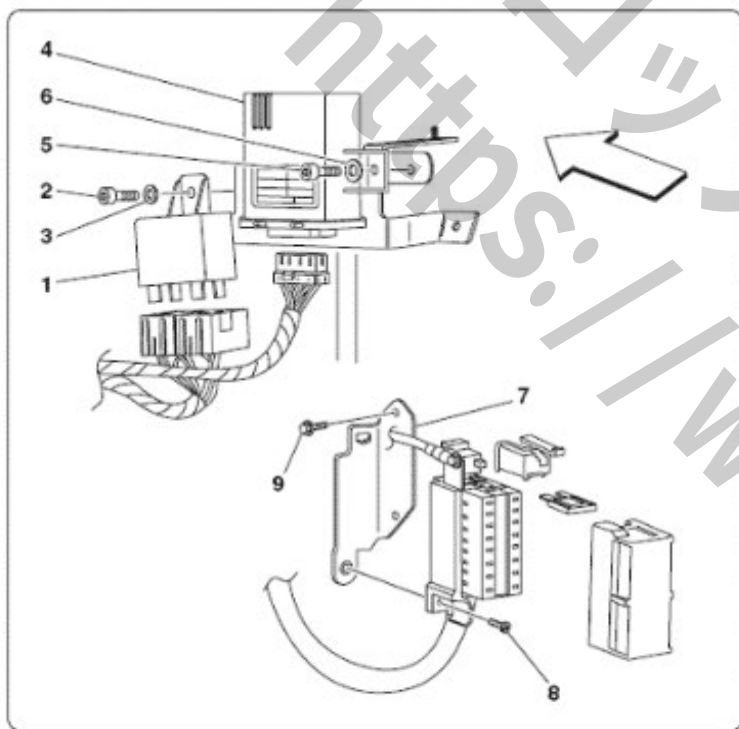

<125 Front Passenger Compartment Control Stations>

No.	Part No.	Name	Qty
1	253060	WINDSHIELD WIPER INTERMITTER	1
2	14304324	SCREW	1
3	12637824	WASHER	2
4	205713	DIRECTION EMERGENCY LIGHT RELAY	1
5	14304324	SCREW	2
6	12637824	WASHER	2
7	68266300	BRACKET	1
8	16285127	SCREW	1
9	10902124	SCREW	2
10	15688101	SCREW	2
11	40136707	CLIP	2

  
<126 Front Compartment Control Stations>

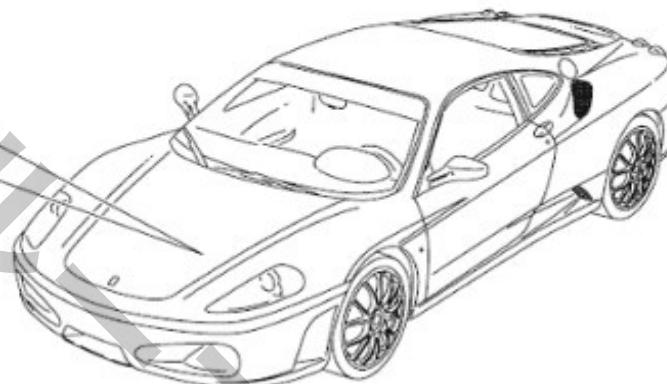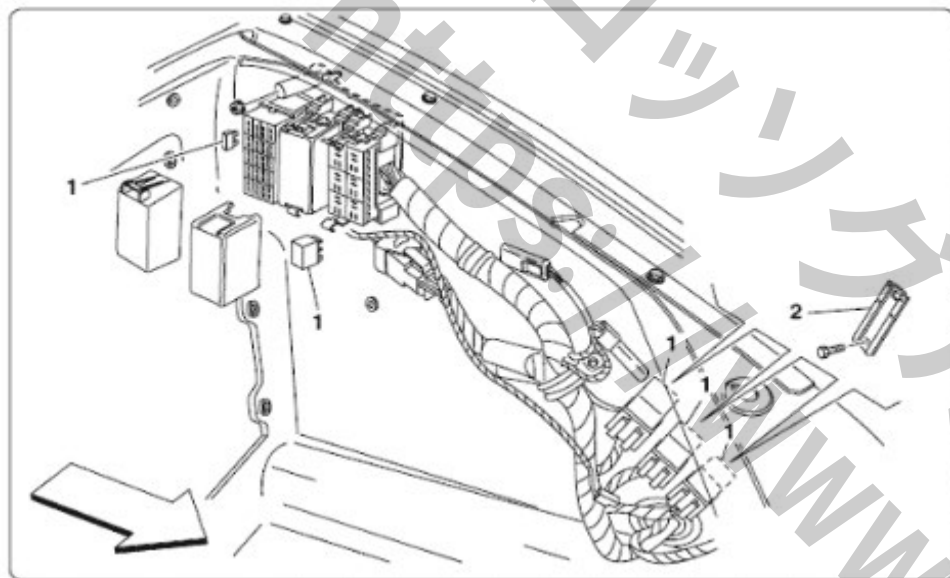

<126 Front Compartment Control Stations>

No.	Part No.	Name	Qty
1	194909	F1 RELAY	2
1	172877	MINI FUSE 10 A.	3
1	172878	MINI FUSE 15 A.	3
1	172878	MINI FUSE 15 A.	7
1	172879	MINI FUSE 20 A.	3
1	172881	FUSE 30 A.	2
1	172881	FUSE 30 A.	3
1	170093	FUSE 30 A.	3
1	172875	MINI FUSE 5 A.	4
1	170061	FUSE 50 A.	3
1	172871	MAXI FUSE 60 A.	3
1	172876	FUSE 7,5 A.	3
1	183275	HEADLIGHTS WASHER TIMER	1
1	161590	MICRO RELAY 20 A.	7
1	172882	MICRO RELAY 30 A.	4
2	155184	BRACKET	1

 
<127 rear passengers compartment control stations>

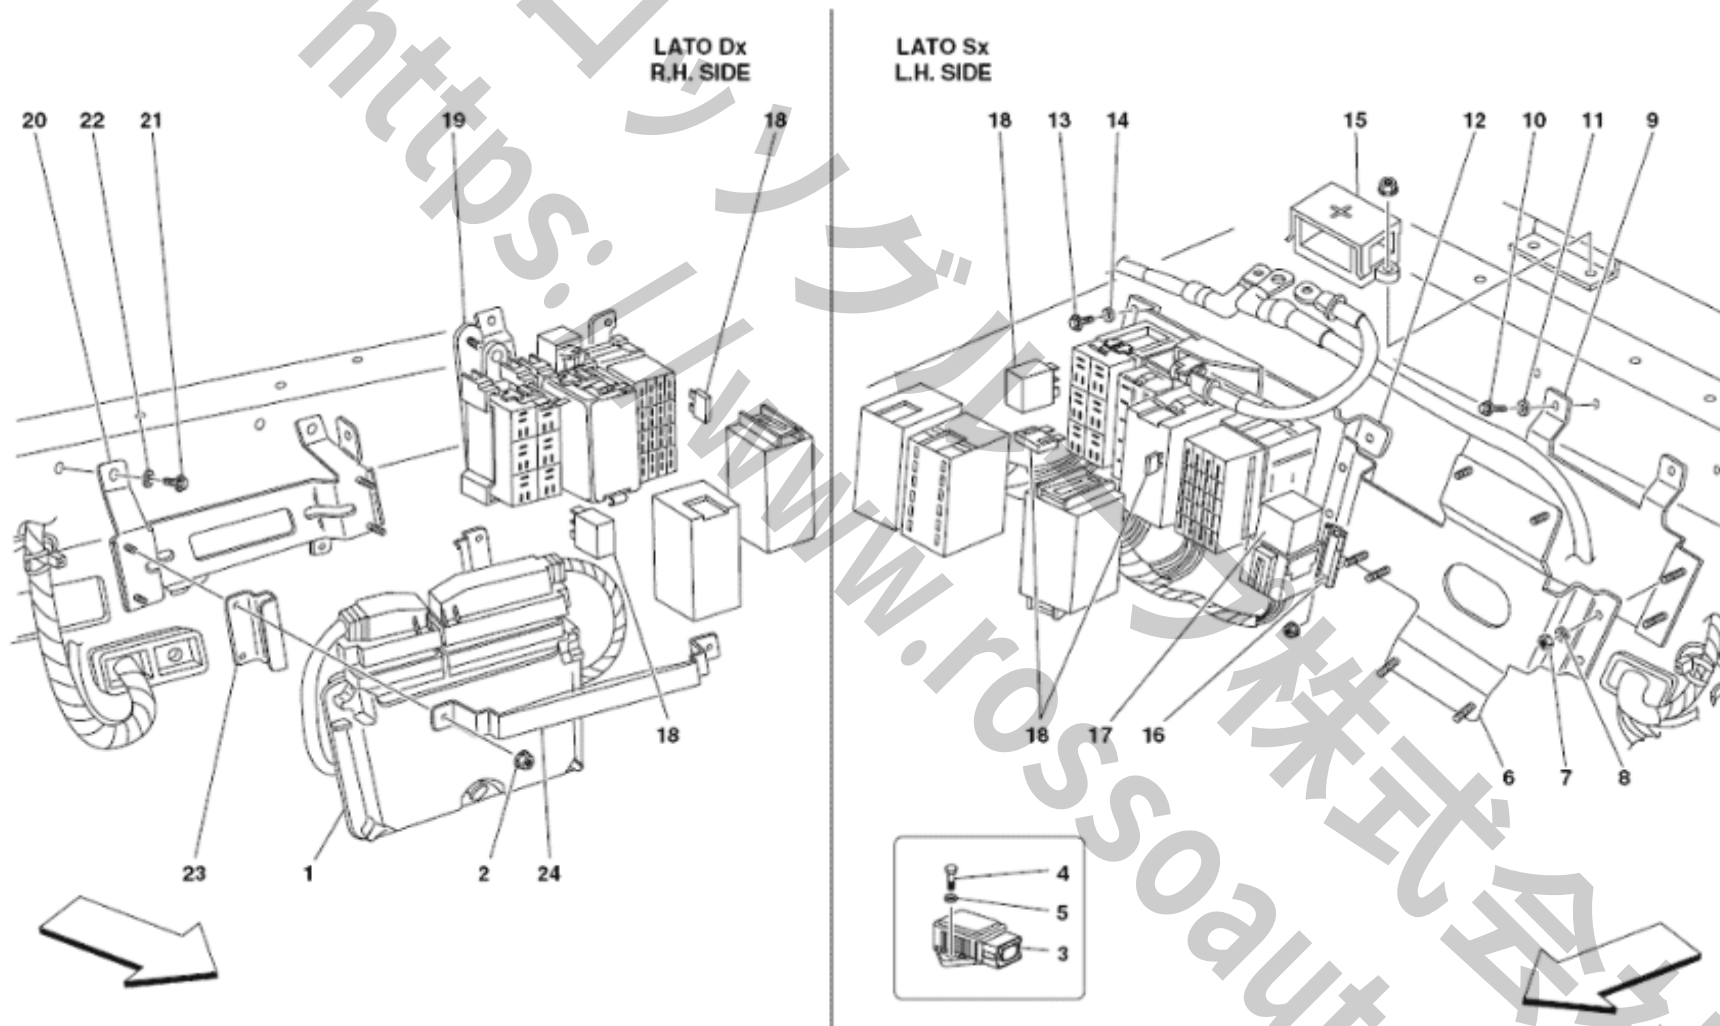

<127 rear passengers compartment control stations>

No.	Part No.	Name	Qty
1	228727	F1 GEAR-BOX ELECTRONIC CONTROL STATION	1
2	102741	NUT	4
3	188172	VAW SENSOR	1
4	10902424	SCREW	2
5	12601274	WASHER	2
6	67505400	L.H. UPPER BRACKET	1
7	102741	NUT	4
8	12620474	WASHER	4
9	67420900	L.H. LOWER BRACKET	1
10	16296924	SCREW	3
11	12620474	WASHER	3
12	67420800	L.H. SIDE BRACKET FOR CONTROL UNIT FIXING	1
13	16296924	SCREW	6
14	12620474	WASHER	6
15	170114	COMPLETE TERMINAL BOX	1
16	155184	BRACKET	1
17	194909	F1 RELAY	1
18	172877	MINI FUSE 10 A.	11
18	172878	MINI FUSE 15 A.	16
18	172879	MINI FUSE 20 A.	2
18	170093	FUSE 30 A.	2
18	172881	FUSE 30 A.	7
18	172875	MINI FUSE 5 A.	4
18	170061	FUSE 50 A.	1
18	172871	MAXI FUSE 60 A.	2
18	172876	FUSE 7,5 A.	5
18	161590	MICRO RELAY 20 A.	11
18	227285	MICRO-RELAY 20/10A	2
18	172882	MICRO RELAY 30 A.	4
18	183662	RELAY FOR IMMOBILIZER/DIAGNOSIS	1
19	67421100	R.H. BRACKET	1
20	67421000	R.H. LOWER BRACKET	1
21	16296924	SCREW	4
22	12620474	WASHER	4
23	67420500	UPPER BRACKET	2
24	68277800	CONTROL UNIT FIXING BRACKET	1

 
<128 Ventilation>

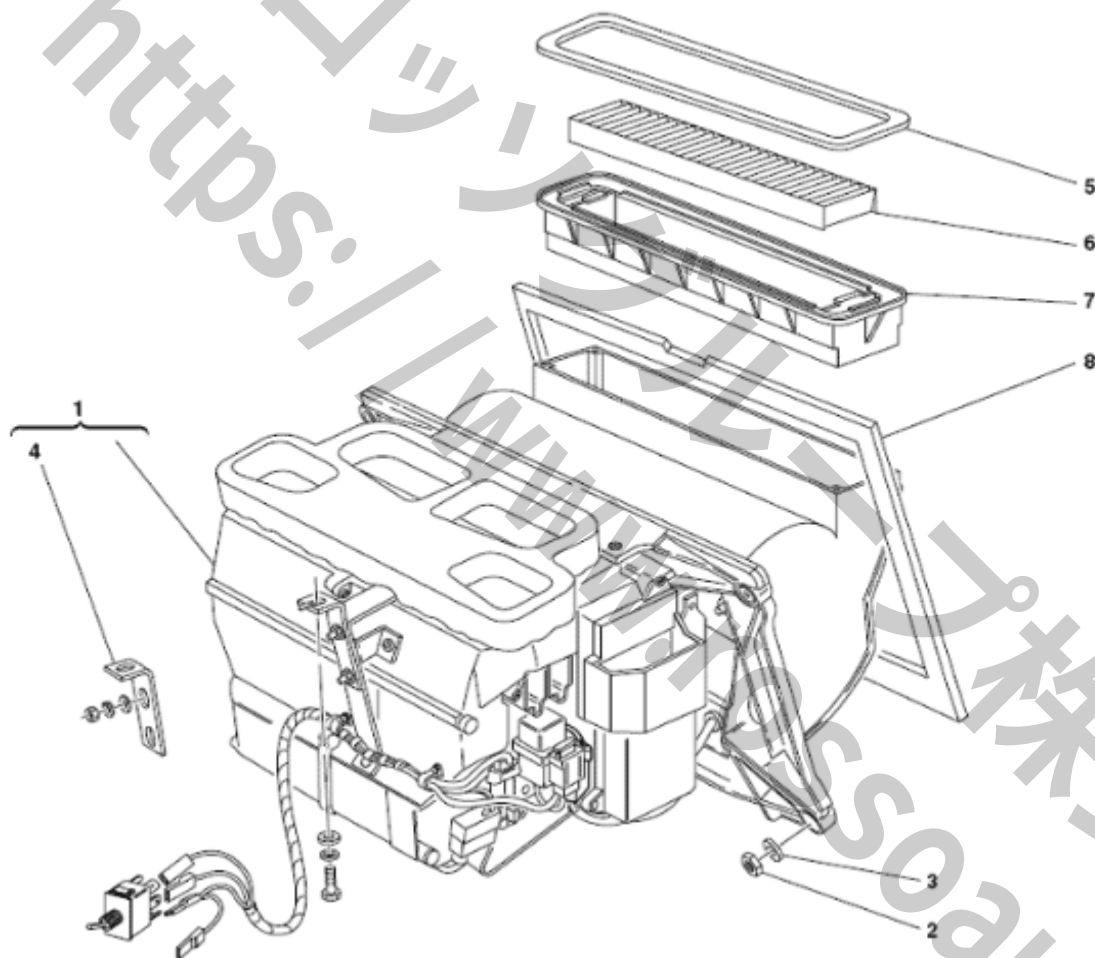

<128 Ventilation>

No.	Part No.	Name	Qty
1	66142400	COMPLETE DRIVERS CAB VENTILATION SYSTEM	1
2	147985	NUT	4
3	12646724	WASHER	4
4	66159200	BRACKET	1
5	65258600	GASKET	1
6	65384300	ANTI POLLEN FILTER	1
6	65384300G	ANTI POLLEN FILTER	1
7	65629700	A/C GROUP MOBILE DUCTING	1
8	66207500	A/C GROUP SET OF GASKETS	1

 
<129 lifting system>

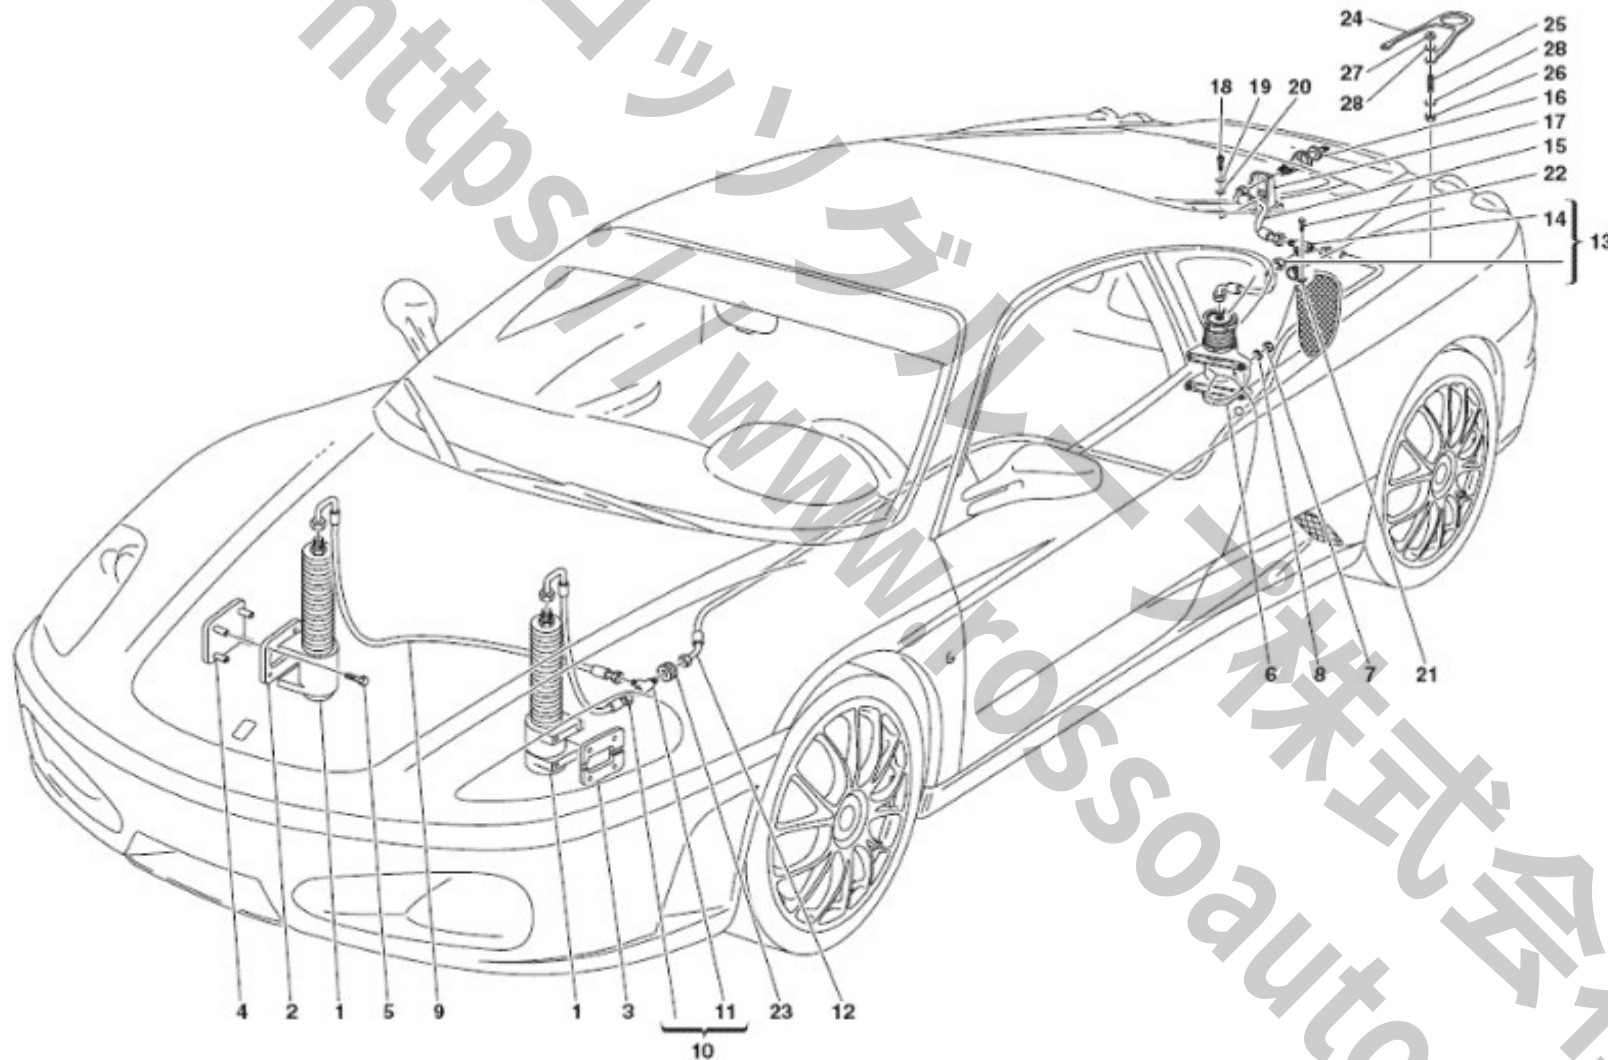

<129 lifting system>

No.	Part No.	Name	Qty
1	221918	FRONT JACK	2
2	221665	R.H. PLATE	1
3	223015	L.H. PLATE	1
4	221668	PLATE	2
5	14359524	SCREW	8
6	223157	REAR JACK	1
7	16104125	NUT	4
8	12638524	R.H. SIDE WASHER	4
9	221663	R.H. FRONT PIPE	1
10	221664	L.H. FRONT PIPE	1
11	224554	T UNION	1
12	221662	PIPE FROM FRONT T UNION TO REAR T UNION	1
13	222092	PIPE FROM REAR T UNION TO JACK	1
14	224554	T UNION	1
15	221661	T PIPE FROM JET TO REAR T UNION	1
16	69317700	AIR JACK VALVE (JET)	1
17	221673	SUPPORT	1
18	14305287	SCREW	4
19	12601277	WASHER	4
20	14496478	WASHER	4
21	10441390	BRACKET WITH SHEATH	6
22	10902424	SCREW	6
23	10396680	CABLE GROMMET	1
24	221266	REAR TOW HOOK	1
25	13517124	STUD	2
26	16104125	NUT	2
27	12646724	WASHER	2
28	2228454	THICKNESS	4



 
<130 Fire-Proof System>

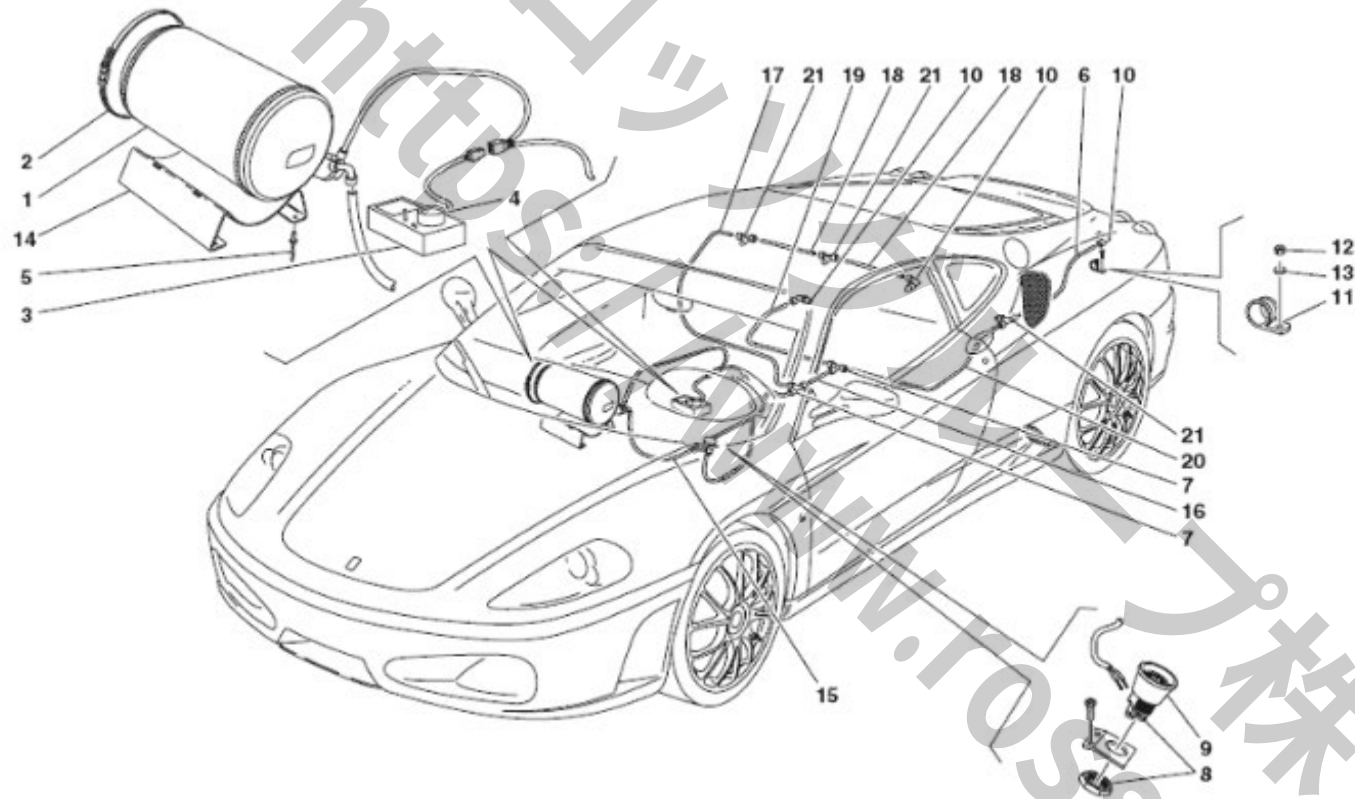

<130 Fire-Proof System>

No.	Part No.	Name	Qty
0	220806	COMPLETE EXTINGUISHER KIT	1
1	181483	CYLINDER FOR EXTINGUISHER SYSTEM	1
2	184697	CLAMP	2
3	220807	FIRE-PROOF SYSTEM CONTROL UNIT	1
4	183090	SWITCH PROTECTION	1
5	69580100	RIVET	8
6	195624	PIPE	1
7	183446	3-WAY UNION	2
8	183091	OUTSIDE SWITCH	1
9	181493	SWITCH PROTECTION	1
10	183444	90I JET	3
11	10441490	HOSE FASTENING BRACKET	1
11	10441590	BRACKET	1
12	10790224	NUT	2
13	12637824	WASHER	2
14	221190	BRACKET	1
15	221165	PIPE	1
16	183443	PIPE	1
17	183439	PIPE	1
18	183440	PIPE	2
19	183445	R.H. PIPE	1
20	183445	L.H. PIPE	1
21	195625	3-WAY JET	3
   
<131 data acquirement>

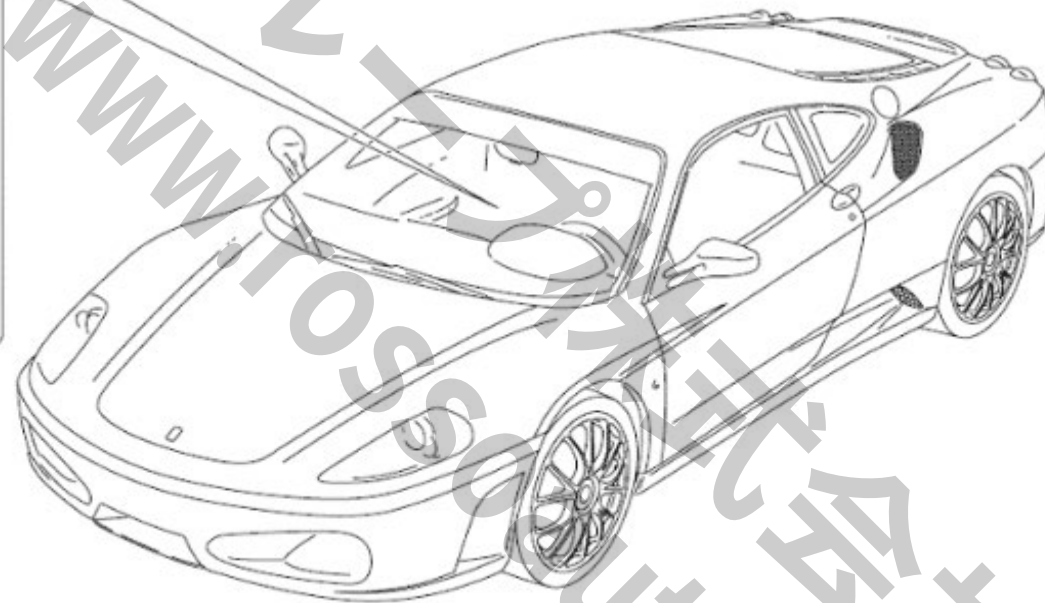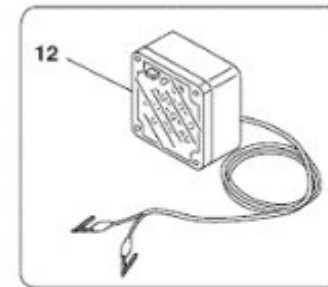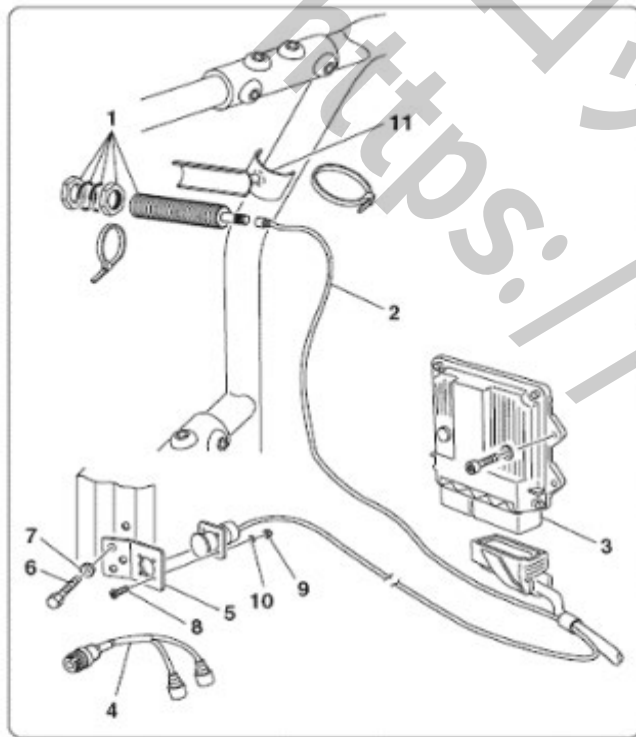

<131 data acquirement>

No.	Part No.	Name	Qty
1	220954	FINISH LINE RECEIVER	1
2	224278	DATA ACQUIREMENT CABLE	1
3	220945	DATA ACQUIREMENT CONTROL UNIT	1
4	223041	DATA DOWNLOAD CABLE	1
5	221128	SMALL PLATE	1
6	10444587	SCREW	3
7	14497778	WASHER	3
8	68927600	SCREW	4
9	61002200	NUT	4
10	12639401	WASHER	4
11	65252000	RECEIVER SUPPORT	1
12	221167	FINISH LINE SENDER UNIT	1